








3 PCS WICKER CONVERSATION SET-

Part List

NO.	Diagram	Description	Qty pcs
A		Upper part	1
B		Lower part	1
C		cushion	1
D		Screws	3
E		Washers	3
F		Allen Wrench	1

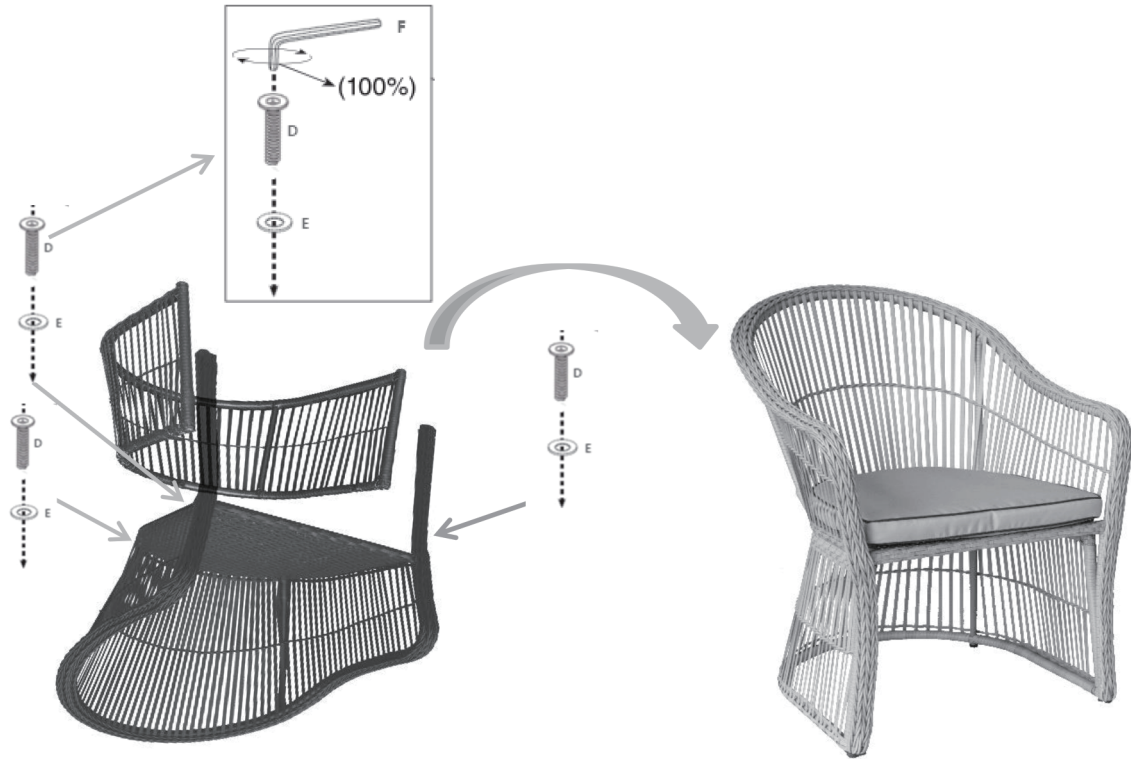

1. Attach runner (B) to chair (A) and secure by using screws (D+E).
2. The cushion is included.