Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any comments or in case there is any missing or damaged parts or hardware. Replacements for missing or damaged parts, or hardware are normally shipped within 2 to 3 days.

We appreciate your business!

ASSEMBLY INSTRUCTION DINING CHAIR

IMPORTANT NOTE:


BEFORE YOUR BEGIN, PLEASE READ AND FOLLOW THE ASSEMBLY INSTRUCTIONS CAREFULLY.

- 1. IDENTIFY AND SEPARATE ALL PARTS BEFORE DISCARDING PACKAGING.
- 2. PLACE WOODEN PARTS ON A CLEAN SOFT SURFACE TO AVOID SCRATCHING THE PARTS.
- 3. DO NOT COMPLETELY TIGHTEN SCREWS UNIT AFTER STEP 7.
- 4. DO NOT USE POWER TOOL FOR ASSEMBLY.

*DO NOT USE POWER TOOLS FOR ASSEMBLY

IMPORTANT: IF YOU DO NOT ADHERETO NOTE 3 & 4, IT WILL RESULT IN DAMAGES TO THE PRODUCTS.


5. AS WITH ALL FURNITURE, OCCASIONALY CHECK TO INSURE HARDWARE IS TIGHT.

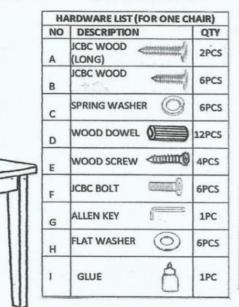


PART LIST (FOR ONE CHAIR)			
NO	DESCRIPTION		QTY
1	CHAIR BACK		1PC
2	LEFT & RIGHT BACK LEG		2PCS
3	LEFT & RIGHT FRONT LEG		2PCS
4	SIDE RAIL	E Pai	2PCS
5	FRONT RAIL	[Immel@]	1PC
6	BACK RAIL	To fue &	1PC
7	SEAT		1PC

TOOL REQUIRED (NOT PROVIDED):


Screw Driver Hammer

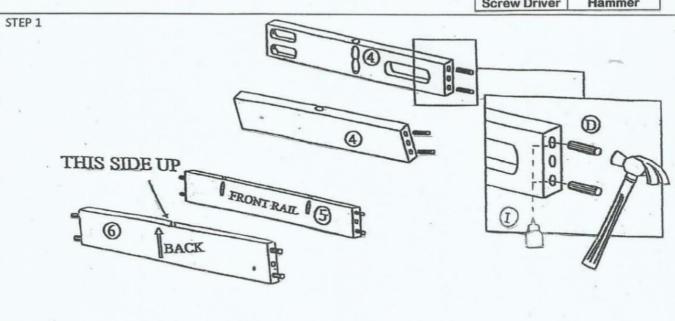



ASSEMBLY INSTRUCTION DINING CHAIR

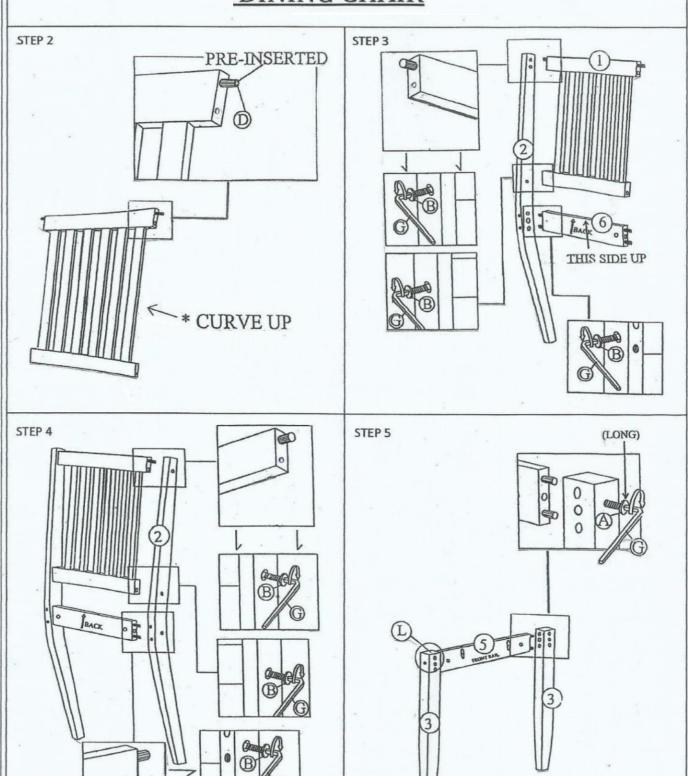

ASSEMBLY INSTRUCTION DINING CHAIR

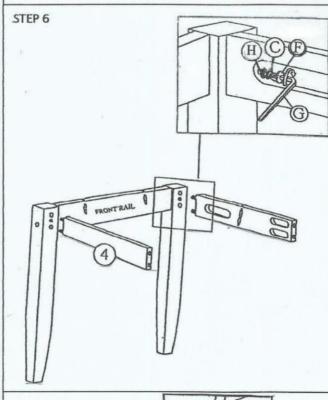

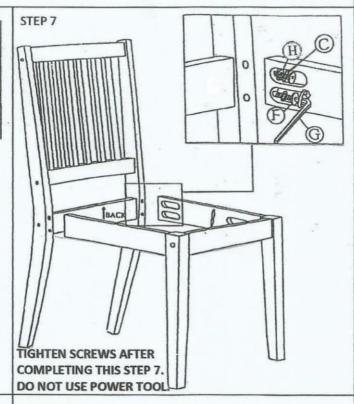

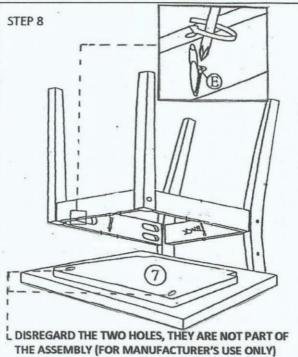

HOLES ON SEAT ARE NOT PRE-DRILLED. TAP THE END OF THE SCREW DRIVER WITH A HAMMER TO MAKE STARTING HOLES AT 4PLACES. 2 IN FRONT AND 1 ON EACH SIDE

