


ASSEMBLY INSTRUCTIONS

40" DOUBLE DROP LEAF TABLE


- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE PRODUCT IS FULLY SET-UP.

PARTS LIST			HARDWARE LIST		
NO	DESCRIPTION	QTY	NO	DESCRIPTION	QTY
1	TABLE TOP 26" X 40"	1PC	A	JCBC BOLT M6 X 60MM	8PCS
2	LEAF TOP	2PCS	B	FLAT WASHER	8PCS
3	TABLE LEG	4PCS	C	SPRING WASHER	8PCS
4	RUNNER RAIL	4PCS	D	M4 ALLEN KEY	1PC
			E	M3.5 X 16mm CHIPBOARD SCREW	12PCS

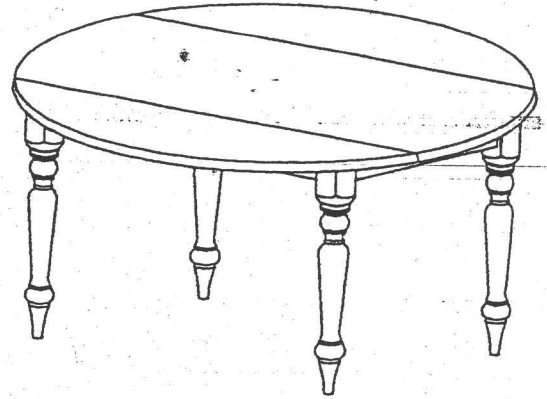


Fully Set-Up


STEP 1

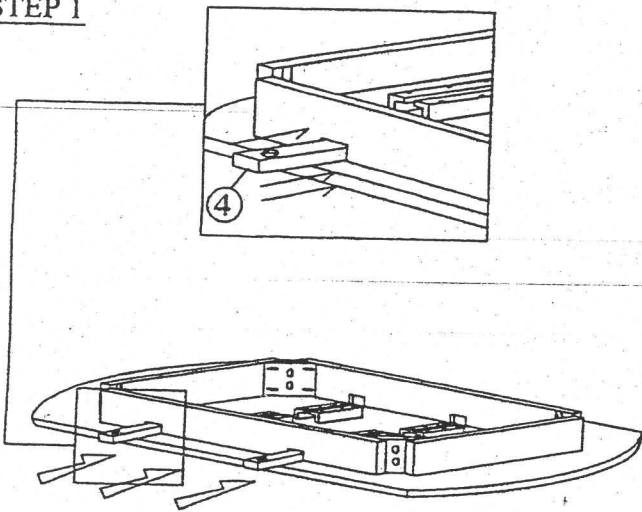


STEP 2

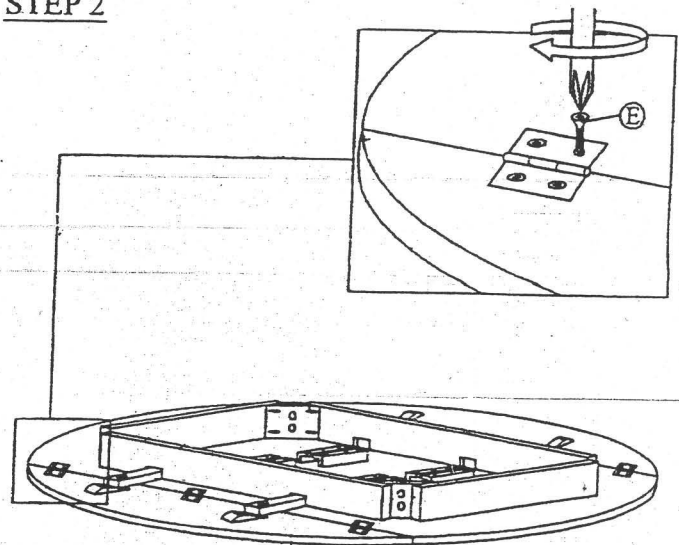

STEP 3

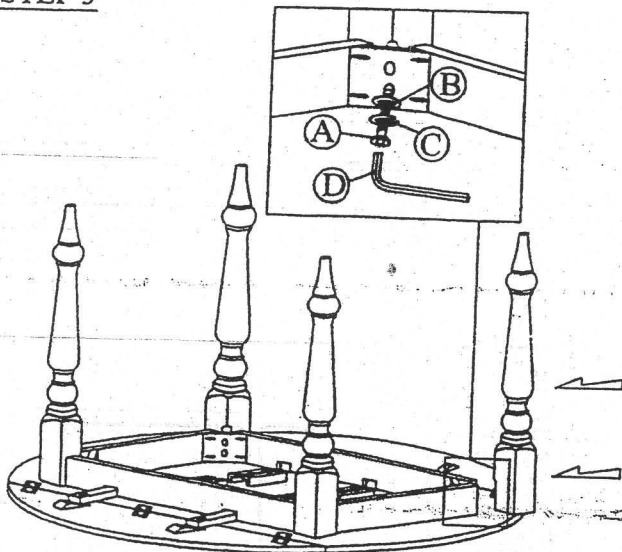

STEP 4

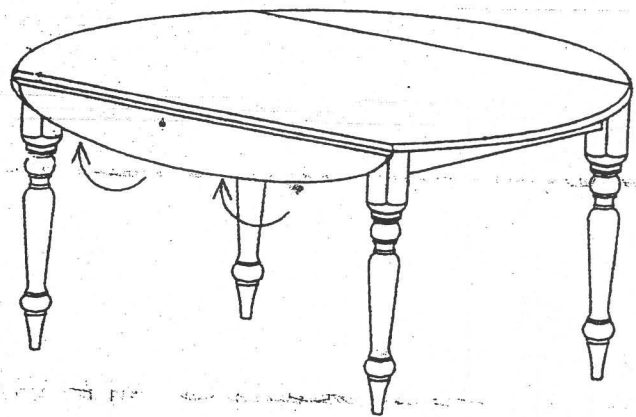

CROSS BACK CHAIR
ASSEMBLY INSTRUCTION

Dear Customer,

 






Thank you for purchasing our furniture products.

Read instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete before assembly. Place all wooden furniture parts on a clean and flat surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS!!!

1. DO NOT FULLY TIGHTEN THE NUT OR BOLTS UNTIL ALL THE NUTS OR BOLTS IS READY ASSEMBLED.

2. DO NOT OVER TIGHTEN THE NUT OR BOLTS TO AVOID CAUSING DAMAGES TO THE THREAD.

NO	PARTS LIST		QTY
1	CHAIR BACK		1 pc
2	FRONT LEG		1 pc
3	WOODEN SEAT		1 pc
4	SIDE RAIL (FL)		1 pcs
5	SIDE RAIL (FR)		1 pcs
6	SIDE LOWER RAIL (FL)		1 pc
7	SIDE LOWER RAIL (FR)		1 pc

NO	HARDWARE LIST	QTY
A	 JCBC BOLT M6 x 50mm	8 pcs
B	 SPRING WASHER	8 pcs
C	 FLAT WASHER	8 pcs
D	 CSK SCREW M4 x 38mm	4 pcs
E	 CSK SCREW M4 x 32mm	3 pcs
F	 ALLEN KEY	1 pc

NOTE: THE LIST QUANTITY SHOW ABOVE IS FOR 1 UNIT ASSEMBLY

