 



NLX-260401

Assembly Instruction

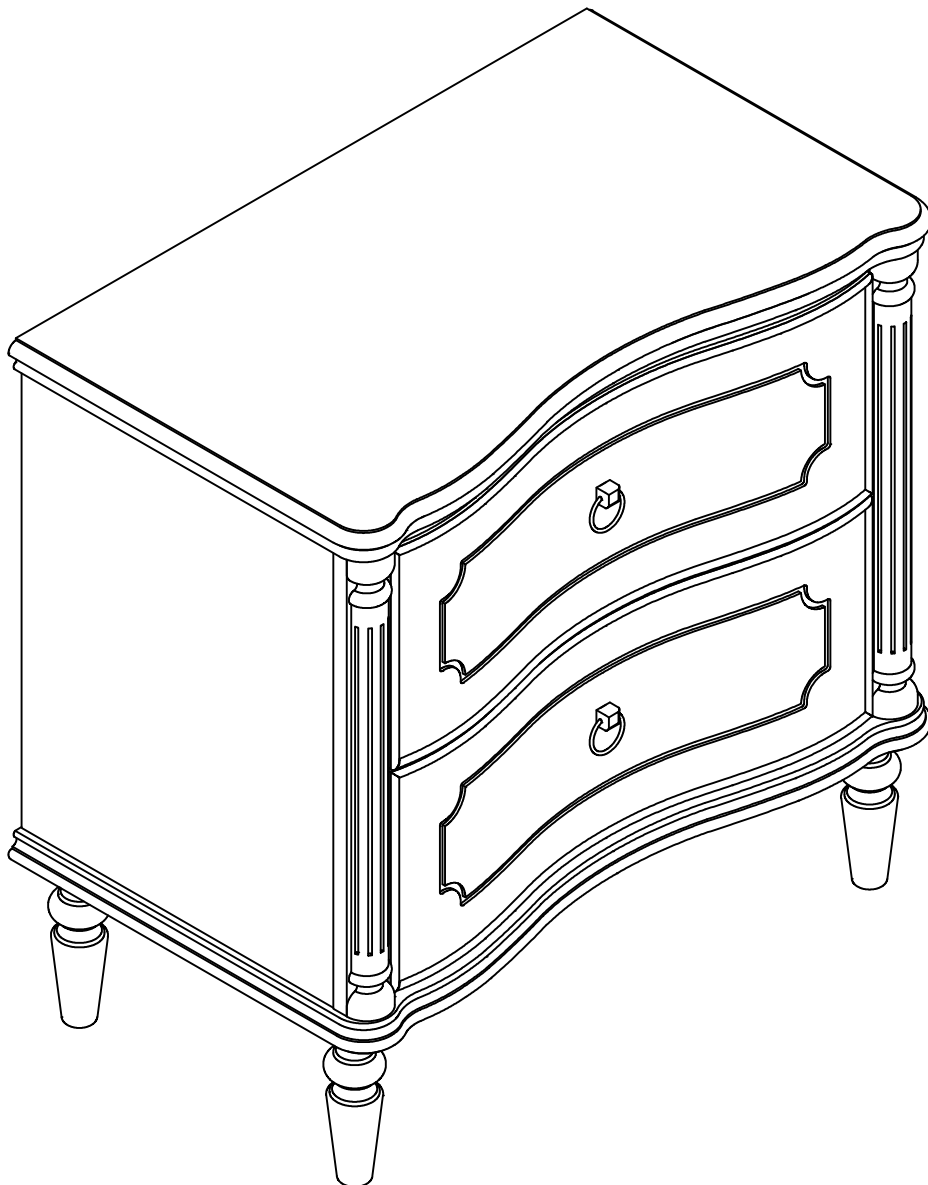


General Assembly Guidelines

 1. Ensure that all parts and hardware are available before beginning assembly.
2. Follow each step carefully to ensure the proper assembly of this product.
3. Two people are recommended for ease in the assembly of this product.
4. A Phillips head screwdriver is required for the assembly of this product.

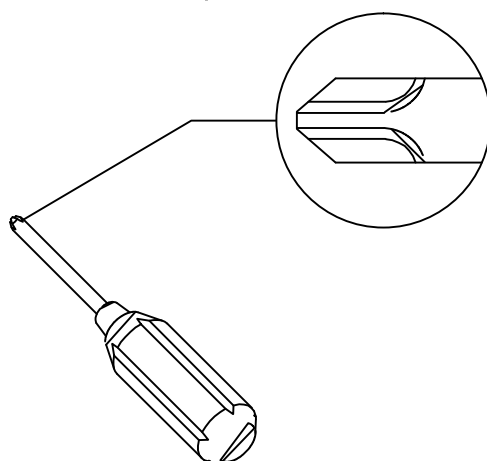


5. HOW THE KNOCK DOWN(KD)ASSEMBLY SYSTEM WORKS

 
- ①. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure the Cam Bolt goes into the pre-drilled hole on the end of the panel for the Cam Lock.
- ②. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock points towards the Cam Bolt.
- ③. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- ④. Use the sticker to conceal the Cam.

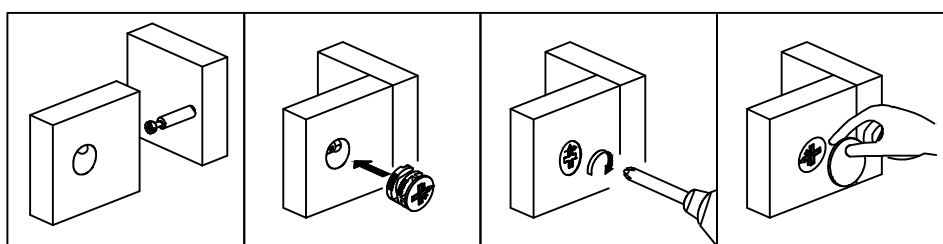

 6. Power tools should not be used to assemble this product.

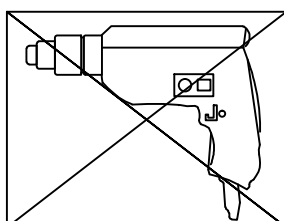


Explosive view

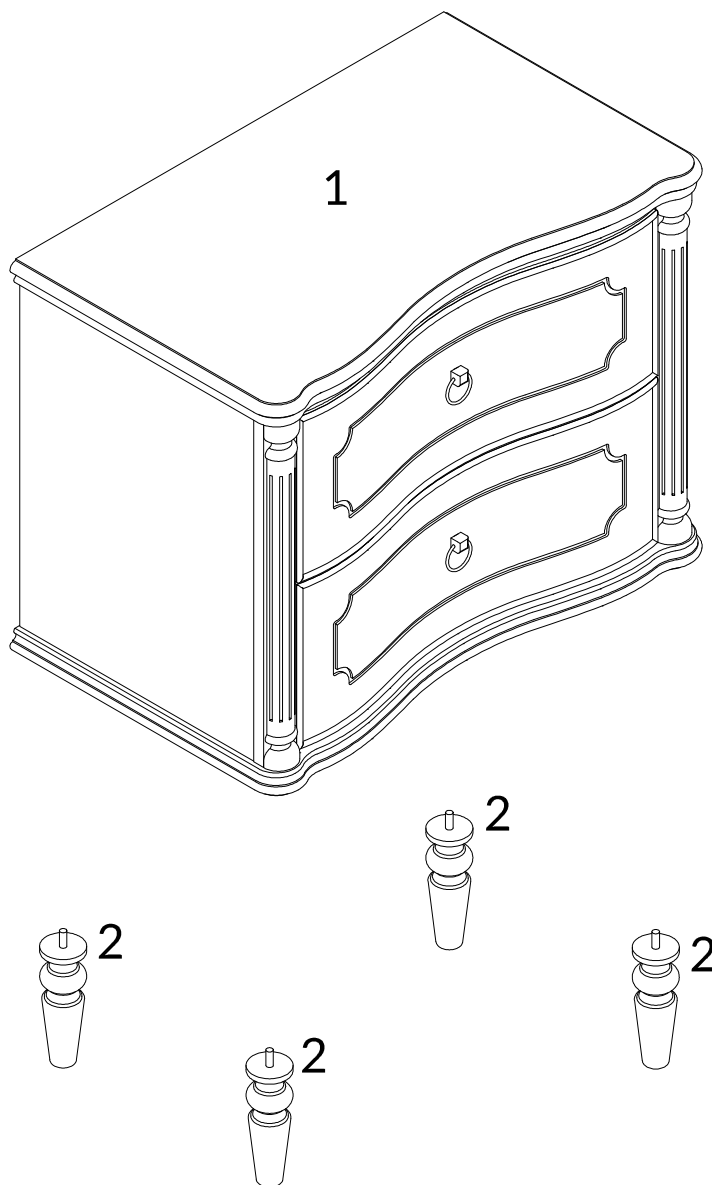 

Parts list

 1 x1 Cabinet

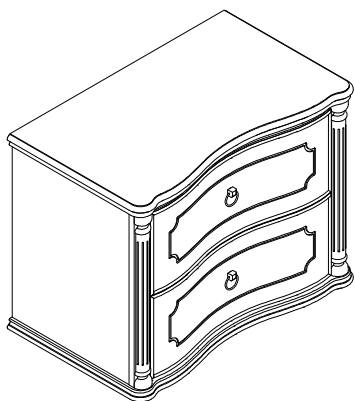


2 x4 Cabinet leg




HARDWARE LIST

 A x1 Anti-tip hardware kit

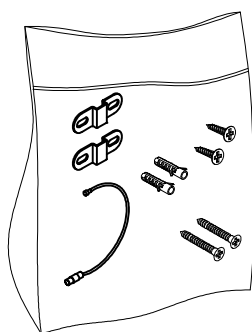


B x1 Cross wrench

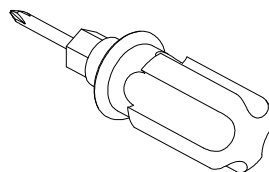 

Step 1



 
Insert 2 with the bottom hole of 1 and tighten it.

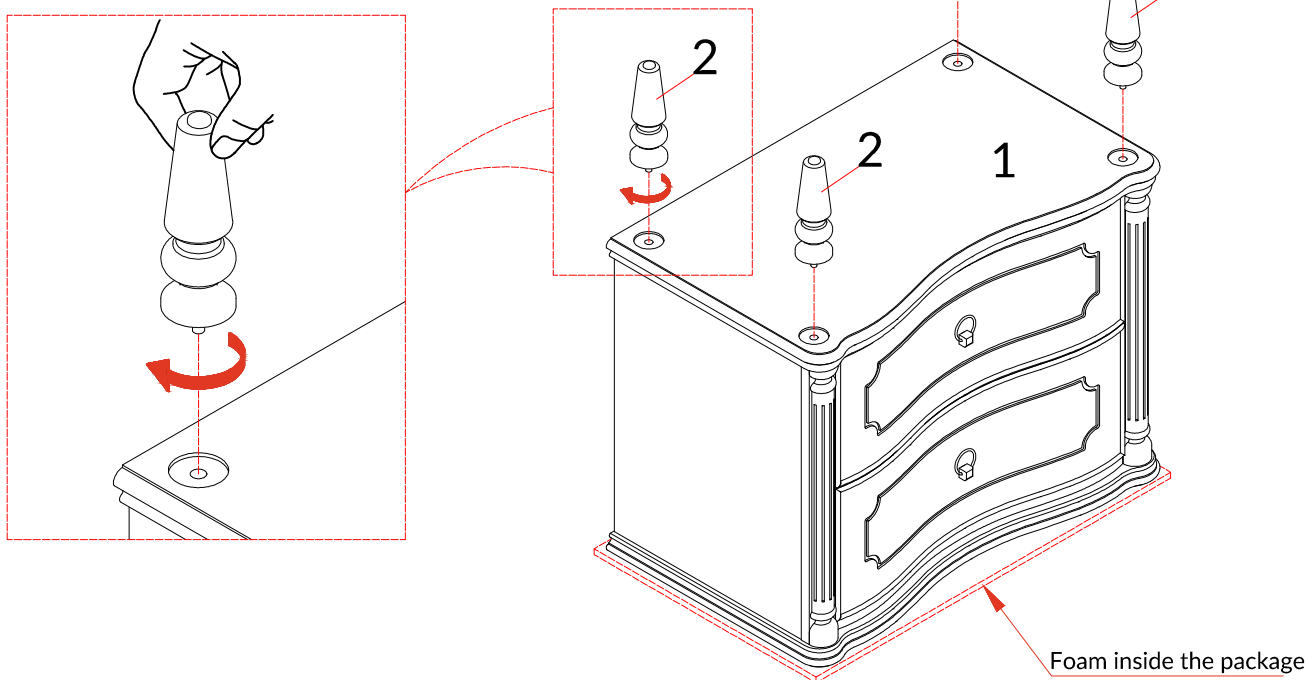

Step 2




   Attention:
Before the next step, adjust the feet of
the locker to keep it level.

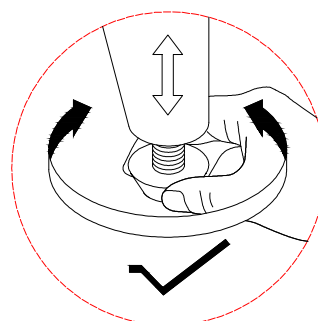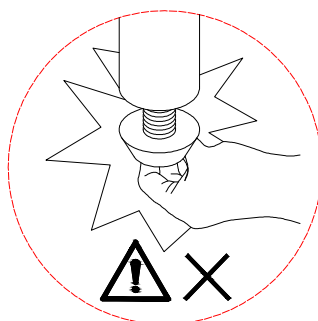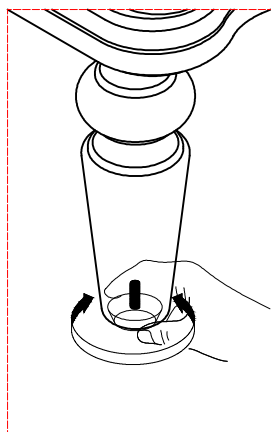


Slide Rail Installation Method

 
1. Slide out the tab.

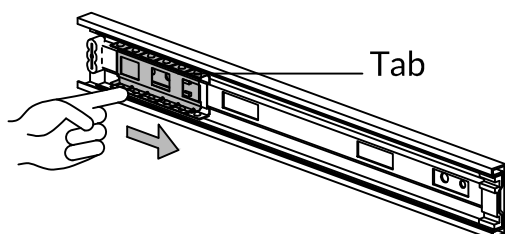

 2. Position the slide rod against the tab.


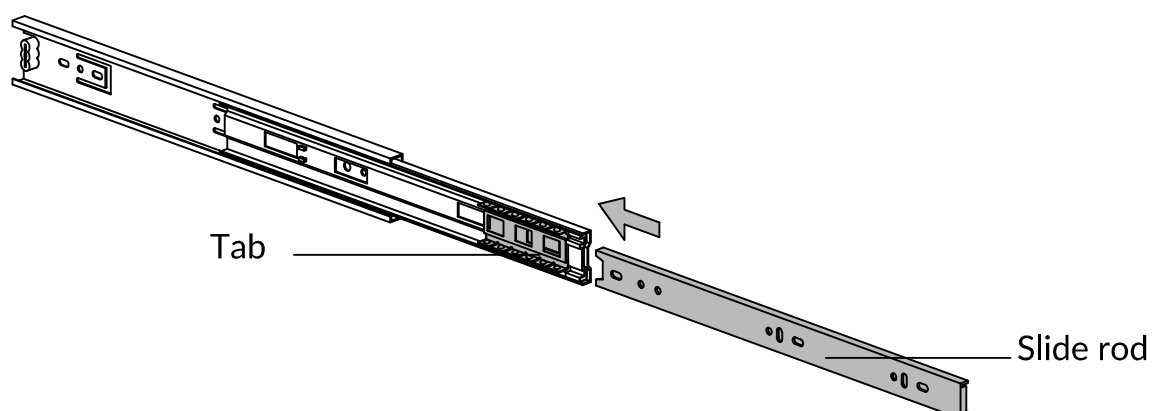


 3. Push the drawer in.

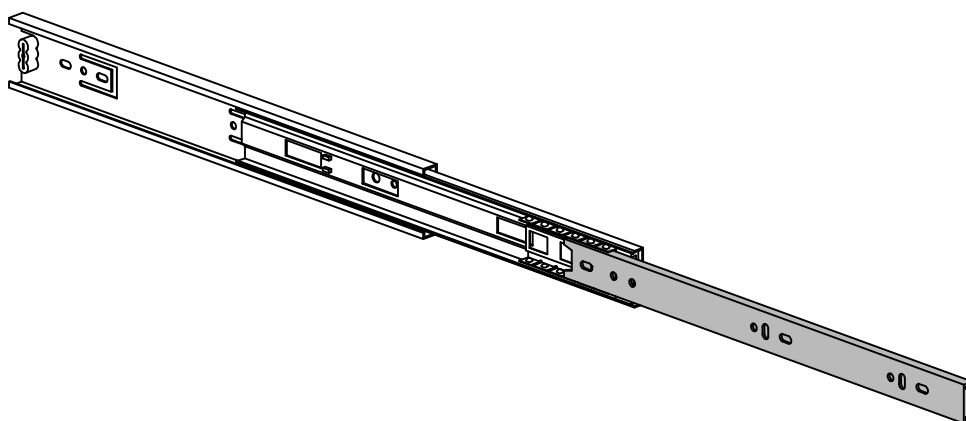


Step 3

  Use screw A4 to attach part A1 to back (1),
tight screw with screwdriver B.

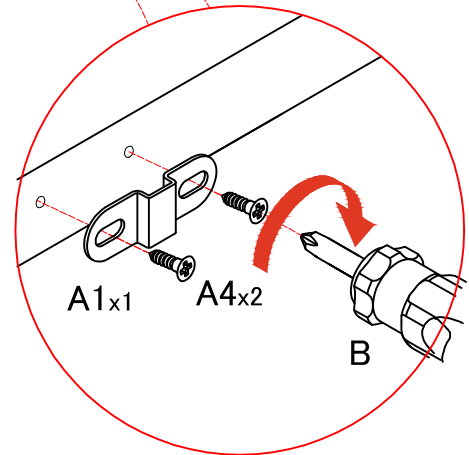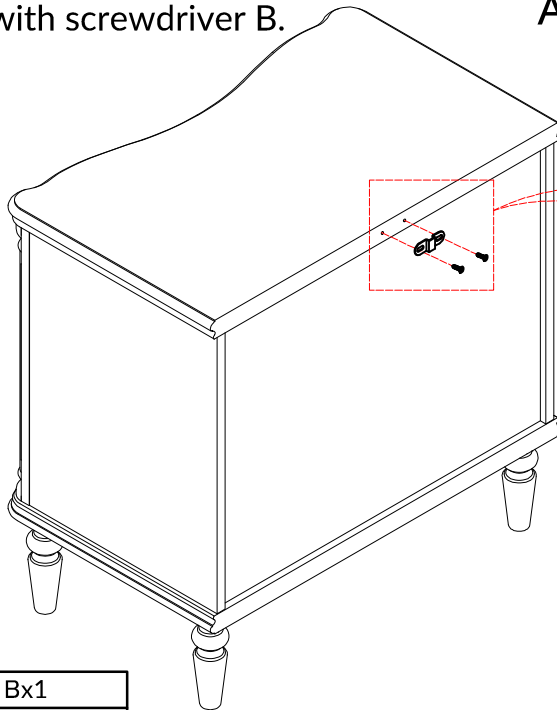

Ax1


 
Bx1




Step 4



  
NOT PROVIDED

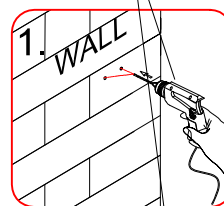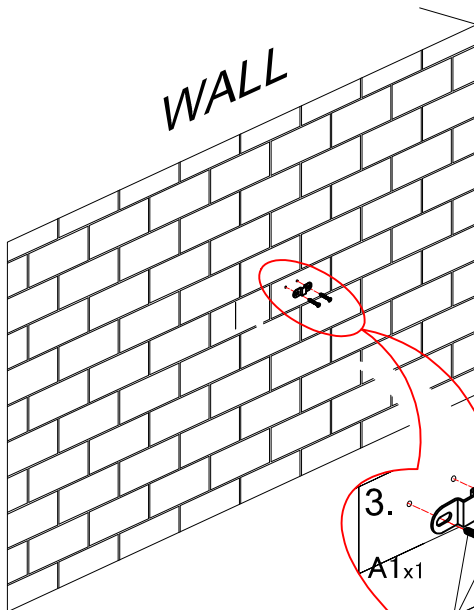

 1. Drill to make two holes in the wall with an electric drill.

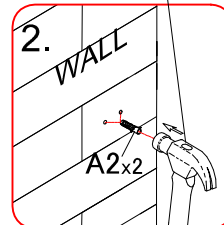

 
2. Tap the plastic wall anchor into the hole with a hammer.

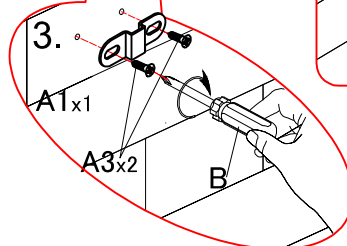

3. Use screw A3 to attach part A1 to back (1) to the wall with screwdriver B

Ax1

 Bx1



Step 5

 
 
 
 
WARNING

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- For use with televisions weighing 35 lb or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



Let the steel cable A5 pass through bracket A1 and tighten.

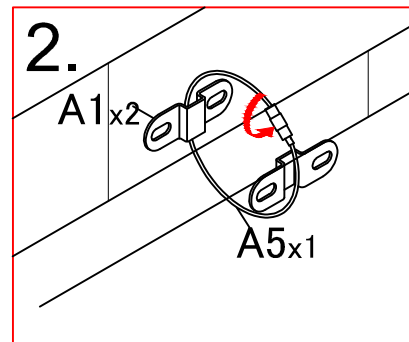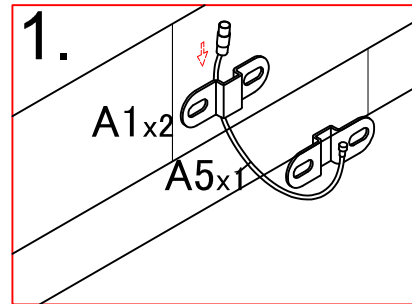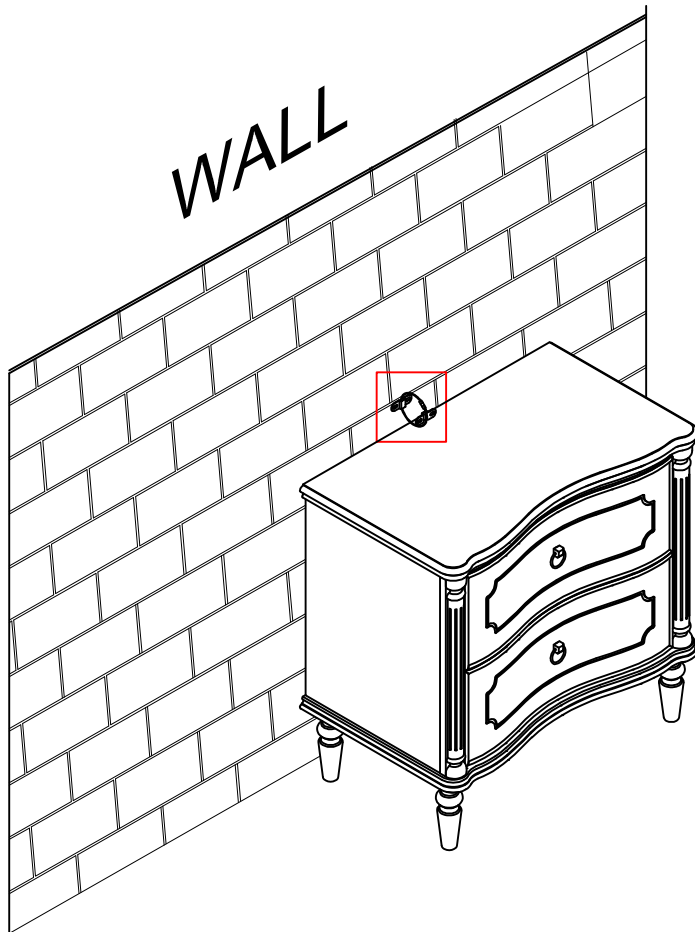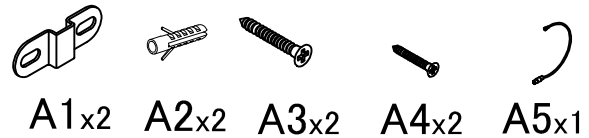

Ax1	Bx1
	