

SPECIFICATIONS (All specifications +5% / -10% tolerance)

Model	EUH4000	EUH5000
BTU's per/Hour	12,4000	17,000
Watts	4,000	5,000
Power Volts	240	240
Amps	20	30
Plug Type	Nema 6-20P	Nema 6-30P
Heating Area	500	700

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Heating element does not glow red	Stainless steel elements won't glow red to produce heat.	Heater is operating correctly
Do not feel heat or air flow	No power to heater	Check power connection to heater
	Desired room temperature reached.	Thermostat will shut off heater once desired room temperature is reached.
	Auto-Reset has tripped	Unplug heater allow to cool down for 10 minutes, and then restart.
	Heater has fan only setting.	Set to run on full power for heating.
Fan running with no heat	Heater in cool down cycle	This is normal to disperse heat throughout the area. Turn thermostat up if additional heat is desired,