


Installation & Assembly

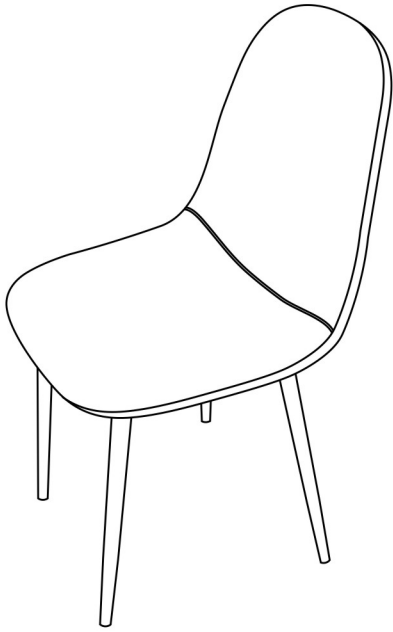


Ax1 	Bx1 	Cx1 	Dx4
Ex4 M6x40MM	Fx8 	Gx4 	Hx4
Ix2 M6x45MM	Jx2 M6x50MM	Kx1 	Lx1
Mx1 			


SPARE (Ersatzteile)

Ex1 M6x40MM	Gx1 	Ix1 M6x45MM	
Fx1 	Hx1 		

STEP 1

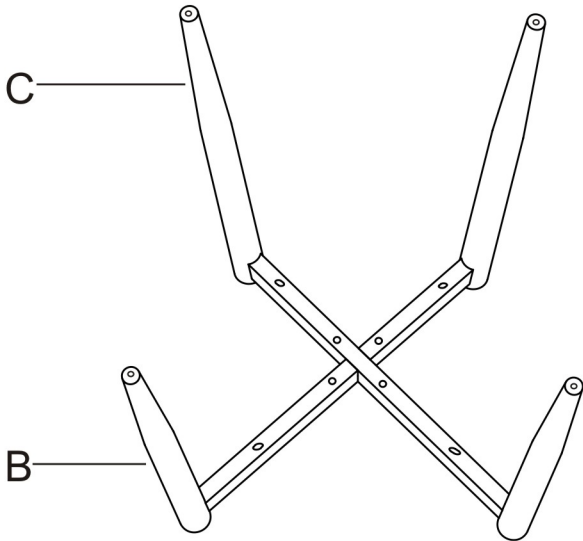

STEP 3

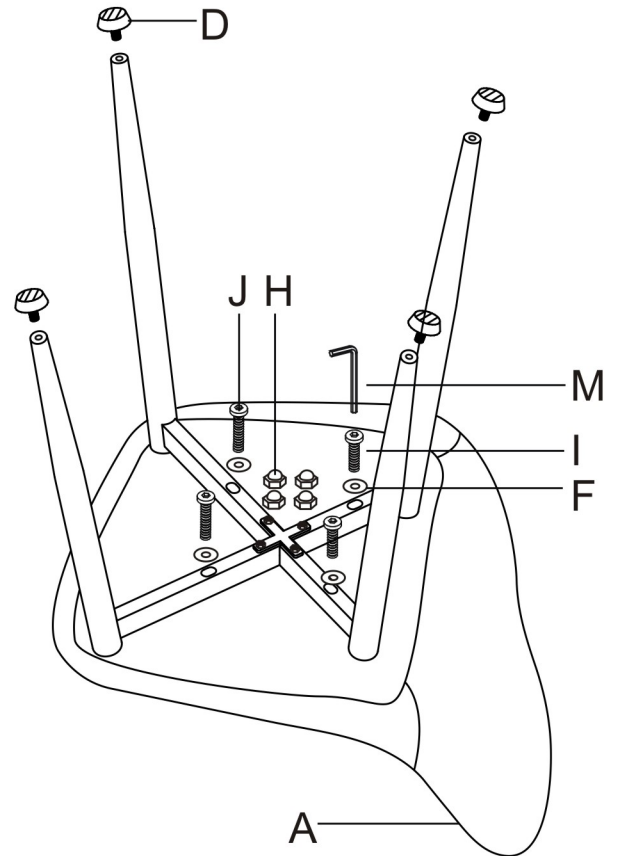

STEP 2

