 


TV/Media Stand-
Mission Oak Finish

TV/Media Stand-
white Finish

Assembly Instructions

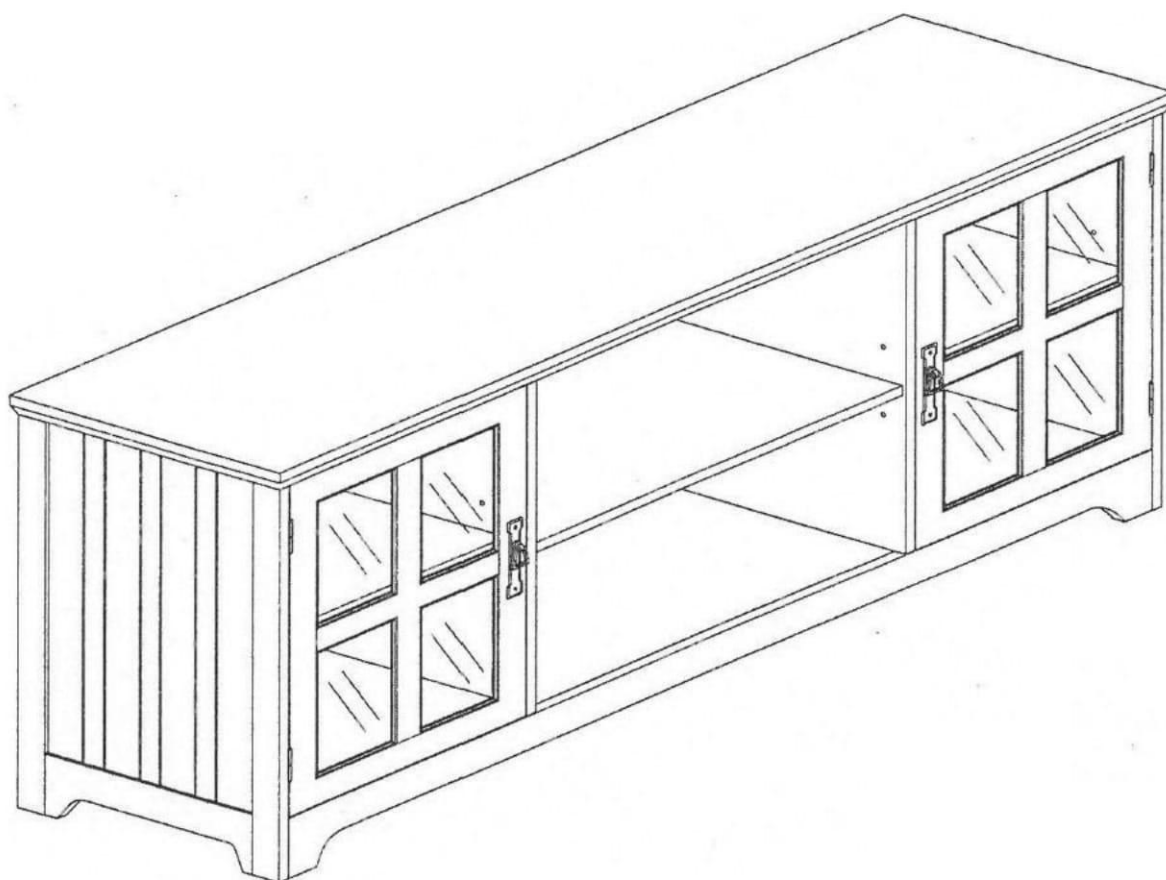

Parts List

 
Please review all parts and hardware before disposing of any packaging.

Call Customer Service if missing hardware.

Using hardware that is too long will cause damage.


Before beginning assembly, separate each type of hardware. Carefully study the hardware diagrams below. You may receive extra hardware with your unit

A Quantity of 1

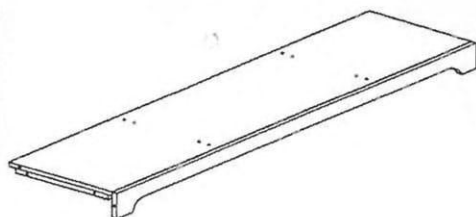

Bottom Panel

 B Quantity of 1

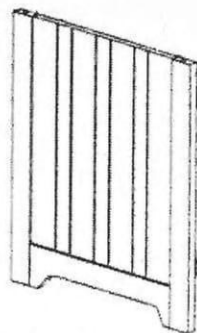


Left Side Panel

C Quantity of 1




Right Side Panel

 D Quantity of 1

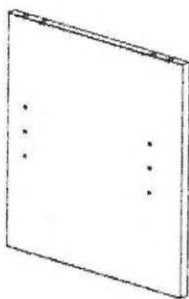


Left Middle Panel

 E Quantity of 1

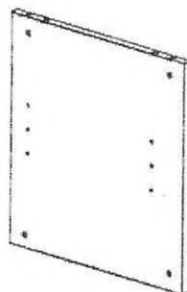


Right Middle Panel

 F Quantity of 1

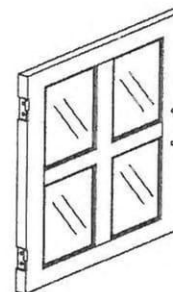


Left Door

 G Quantity of 1

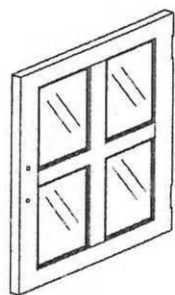


Right Door

 H Quantity of 1

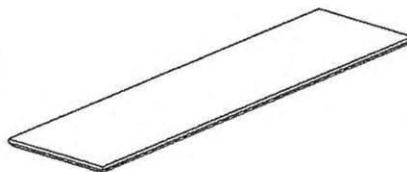


Top Panel

 I Quantity of 1

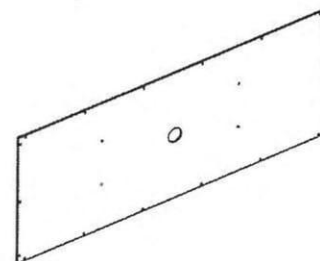


Back Panel

 J Quantity of 2

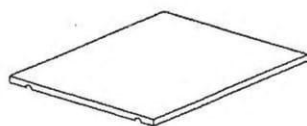


Side Adjustable Shelf

 K Quantity of 1

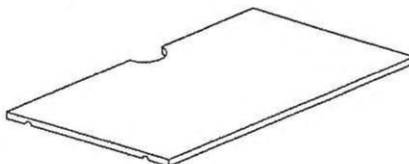

Middle Adjustable Shelf

 L Quantity of 1

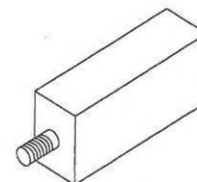


 














Support leg

Parts List

 Please review all parts and hardware before disposing of any packaging.
Call Customer Service if missing hardware.

Using hardware that is too long will cause damage.

      
Before beginning assembly, separate each type of hardware. Carefully study the hardware diagrams below. You may receive extra hardware with your unit

(1)	Quantity of 16	(2)	Quantity of 4	(3)	Quantity of 2		
							
8mm x 30 mm Wood Dowel		1/4" x 1-1/4" Bolt		Handle			
(4)	Quantity of 4	(5)	Quantity of 2	(6)	Quantity of 4		
							
5/32" x 15mm Bolt For Handle		Magnet		3.5mm x 15 mm Screw For Magnet			
(7)	Quantity of 22	(8)	Quantity of 12	(9)	Quantity of 4		
							
3.5mm x 12 mm Screw For Back		Metal Pin		Bracket			
(10)	Quantity of 4	(11)	Quantity of 4	(12)	Quantity of 4		
							
3.5mm x 15 mm Screw For Bracket		Plastic Anchor		7mm x 38mm Screw For Wall			
(13)	Quantity of 2	(14)	Quantity of 4	(15)	Quantity of 12	(16)	Quantity of 12
							
Plastic Chain		Flat washer 1/4"x3/4"		Cam Bolt		Cam Lock	

Care and Cleaning Instructions:

Before using, wipe with a clean, dry cloth.
Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.

 Assembly Tool Required
No. 2 Phillips Screwdriver
(Not Included)

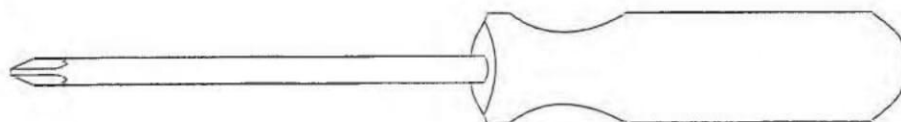

Assembly Instructions

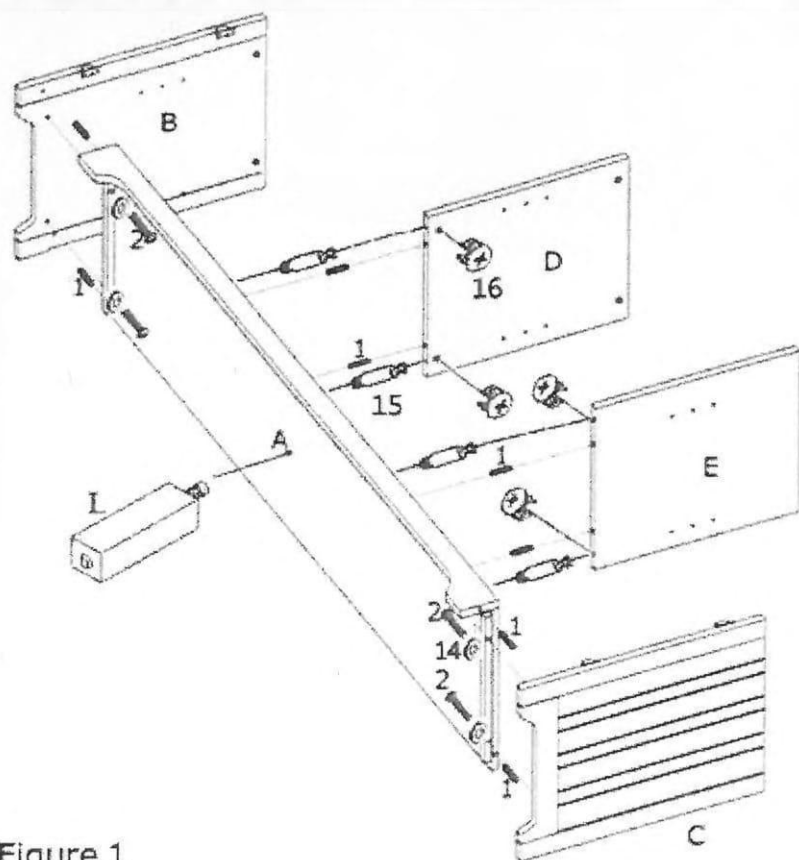 


Figure 1

Assembly Instructions:

Wood may scratch easily. Be careful when assembling. Do not scratch.

- Step 1. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated on the front page.
- Step 2. Put the Bottom Panel(A) on the soft working surface.
- Step 3. Insert the Wood Dowels(1) into predrilled holes in Bottom Panel(A) and Middle Panel(D,E).
- Step 4. Attach the Side Panels(B,C) and Middle Panels(D,E) to the Bottom Panel(A) by using cam bolt (15), cam lock (16)& Wood Dowel (1)& Bolt(2) as shown.
- Step 5. Attach support leg (L) to bottom Panel (A) by hand.

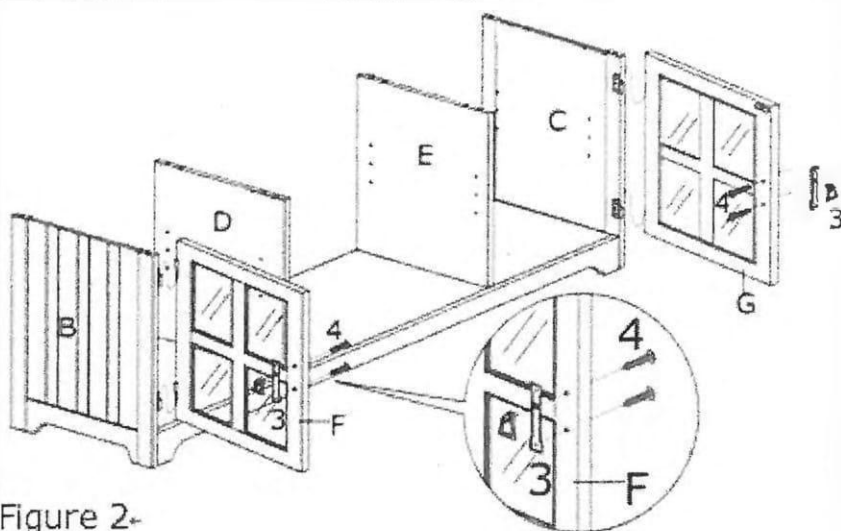 


Figure 2-

- Step 1. Attach the Left Door(F) to the Left Side Panel(B) and Right Door(G) to the Right Side Panel(C).
- Step 2. Attach Handle(3) to Doors (F,G) with Bolt For Handle(4).

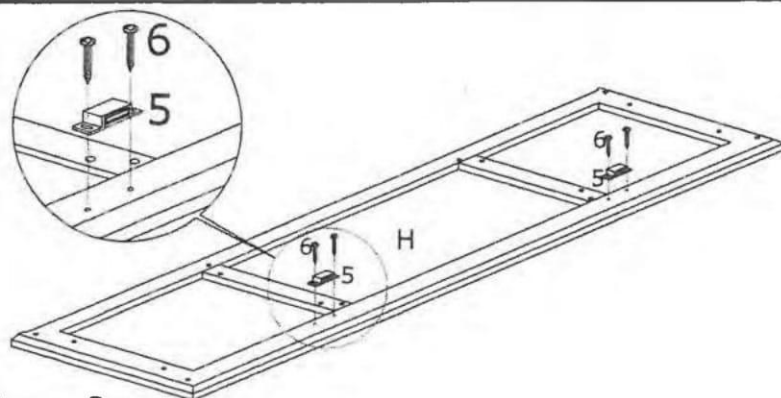 


Figure 3

- Step 1. Put the Top Panel (H) on the soft working surface.
- Step 2. Attach Magnet(5) to the Top Panel(H) with Screw for Magnet(6).

Assembly Instructions

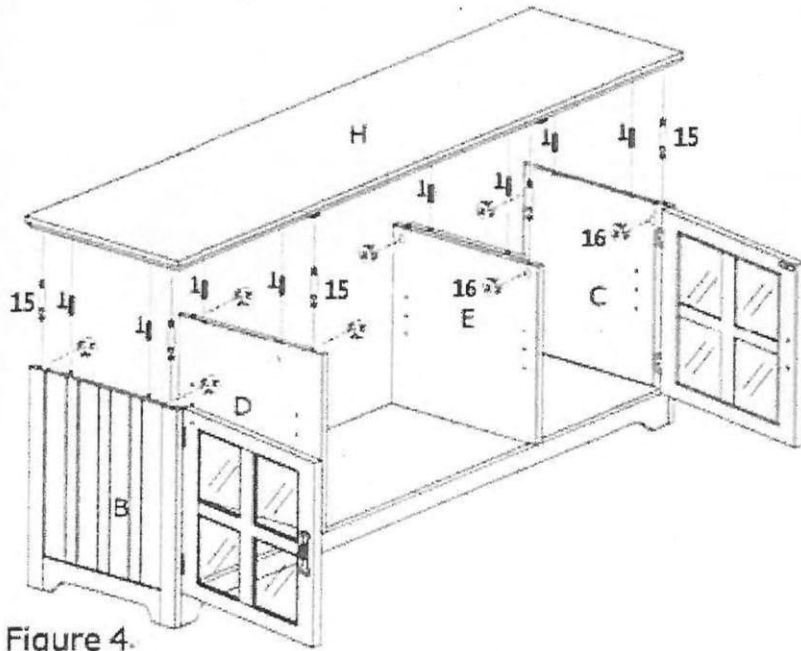 


Figure 4.

Step 1. Insert the Wood Dowels(1) into predrilled holes in Side Panels(B,C) and Middle Panels(D,E).

Step 2. Attach the Top Panel (H) to the Side Panels (B,C) and Middle Panels (D,E) by using cam bolt (15), cam lock (16)& Wood Dowel (1)as shown.

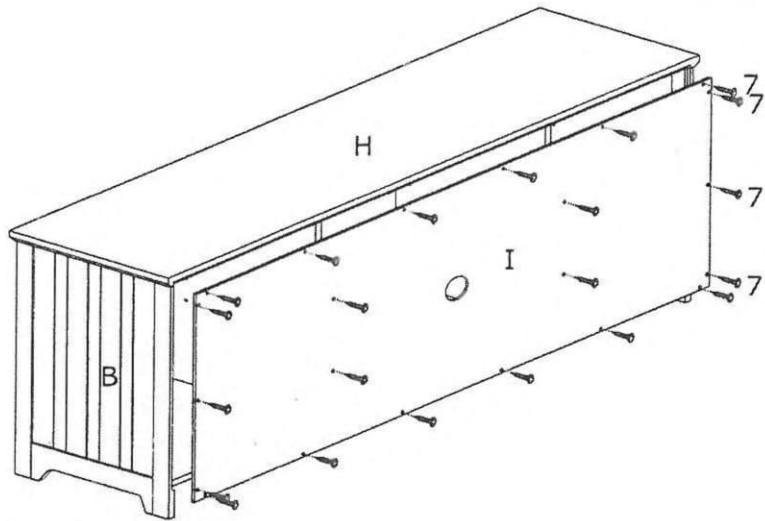 


Figure 5

Step 1. Insert Back Panel (I) into grooves of side panels(B,C), Top Panel(H) and Bottom Panel(A) with Screw For Back (7) and tighten.

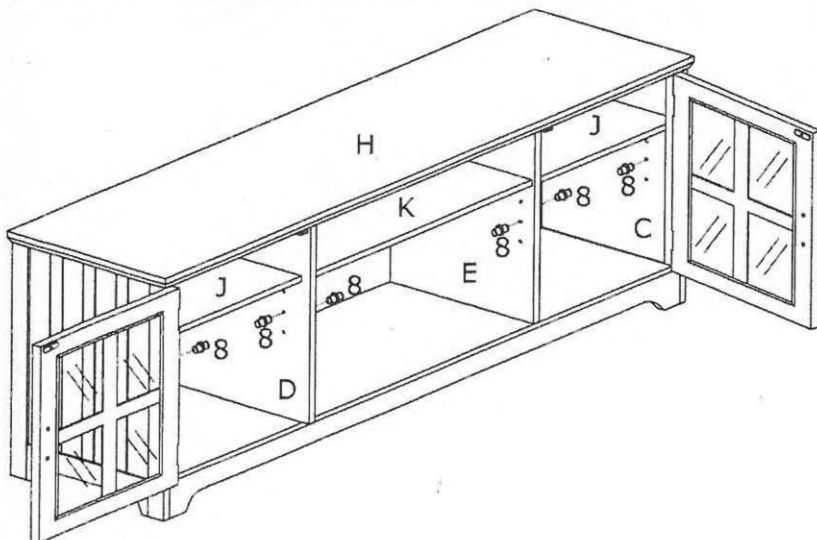 


Figure 6

Step 1. Insert the metal Pin(8) into desirous holes of inner Side Panels(B,C) and Middle Panel(D,E).

Step 2. Put the Adjustable Shelf(J,K) on the Metal Pins(8)in each section.

Assembly Instructions


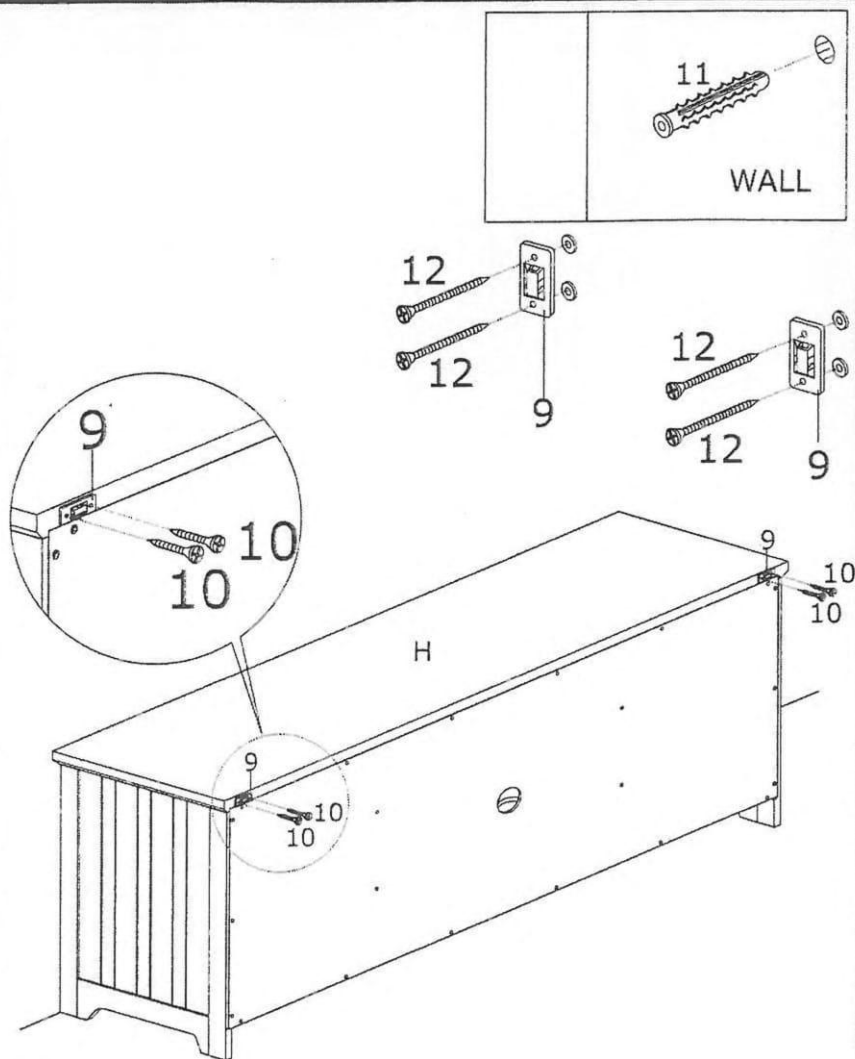 


Figure 7

Step 1. Attach Bracket(9) to the Top Panel(H) with Screw For Bracket(10).

Step 2. Drill 1/4 pilot holes in near proximity of the Bracket(9) attached to the Top Panel(H) and tap the Plastic Anchor(11) into wall.

 Step 3. Fasten Bracket(9) using Screw For Wall(12) into the Plastic Anchor(11).

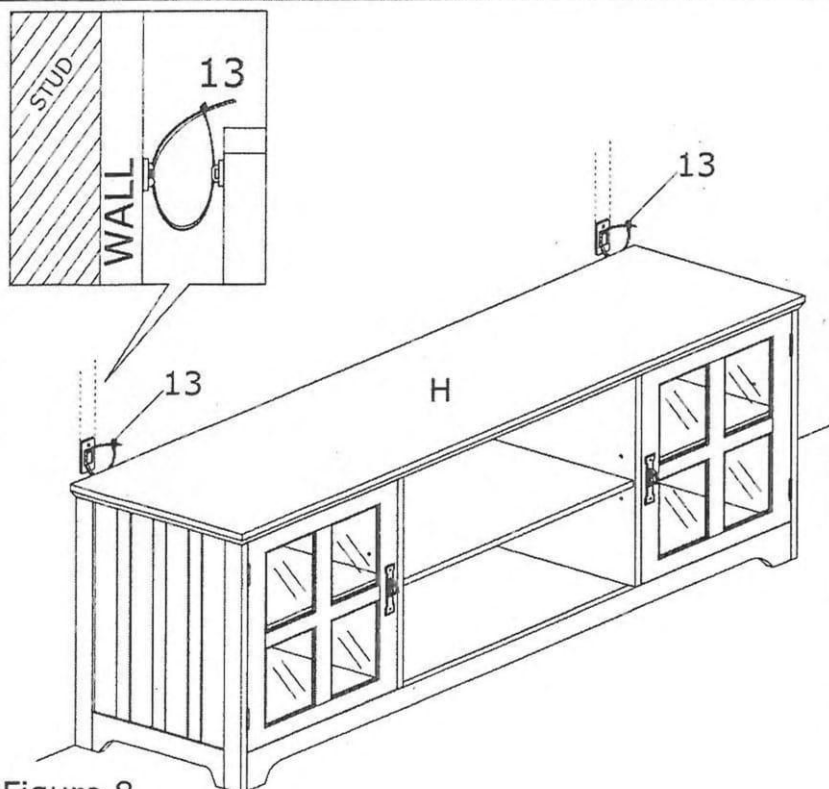

Step 1. Move this item to the fastened wall Bracket(9) and tie in both Bracket(9) with Plastic Chain(13) as shown in diagram.

Figure 8