

INSTALLATION MANUAL


CEILING FAN WITH LIGHT

Model No.: FS6685-602A

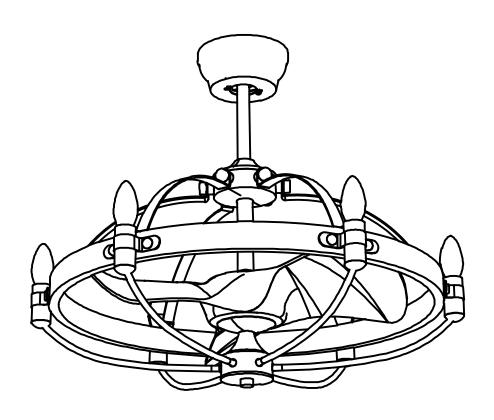

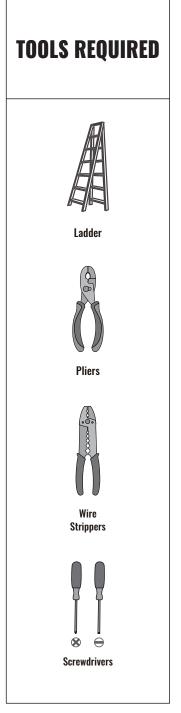



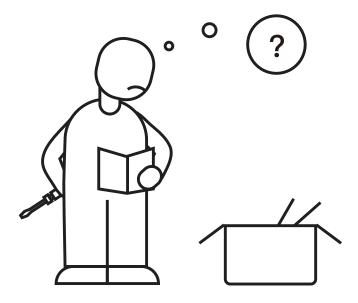


Please contact us with following information:

- 1. Screen shot of your order page, including product picture, name and order ID number.
- 2. Problem details with pictures / short video if possbile.

PACKING LIST

Note: The light bulbs are not included in the packing list.

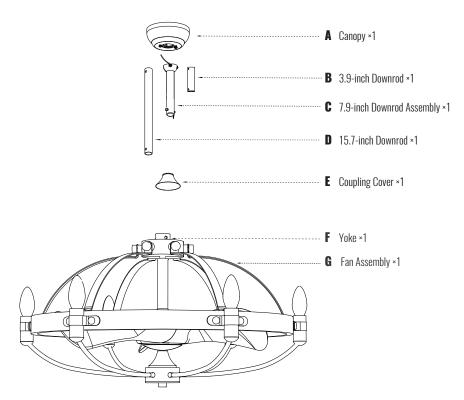

INSTALLATION KIT


AA Mounting Bracket ×1	BB Wire Nut ×3	(C) minimum	CC Outlet Box Screw ×2	DD Flat Washer ×2	Canopy Screw *2
FF Clevis Pin ×1	GG "R" Pin×1		HH Receiver ×1	Plastic Anchor ×2	Remote Holder Screw ×2
KK Set Screw ×2	LL Remote Control ×1		MM Remote Holder ×1	NN Pair of Gloves ×1	

Note:


- $1. \ The \ listed \ quantity \ is \ for \ installation, extra \ hardware \ may \ be \ included.$
- 2. Parts "FF, GG" have been pre-installed on downrod assembly (C).
- 3. Parts "KK" have been pre-installed on yoke (F).
- 4. Remote control requires alkaline battery AAA 1.5V×2pcs (not included).

INSTALLATION


1. Assemble the Downrod And Canopy

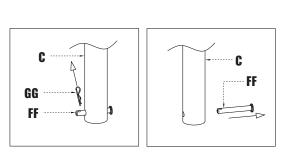

Step 1. Remove the "R" pin (GG) and clevis pin (FF) from the downrod assembly (C).

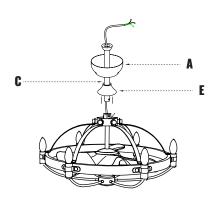


Step 2. Assemble the canopy (A) and coupling cover (E). Route wires from the fan through the downrod assembly (C).

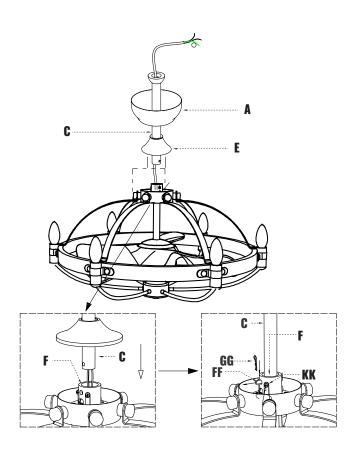


Step 3. Align the holes at the bottom of the downrod assembly (C) with those in the yoke (F).

Step 4. Carefully insert the clevis pin (FF) through the holes in the yoke (F) and downrod assembly (Be careful not to jam the clevis pin against the wires inside the downrod assembly). Insert the "R" pin (GG) into the end of the clevis pin (FF). Tighten the set screws (KK) to secure the downrod assembly (C).

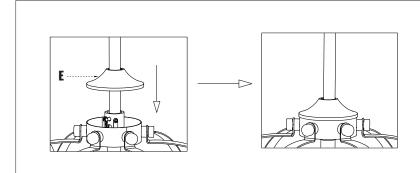


Step 5. Fit the coupling cover (E) onto the fan assembly (G).

2. Mount the Bracket

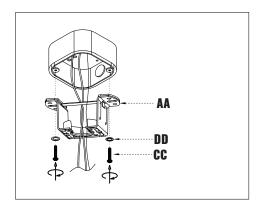

Use outlet box screws (CC) and flat washers (DD) to fix the mounting bracket (AA) to the outlet box.

3. Hang the Fan

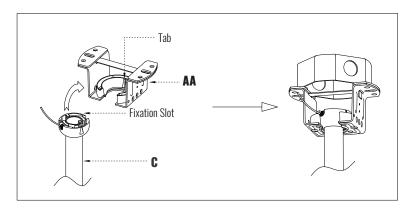


Lift the downrod (C) into the mounting bracket (AA). Rotate the downrod until the tab in the mounting bracket (AA) is seated in the fixation slot in the downrod ball.


4. Connect the Wires

Note

- ① This fan only needs one set of input wires (black, white, and ground wire). Both of the fan and lights will be controlled by the remote controller.
- ② This fan can only be connected to an on/off switch if you have one, not a dimmer switch.

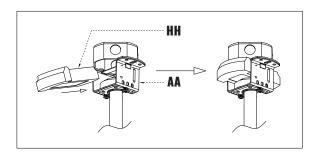


Step 1. Insert the receiver (HH) into the gap of mounting bracket (AA).

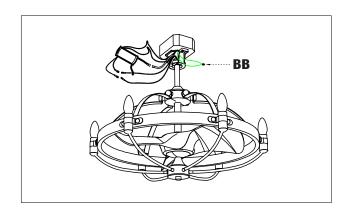

Step 2. Connect the wires on the fan and the receiver (HH).

Step 3. Connect the wires from the receiver to the house supply wires with wire nuts (BB), ground wire (green, green/yellow, or bare copper) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to hot wire. Wrap the connection with electrical tape.

5. Attach the Canopy

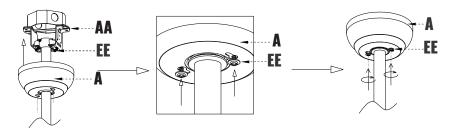


Step 1. Loosen the canopy screws (EE) from the mounting bracket (AA) but do not take off.

Step 2. Push canopy (A) up to the ceiling, making canopy screws (EE) go through the screw holes on canopy (A), then rotate canopy (A) to make it lock onto the canopy screws (EE).


Step 3. Tighten the canopy screws (EE) to secure the canopy (A).

6. Install Light Bulbs

Install light bulbs (Use only E12 bulbs, max 40W each).

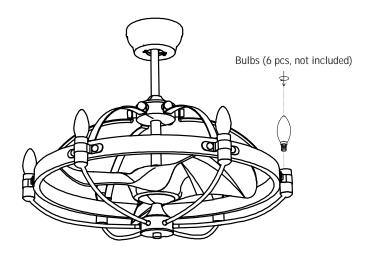


REMOTE CONTROL INSTRUCTIONS

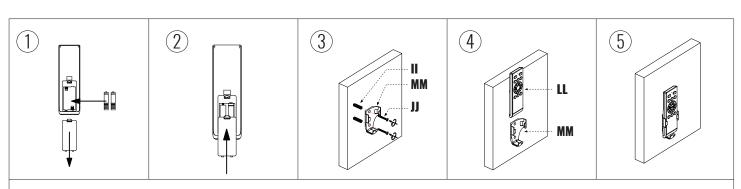

- 1. Insert 2 batteries before using: AAA 1.5V battery x 2pcs (not included).
- 2. Mark and drill screw holes in the wall, then insert the remote holder anchors (II).
- 3. Use remote holder screws (JJ) to fix the remote holder (MM) onto the wall.

REMOTE CONTROL INSTRUCTIONS

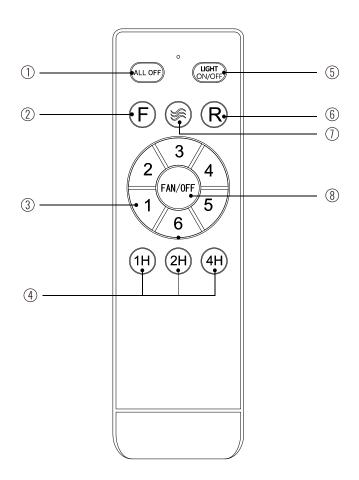

NOTE:

Please insert 2 batteries before using. AAA 1.5V battery x 2pcs (not included)

- 1: Turn off the fan and lights.
- (2)(6): "F" refers forward fan direction."R" refers reverse the fan.
- ③: 1/2/3/4/5/6 for fan speeds.
- 4: 1H/2H/4H for timing the fan.
- (5): Turn on/off the lights.
- (7): Natural wind of the fan, fan speed will change automatically when use this function.
- (8): Turn off the fan.

REMOTE SIGNAL PAIRING:

If the remote control loses signal with the fan, turn off the power from the wall switch, then turn it back on, immediately press button (§) for around 3 seconds. After the fixture beeps or flashes, the reconnection is complete.

Trouble Shooting

1. Fan doesn't work

- Make sure the fixture is connected to an ON/OFF wall switch, not dimmer switch.
- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

2. Lights Do Not Light Up / Flicker / Noisy Operation

- Make sure the fixture is connected to an ON/OFF wall switch, not dimmer switch.
- Check your power and switch to make sure it's power on.

3. Noisy Operation

- Re-tighten all screws on bracket.
- Check to see if any of the blades are cracked. If so, replace the blades.

4. Remote does not work

- Make sure the battery is installed correctly.
- Pair the remote control again (See page 6).
- Install 2 new batteries.

Clean And Care

To clean, wipe the fixture with soft cloth. Spray from chemical cleaners can discolor the finish of the fixture. Do not use scouring pads, powders, steel wool or abrasive paper to clean this fixture.

Ordering Parts

Keep this manual for future reference, and in case replacement parts are needed. Available parts can be ordered from place of purchase. Use exact wording from diagrams when ordering parts.