 
 


# MODEL: GT24008

 
 
 
 
 
 
 
 
 
 

 
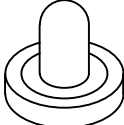 
 
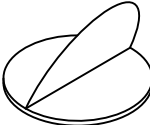 
 
 

 


 
 
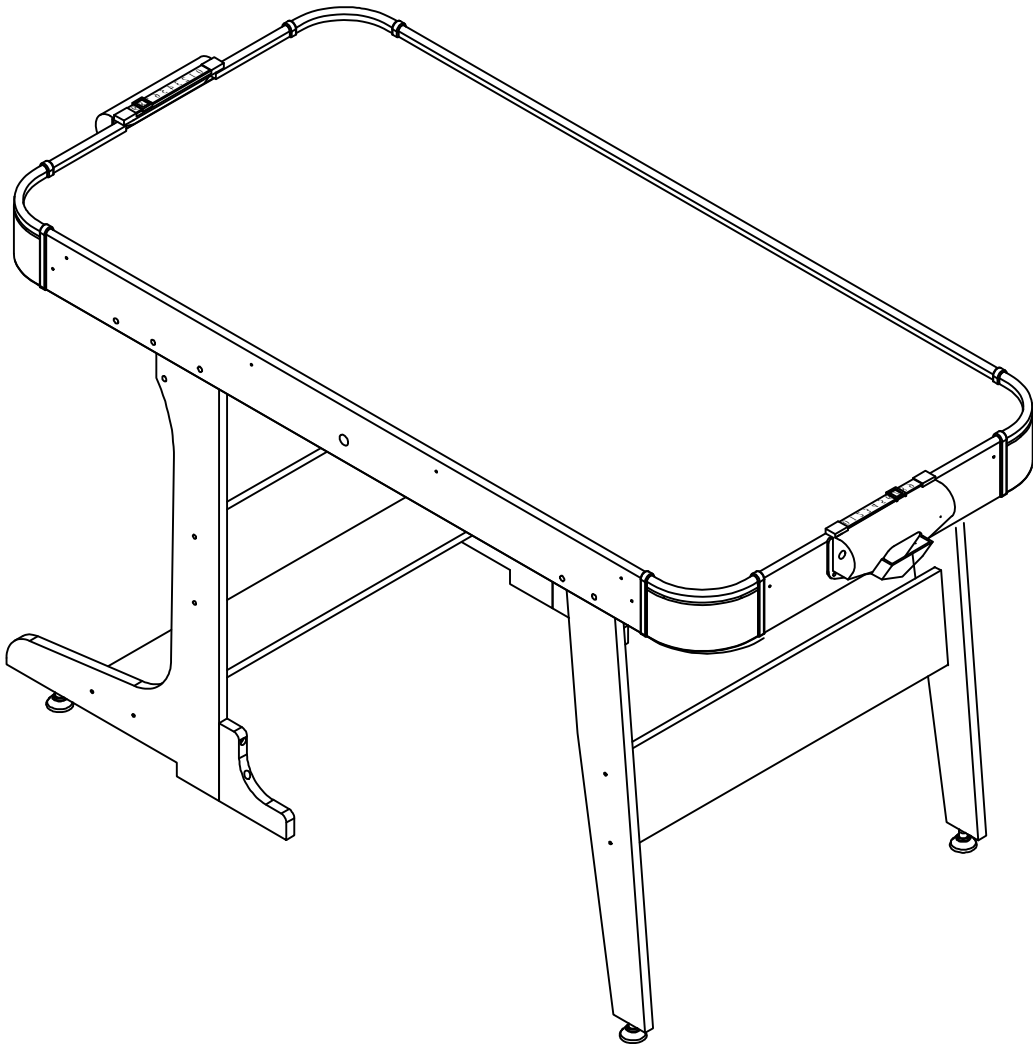 


 



Missing parts, damages, and any other problems, please contact us via email.

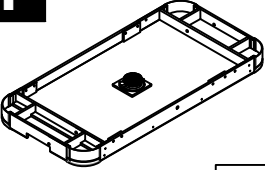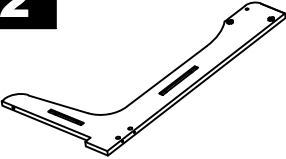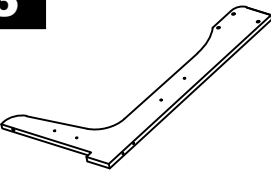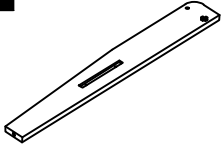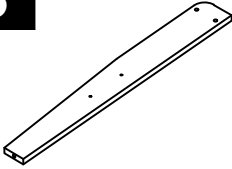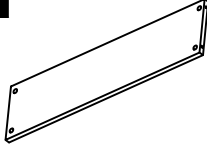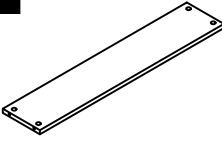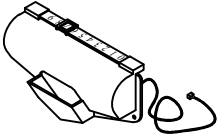

 

 

 




[raykeepgoods@outlook.com](mailto:raykeepgoods@outlook.com)

# GT24008 PARTS LIST

 
|  |  |  |  |
|--|--|--|--|
| <b>1</b><br><br>Hockey Cabinet x1     | <b>2</b><br><br>Leg Right x1              | <b>3</b><br><br>Leg Left x1                      | <b>4</b><br><br>Leg Right x1              |
| <b>5</b><br><br>Leg Left x1           | <b>6</b><br><br>Leg Panel-A x2            | <b>7</b><br><br>Leg Panel-B x1                   | <b>8</b><br><br>Mounting Plate x2         |
| <b>9</b><br><br>Goal box x2           | <b>10</b><br><br>Leg Leveller x4          | <b>11</b><br><br>Electronic scorer x1             | <b>12</b><br><br>Adapter x1               |
| <b>13</b><br><br>Hockey striker x2  | <b>14</b><br><br>Hockey Puck x2         | <b>15</b><br><br>Felt Pad x2                   | <b>A1</b><br><br>Wrench x1              |
| <b>A2</b><br><br>Open End Wrench x1 | <b>A3</b><br><br>1/4"x1-1/2" Bolt x4    | <b>A4</b><br><br>1/4"x2" Bolt x4               | <b>A5</b><br><br>1/4" Washer x8         |
| <b>A6</b><br><br>Lock Nut x4        | <b>A7</b><br><br>4x35mm Screw x12       | <b>A8</b><br><br>4x55mm Screw x4               | <b>A9</b><br><br>4x12mm Screw x4        |
| <b>A10</b><br><br>3x15mm Screw x2   | <b>P1</b> Pre-installed<br><br>Motor x1 | <b>P2</b> Pre-installed<br><br>Apron Corner x4 | <b>P3</b> Pre-installed<br><br>T-Nut x6 |

**ASSEMBLY INSTRUCTIONS:**

1. Find a clean, level place to begin the assembly of your Air Hockey Table. The table will be assembled upside down and then turned over on its legs once the assembly completed. This game table is heavy, and turning it over will require at least two strong adults.
2. Remove all the parts from the box and verify that you have all of the listed parts as shown on the parts list. Carefully cut or tear the four corners of the box so that the bottom of the box can be used as your work surface.

 
 
|    |   |    |
|----|---|----|
| 1  |    | x1 |
| 2  |    | x1 |
| 3  |    | x1 |
| 4  |   | x1 |
| 5  |  | x1 |
| A3 |  | x4 |
| P1 |  | x1 |
| P2 |  | x4 |
| P3 |  | x6 |

**Fig 1**

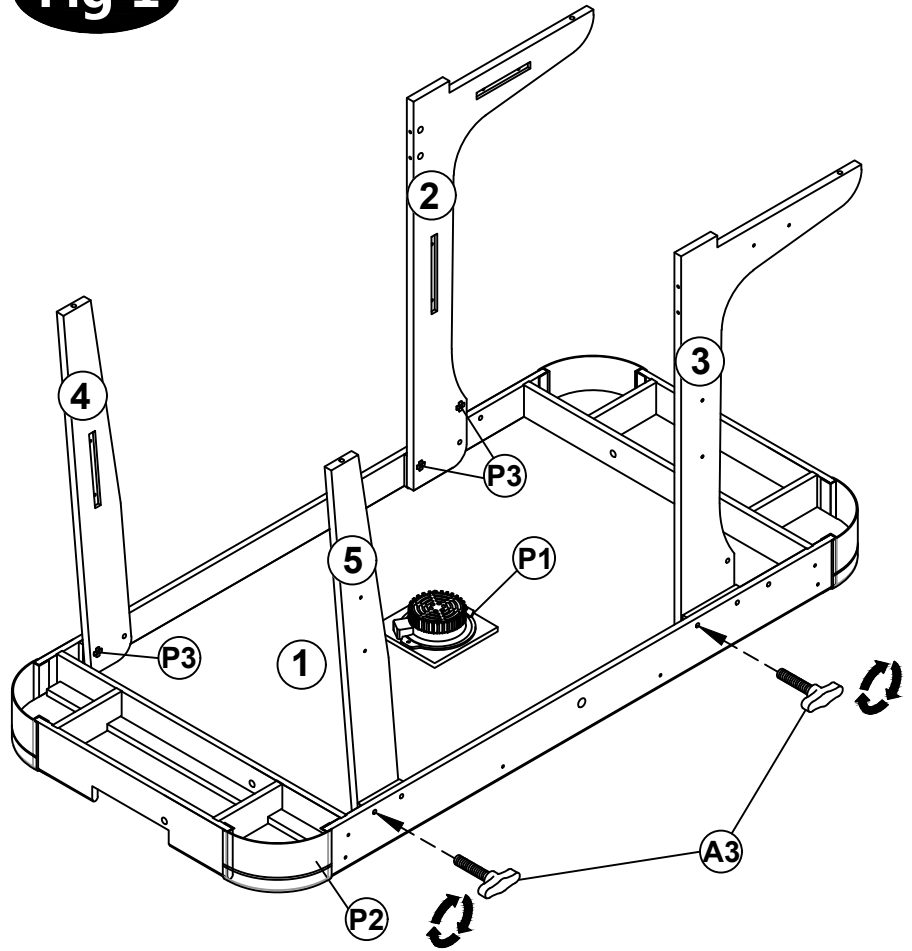

 
 
**Fig 1**

3. Using (A3) Bolt attach Legs to the (1) Hockey Cabinet. *Note:* (A3) Bolt corresponds to holes with metal inside.

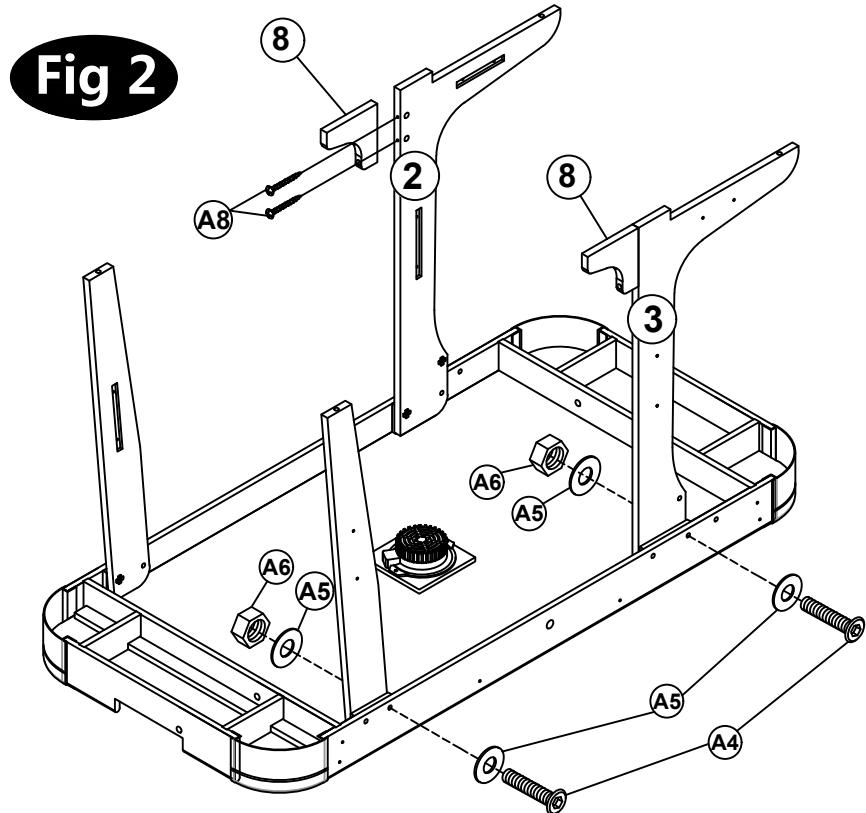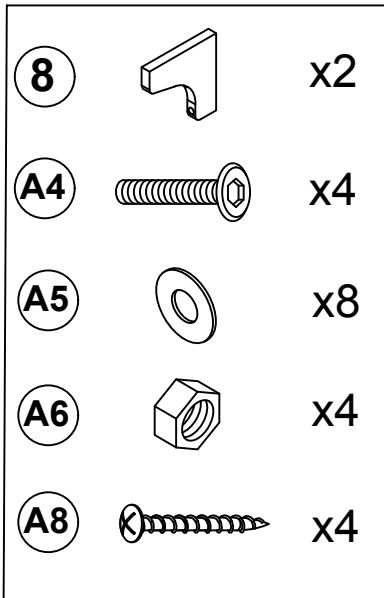

 
**Fig 2**

- Using (A4) Bolts and (A5) Washer lock into the other hole in the Legs. Tighten the bolts using another (A5) Washer and (A6) Nuts on the other side of legs.
- Attach the Mounting Plate (8) to the Legs (2 & 3) using two Screws (A8) per Mounting Plate. See FIG. 2.

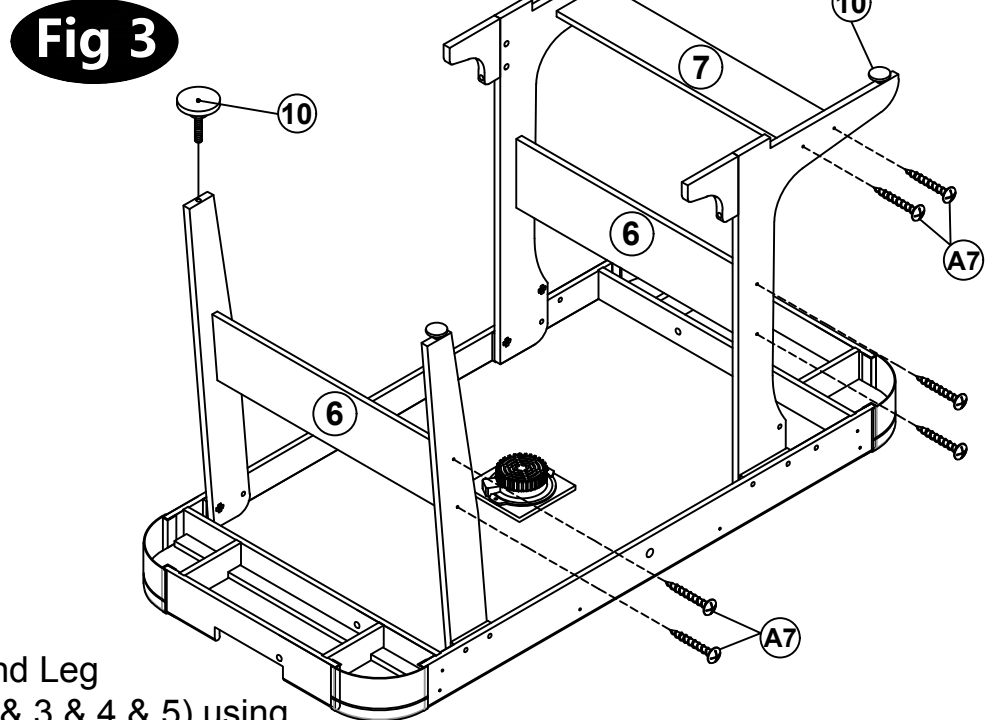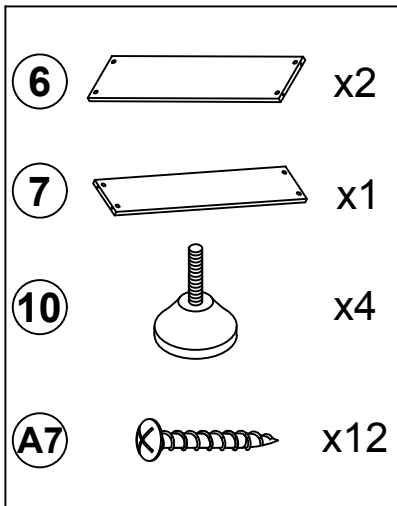

**Fig 3**

- Attach Leg Panel-A (6) and Leg Panel-B (7) to the Leg (2 & 3 & 4 & 5) using four screws (A7) per Leg Panel.
- Screw the Leg Levelers (10) into the bottom of each Leg (2 & 3 & 4 & 5).

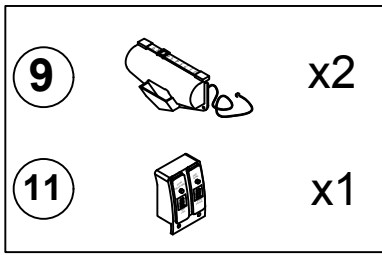 


**Fig 4**

**Fig 4**

 
8. Thread the wires from the Goal Boxes (9) through the openings of the end aprons and supports of the playfield to the opening of the side apron and use the Velcro Straps to fix the Scorer Wires. See FIG. 4.

9. Insert the Scorer Wires into the Electronic Scorer (11).

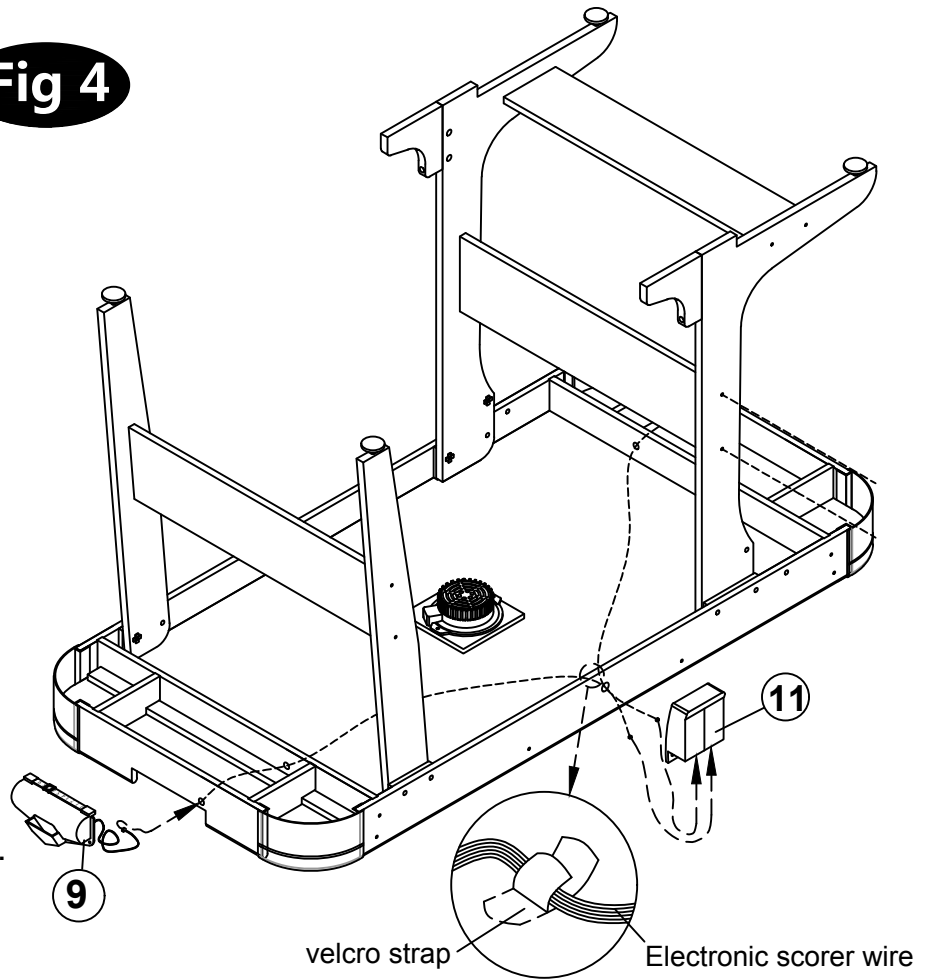

10. Lift the table assembly from the floor with two adults, turn it over, and set the table on its leg in the location where you will play.

**Go back and make sure that all connections are tight.**

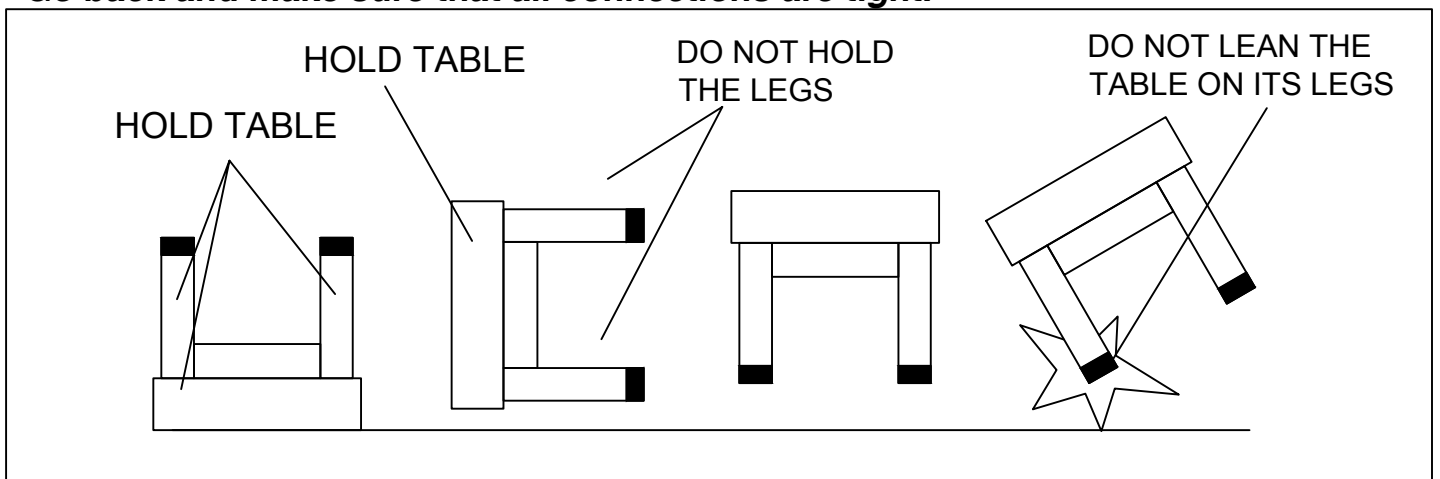


**CAUTION:** Two strong adults are recommended to turn the table over as shown.


1. Lift the table off the ground.
2. Turn the table over.
3. Place it on all four feet at the same time on the ground.

|     |  |    |
|-----|--|----|
| 12  |  | x1 |
| 13  |  | x2 |
| 15  |  | x2 |
| A9  |  | x4 |
| A10 |  | x2 |


**Fig 5**

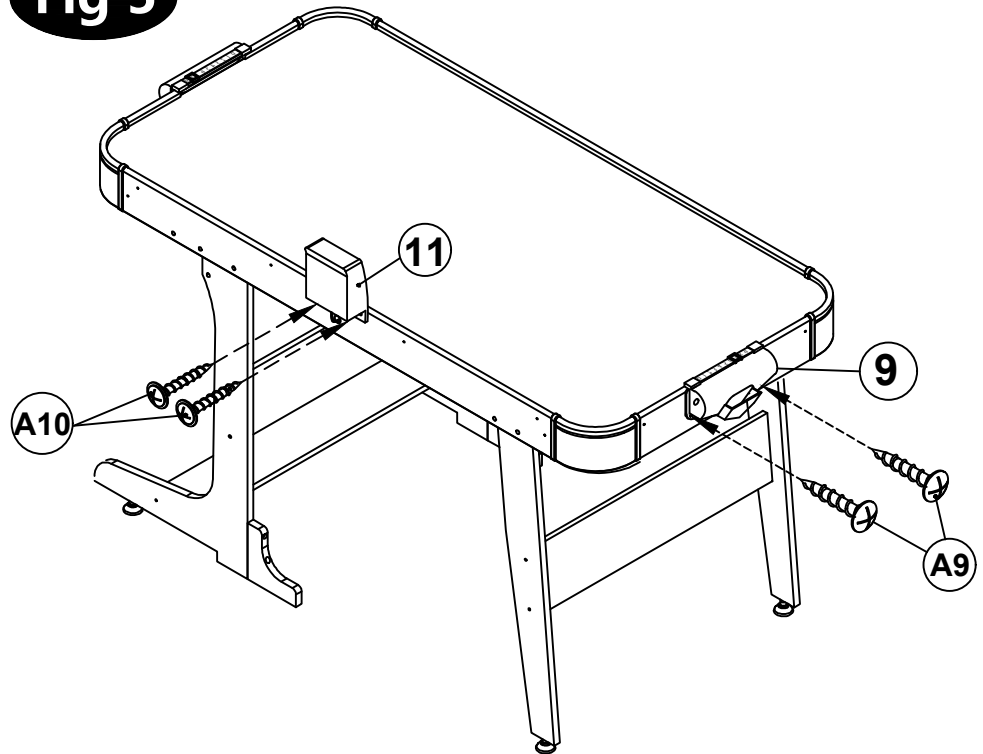 

**Fig 5A**

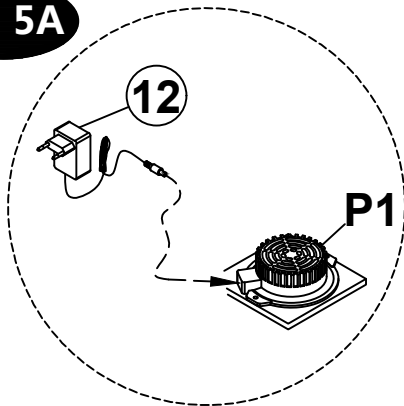 


**Fig 5B**

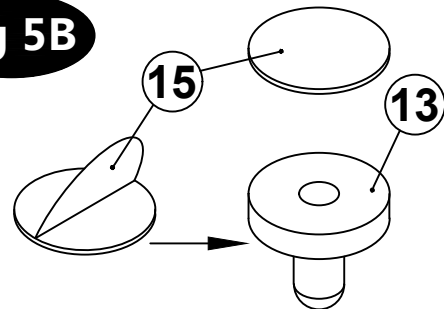  

 
## Fig 5

11. Attach the Goals Boxes (9) to each end apron using two Screws (A9) per Goal Box.
12. Attach the Electronic Scorer (11) to the side apron in the pre-drilled holes using two Screws (A10).
13. Insert the Adaptor (12) into the DC Motor (P1) .See FIG. 5A .
14. Tear off the backside papers of the Felt Pads (15) and stick them onto the bottom of the Pushers (13).See FIG. 5B .

## How To Made The Table Stand Up

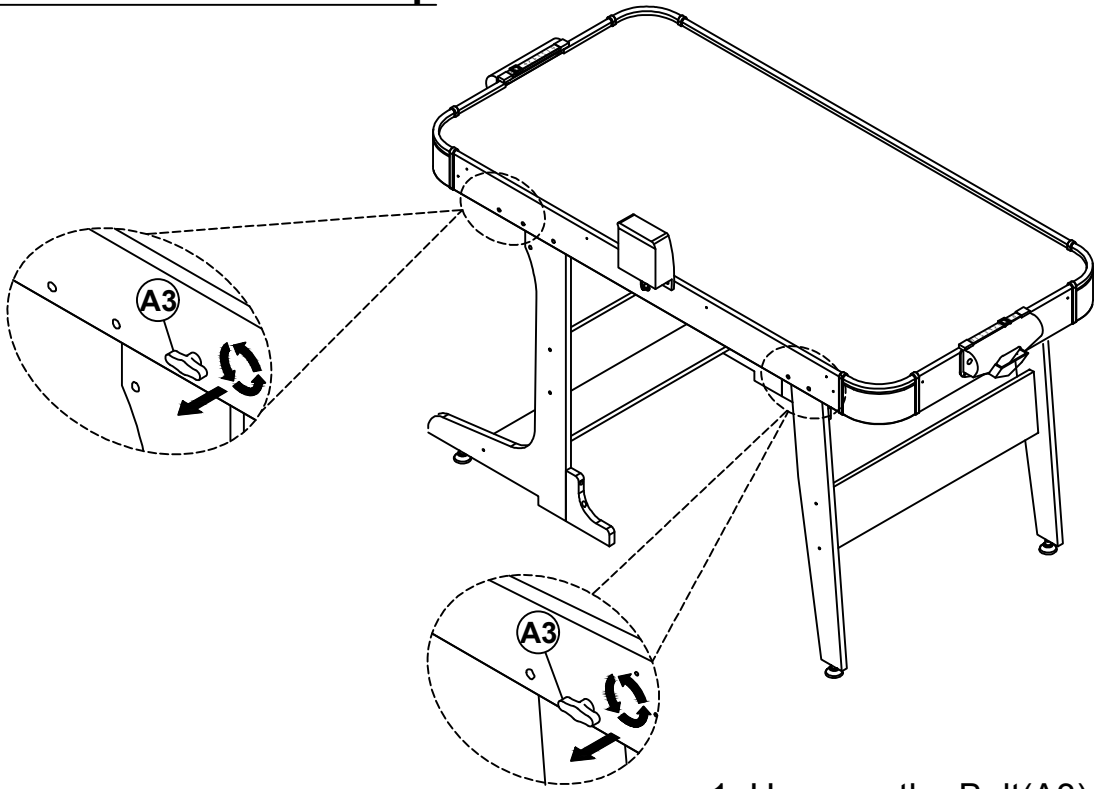

1. Unscrew the Bolt(A3).
2. Pick up the part of the table near the straight leg and slowly lift it up.
3. Then, when the table is flipped to the vertical position, use the Bolt(A3) to secure the support feet.

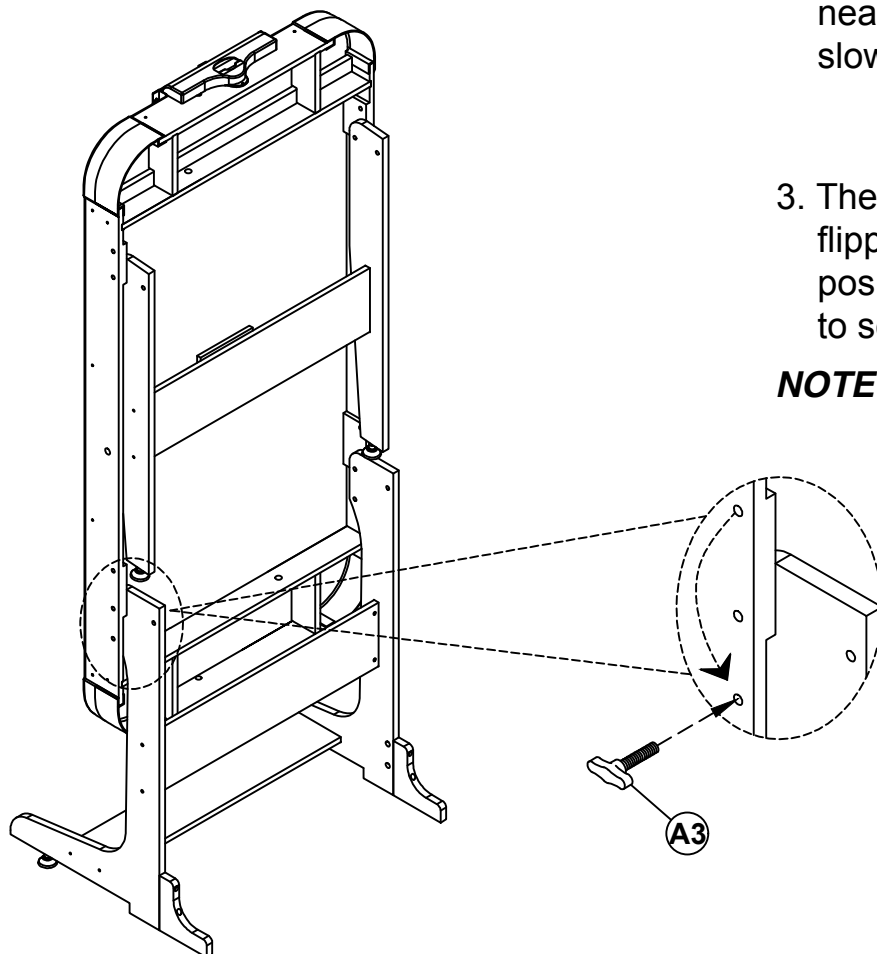

**NOTE: Be careful not to clip your fingers.**

## Electronic Scorer Operation



### **⚠ WARNING: !**

- 1) Require 2 pcs “AAA” Batteries (Not included).
- 2) Do not mix old and new batteries.
- 3) Do not mix alkaline, standard (carbon zinc), or rechargeable (nickel-cadmium) batteries.

### **ELECTRONIC SCORER OPERATION**

#### **1. Install Batteries**

Battery Box: Remove the battery cover and insert 2 “AAA” Batteries into the battery box. ( 2 “AAA” Batteries not included.) When HOME/VISITOR indicates “0”, the game can start.

#### **2. Reminding:**

- a. Batteries must be installed according to the correct polarization (+ and -) required.
- b. Please clean the battery contacts and also those of the device prior to battery installation.
- c. If the game will not be used for a long period of time, we recommend that the batteries should be removed.

3. When the “HOME” player scores a point, the “HOME” indicator will show 1 point; when the “VISITOR” player scores a point, the “VISITOR” indicator will show 1 point.
4. The first player to reach 10 points wins the game, and the winner’s indicator will stay at 9 points and flash for several seconds.
5. After the game, you can press the “RESET” button to start a new game and the HOME/ VISITOR will indicate “0”.

#### **Note:**

1. You can press the “RESET” button at any time, to set the scorer back to the beginning status.
2. You can press “ON/OFF” at any time to turn off the Press “ON/OFF” again to turn it back on.