



Optional LED Light Fixture

Ceiling Fan Accessory
Designed to Coordinate with the Ceiling Fan

Instruction Manual

"CAUTION-RISK OF FIRE"
CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.


Special Notice: This appliance is equipped with a "Wattage Limiting Device" required by the United States Department of Energy. The device has been installed at the factory and can not be removed.

1. SAFETY RULES

WARNING! RISK OF ELECTRIC SHOCK

All electrical connections must be made in accordance with local codes, ordinances, or national codes. If you are unfamiliar with installing electrical wiring, secure the services of a qualified electrician. Before starting this installation, disconnect the power by turning off the circuit breaker at your main panel or removing the fuse at the fuse block. Turning the power off using the ceiling fan switch (speed control on/off) is not sufficient to prevent electrical shock.

NOTE: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care are factors which cannot be built into any product. These factors must be supplied by the person (s) caring for and operating the unit.

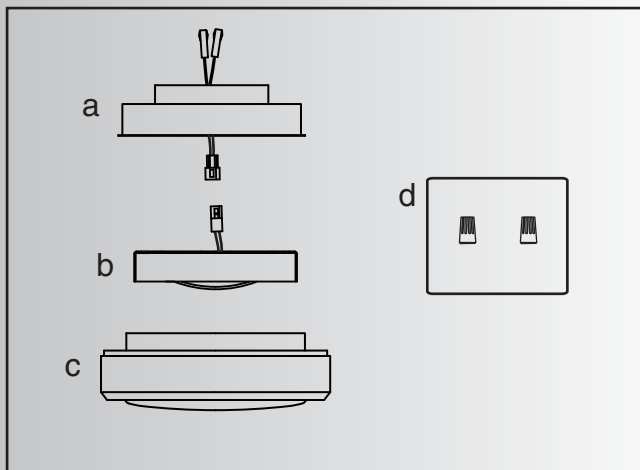

2. PACKAGE CONTENTS

Unpack your fan and check the contents. You should have the following items:

- a. Light plate
- b. LED Light kit
- c. Glass shade
- d. Part bag contents:
 - wire nuts (2)

LED Light Fixture

2

3. REMOVING THE DECORATIVE BOTTOM COVER & BOTTOM COVER

CAUTION: Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at the fuse box. Turning power off using the fan switch is not sufficient to prevent electric shock.

Step 1. Remove the Decorative bottom cover from the ceiling fan by turning bottom cover counterclockwise. (see figure 1)

Step 2. Remove the bottom cover by loosening two of the mounting screws and removing the third, all located on the mounting plate.

Rotate the bottom cover counterclockwise so the mounting screw heads are at the "large" end of the keyhole slots and remove the housing. (see figure 2)

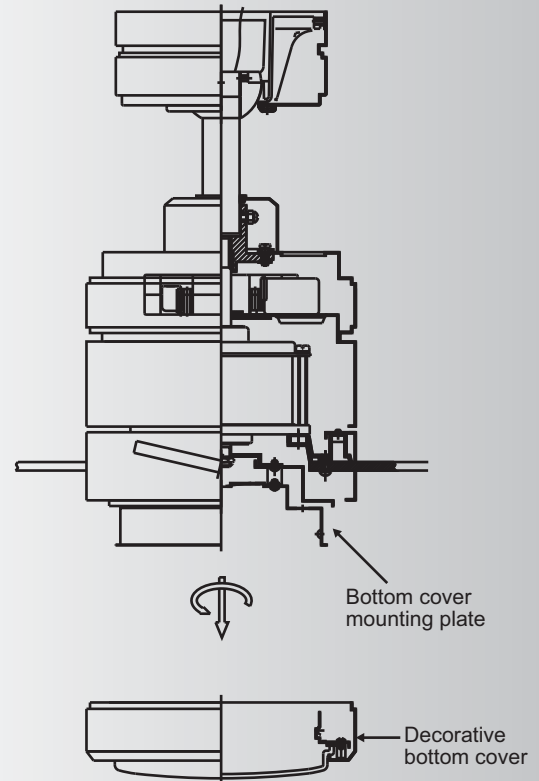


Fig. 1

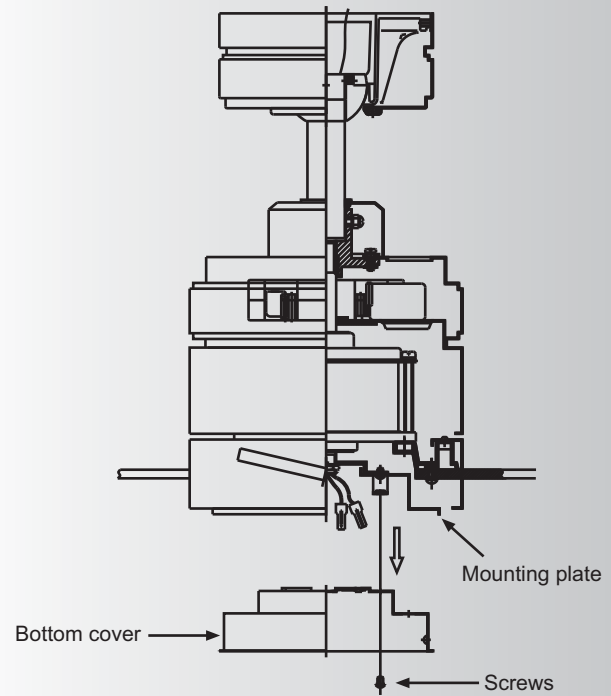


Fig. 2

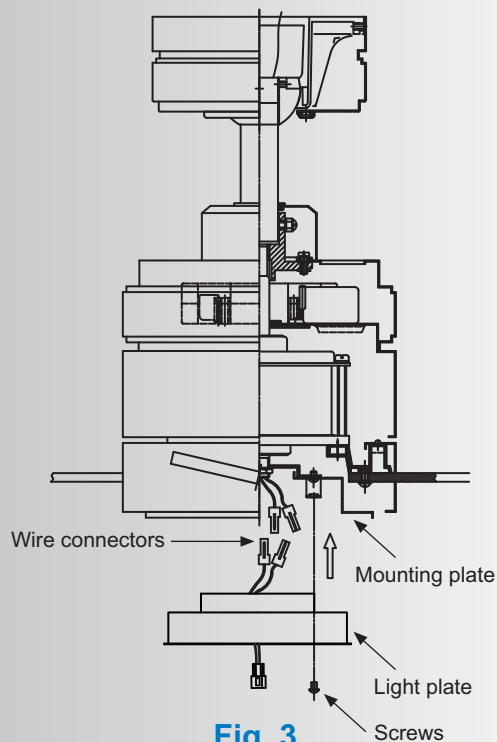


Fig. 3

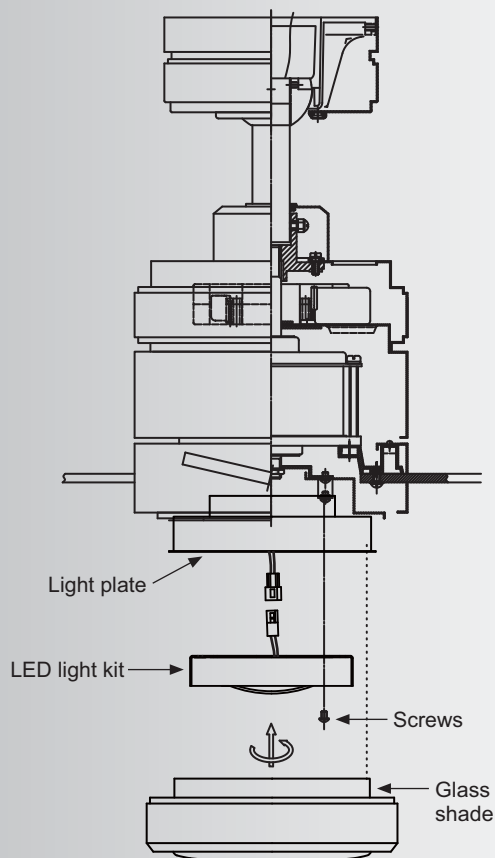


Fig. 4

4. INSTALLING THE LIGHT FIXTURE

1. Raise and hold the light plate close to the mounting plate of the ceiling fan. Attach the fixture wires to the fan by pushing the wire connectors together. White from the fixture to the White wire from the fan. Blue wire from the fixture to the Black wire from the fan. (Fig 3)

2. Carefully push all wires back into the mounting plate, then install the light plate onto the mounting plate with 3 screws provided. Be sure to tighten all screws. (Fig. 3)

3. While holding the LED light kit under the fan motor assembly, make the 2-pin wire connections:

- Red to white
- Black to black

4. Carefully push all wires back into the light plate, then install the LED light kit onto the light plate with 3 screws provided. Be sure to tighten all screws. (Fig. 4)

5. Attach the glass shade to the light plate by turning the glass shade clockwise. DO NOT OVER TIGHTEN. (Fig. 4)