


## EASEL AND IDEAWALL ASSEMBLY INSTRUCTIONS

### Models

NEX203ME-CM, NEX203ME-EM,  
NEX203ME-PM, NEX203ME-SM,  
NEX206MW-CM, NEX206MW-EM,  
NEX206MW-PM, NEX206MW-SM


 Before discarding the packaging, inventory the components and fasteners. (Some may be taped to the foam packaging.)

## FASTENERS AND HARDWARE

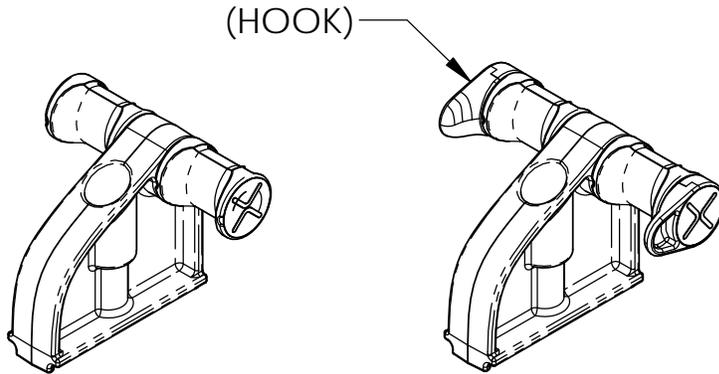


TABLET HANGER  
2 EA.


TABLET HANGER  
(WITH HOOKS)  
2 EA.

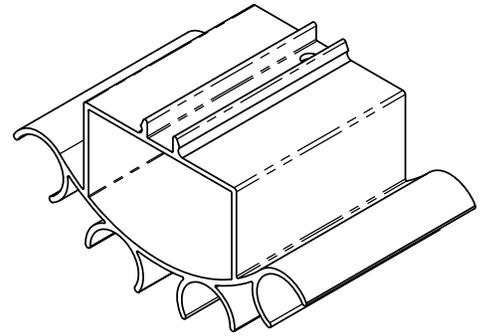


MARKER/ERASER  
HOLDER  
1 EA.

 

#10 X 2 1/2" PAN HEAD  
MACHINE SCREW  
5 EA.

 

#10 X 1 1/2" PAN HEAD  
TAPPING SCREW  
4 EA.

 

#12 X 1" PAN HEAD  
MACHINE SCREW  
8 EA.


## RECOMMENDED TOOLS:

CORDLESS DRILL - 12 VOLT OR BETTER

#2 AND #3 PHILLIPS SCREWDRIVER BITS


SCREWDRIVER BIT EXTENDER

# EASEL AND IDEAWALL COMPONENTS

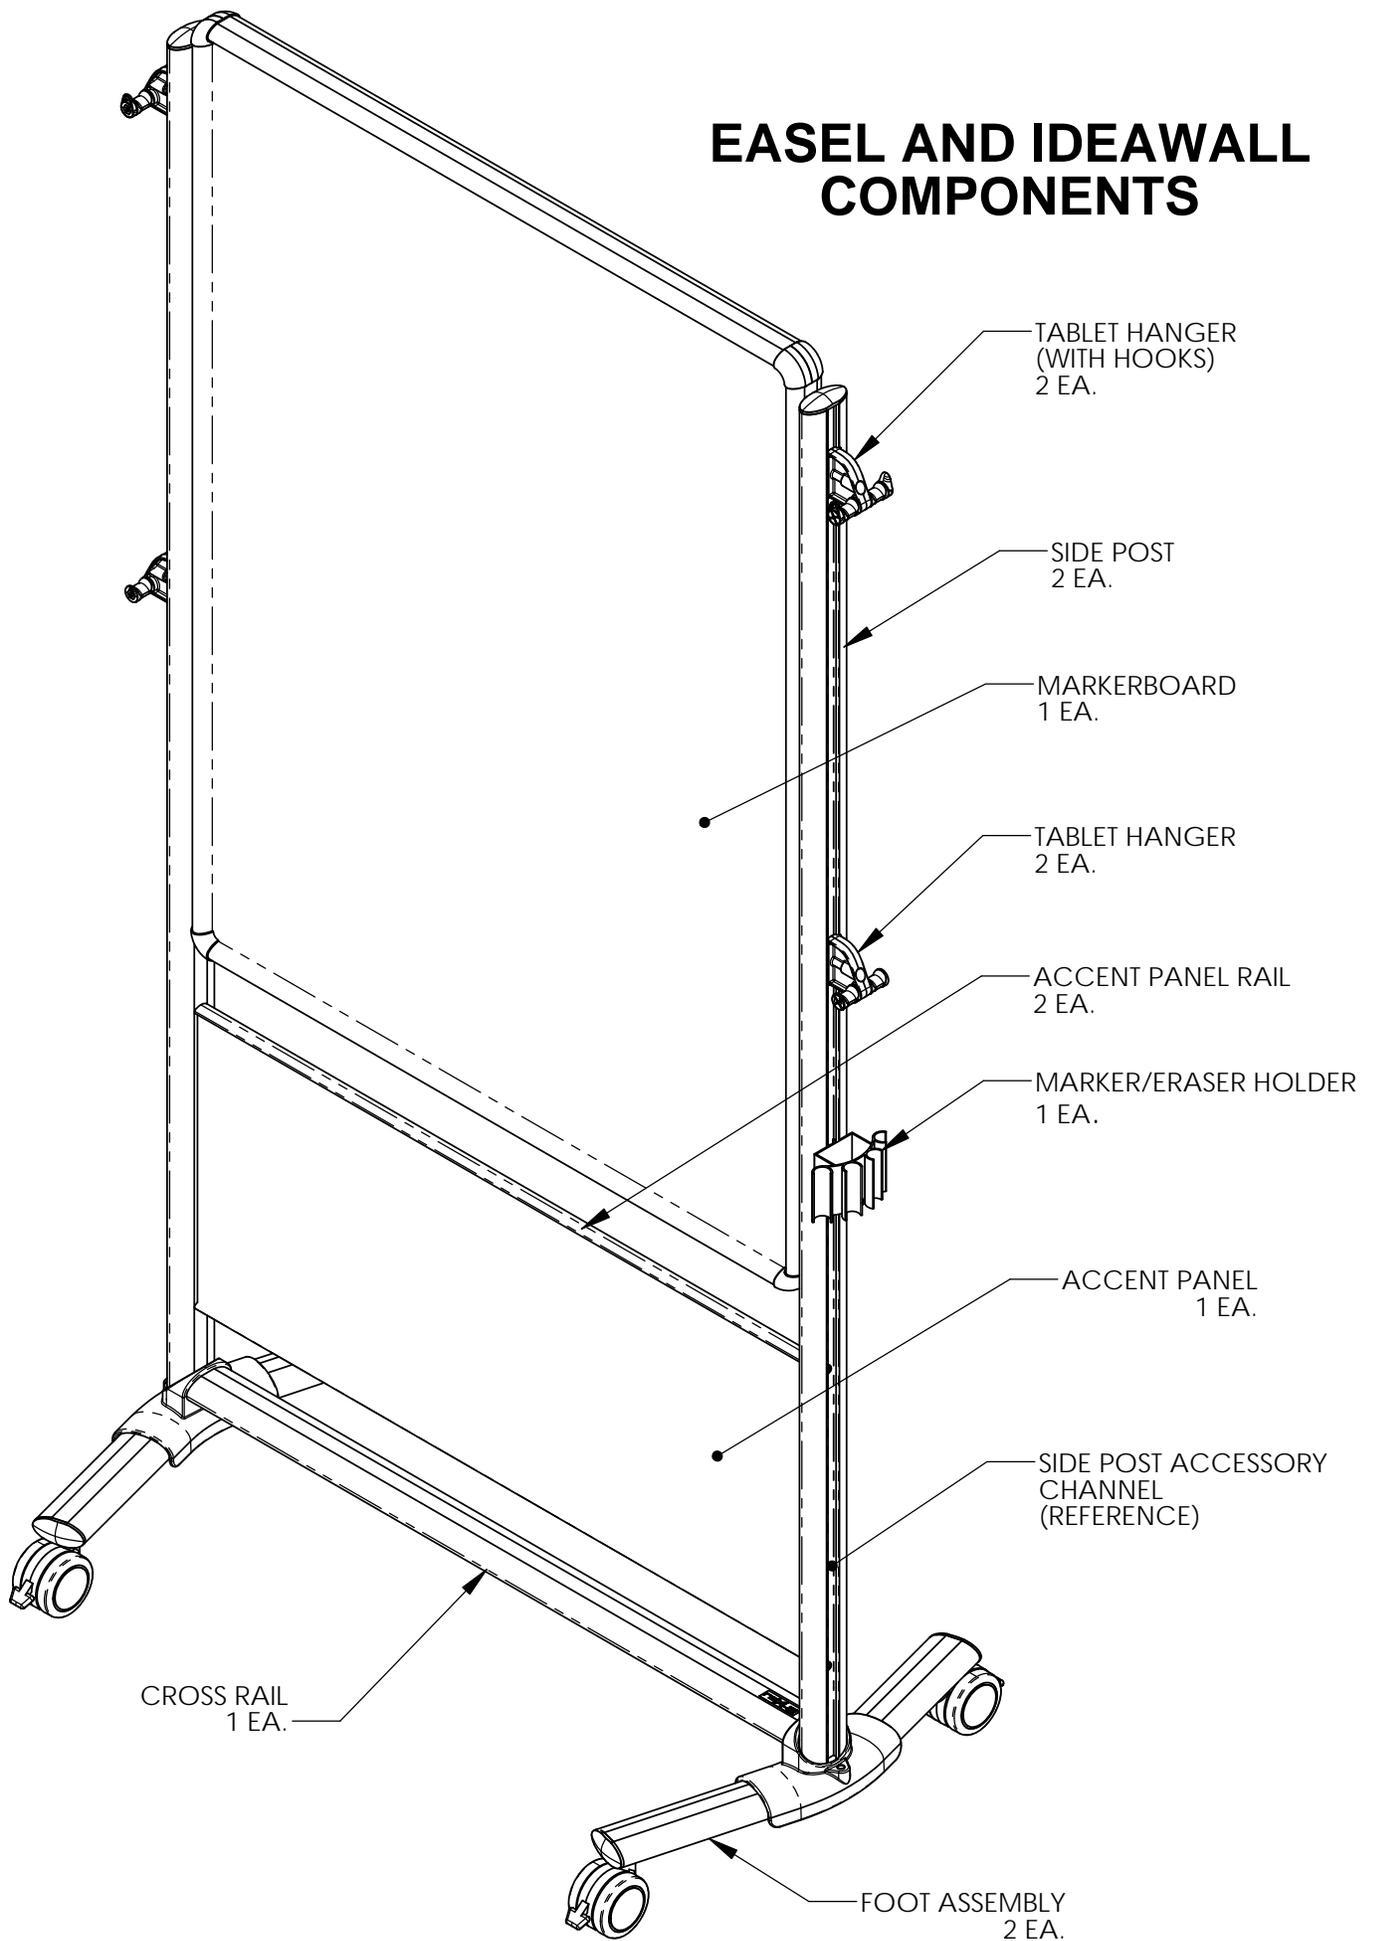




**3.** Attach the foot assemblies to the cross rail, as shown.

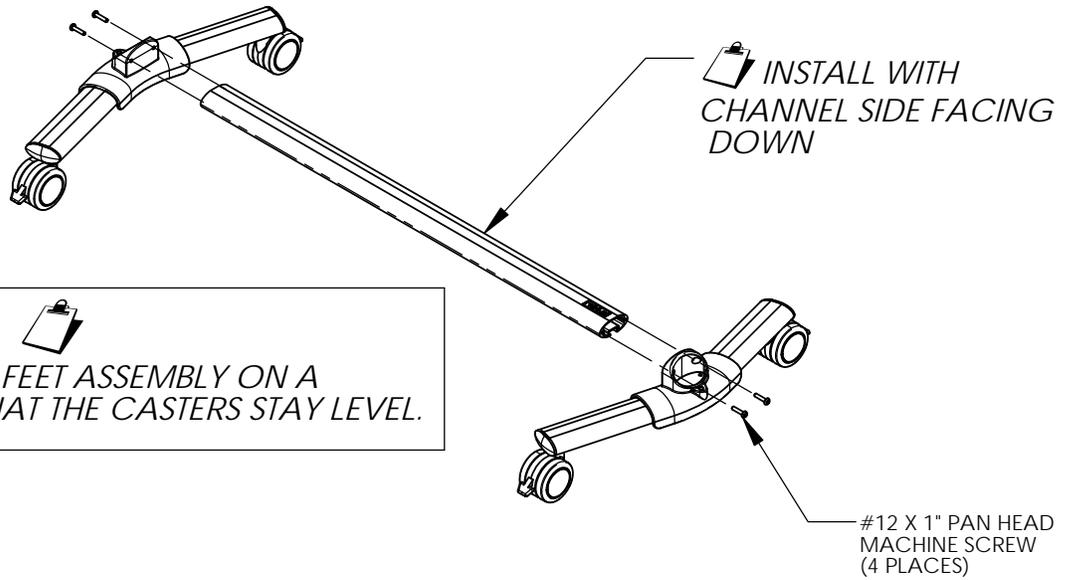

⊕ USE #3 DRIVER BIT WITH A BIT EXTENSION


**4.** Attach the feet assembly to the side posts, as shown.

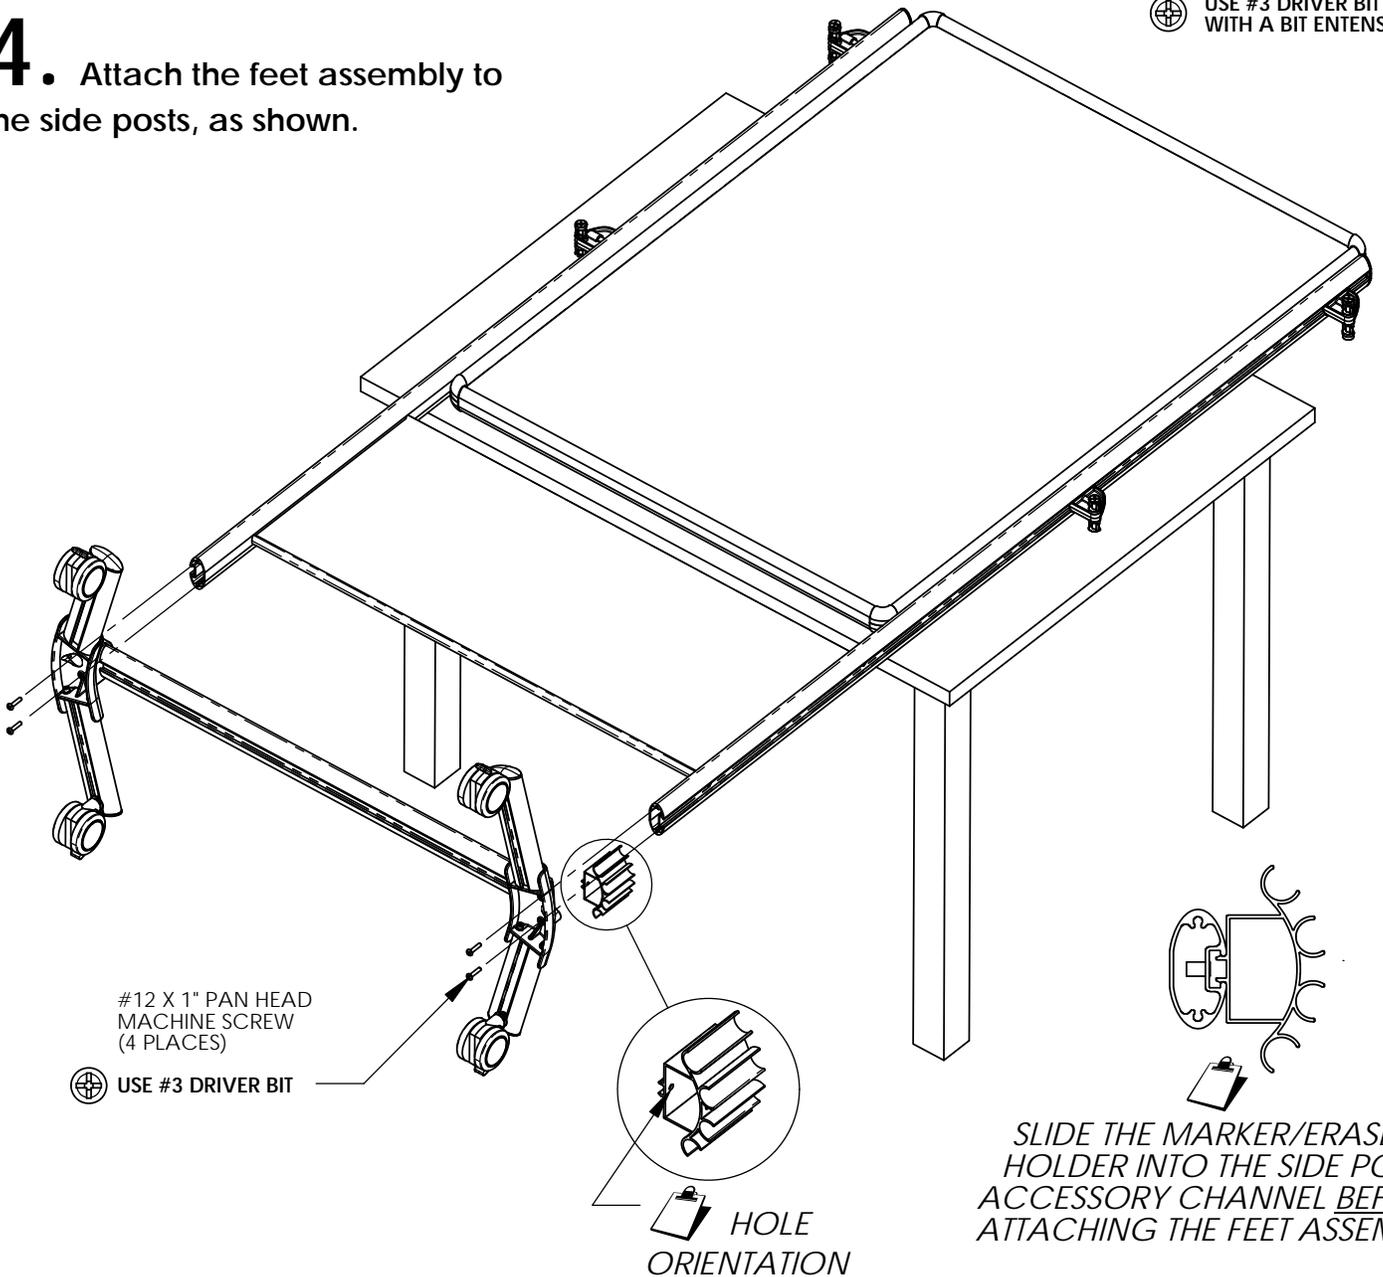

#12 X 1" PAN HEAD MACHINE SCREW (4 PLACES)  
⊕ USE #3 DRIVER BIT

📄 HOLE ORIENTATION


📄 SLIDE THE MARKER/ERASER HOLDER INTO THE SIDE POST ACCESSORY CHANNEL BEFORE ATTACHING THE FEET ASSEMBLY.

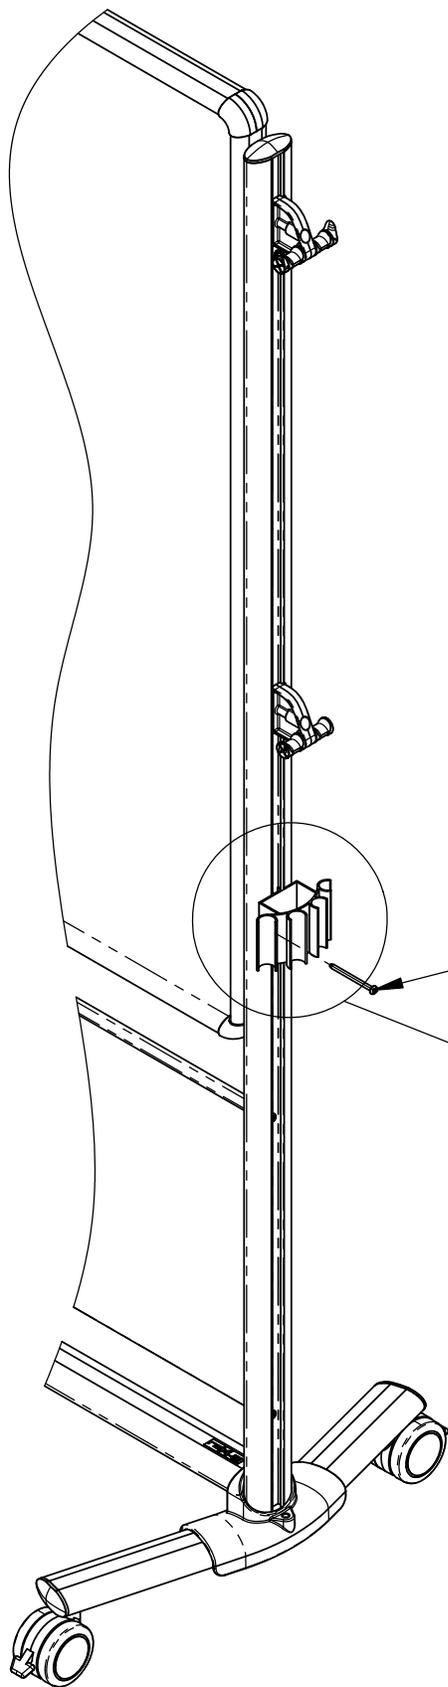

**5.** Slide the marker/eraser holder up into position above the accent panel and attach with the screw as shown.

#10 X 2 1/2" PAN HEAD MACHINE SCREW

⊕ USE #2 DRIVER BIT

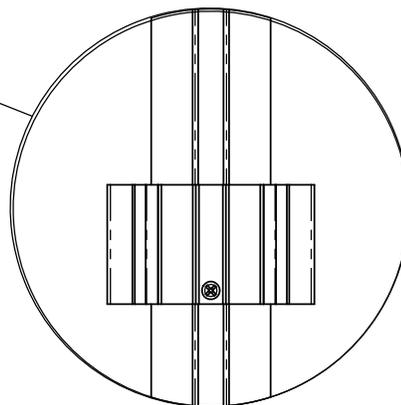

**6.** Tighten all screws to complete the assembly.