


 

 
 
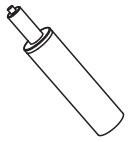
 
 

 
 















Office Chair

 User Manual

PACKING LIST

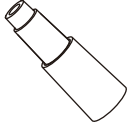
A×1 	B×1 	Z×1 	U×1 	C×1 
D×5 	P×1 	F×1 	GA×2 	Q×2 
GB×2 	H×5 	N×1 	M×1 	R×1 
S×1  5x10mm	K×4  6x20mm	Y×8  6x25mm	L×10  6x14mm	E×4  8x25mm
W×6  6x30mm	J×6  6x25mm	X×1 		

INSTALLATION

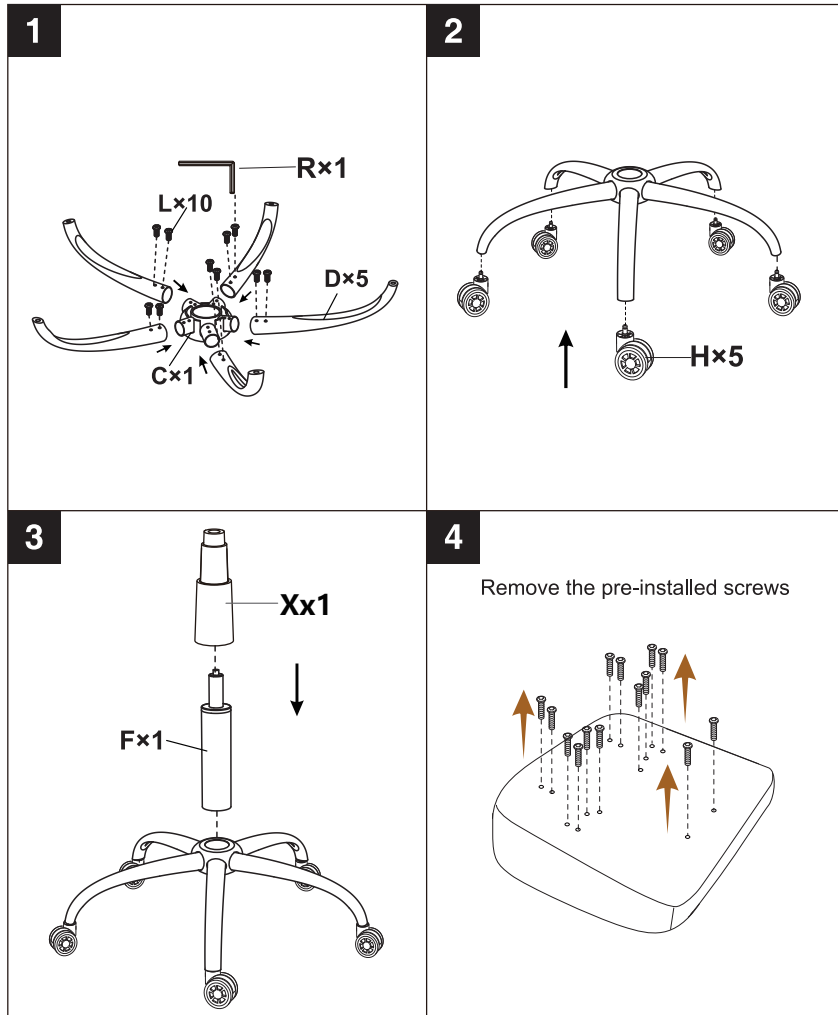


Note: All screws have been pre-assembled to the accessories. Please remove them from the accessories before assembling.

INSTALLATION

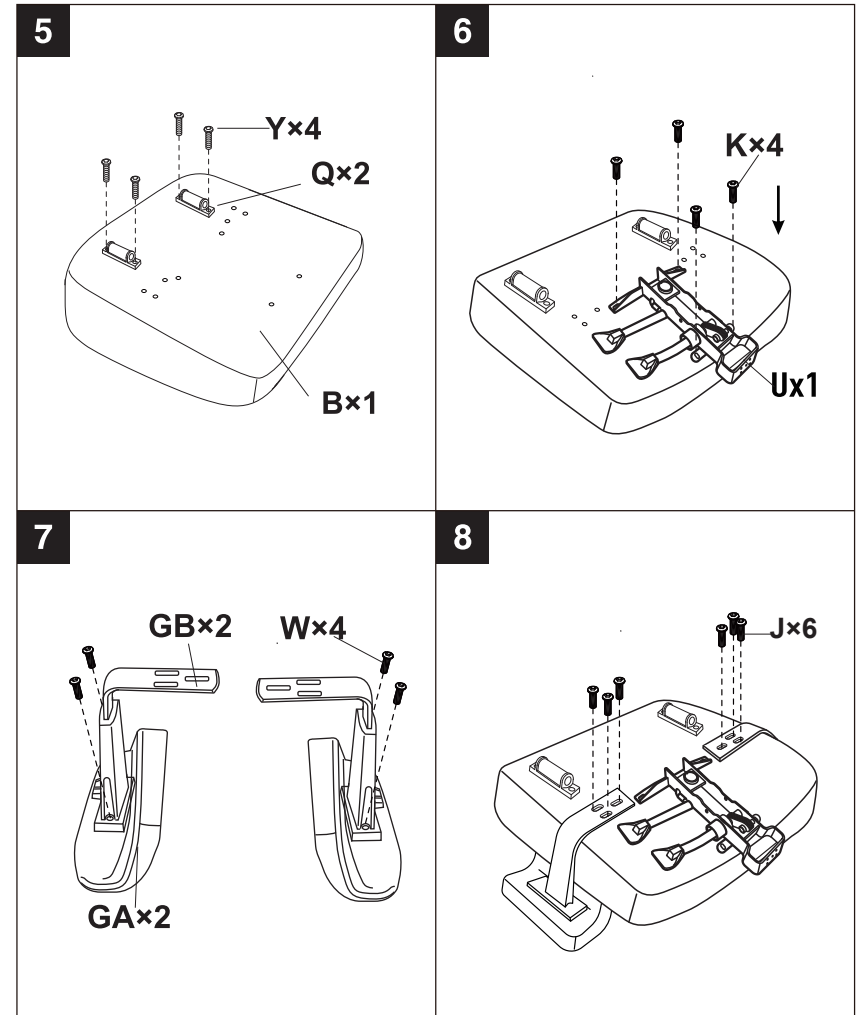


Note: All screws have been pre-assembled to the accessories. Please remove them from the accessories before assembling.

INSTALLATION

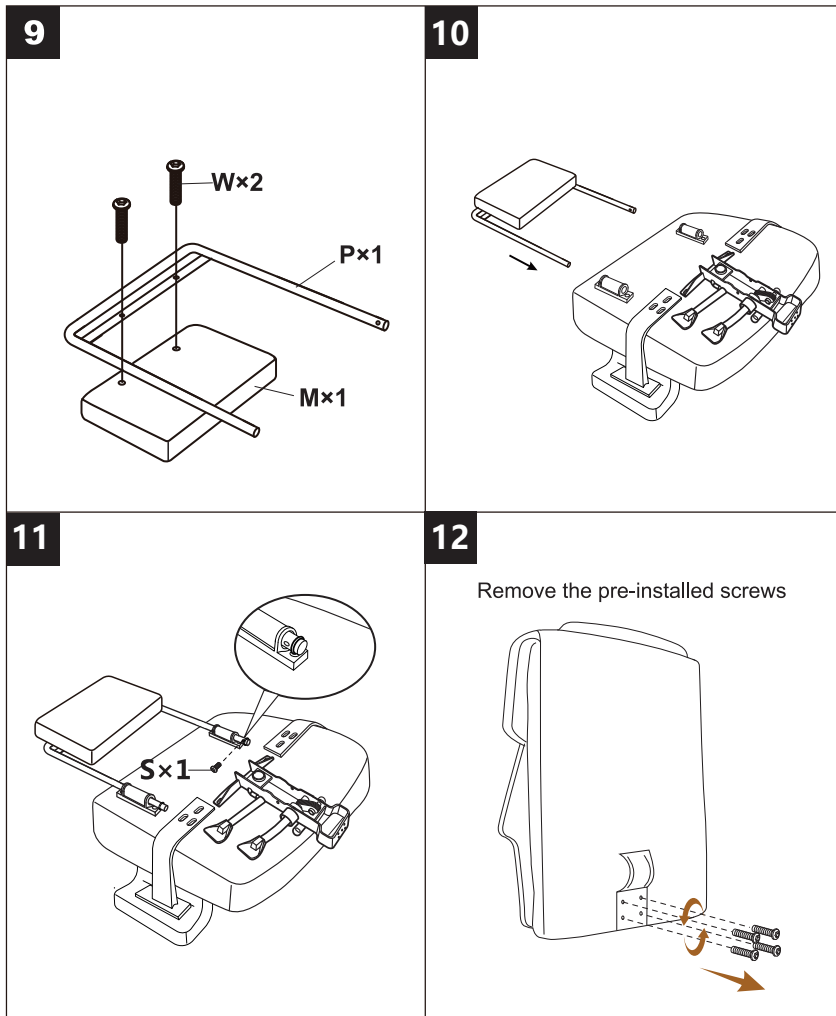

Note: All screws have been pre-assembled to the accessories. Please remove them from the accessories before assembling.

INSTALLATION

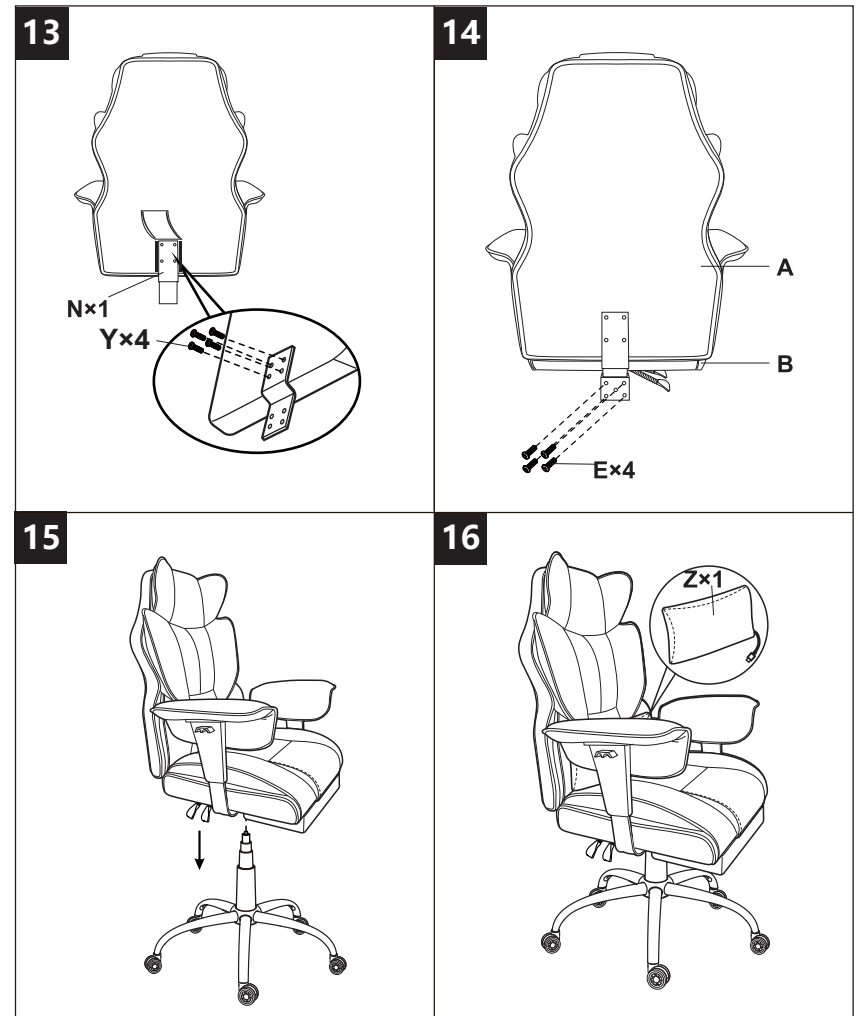

TROUBLESHOOTING

Fault conditions	Possible causes	Exclusion method
The product is shaking and unstable	<ol style="list-style-type: none">1. Wrong screw installation2. The screw is broken3. Check that the screws are not tightened in place	<ol style="list-style-type: none">1. According to the instruction manual, install the correct screw in the correct position2. To replace, use the included spare screws3. Tighten the loose screws

MASSAGE FUNCTION



Please press to start the waist pillow massage function.

Armrest up and down adjustment function

