



Remote Control Set-Up Instructions.

- 1) Firstly, please ensure the rocker switch  is set to the **ON** position.
- 2) On the fire near the manual buttons, you will see the word **RESET** in white capital letters. There are two lights and a reset button here. You will need to use a pen nib (or something similar to press this).
- 3) Keeping the remote close to you, press and hold the reset button in until you hear three short beeps from the fire.
- 4) Once you have heard the three short beeps, immediately press the **power button**  on the remote and you should hear a fourth, longer beep.
- 5) The remote is now connected to the fire

If the fire does not beep the fourth, longer time, please repeat steps 1-4.

Re-Connect an Existing remote

- 6) Firstly, slide the back cover of the remote off and press the **reset** tab just above the batteries.
- 7) This should disconnect the remote from the fire. To test this, press any buttons on the remote to ensure it does **NOT** operate the fire. If it still operating the fire, or the fire is beeping in response to you pressing the buttons, keep pressing the reset tab until it has disconnected.
- 8) Now the remote is disconnected, you need to re-connect the remote to the fire by following steps 1 - 4.
- 9) Repeat this until the fire connects and the remote controls all functions.