



Components


Ⓐ 1 x Table Top

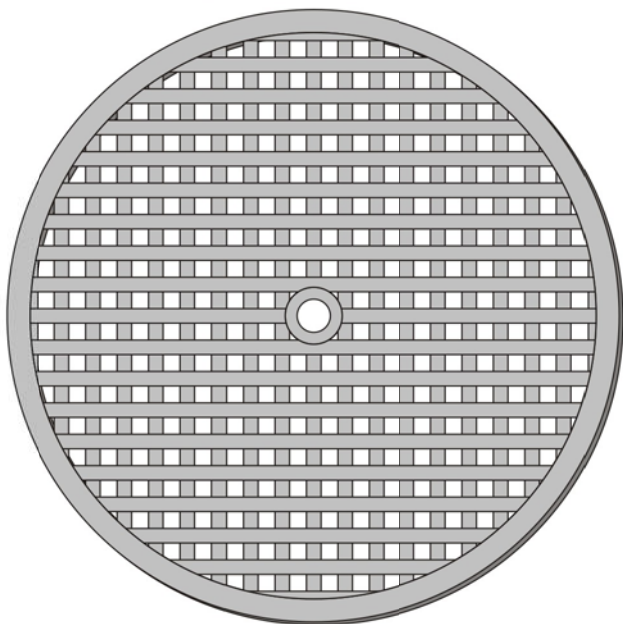

Ⓑ 4 x Leg

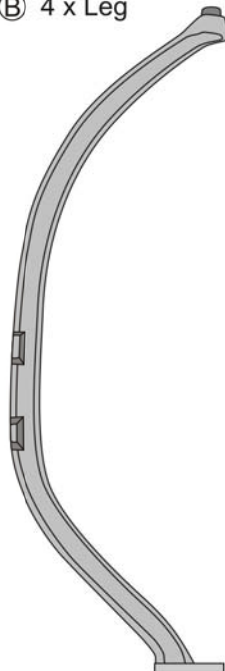

Ⓒ 4 x Leg Support

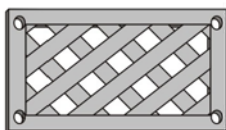

Fittings

Ⓐ 16 x Screw



Ⓑ 16 x Small Nut



Ⓓ 16 x Small Spring Washer



Ⓕ 16 x Small Washer



Ⓒ 4 x Large Nut



 
Ⓔ 4 x Large Spring Washer



Ⓖ 4 x Large Washer



H 4 x Screw



Cast Aluminium 85cm Round Table

Simple Assembly Instructions - Please keep for future reference



IMPORTANT

1. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
2. Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.
3. Take all the fittings out of the plastic bag and separate them into their groups.
4. Ensure you have enough space to lay out all the parts before assembly.
5. To avoid scratching it is recommended that you assemble the unit on a soft level surface.

Assembly Instructions

Stage 1- Fitting the Unit



NOTE: It would be useful to ask someone to help you at this stage.

1. Fix the screw(H) on the table top.
2. Locate the Legs (B) onto the screw fitting on the base of Table Top (A).
See fig. 1.

3. Use Large Nuts (C), Large Spring Washers (E) and Large Washers (G) to fix the Legs (B) onto the Table Top (A).
See fig. 1.

4. Use Screws (A), Small Nuts (B), Small Spring Washers (D) and Small Washers (F) to fix Leg Supports (C) onto the Legs.
See fig. 2.

5. The rubber screw caps at the bottom of the four legs can be adjusted, if necessary, to make the legs level with the ground.

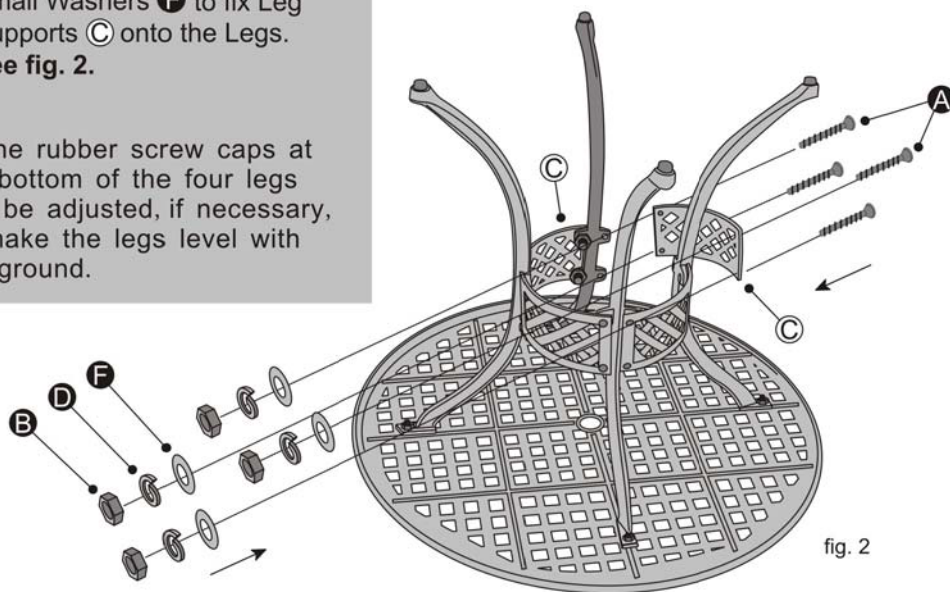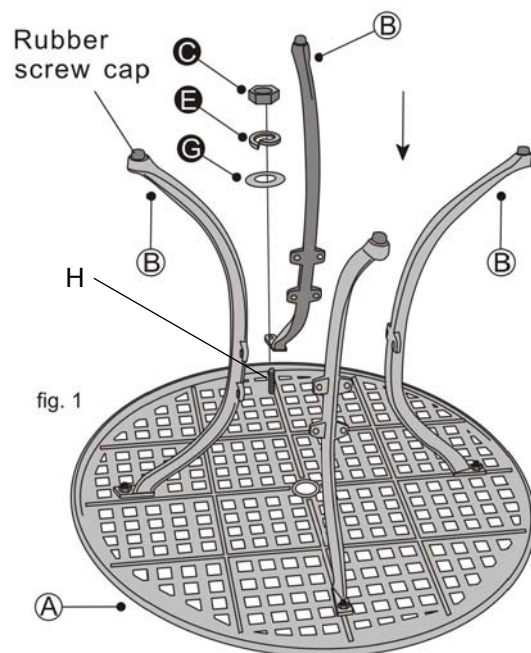

Assembly Instructions

Stage 2 - Finishing the Unit

1. Carefully turn the unit upright.
Then place the unit in the desired location.
See fig. 3.



Care and Maintenance

Safety

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.

Fitting

From time to time please ensure there are no loose screws on the product.

To extend product life and appearance it is not recommended to leave your garden furniture outside during winter months.