 
 


Installation Instruction

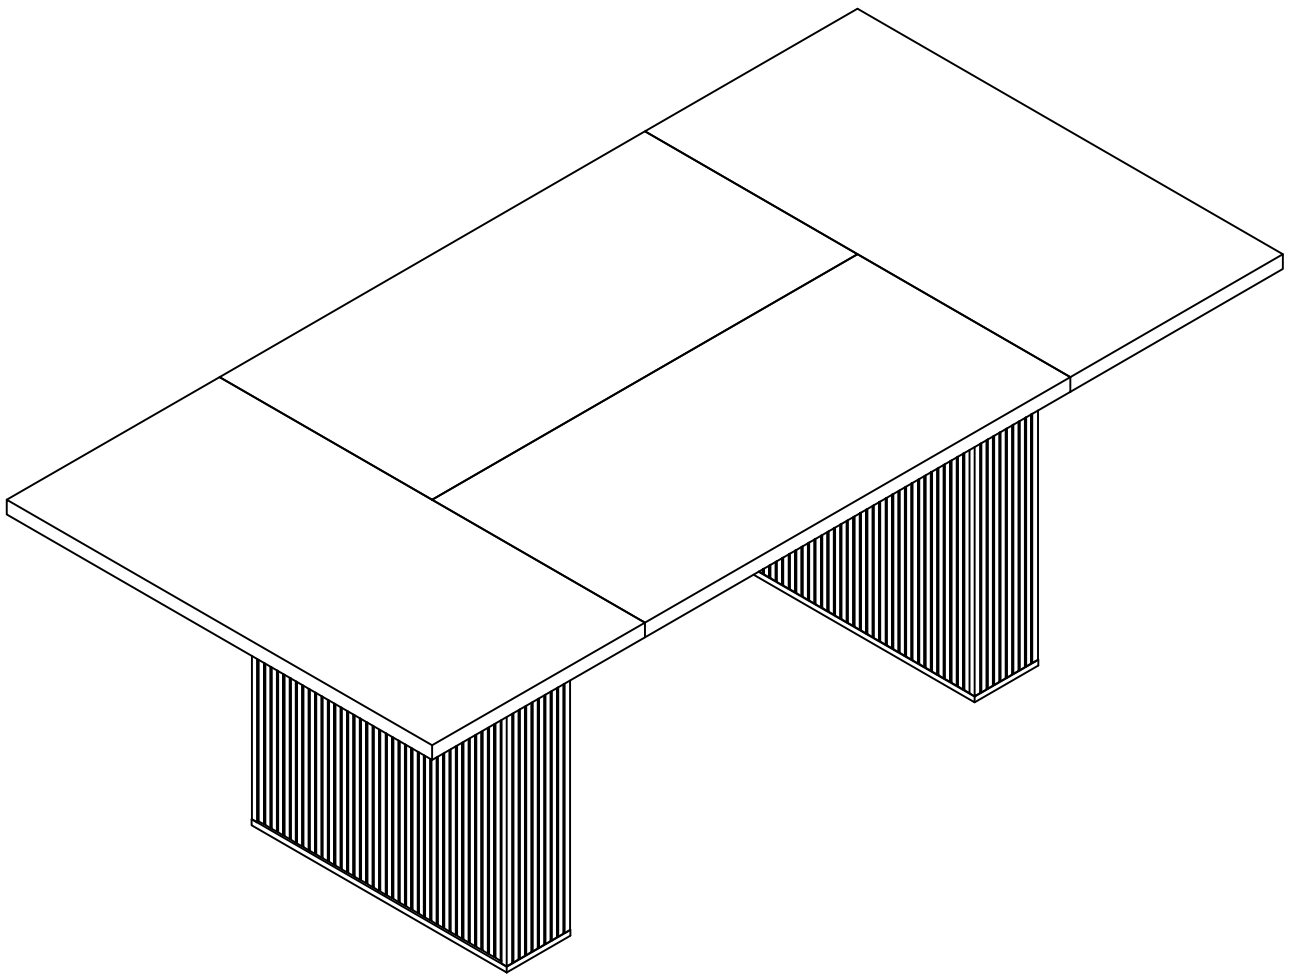 


The Accessoriess

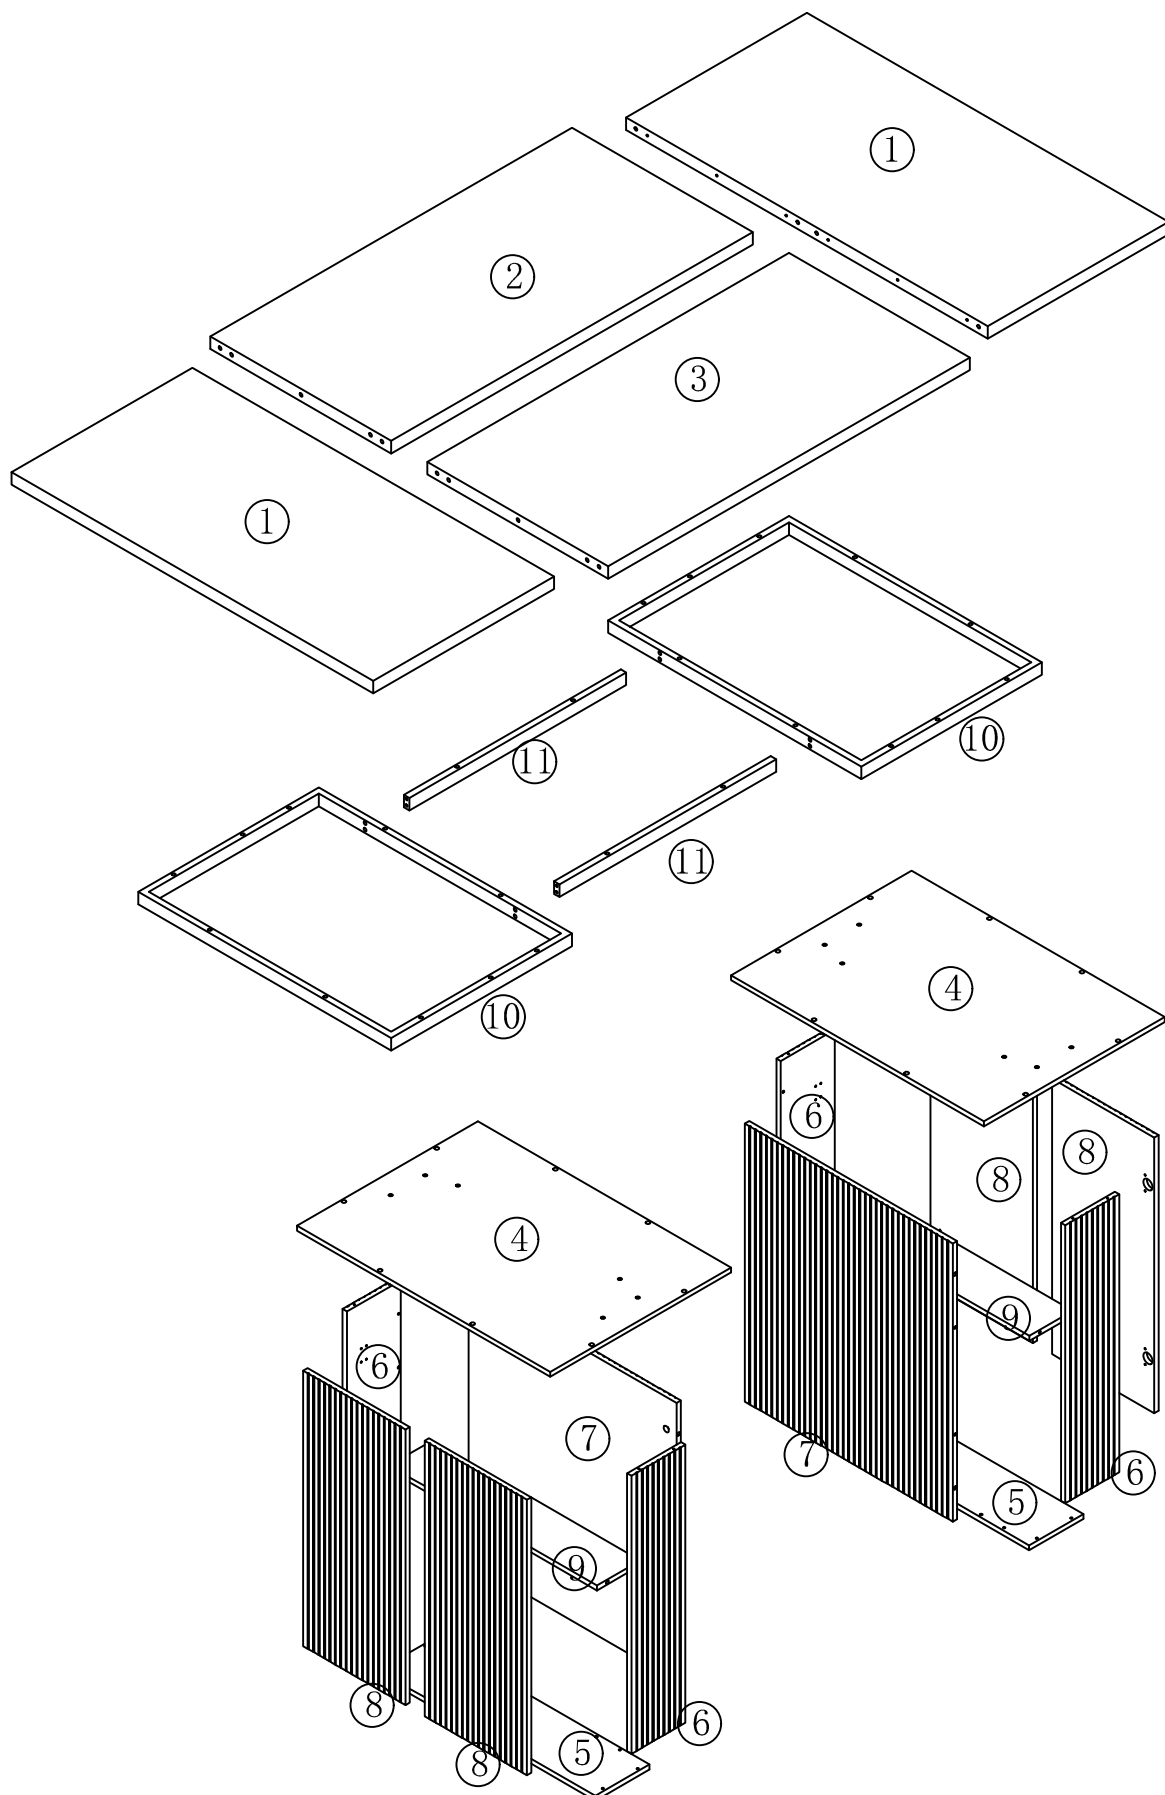


Included Accessories

①

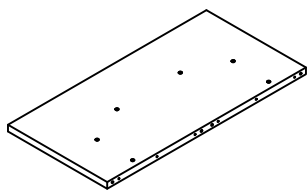


2pcs

 ②

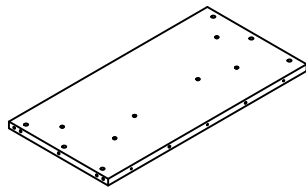


1pc

 ③

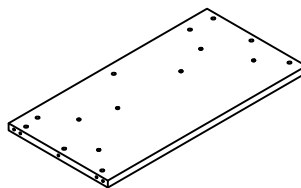


1pc

 ④

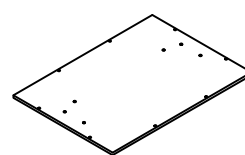


2pcs

 ⑤




2pcs

 ⑥




4pcs

 ⑦

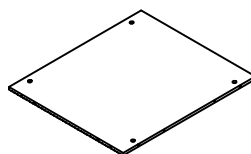


2pcs

 ⑧

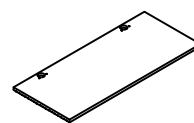


4pcs

 ⑨



2pcs

 ⑩

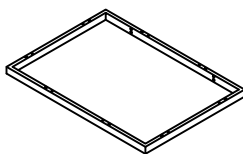

2pcs

 
⑪



2pcs

The Hardwares

(A)




φ5*35mm
27pcs

(B)



φ15*9mm
27pcs

 (C)



φ8*30mm
10pcs

(D)



M4*35mm
24pcs

(E)



 
M3.5*10mm
56pcs

(F)



φ6*30mm
20pcs

(G)




M6*45mm
20pcs

(H)



M6*45mm
12pcs

 (I)




M6*25mm
16pcs

(J)




φ26*9mm
8pcs

 (K)




4pcs

 (L)



4pcs

 (M)



8pcs

(N)

 



S4
1pc


IMPORTANT:

- 1.Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
- 2.Do not over tighten screws and bolts to avoid stripping
- 3.Please use hand tools to assemble this product,you can also use power tools(please use power tools carefully).

Step 1


A	×3
	

 C	×2
	


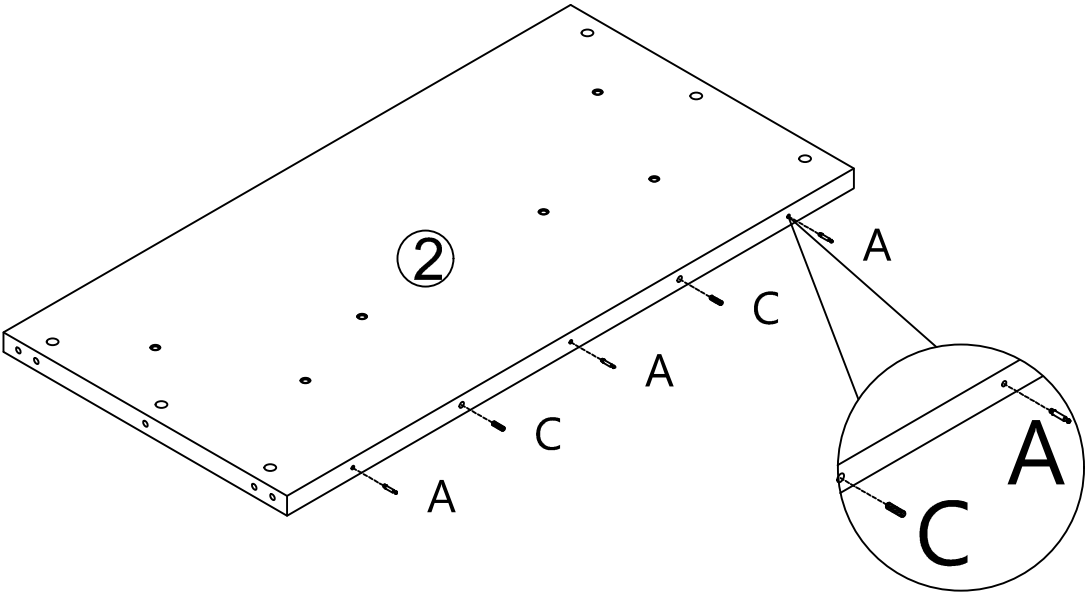 



Step 2

B	×3
	

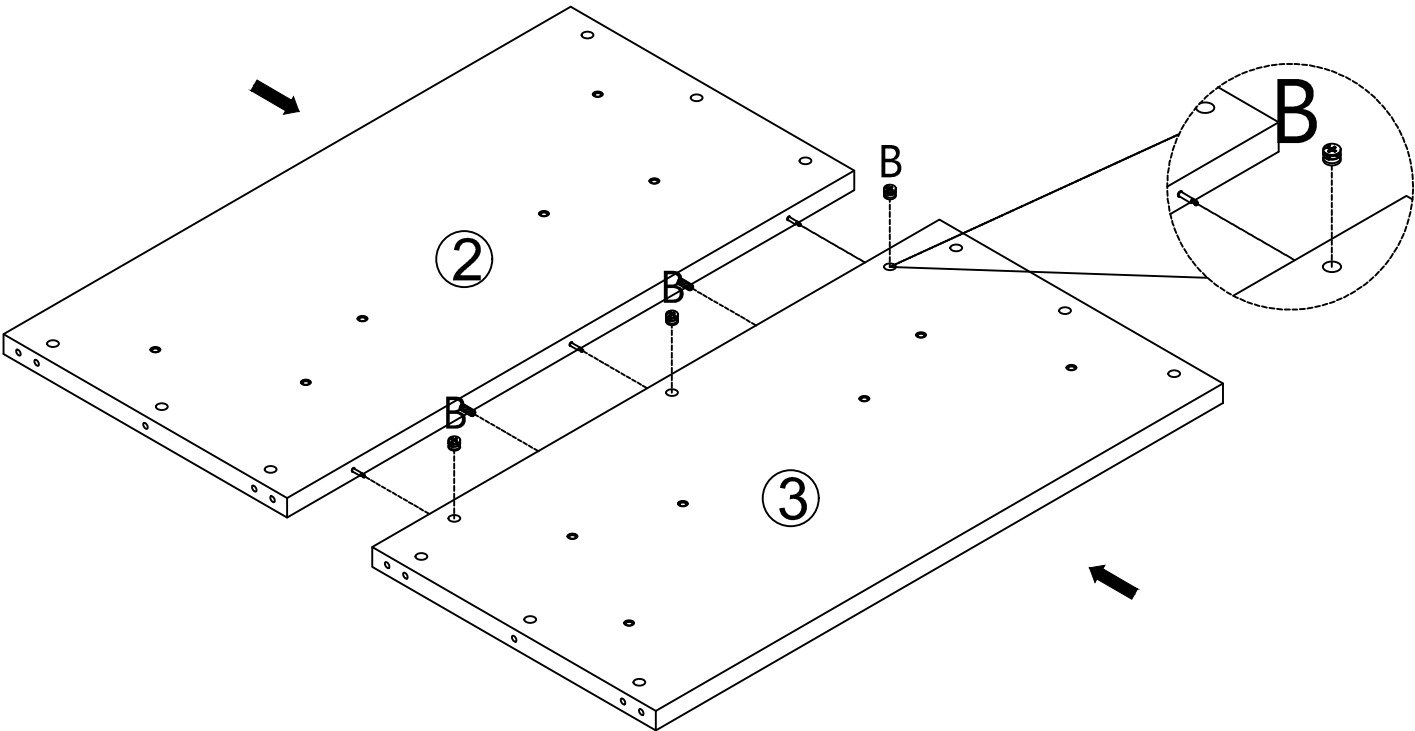 

  
Step 3

A	×12	C	×8
			

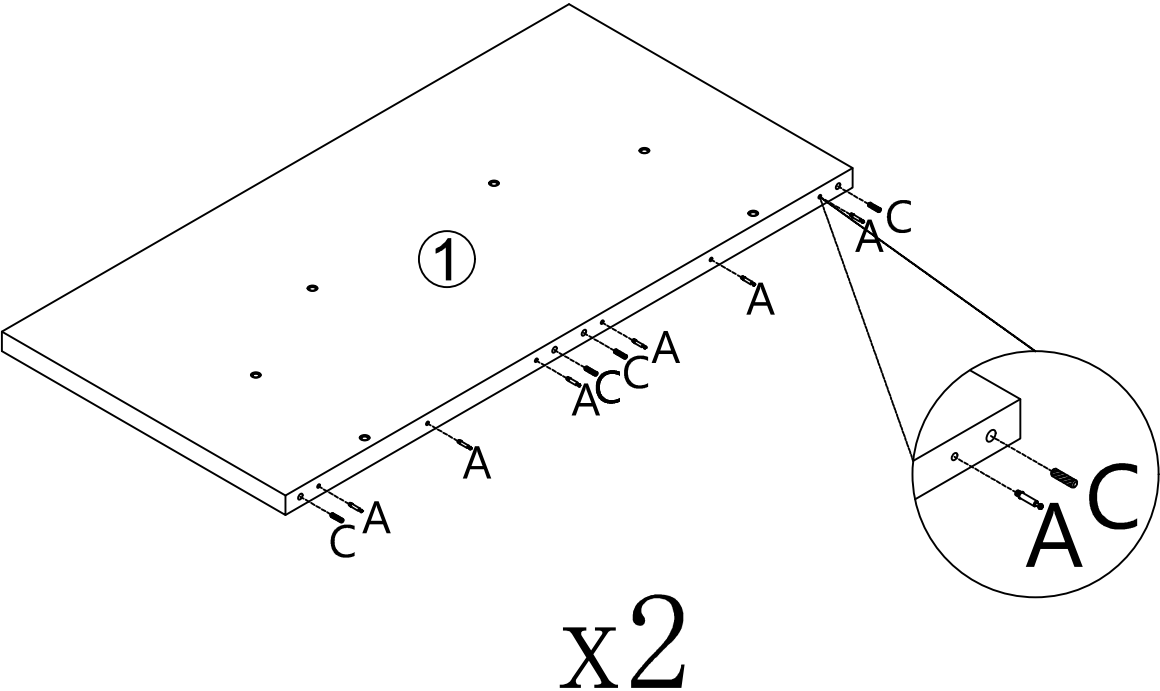 


Step 4

B	×12
	

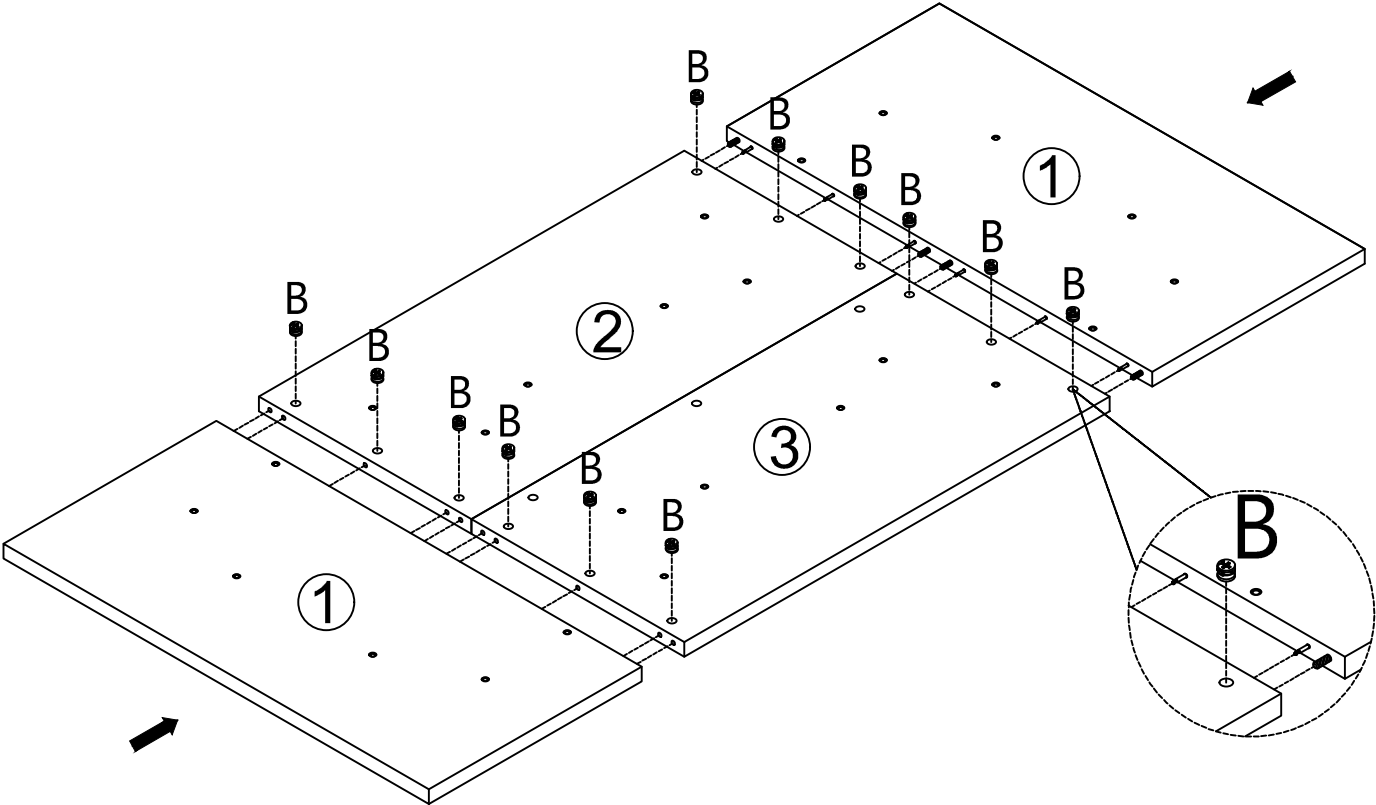 


Step 5

H	×8	N	×1
			


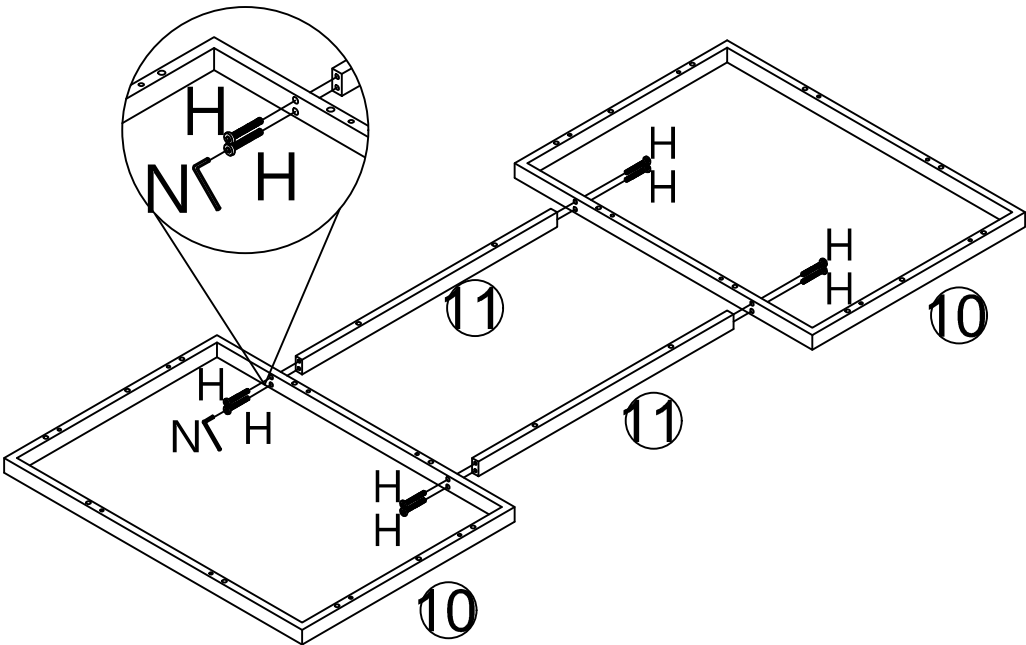 


Step 6






G	×20	H	×4	N	×1
					

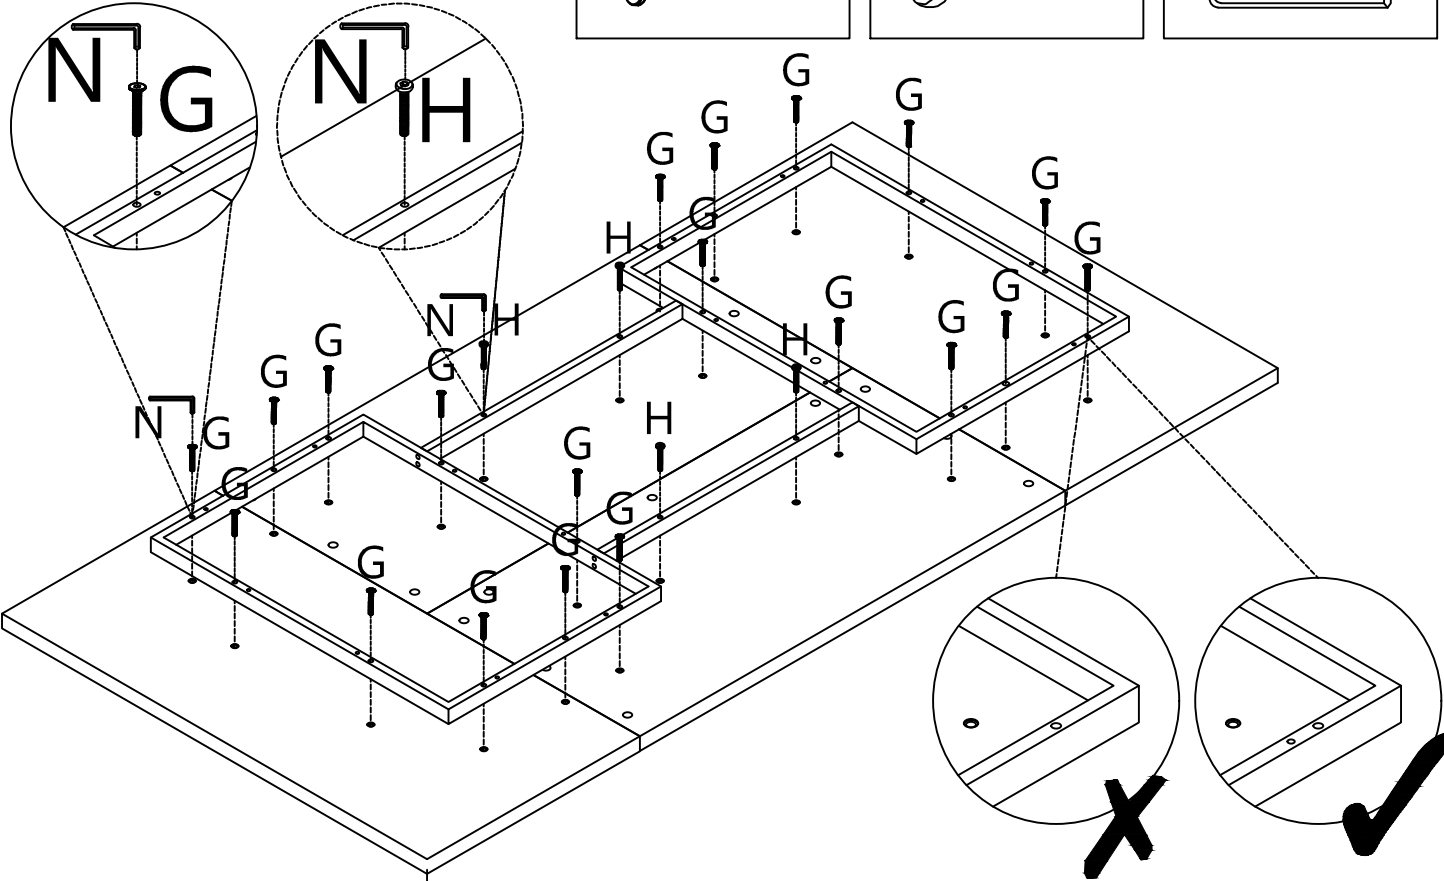 

  Step 7

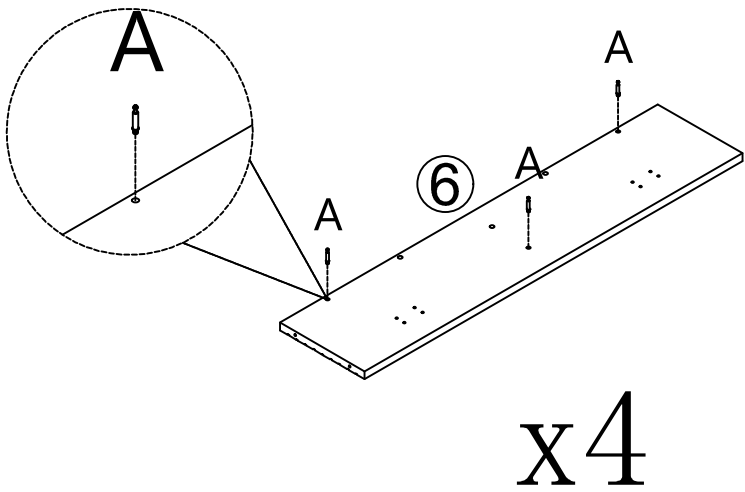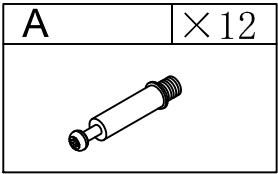


     Step 8

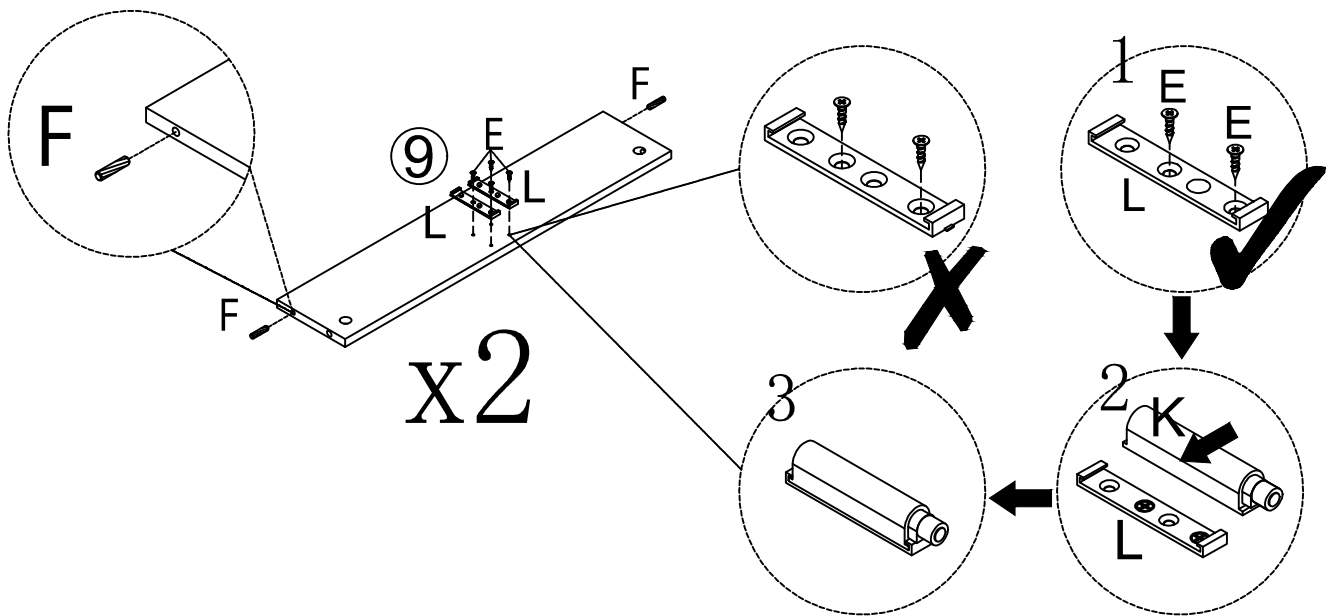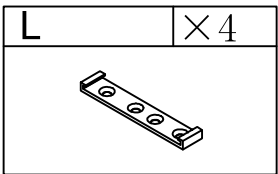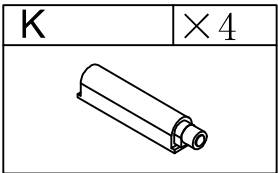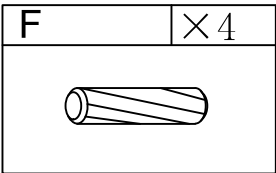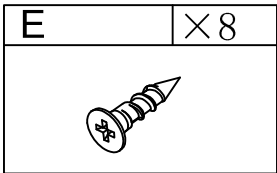


Step 9

F	×16
	


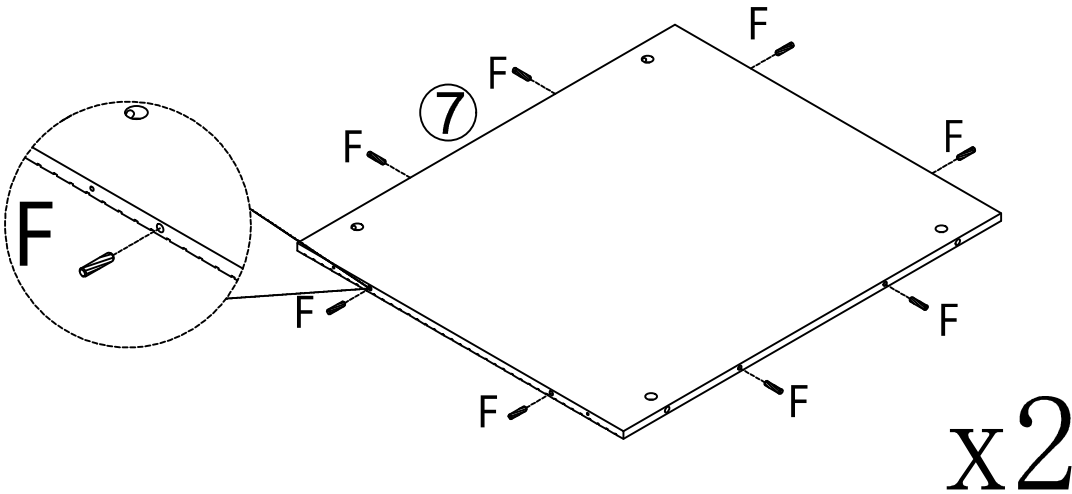 


Step 10



B	×6
	

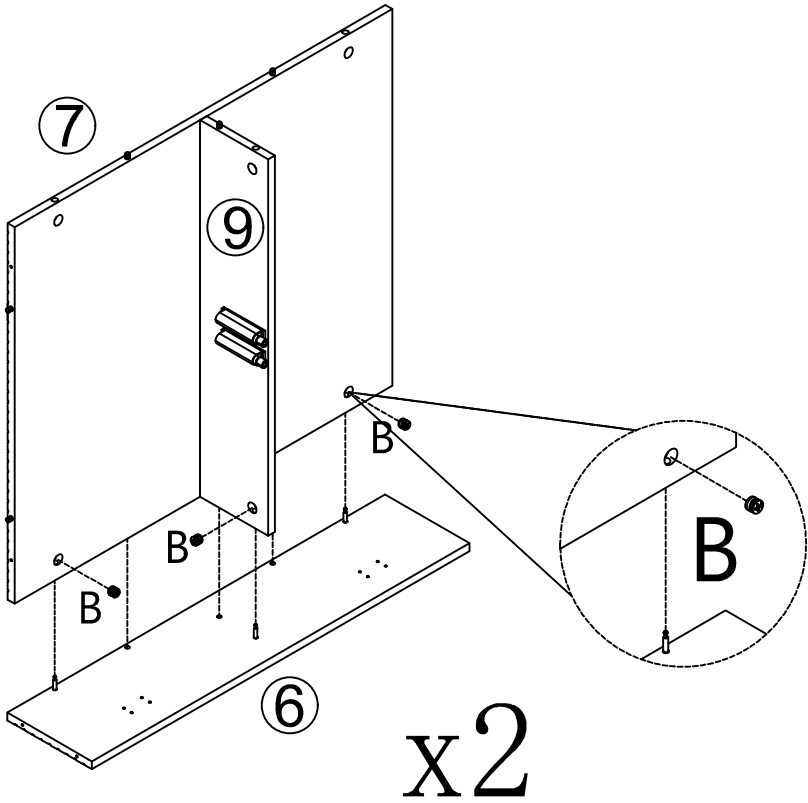 

  
Step 11

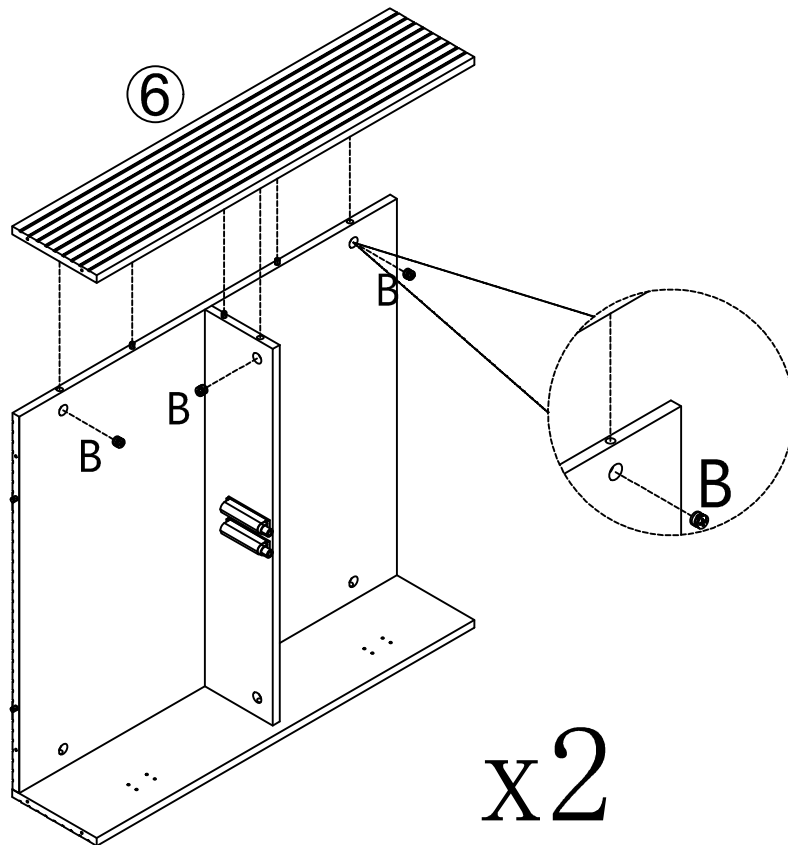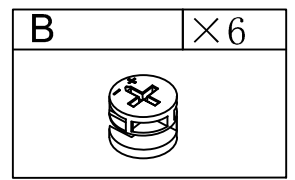

  Step 12

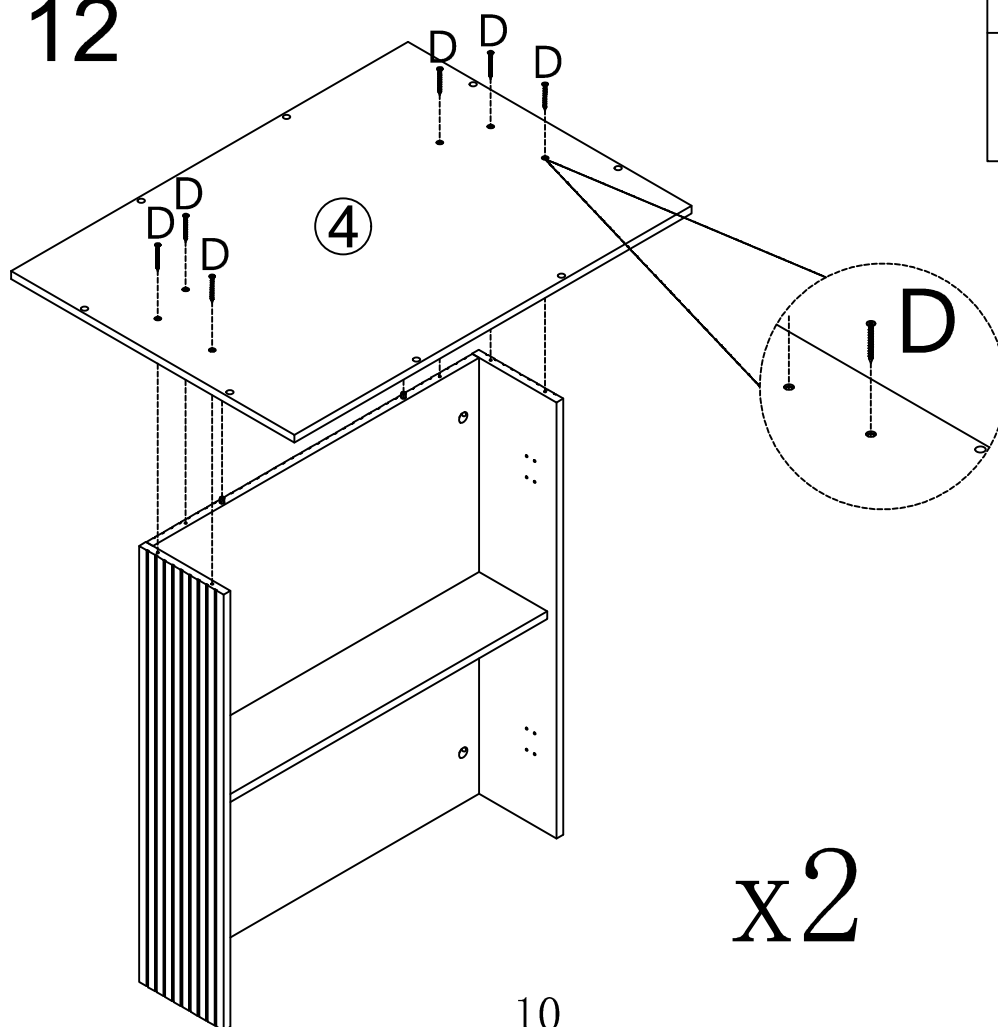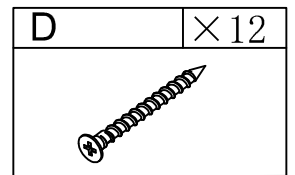


 Step 13

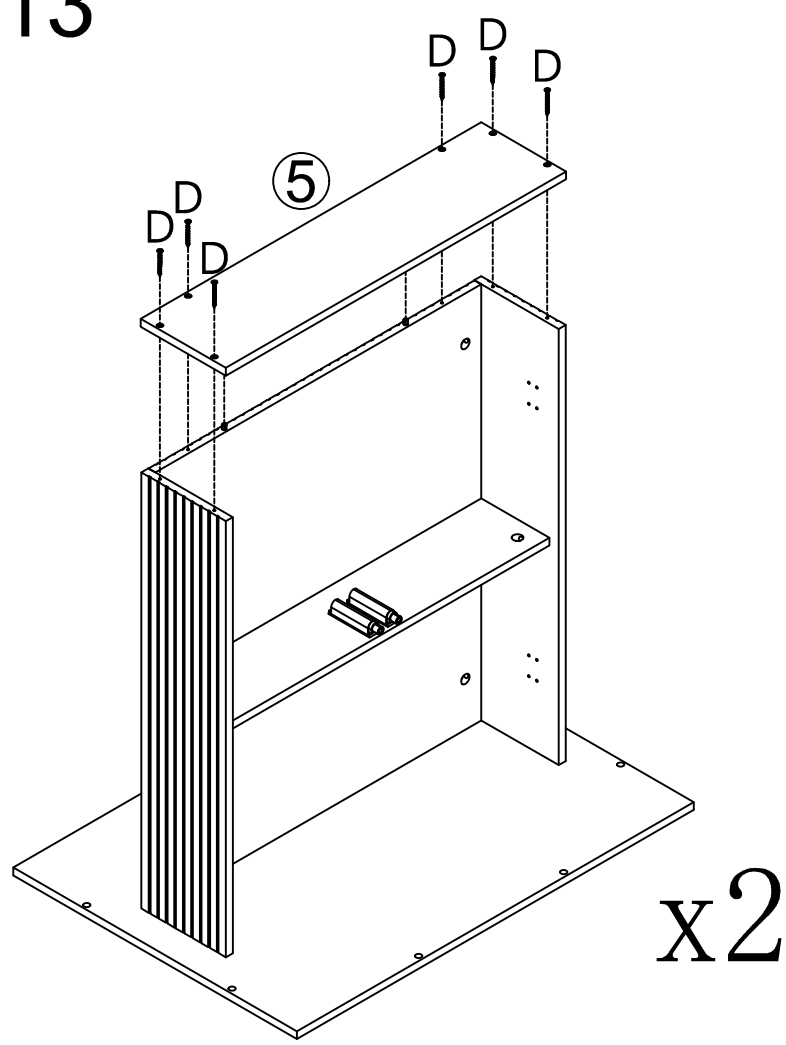

D	×12
	

 Step 14

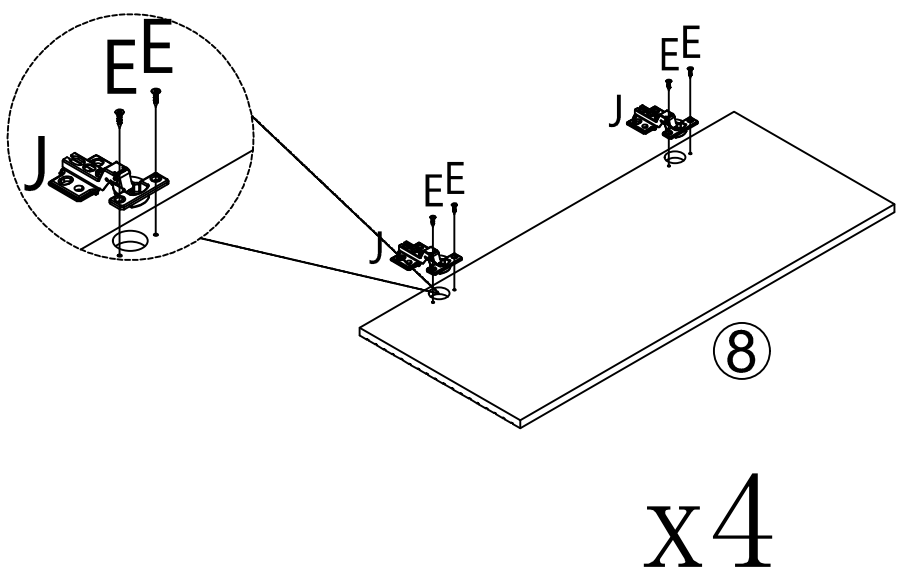


E	×16
	



J	×8
	

Step 15

E	× 32
	


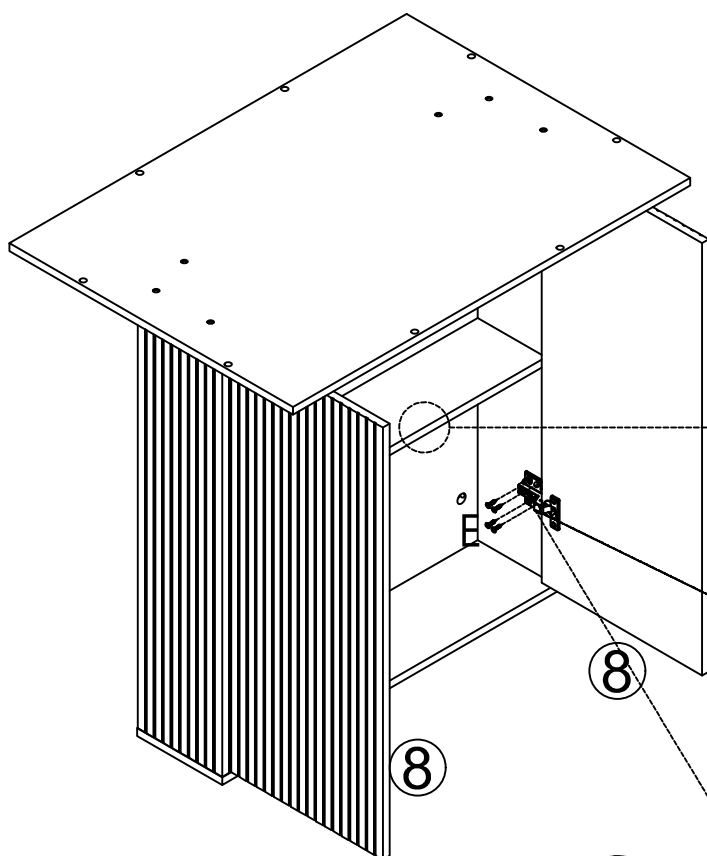 


  if the spring-loaded door cannot be opened by pressing , you can rotate the head of component M to adjust its length.

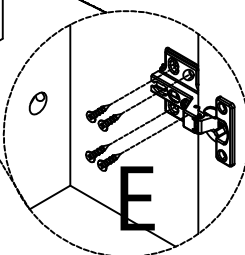
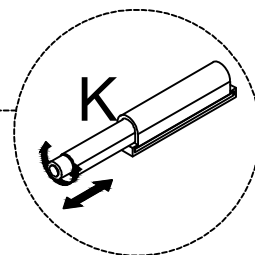


x2

 
 
How do I get the two doors to align flat by adjusting the hinges?

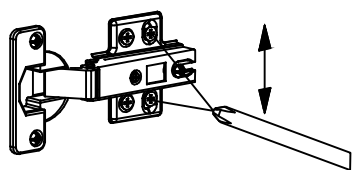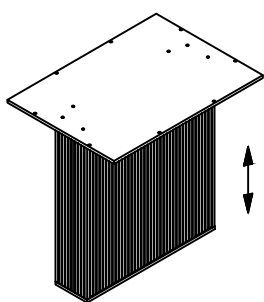

  1. The screws can be loosened to adjust the uneven problem under the table top.

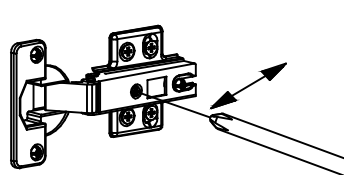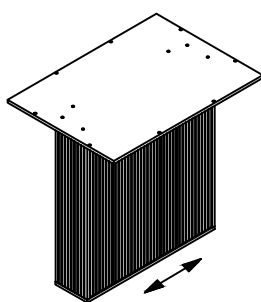

  2. Adjust the screws shown in Fig. 2 and pull the door back and forth so that it can be opened smoothly.

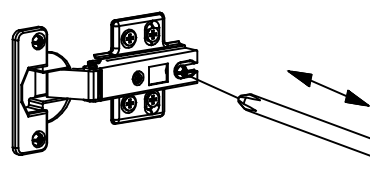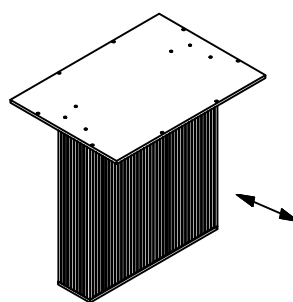

3. Adjust the screws shown in Figure 3 to adjust the door left and right to the right position.

Step 16

I	×16	M	×8
