
# **INSTRUCTION**


# Platform Bed

Caution: Read owner's manual completely before assembly and use.



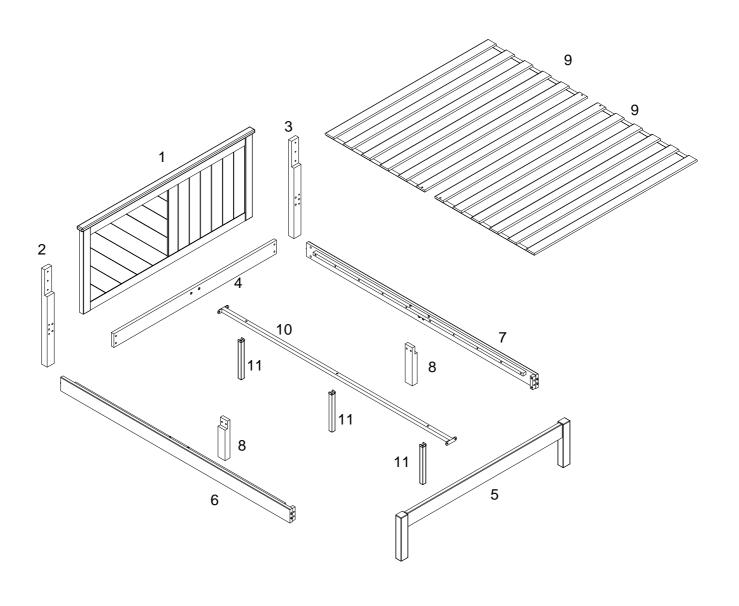

#### Parts and Hardware:

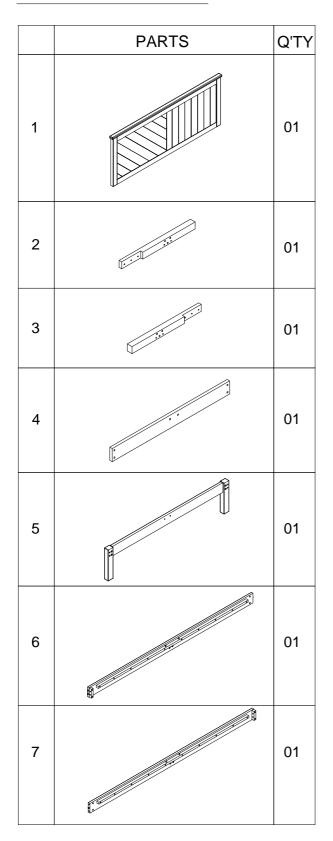



	PARTS	Q'TY
8		02
9		02
10		01
11		03

#### Parts and Hardware:


	HARDWARE	Q'TY
А	M6×90	04
В		04
С	M8×35	21
D	0	16
E		01
F	<b>™</b> M8×20	04
G	(O) bl ack	03

	HARDWARE	Q'TY
С	M8×35	02
D	0	02

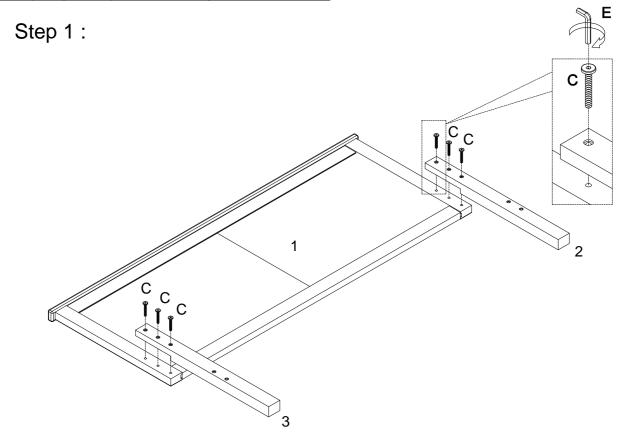


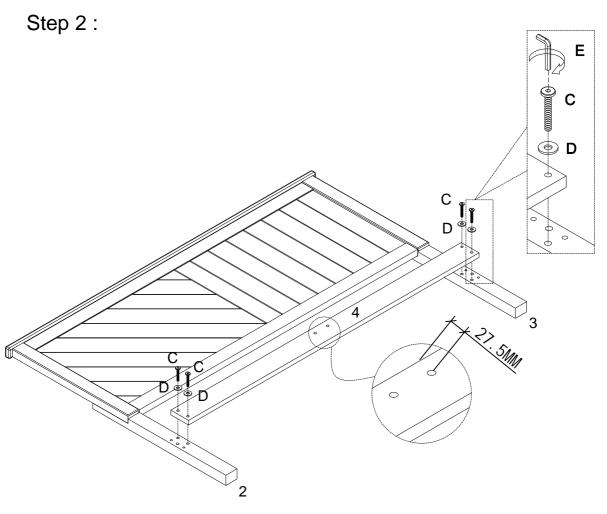


Step 3:

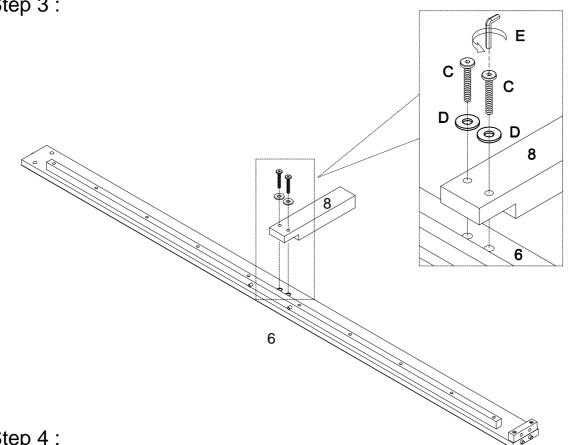


Step 4:

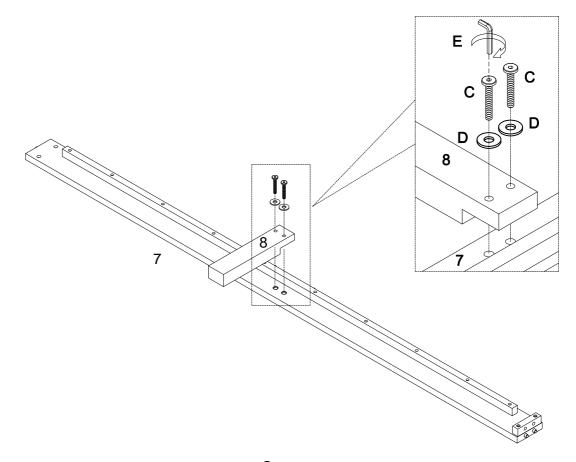


Step 5:

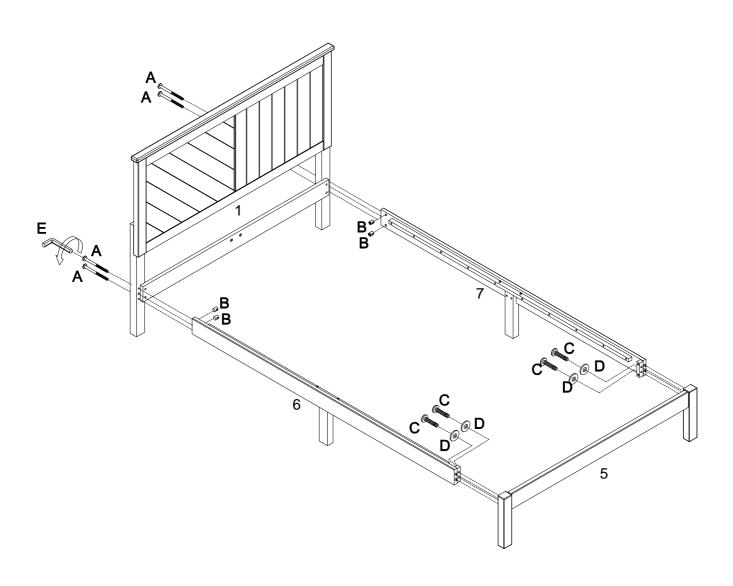


Step 6:

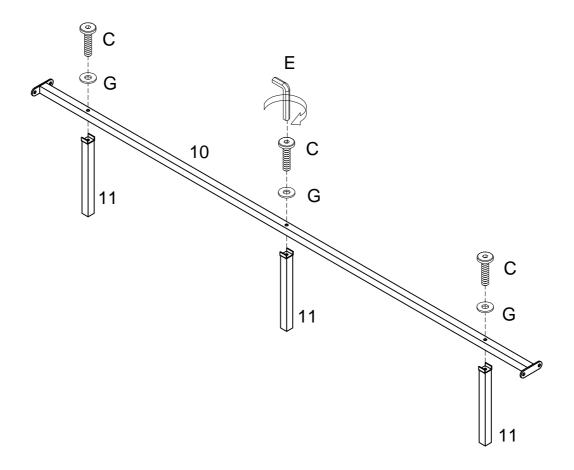

# Step 7:

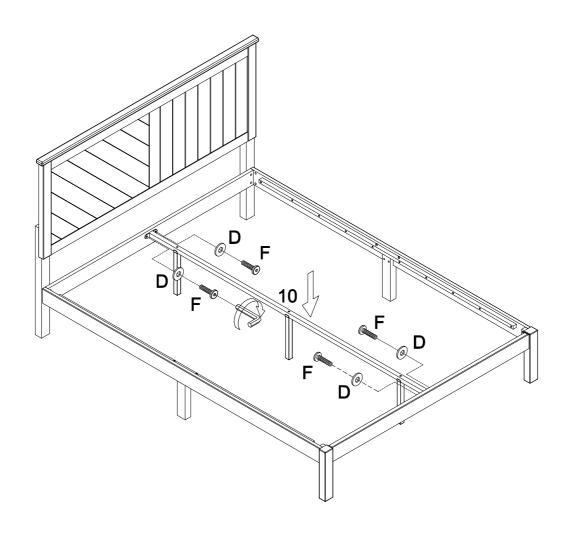

Step 8:

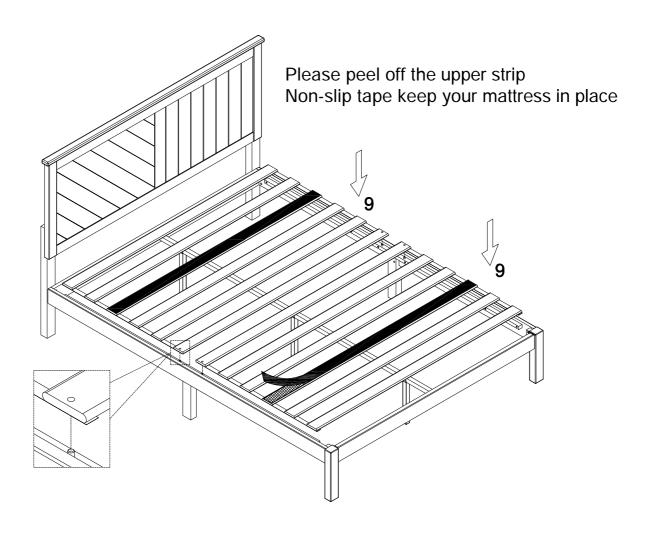

# Warning!

When the assembly bed needs to move, it can't be directly pushed and pulled. First of all, the foot of the bed should be lifted off the ground and then moved. Otherwise, The support rod in the middle of the bed can be crooked or broken.