




Assembly Instructions

CM4052E

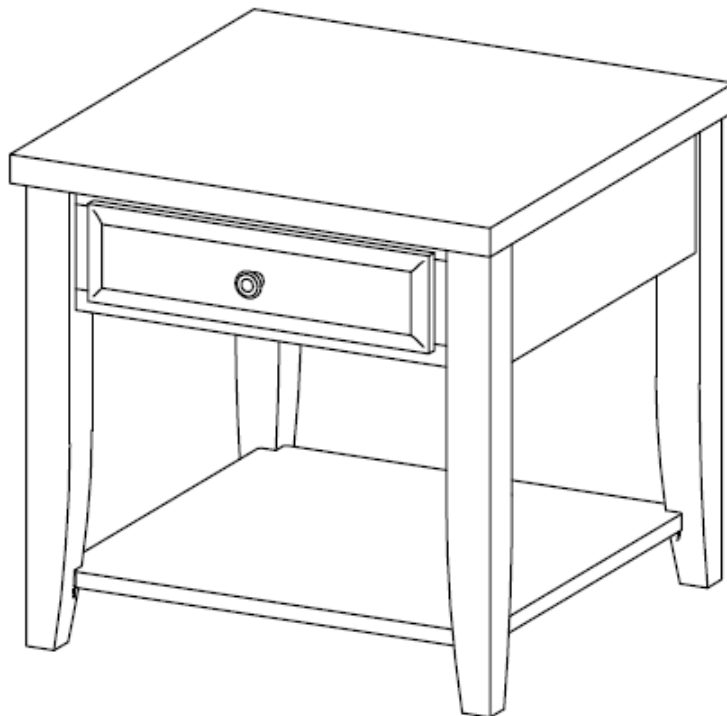

 
ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

Tools Required for Assembly:


Allen Wrench




ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY.
PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.

BASIC ASSEMBLY TECHNIQUES

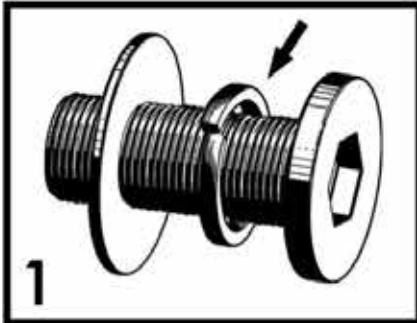


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

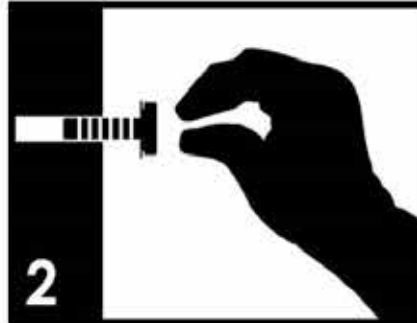


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.




Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

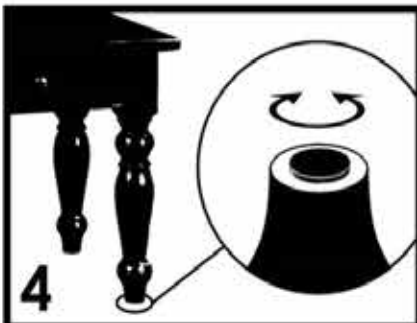

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

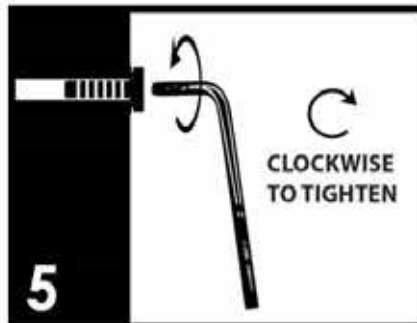

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

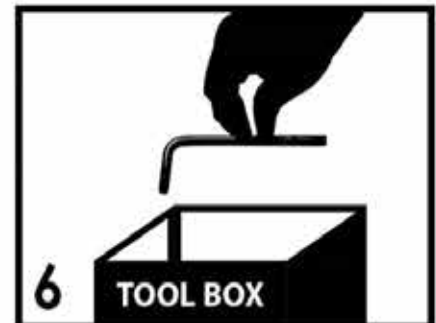

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

MD

Parts List



#1 x 1 pc
Table Top



#2 x 4 pcs
Leg



#3 x 1 pc
Bottom Shelf

Hardware List



#A x 1 pc
Allen Wrench M5



#B x 8 pcs
Bolt 5/16"x2"



#C x 8 pcs
Flat Washer 5/16"

Hardware List (Continued)



#D x 8 pcs
Lock Washer 5/16"



#E x 1 pc
Allen Wrench M4



#F x 8 pcs
Bolt 1/4"x3/4"




#G x 8 pcs
Flat Washer 1/4"



#H x 8 pcs
Lock Washer 1/4"




#I x 4 pcs
L Bracket

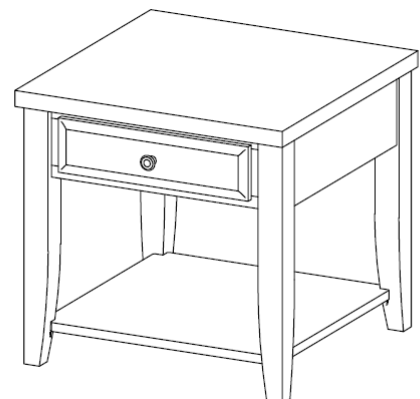




#B x 8 pcs
#C x 8 pcs
#D x 8 pcs

 

- I. Carefully place the table top (#1) facing down on a protected surface. Align the legs (#2) with the pre-drilled holes on the bottom of the table top (#1).
- II. Prepare 8 bolt assemblies by inserting FIRST the lock washer (#D) onto the bolt (#B) and then the flat washer (#C) onto the SAME bolt (#B), in that order.
- III. Insert the bolt assemblies through the pre-drilled holes on the table top (#1) and secure those bolts using the Allen wrench (#A) to lock them with the legs (#2).

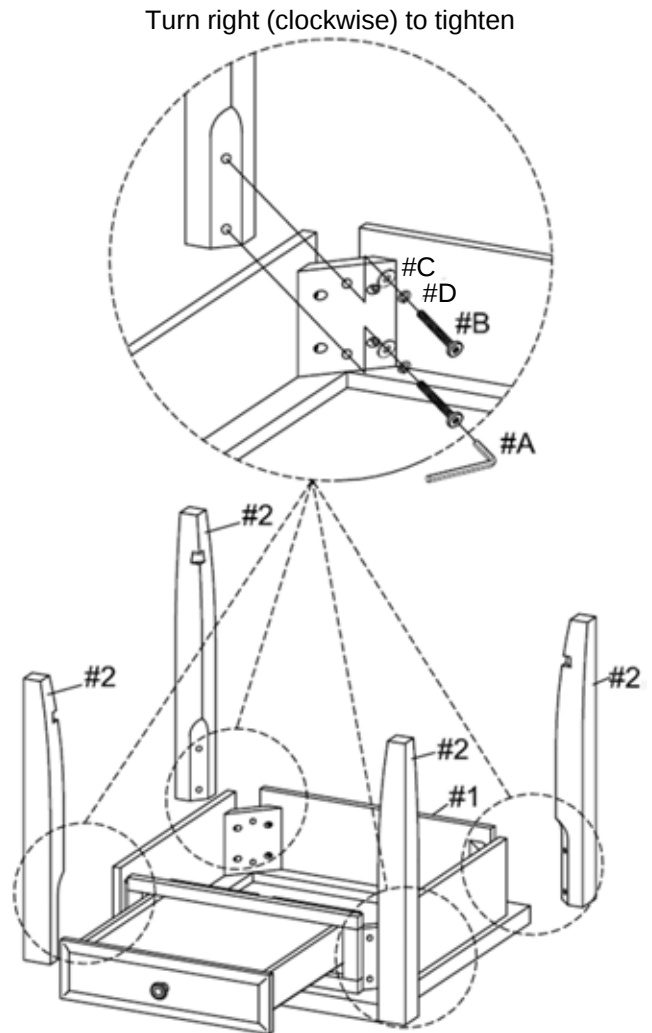

Turn right (clockwise) to tighten




#F x 8 pcs
#G x 8 pcs
#H x 8 pcs
#I x 4 pcs



- I. Prepare 8 bolt assemblies by inserting FIRST the lock washer (#H) onto the bolt (#F) and then the flat washer (#G) onto the SAME bolt (#F), in that order.
- II. Align the long side of the L brackets (#I) with the pre-drilled holes on the bottom shelf (#3). Insert 4 bolt assemblies through the long side of L brackets (#I) and secure those bolts using the Allen wrench (#E) to lock them with the bottom shelf (#3).
- III. Align the short side of the L brackets (#I) on the bottom shelf (#3) with the pre-drilled holes on the legs (#2).
- IV. Insert 4 bolt assemblies through the short side of the L brackets (#I) and secure those bolts using the Allen wrench (#E) to lock them with the legs (#2).
- V. Carefully turn the completed table upright. Make sure the table is rested on a flat surface and it does not feel loose or wobbly. If it does, double check that the bolts are secured and properly tighten.

Turn right (clockwise) to tighten

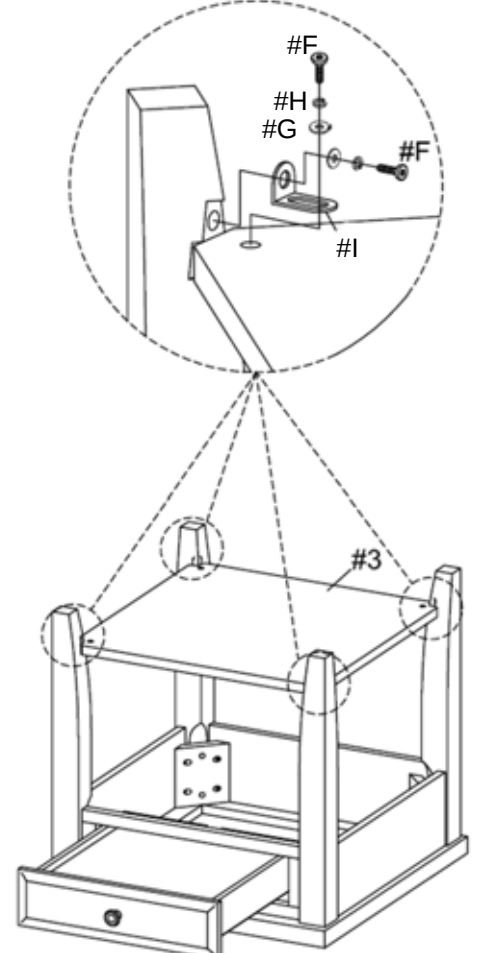

ASSEMBLY IS COMPLETED