ASSEMBLY REQUIREMENTS	2-Person Assembly	30 MINUTES Assembly Time Approximate	Tools Required (Not Provided)	Mallet
Thank you for purcha	sing our product!			
Please refer and use this a product. Contact our customer serv missing or damage parts o normally shipped within 2	vice department in case or hardware. Replaceme	there are any		

ASSEMBLY PREPARATION

- 1. Remove all packaging materials, staples and packing straps from the carton.
- 2. Refer to Parts List and Hardware List. and ensure parts and hardware are complete before assembly. Contact customer service for missing parts.
- 3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Identify all of the parts, hardware and quantities required for each step.
- 4. During assembly, do not over-tighten any fittings as this may cause damage.
- 5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 6. Always place the product on a flat, level surface.
- 7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g.hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.

PARTS LIST							
ltem	Description	Part	Qty				
P1	Table Top & Apron		1				
P2	Table Leg		4				

	HARDWARE LIST						
ltem	Description	Part	Qty	Extra			
H1	Allen Key M5 x 65mm		1				
H2	JCBB Screw M8 x 60mm		8	1			
H3	Spring Washer		8	1			
H4	Flat Washer		8	1			
H5	Leg Stud		4	2			



- a) With the assistance of another person, place Table Top (P1) bottom-side up on a surface that does not scratch or damage the product.
- b) Position Table Leg (P2) against the corner of the table aprons and align the screw holes on (P2) to the screw holes on the corner block.
- c) Insert Screw (H2) fitted with Spring Washer (H3) and Flat Washer (H4) through each hole on the corner block into screw hole on (P2).
- d) Use Allen Key (H1) to drive (H2) to fasten Table Leg (P2) to corner block. Do not tighten (H2) completely until both screws are in place on each leg. Do not over-tighten the screws.
- e) Repeat the above assembly procedure for the other three legs.
- f) Use a mallet or hammer to gently nail Leg Stud (H5) into each end of the leg.
- g) Turn the table right-side up.

The assembly of the table is complete.

ASSEMBLY INSTRUCTIONS 90 MINUTES 2-Person **Tools Required** ASSEMBLY Assembly Time ≝11⊧ REQUIREMENTS Assembly (Not Provided) Approximate Thank you for purchasing our product! Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

ASSEMBLY PREPARATION

- 1. Remove all packaging materials, staples and packing straps from the carton.
- 2. Refer to Parts List and Hardware List. and ensure parts and hardware are complete before assembly. Contact customer service for missing parts.
- 3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Identify all of the parts, hardware and quantities required for each step.
- 4. During assembly, do not over-tighten any fittings as this may cause damage.
- 5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 6. Always place the product on a flat, level surface.
- 7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g.hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.



STEP 2

- a) Insert Wood Dowel (D) into the respective holes on (P1).
- b) Attach Back Apron (P5) and Front Apron (P7) via wood dowels.
- c) Use JCBC Bolt (B) fitted with Spring Washer (C) to fasten (P5&P7) to (P1) as shown in the enlarged drawing. Use Allen Key (F) to drive (B).
- d) Insert Leg Support (P8) to (P1).



STEP 3

- a) Insert Wood Dowel (D) into the designated holes on (P2, P3, P4, P5 & P7).
- b) Attach a complementary (P1) to (P2, P3, P4, P5 & P7) via wood dowel and to Leg Support (P8).
- c) Use JCBC Bolt (B) fitted with Spring Washer (C) to fasten (P1) to (P5 & P7) as shown in the enlarged drawing. Use Allen Key (F) to drive (B).



STEP 4

- a) Use JCBC Bolt (A) fitted with Spring Washer (C) to fasten both sides of (P1) to (P2) as shown in the enlarged drawing. Use Allen Key (F) to drive (A). Next, insert Wood Button (G) to conceal bolt hole.
- b) Use Screw (E) to fasten Backrest Bottom Rail (P4) and Leg Support (P8) to (P1).



STEP 5

- a) Place the Cushion Seat (P6) bottom-side up on an elevated surface (e.g. table top).
- b) Position the chair assembly (from STEP 4) with the legs facing up as shown.
- c) Center the seat frame to (P6) with rear of the seat against the Chair Back.
- d) Use Screw (E) to fasten (P6) to the Front and Back Apron. Use a Phillips Screwdriver to drive the screws. Do not tighten the screws completely until all 4 screws are in place.
- e) Use a mallet or hammer to gentle nail leg Stud (H) into each end of the leg.
- f) Set the chair right-side up.
 The assembly of the chair is complete

