



Ceiling Fan User's Manual

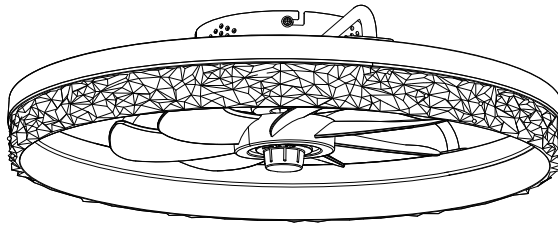

Warm Tips

- **Wall Switch Memory:**
Keep the light on >10s, then turn off, after 5s turning on, it keeps the last light condition.
- **Remote Control Light Memory:**
Press "Light on/off" to keep the last light condition.
- **Using a full-range dimmer switch to control the fan speed will damage the fan.**

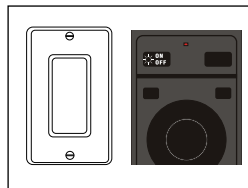

 
WARNING!!!

- **To avoid fire, shock and serious personal injury, follow these instructions.**
 1. Read your user's manual and safety information before installing your new fan. Review the accompanying assembly diagrams.
 2. Before servicing or cleaning the unit, switch off the power at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service disconnecting means cannot be locked, securely fasten a warning device, such as a tag, to the service panel.
 3. Be cautious around the fan and blades when clearing, repairing, or working near the fan. Always turn off the power to the ceiling fan before performing any servicing.
 4. Do not insert anything into the fan blades while the fan is operating.
 5. This appliance is not intended for use by young children or individuals with disabilities without supervision. Young children should be supervised to ensure they do not play with the appliance.
 6. Before installing your ceiling fan, refer to the section on the proper method of wiring your fan. If you feel that you do not have enough wiring knowledge or experience, it is recommended to have your fan installed by a licensed electrician.

Tools May Required



Ladder



Screwdriver



Wire Strippers



Tape



Goggles





Accessories

- Check to see that you have received the following parts:

aa (4)  Wire nut	bb (3)  J-box screw	cc (5)  Self-tapping wood screw
dd (2)  Expansion screw	ee (5)  Plastic expansion tube	ff (5)  Washer
gg (8)  Screw	hh (1)  Screwdriver	

Package Contents

 - Check to see that you have received the following parts

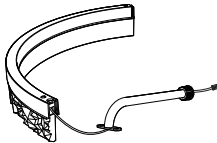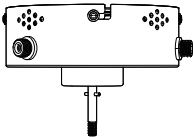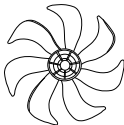A (3)  Lamp body part	B (1)  Canopy part	C (1)  Fan blade
D (1)  Blade cap	E (1)  Remote control	F (1)  Remote control holder

Energy Saving Usage

- Ceiling fan performance and energy savings rely heavily on the proper installation and use of the ceiling fan. Here are a few tips to ensure efficient product performance.

Choosing the Appropriate Mounting Location

Ceiling fans should be installed or mounted in the middle of the room and positioned at least 7 feet above the floor and 18 inches away from the walls. If the ceiling height allows, it is recommended to install the fan 7~9 feet above the floor to achieve optimal airflow.

Turn Off When Not in the Room

If the room is unoccupied, turn off the ceiling fan to save energy.

Using the Ceiling Fan Year Round

Summer Season: Use the ceiling fan in the counterclockwise direction. The airflow created by the ceiling fan produces a wind-chill effect, making you feel cooler. Select a fan speed that provides a comfortable breeze; lower speeds consume less energy.


Winter Season: Reverse the motor and operate the ceiling fan at a low speed in the clockwise direction. This produces a gentle updraft, which pushes the warm air near the ceiling down into the occupied space. Remember to adjust your thermostat when using your ceiling fan. This simple step can lead to additional energy and cost savings.

Operate Your Ceiling Fan

- **IMPORTANT:** Using a full range dimmer switch to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed. (Figure 1).
Only control light on/off via wall fan switch.
- Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).






(Figure 1)

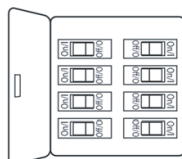

(Figure 2)

Electrical And Structural Requirements

- Your new ceiling fan will require a grounded electrical supply line of AC 110-130V/60Hz and a 15 Amp circuit. According to electrical codes, it is necessary to use a fan-rated outlet box to support the additional weight and motion associated with a ceiling fan. A fan-rated box will be clearly labeled as such and is typically designed to support ceiling fans weighing up to 70 pounds. Fan-rated outlet boxes are available in various ratings and designs. It is essential to ensure that the rating of your ceiling fan outlet box meets the requirements for the specific ceiling fan you are installing. Please refer to the figures below for different structural configurations that can be used for mounting the outlet box.
- Low-profile use (Figure 1):
A 1/2-deep pancake box is meant to be screwed to a joist or block. It is used if only one cable is coming into the box. It is also available in a saddle-mount configuration.
- Deep-profile use (Figure 2)
A 2-1/4" deep box can be attached to blocking between joists and is roomy enough to handle more than one cable.
- Brace use (Figure 3)
Paired with a deep box, this hanger is meant to span between two joists and takes the place of wooden blocking.
- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

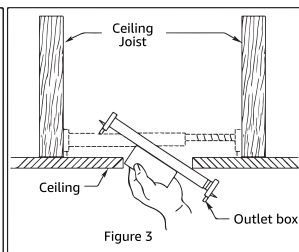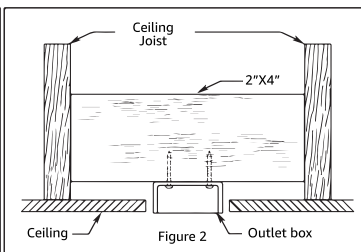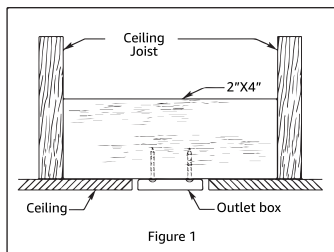



⚠ WARNING

To ensure safety and prevent potential electrical shock, it is not sufficient to simply turn off the wall switch. Prior to wiring, make sure to turn off the electricity at the main fuse box. All wiring should be done in accordance with national and local electrical codes. Additionally, it is important to properly ground the ceiling fan as a precautionary measure against possible electrical shock. Following these guidelines will help ensure the safe installation and operation of your ceiling fan.



⚠ WARNING

Do not use a variable (rheostat) wall controller or dimmer switch to operate this fan. Doing so can cause damage to the ceiling fan's remote control unit. It is recommended to only use the provided remote control.



Installation

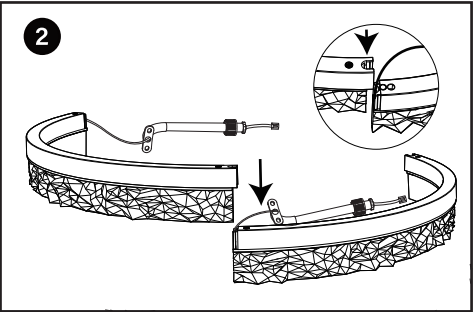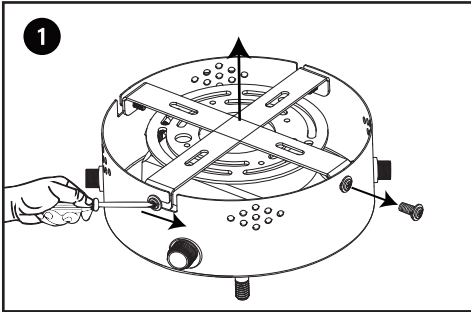

- 1** Loosen, but do not fully remove, the three screws on the awning. Next, remove a separate screw and rotate the mounting plate counterclockwise to detach it.
- 2** Fit the slots between the two lamp body parts securely together. (Repeat this step to install the remaining lamp body parts.)

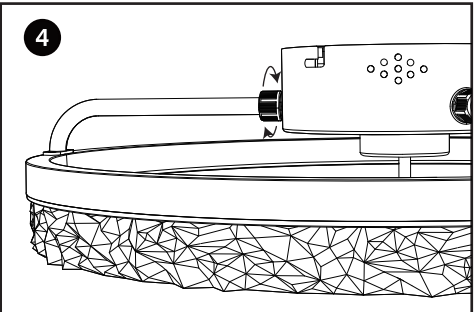
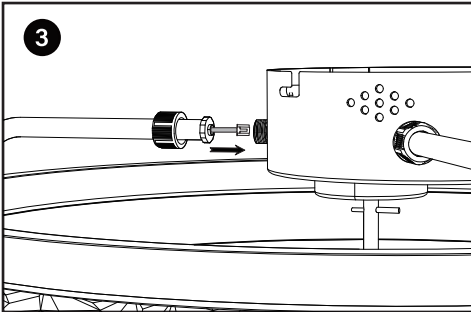


- 3** Pass the support arm and the wires together through the opening in the fan motor housing.
- 4** Turn clockwise to tighten the support arm. (Install the remaining lamp arms by repeating steps 3 and 4.)

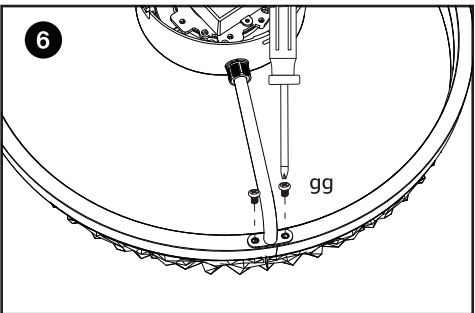
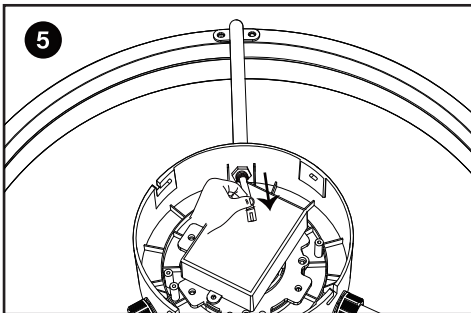


- 5** Gently pull the wires to the desired length, then tighten the support arm by turning it clockwise.
- 6** Use two screws to secure the two lamp bodies together and tighten them. (Repeat this step to secure the remaining support arms.)



Installation

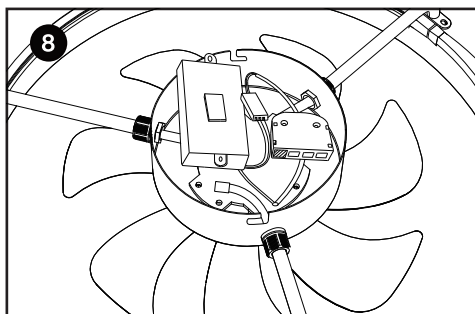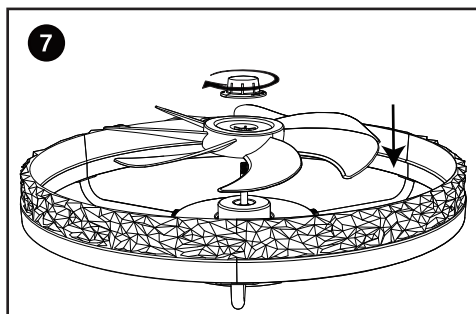

- 7** Remove the protective sleeve, align the fan blades with the motor core, and screw in the fan blade cap counterclockwise to secure it.
- 8** Tear off the adhesive backing on the controller and secure it inside the back cover.

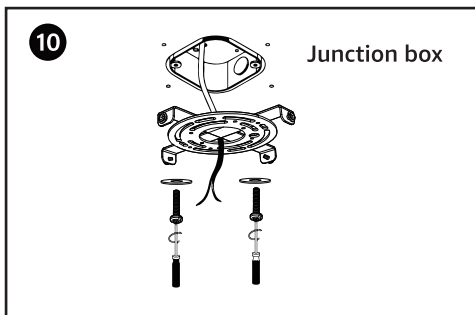
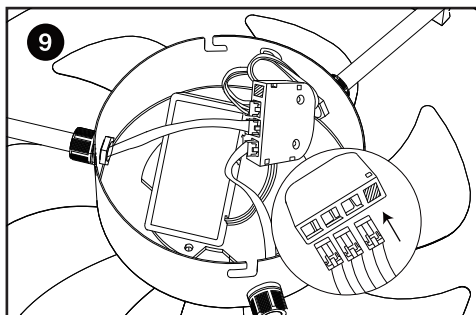


- 9** Insert the 3 wires into the small junction box.
- 10** According to the user's ceiling situation, choose the corresponding installation method.
- Junction box: Use J-box screws and washers to secure the bracket to the ceiling.

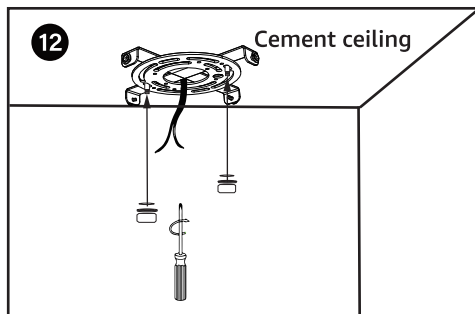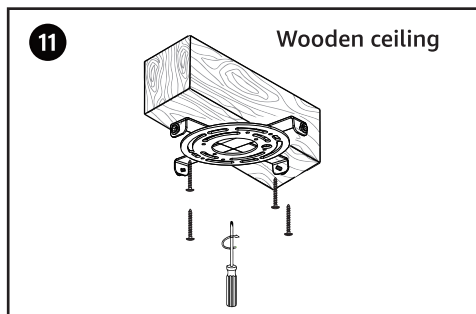



- 11** Wooden ceiling: Drive self-tapping screws directly into the wooden ceiling.
- 12** Cement ceiling: Drill holes in the cement ceiling, then use expansion screw or plastic expansion tube and self-tapping screws for fixing.

Installation

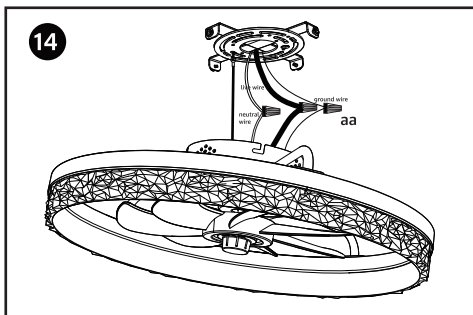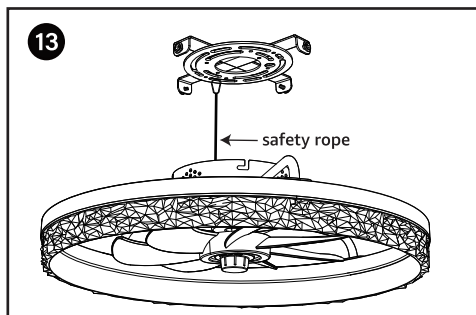

- 13** Hang the lamp onto the ceiling plate using the pre-installed safety rope for added stability.

- 14** Wiring:
Connect the "Neutral wire" (white wire) from ceiling to the white wire.
Connect the "Live wire" (black wire) from ceiling to the black wire.
Connect the "Ground wire" (green or yellow/green or bare) from ceiling to the yellow/green wire.

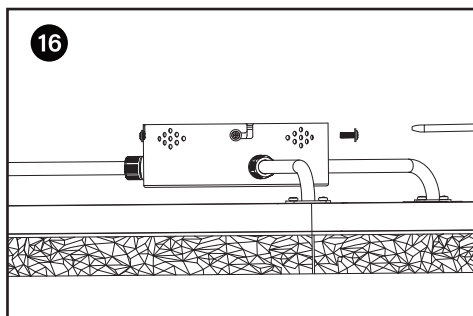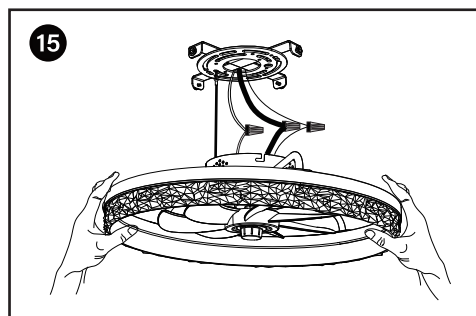


- 15** Align the grooves on the canopy with the screws on the bracket, then gently push the fixture upward to secure it in place.
- 16** Rotate the ceiling fan to align with the grooves, then tighten all 4 screws.

Tips: If it is difficult to install the ceiling fan according to the picture, you can scan the QR code on the first page of the manual to refer to our installation video.

Remote Control



Attach wall plate using the two screws provided.

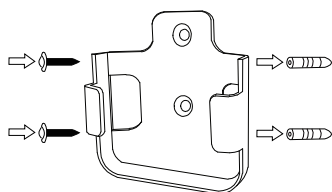

	Light on/off
	Light & fan /off
	CCT change
	Night light
	Brightness +
	Brightness -
	CCT + (cooler)
	CCT - (warmer)
	Pairing
	Forward/reverse
	All off after 2 hours
	Fan speed
	Fan speed
	Fan speed
	Natural wind
	Fan off

To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

Pairing method: (single/multiple fans)

 
 
 
The remote control transmitter can be used to control multiple receivers.

1. For the ceiling fan you want to pair, turn the main power switch off for at least 60 seconds.
2. Turn on the main power switch of the ceiling fan, then immediately click **SETUP** button.
3. The light will blink to indicate successful pairing.

If the pairing process is unsuccessful, please repeat the above steps.

APP Control

- **NOTE:** Scan the QR code and install the APP on your phone, or search and install from Google Play, Apple App Store, and other app stores. Make sure your phone is connected to the internet and **BLUETOOTH** enabled.

Make sure you allow this app to access Bluetooth. (For iPhone users, Android users can ignore this step.) Method 1: Click "Allow" when opening the app for the first time. Method 2: Go to your phone's settings, find the app, and enable Bluetooth access.   	Picture 1				Turn on the fan's power wall switch, once the light is on, press the pairing button within 5s. When the fan light flashes twice, it indicates that the fan has been successfully paired with the phone and can now be controlled through the phone.
	Picture 2				Slide to change the fan speed
	Picture 3				Slide to change the brightness of the light
					Quick switch for "Natural" light color
					Quick switch for "Yellow" light color
					Quick switch for "White" light color
					N/A for this model
					Timer the fan
					Natural wind: fan speed will change automatically when use this function
					Sleeping wind
					Night light (10% brightness in neutral white)
					N/A for this model
					Fan moves forwards
					Fan moves reversely
					Light off/on
					Fan off/on

Troubleshooting


⚠ WARNING

For your own safety turn off power at fuse box or circuit breaker before trouble shooting.

Trouble	Probable Cause	Suggested Remedy
THE FAN WON' TSTART OR THE LIGHT WON'T OME ON	1. Fuse or circuit breaker blown. 2. Loose power line connections to the fan or loose switch wire connections in the switch housing. 3. The wiring between the receiving box and the fan is not properly connected. 4. The receiving box is damaged due to the wrong connection.	1. Check main and branch circuit fuses or circuit breakers. 2-3. Check line wire connections to the fan and switch wire connections in the switch housings - CAUTION: Make sure the main power is turned off! 4. Contact us for support.
FAN WOBBLES EXCESSIVELY	1. Check for loose ceiling screws. 2. Check if the four screws on the canopy are loose.	1-2. Tighten the loose screws.
FAN SOUNDS NOISY	1. Check for loose ceiling screws. 2. Check if the four screws on the canopy are loose. 3. Check for wrong wire connection to the wall switch or light dimmer.	1-2. Tighten the loose screws. 3. Disconnect from the wall switch and use the remote controller only.
REMOTE DOES NOT WORK	1. Battery out of power 2. Battery not installed correctly 3. Not paired 4. Bluetooth funciton not on	1. Use new battery 2. Install again to ensure right 3. Pair with light 4. Made sure open BLE to pair

Installation Recommended

Room Size:

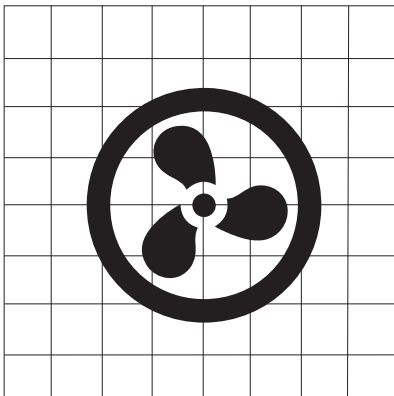

UP TO 7ft x 7ft

Room Height:

Installation Height	7FT	8FT
	9FT	10FT

Customer Service :

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours

You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

Your fan light comes with a two-year warranty. If a malfunction occurs due to product quality issues, we will assist in diagnosing the problem and provide replacement parts free of charge to ensure your fan light resumes normal operation.