


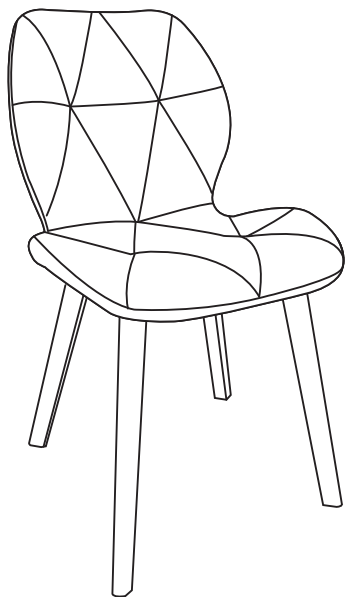


Ax1 	Bx1 	Cx1 	Dx1  6x45mm
Ex4  6x60mm	Fx5 	Gx5 	Hx4 
Ix1 			

SPARE (Ersatzteile)

Dx1  6x45mm	Ex1  6x60mm	Fx1 	Gx1 	Hx1 
--	---	--	--	--

STEP 1

D	 6x45mm	1
F		1
G		1
I		1

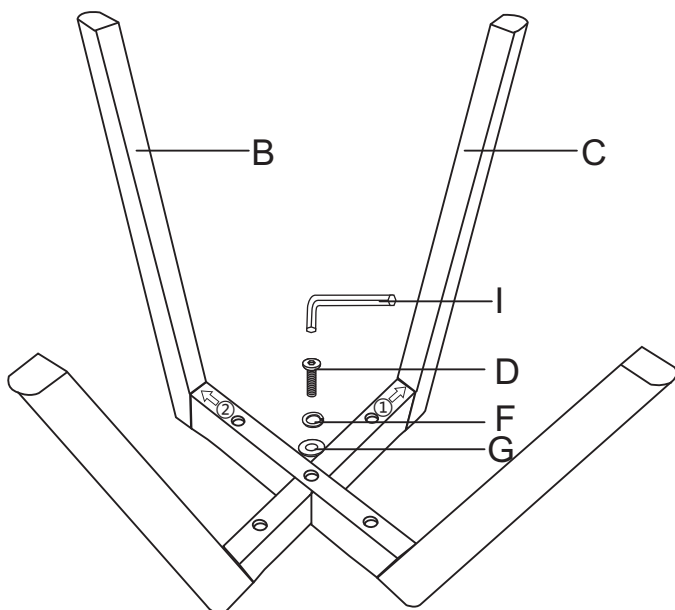

STEP 2

E	 6x60mm	4
F		4
G		4
H		4
I		1

