

Operating Instructions

Instruction (for clock with musical chime, hourly strike and pendulum)

1. Insert one 'AA' size battery for the movement and one for the pendulum and two for the Melody generator (batteries not included). The polarity of the battery must be inserted as indicated in the battery holder to prevent accidental damage to the movement.
2. Time setting: turn the time setting knob on the back side of the movement. Caution: For any clock with musical chime and strike, **DO NOT** turn anti-clockwise, as this will upset the chime settings.
3. Hold the clock upright, and hook the pendulum (where applicable) onto the swing-lever.
4. Strike setting: press the pusher button to set number of strike to match with the time on the hands, one press increases one strike. For example, when the hour indicated is 9:00, but it strikes only four times, you should press the button five times to increase the strike from 4 to 9. The first chime/strike after the battery is inserted is 6:00AM for a Westminster Chime clock. (Note: The clock will switch off automatically from 10:00 PM to 5:00 AM, if the strike is set correctly.)
5. Set the clock straight upright on a firm and stable surface (wall or table for standing).
6. Use alkaline batteries ONLY (not included). Replace battery once a year even if the clock is still running. When the clock becomes slow or the swinging pendulum becomes weak, or the chime sound becomes weak, the batteries should be replaced. Remove batteries when the clock is not in use for a long period. For cleaning, use only a soft cloth and no abrasive cleaner.