

About Installation

Thank you for purchasing a Ufly product. You may refer to this installation manual, and you can also visit our official website for installation and troubleshooting videos of the RS Series. Please make sure to follow the guide step by step during installation. If you are unable to install it yourself, please contact a professional installer and ask them to install it with reference to this manual.
www.uflyscreen.com




Installation Instructions

Please do not use excessive force before installation is fully completed. All products have been calibrated and tested at the factory. If you encounter any problems, please contact us immediately.
Service@uflyscreen.com

Installation Instructions

1 Installation Instructions


Installation Diagrams for UFLY Retractable Screen & Door Series.
You may also view the installation animation video on our official website.

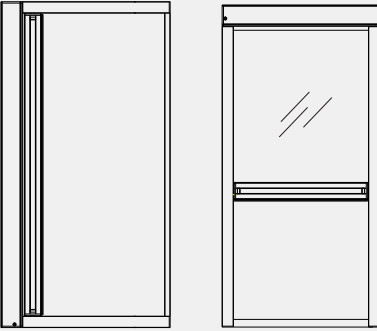

2 Inspect the packaging


Check that the carton is free of damage and deformation.

Verify the model, color and dimensions.

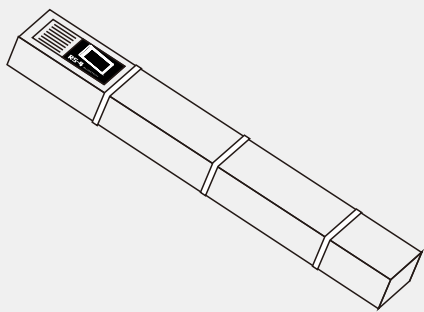


3 Inspect all items

Please ensure all items are complete.
Please do not remove the tape binding the screen door main body before installation is finished to ensure proper installation..

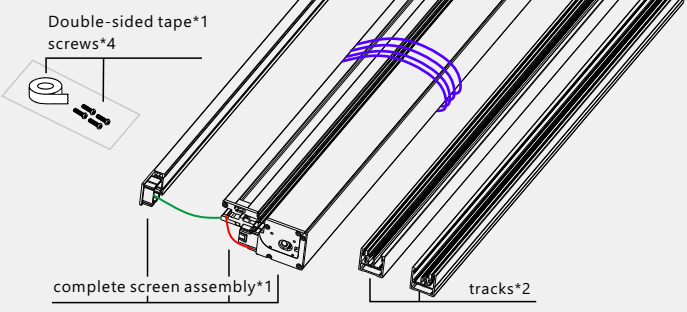


4 Position the screen door.

Please place the screen door flat on a clean, level surface as shown in the diagram.

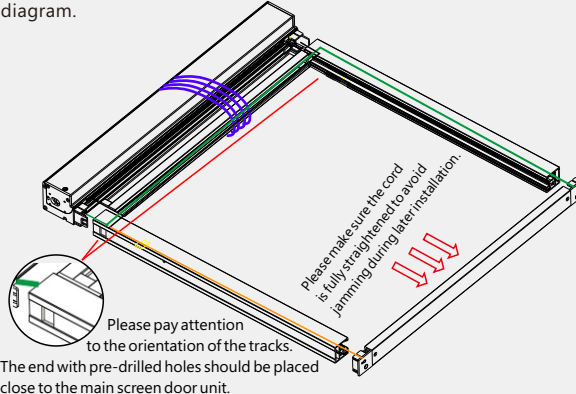


5 Insert the tracks

After confirming the correct orientation of the tracks, connect them to the main screen door unit.
Note: Do not use excessive force. Alignment with the holes is easy; forceful operation may damage the accessories.

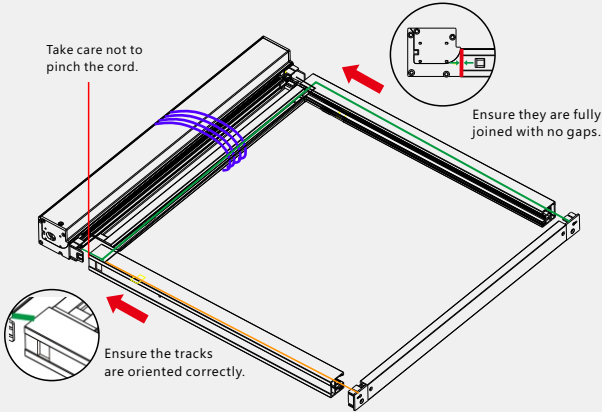


6 Install the frame

Insert the frame into the tracks to complete the screen door assembly.
Be careful not to catch the cord outside the tracks.

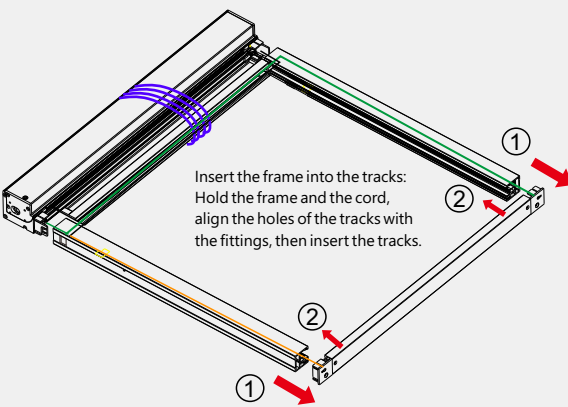


7 Check the installation

After assembly, please double-check that the installation is correct. You may test it by sliding and confirm all functions work properly.
Note: If it does not slide smoothly, do not use force. Please recheck your previous installation steps.

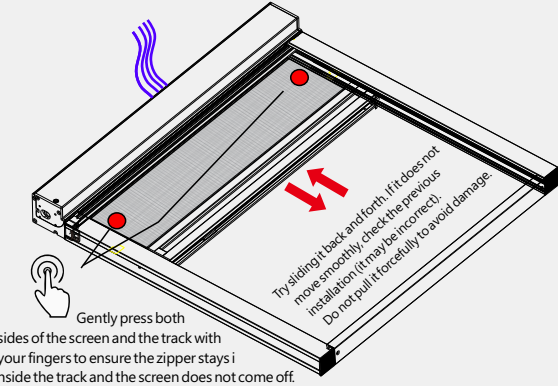

8 Installation complete


1. The product slides smoothly without jamming.
2. The zipper windproof function works properly.
3. The handle does not tilt when sliding.

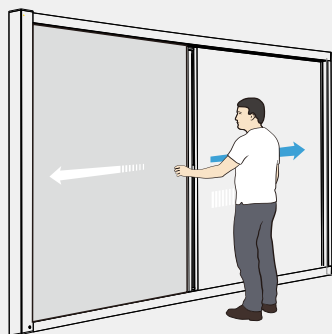

9 Install the screen door


Take the screen door to the entrance door and prepare the tools for fixing it.
You can apply double-sided tape to the back of the screen door.

To avoid damaging the accessories, please keep the screen door upright and do not twist it.

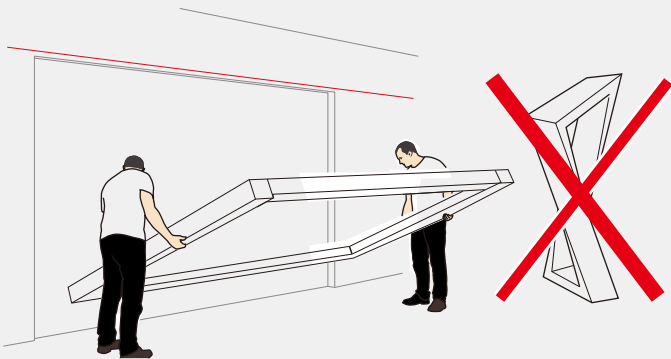


10 Secure the screen door with adhesive (Recommended)

You may secure the screen door using both double-sided tape and glass adhesive to ensure it is stable.
Please do not use the screen door until the adhesive is completely dry. It will be ready for use after about 1 day.

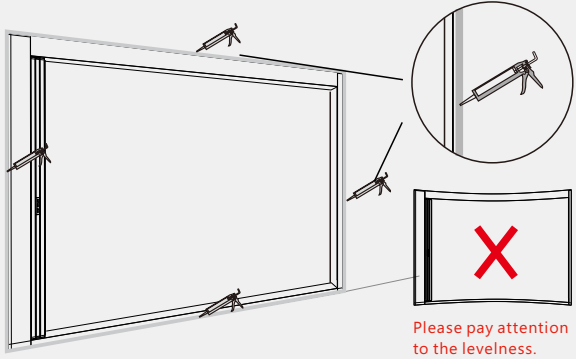

11 Fix the screen door with screws.

Roller screen doors should not be fixed with random screws.
Use screws with caution to avoid damaging accessories and the structure.
Note: No screws are allowed in the top and bottom tracks at all.




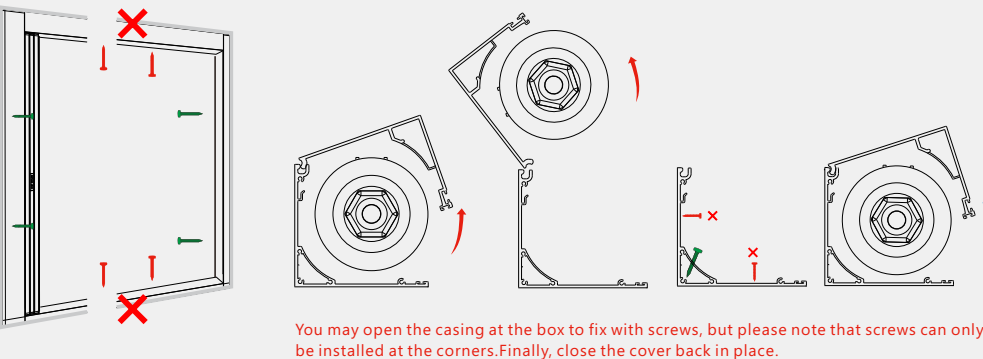


→ **Success!**

Solutions

The screen mesh has been knocked out of the track.


If the screen mesh is knocked out of the track by a pet or a person, please open the cover, detach the handle, and carefully remove the screen core (gently take out the zipper caught in the track). Then reinstall the screen core, making sure the zipper is properly seated in the track. Finally, reattach the cover and reconnect the handle.

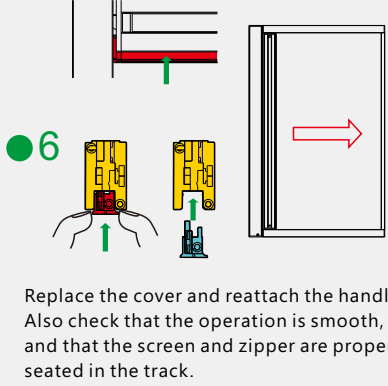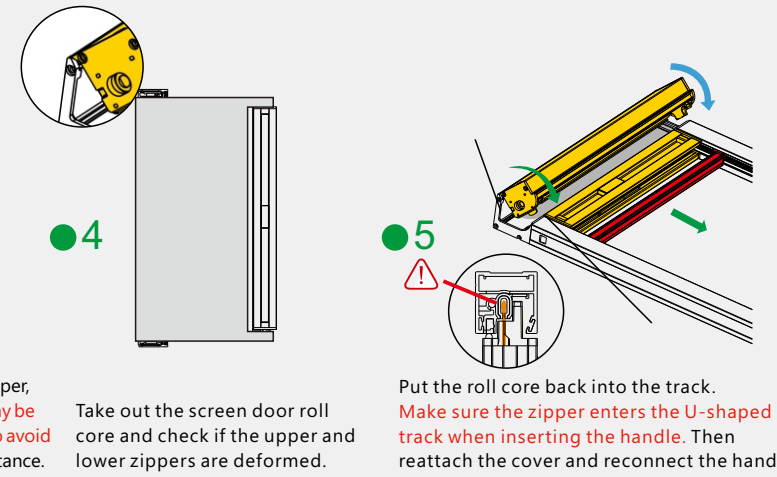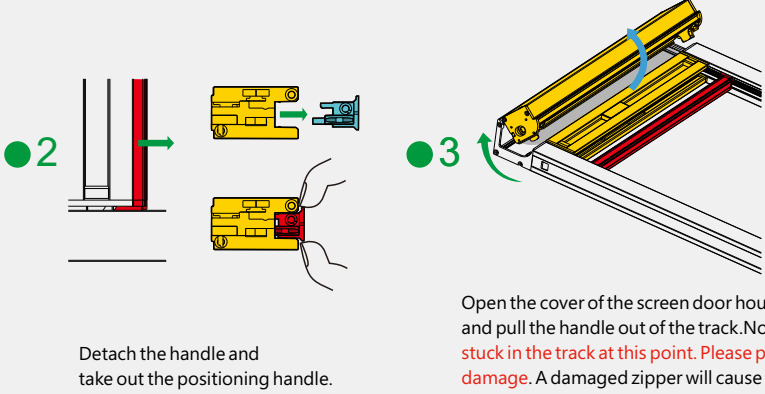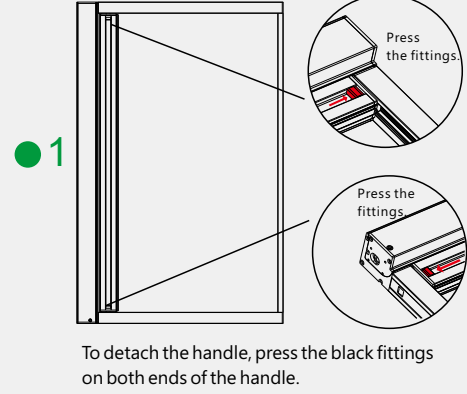

Adjust the rebound tension.

If the rebound is too fast, turn the screw counterclockwise.


If there is no rebound force, turn the screw clockwise.

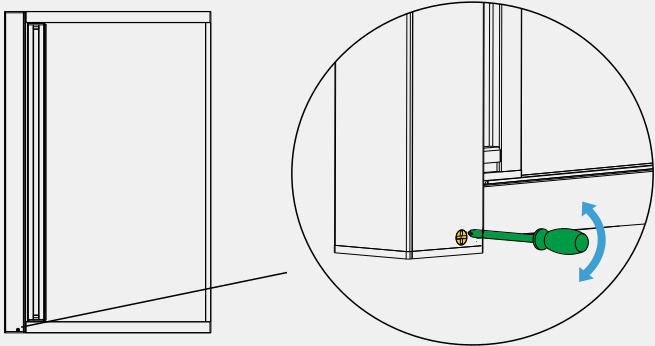

Use a cross drill or screwdriver to locate the black cross screw hole on the tube cover.
Adjust the spring tension (do not press hard).

Situation 1: Strong rewinding force / handle rebounds or cannot close properly
Loosen the spring moderately (turn counterclockwise).

Situation 2: Weak rewinding force / fails to retract properly when closing
Tighten the spring moderately (turn clockwise).

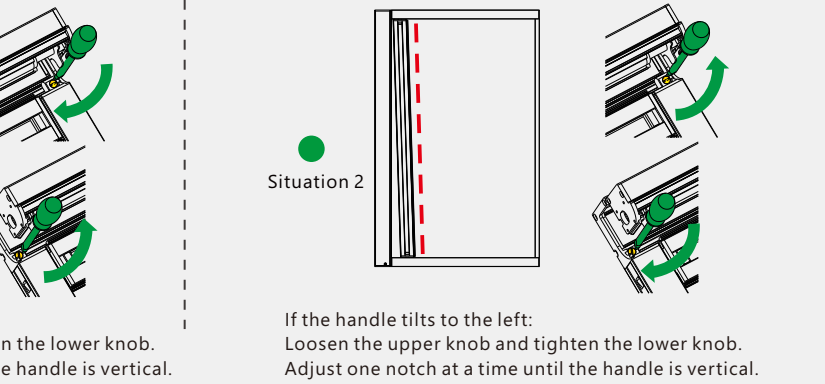

If the handle tilts to the left:
Loosen the upper knob and tighten the lower knob.
Adjust one notch at a time until the handle is vertical.

If the handle tilts to the right:
Tighten the upper knob and loosen the lower knob.
Adjust one notch at a time until the handle is vertical.