 


INSTALLATION

 
 
Product Manual

Version: 200329US-01-26A-AA

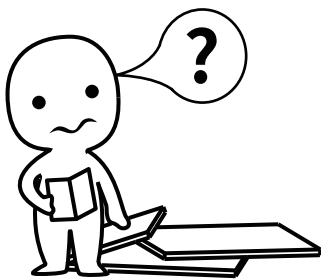


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

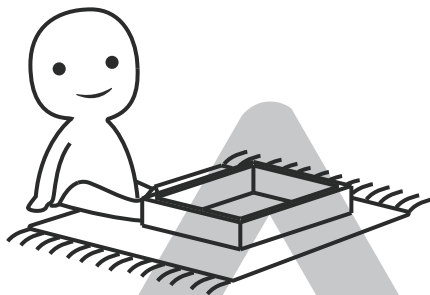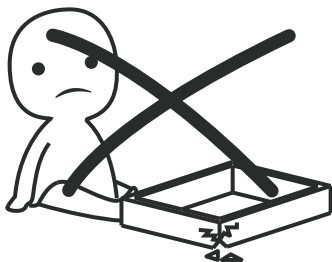



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

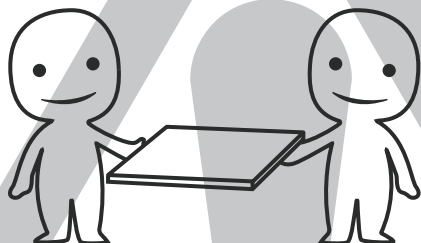

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

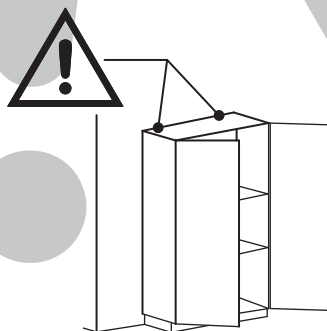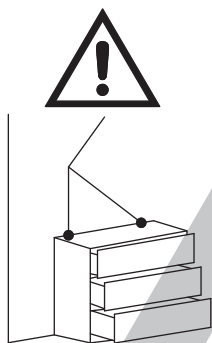

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !






It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

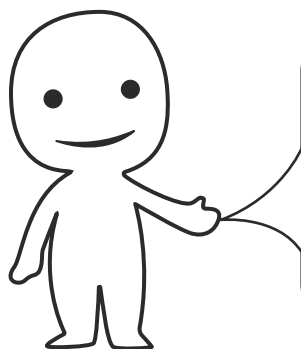


Please prepare the following tools

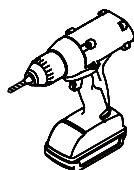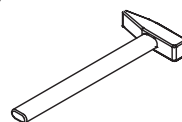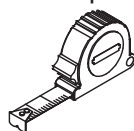     


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 55



Ø 15 x 10 mm

 B x 55

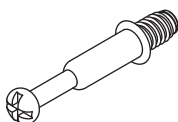


Ø 6 x 35 mm

C x 55



 D x 15

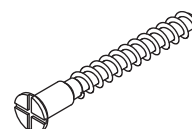


Ø 5 x 40 mm

E x 24




Ø 6 x 30 mm

 F x 6




G x 12

 

Ø 4 x 18 mm

 H x 3

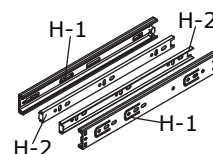


300mm

J x 36




Ø 3.5 x 12 mm

 K x 2

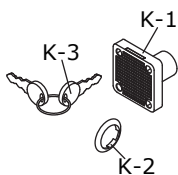

L x 8

 


Ø 3.5 x 20 mm

M x 6




 N x 66




Ø 3.5 x 14 mm

 
P x 4





















Q x 2

 


R x 14

 

Ø 8 x 38 mm

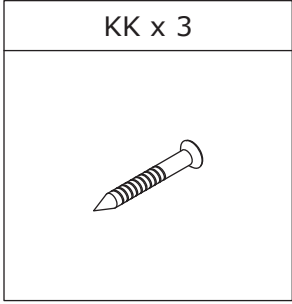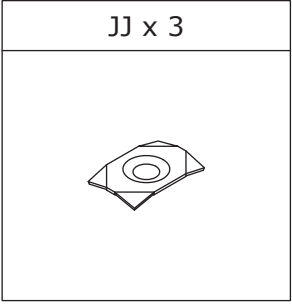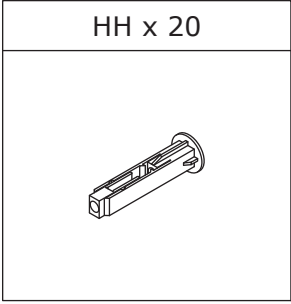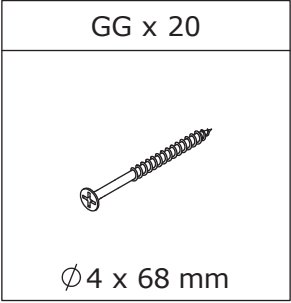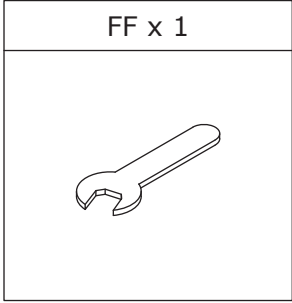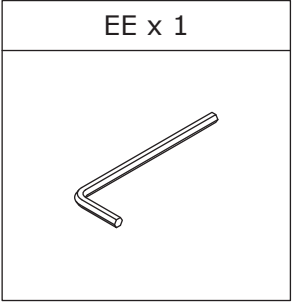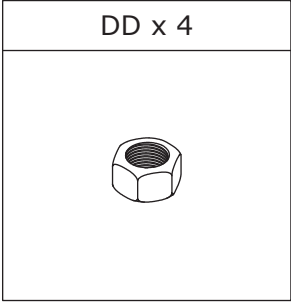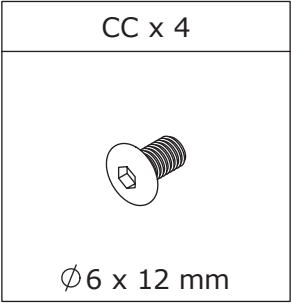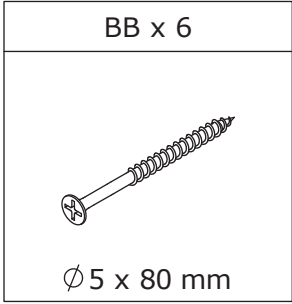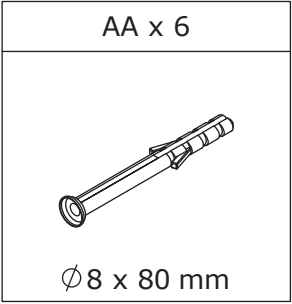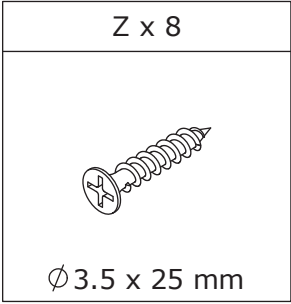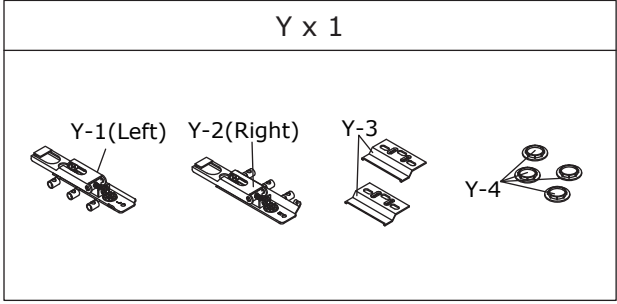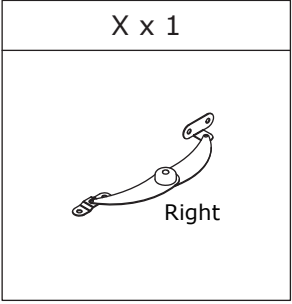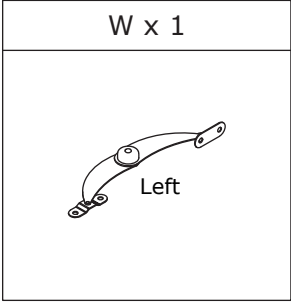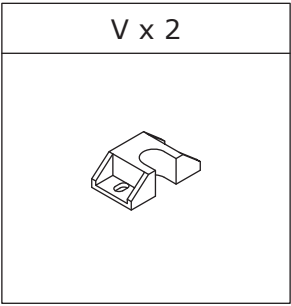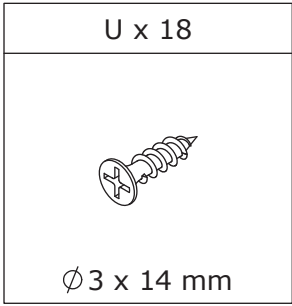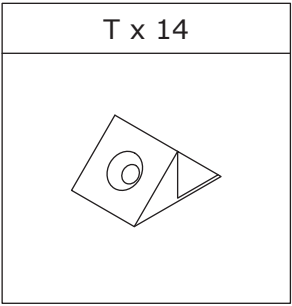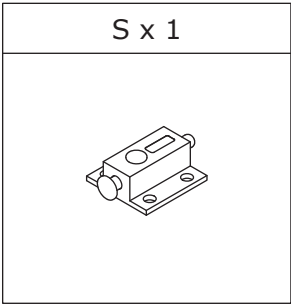                  

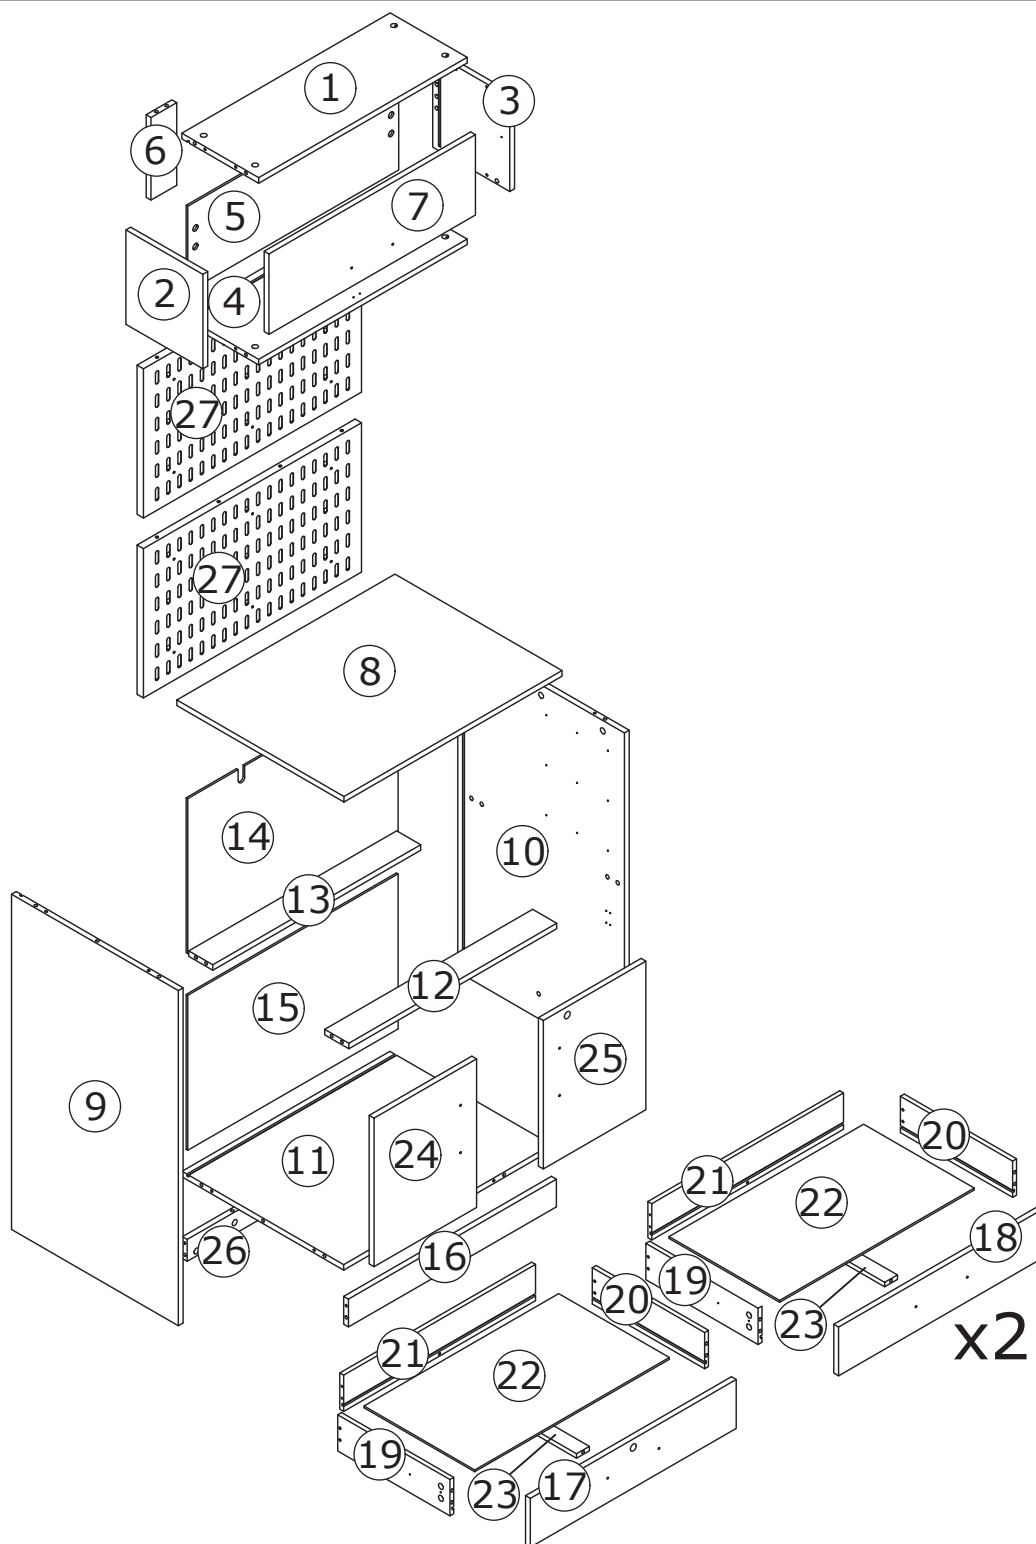 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

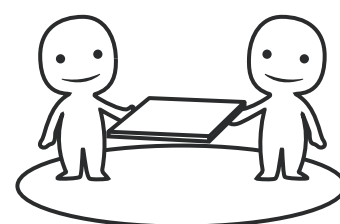


ASSEMBLED BY 2 ADULTS



Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.




 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

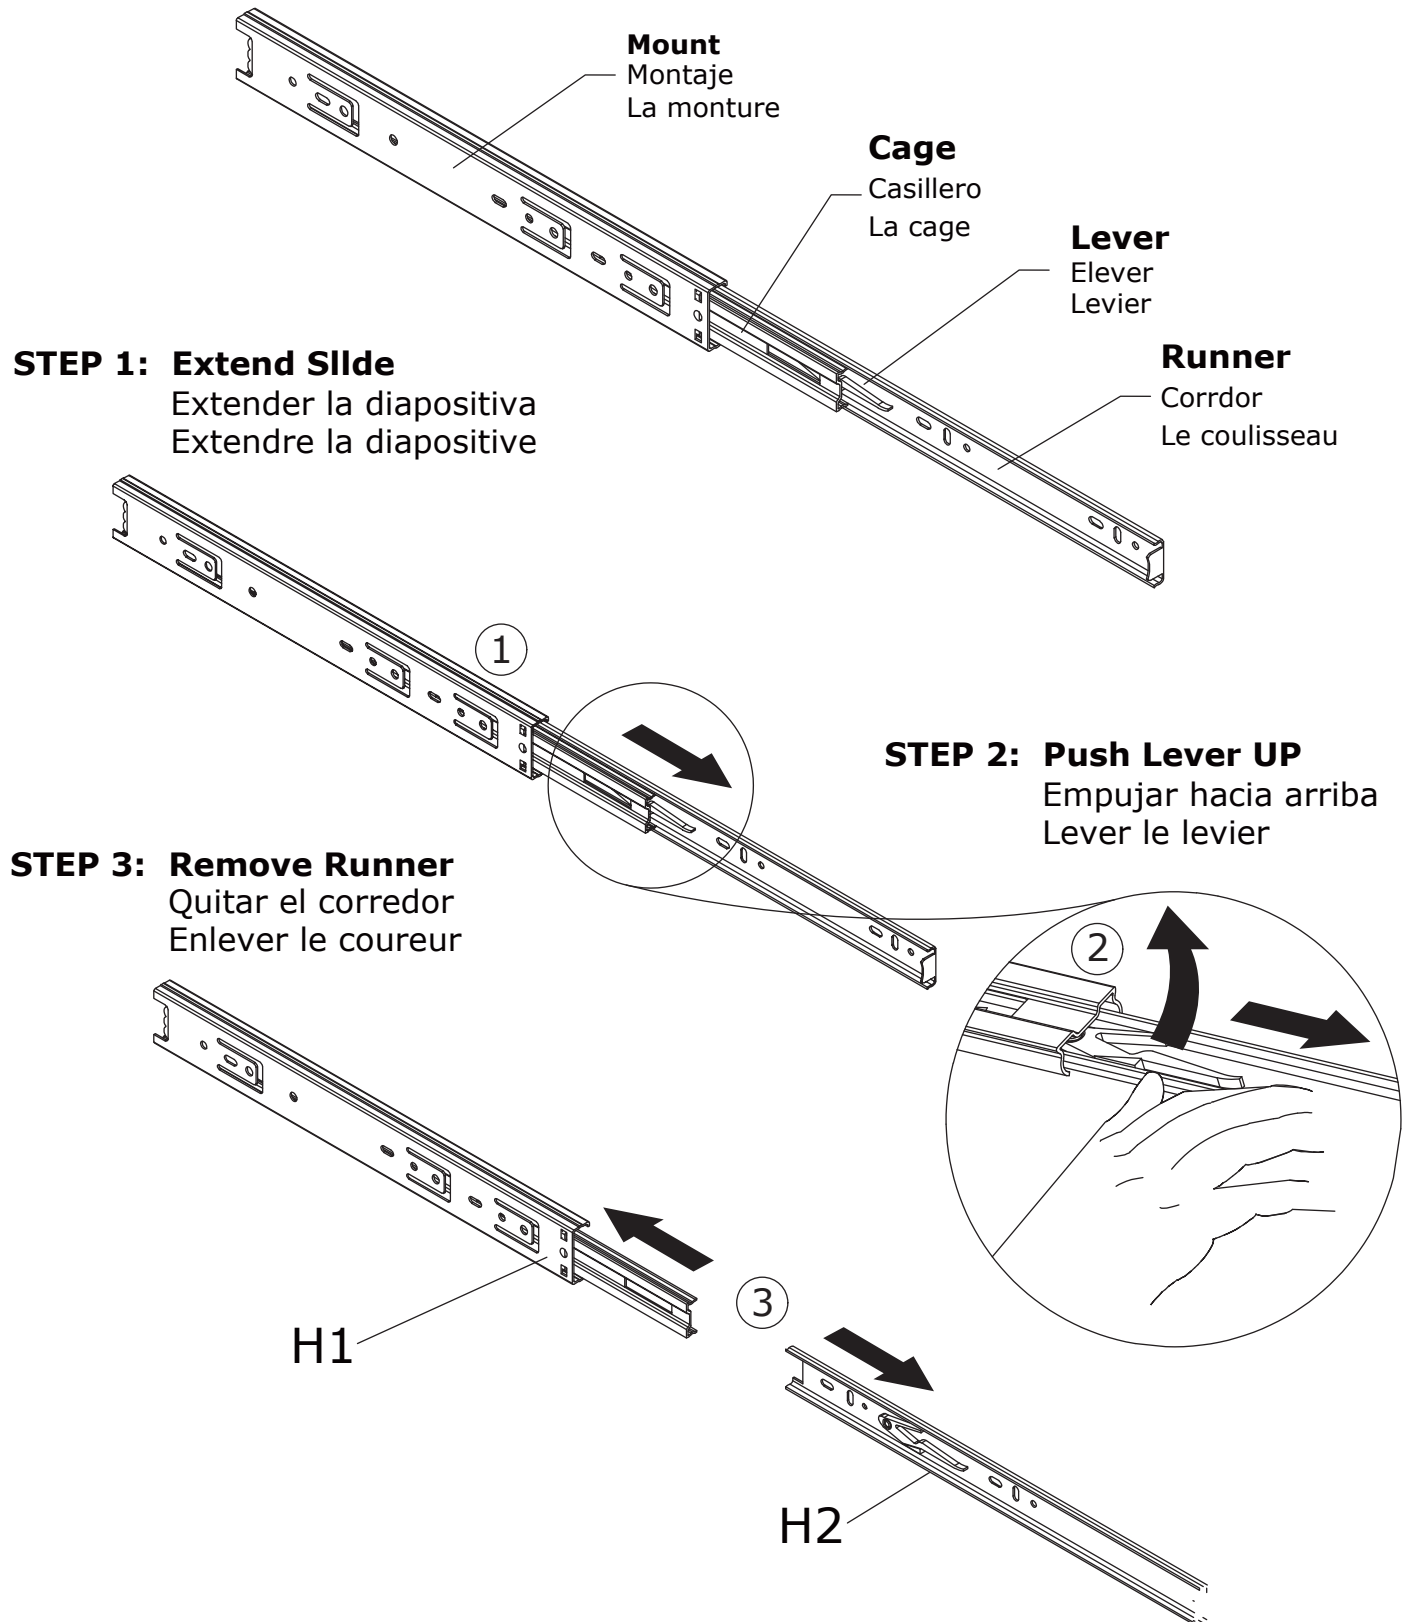




1

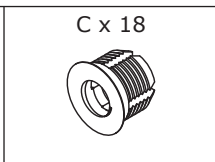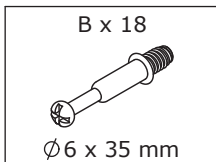  


 
 
 
 
Install (C) onto panels 9 and 10, then screw self-tapping rod (B) into panels 9 and 10.

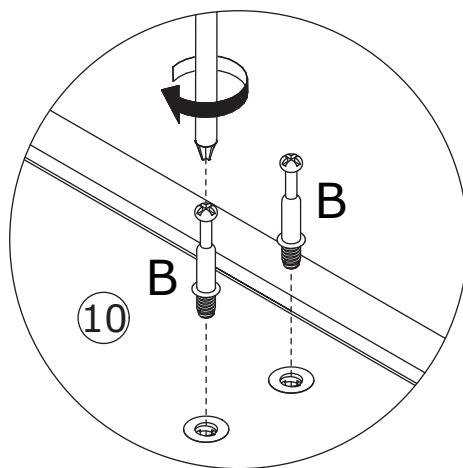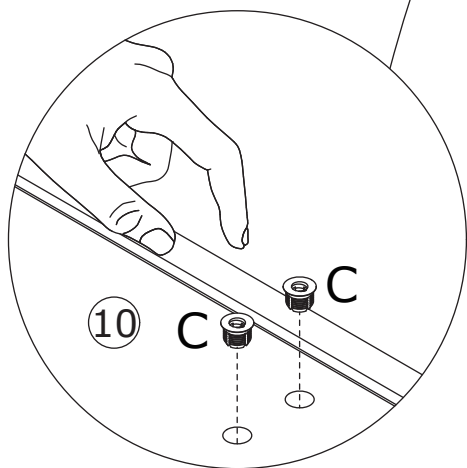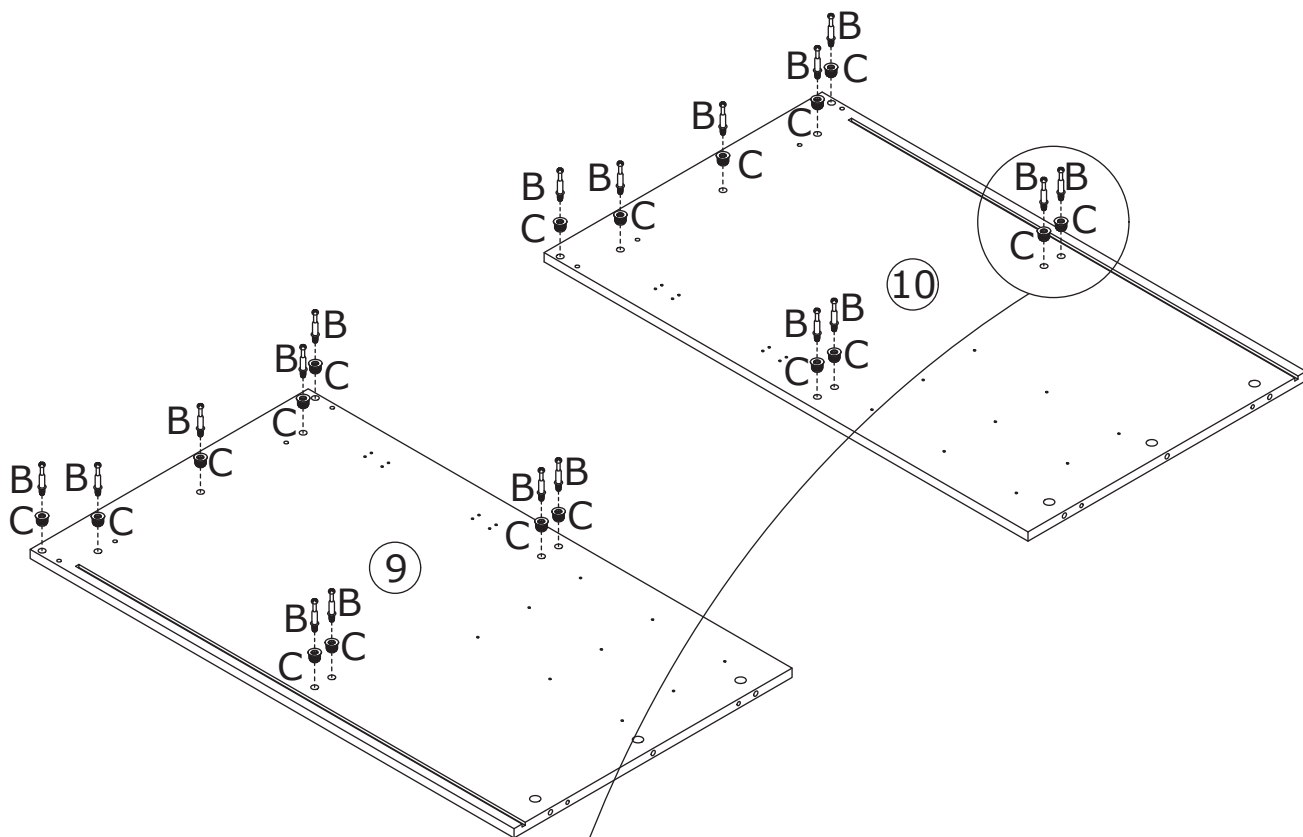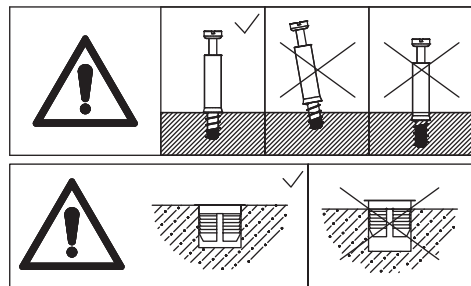



2

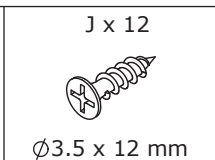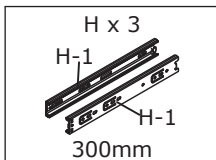   

 
 
 
 
 
Extend the slide rail.
Secure slide rail (H-1) to panel 9
and 10 using screw (J).

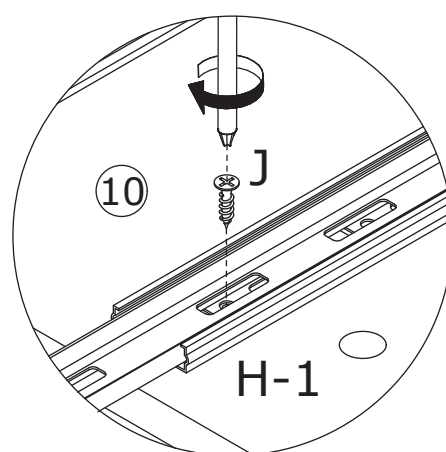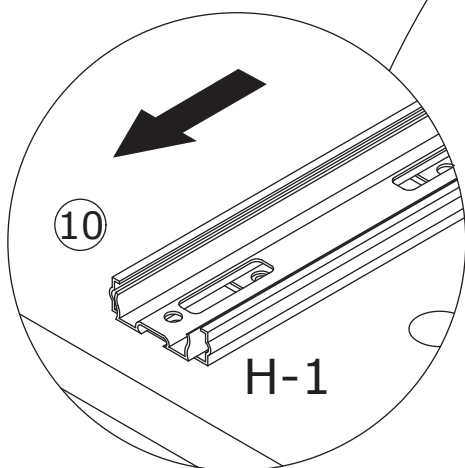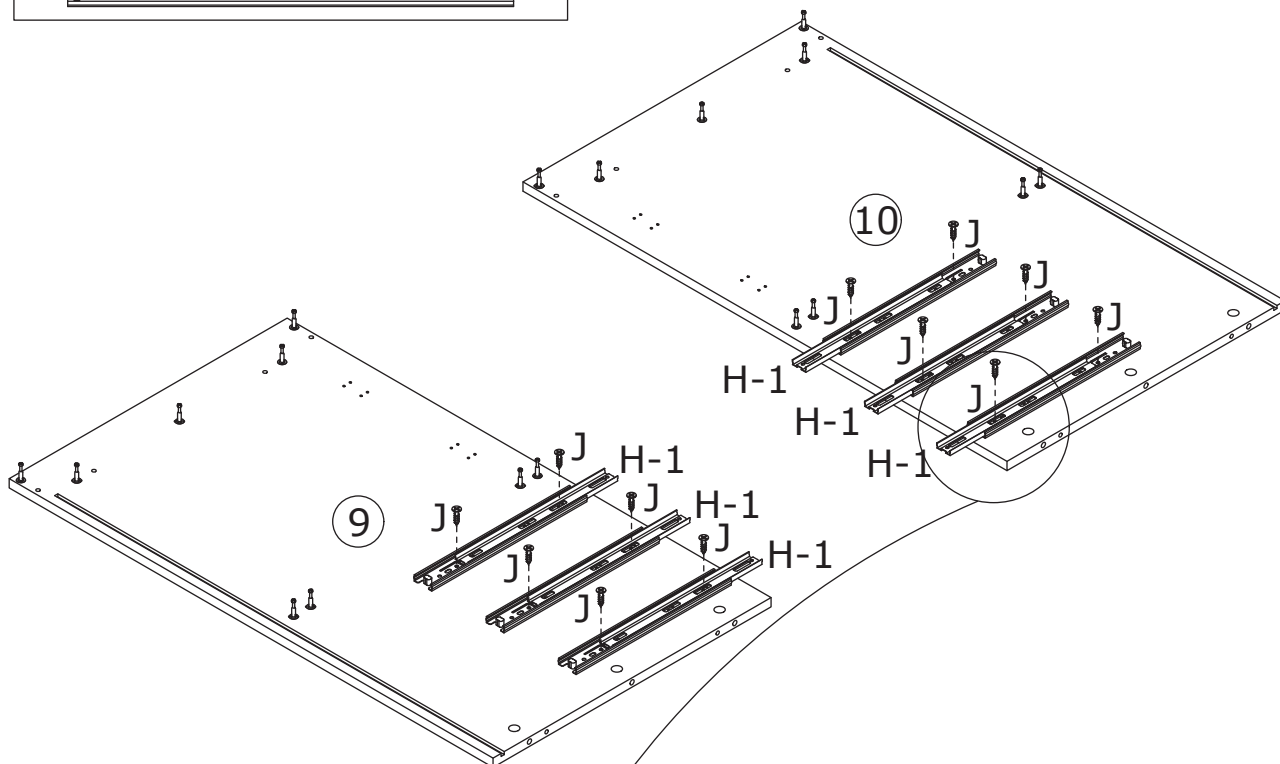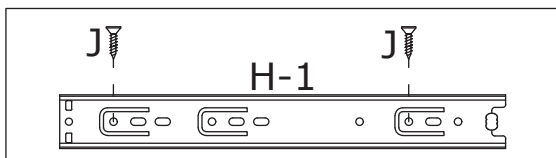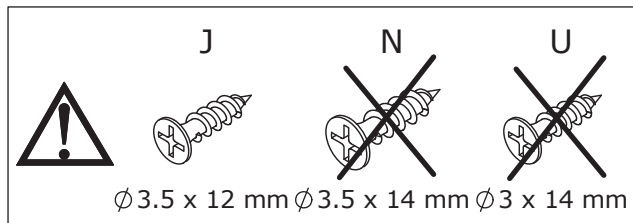

3

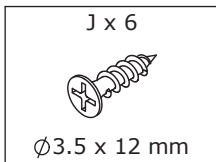  

     Shorten the slide rail.
Secure slide rail (H-1) to panel 9
and 10 using screw (J).

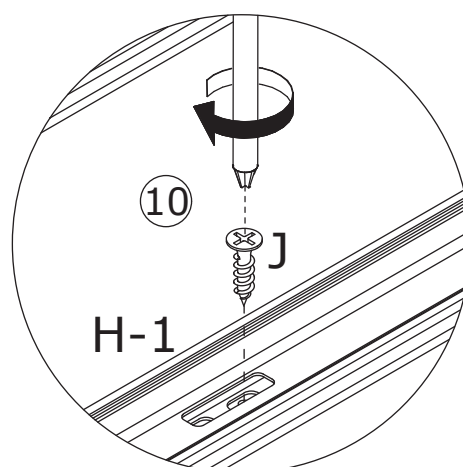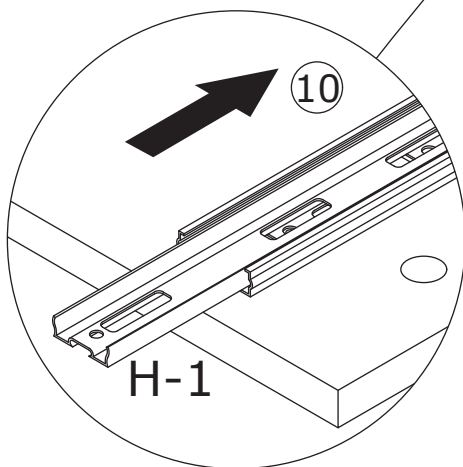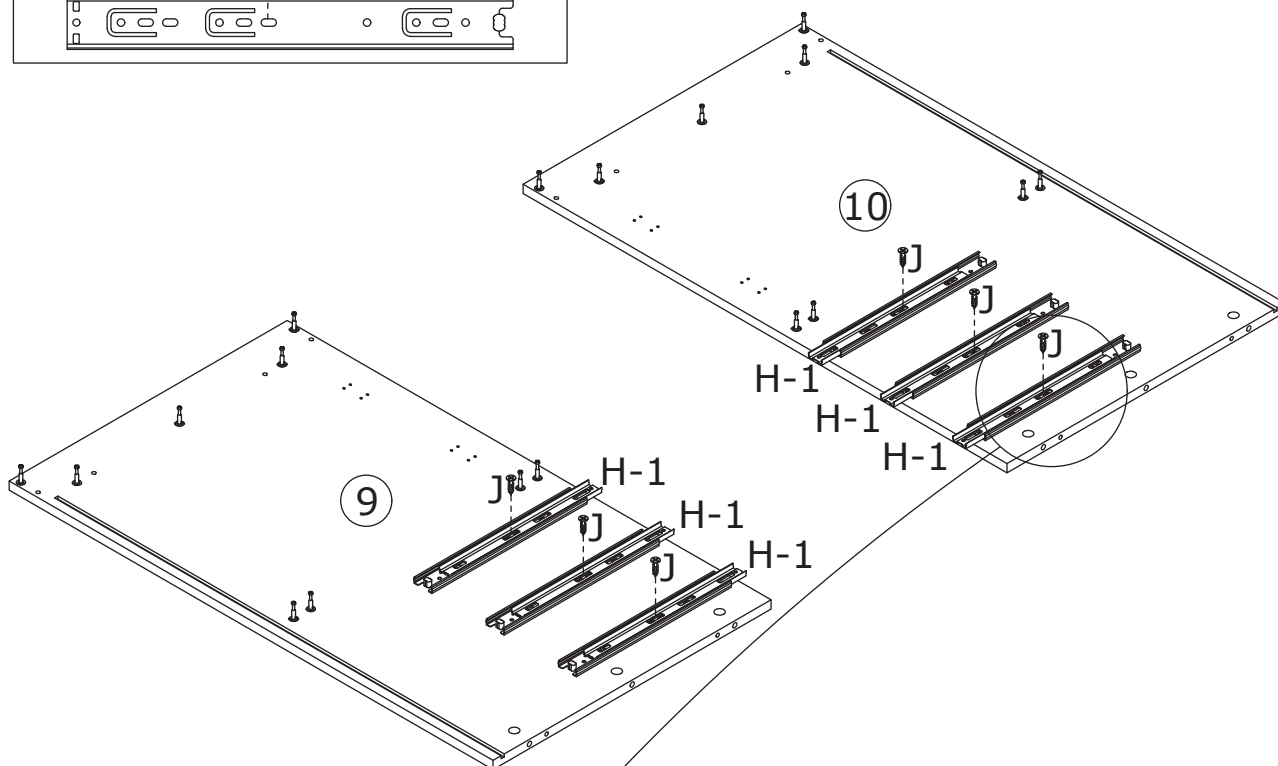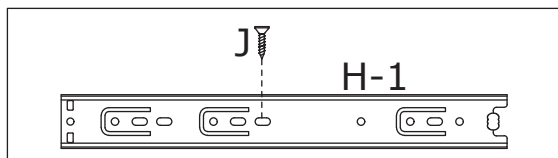
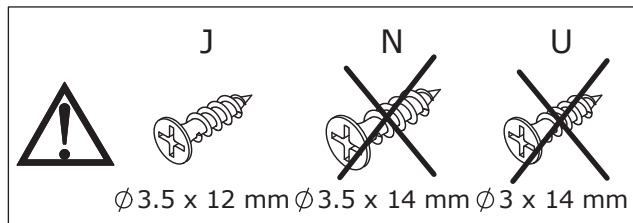


4





B x 4



 
 
C x 4



   
 
Install plug (C) onto panels 11 and 16, then screw self-tapping rod (B) into panels 11 and 16.

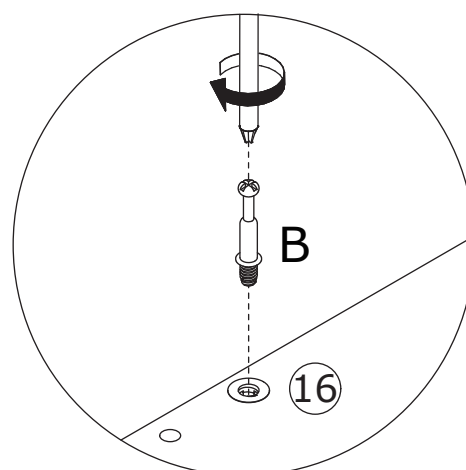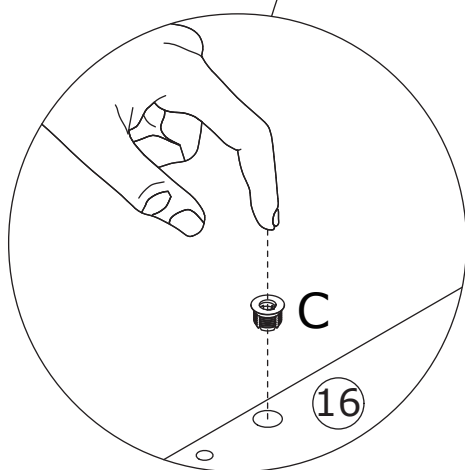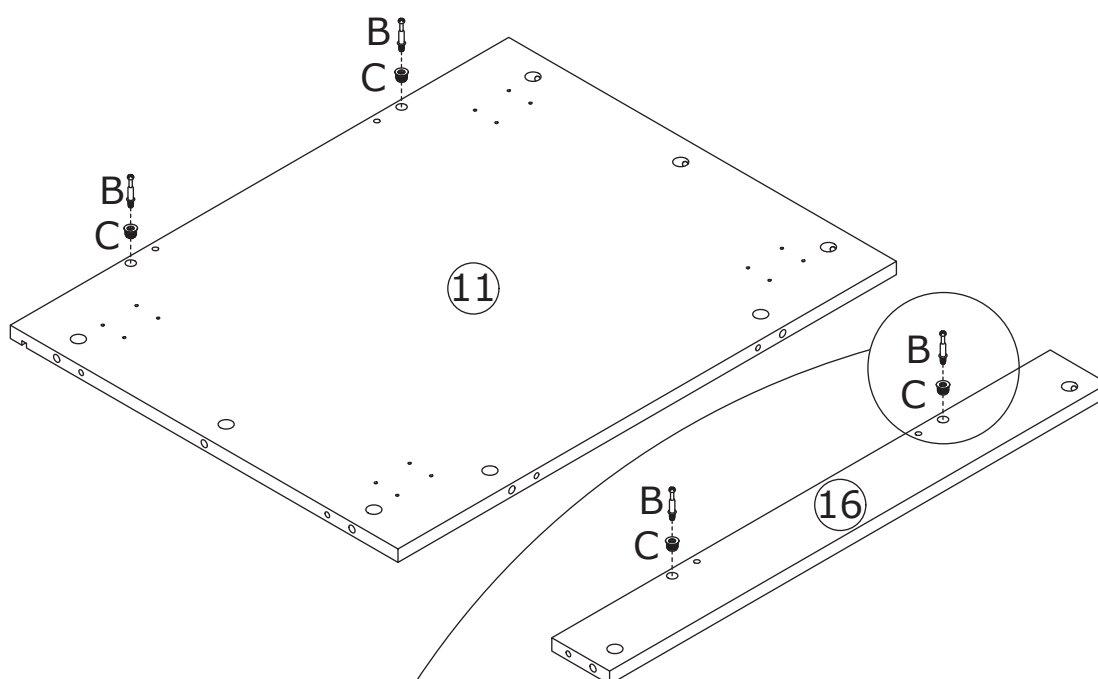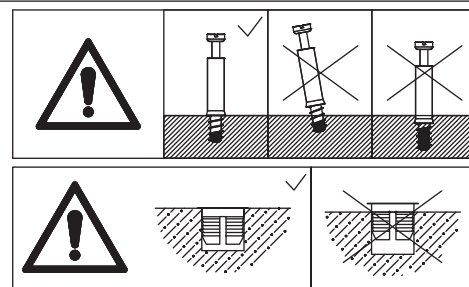

5

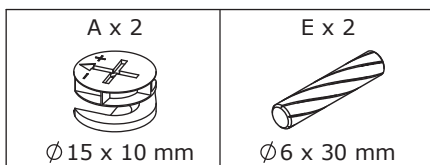  


 
 
Connect panel 26 to panel 11 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

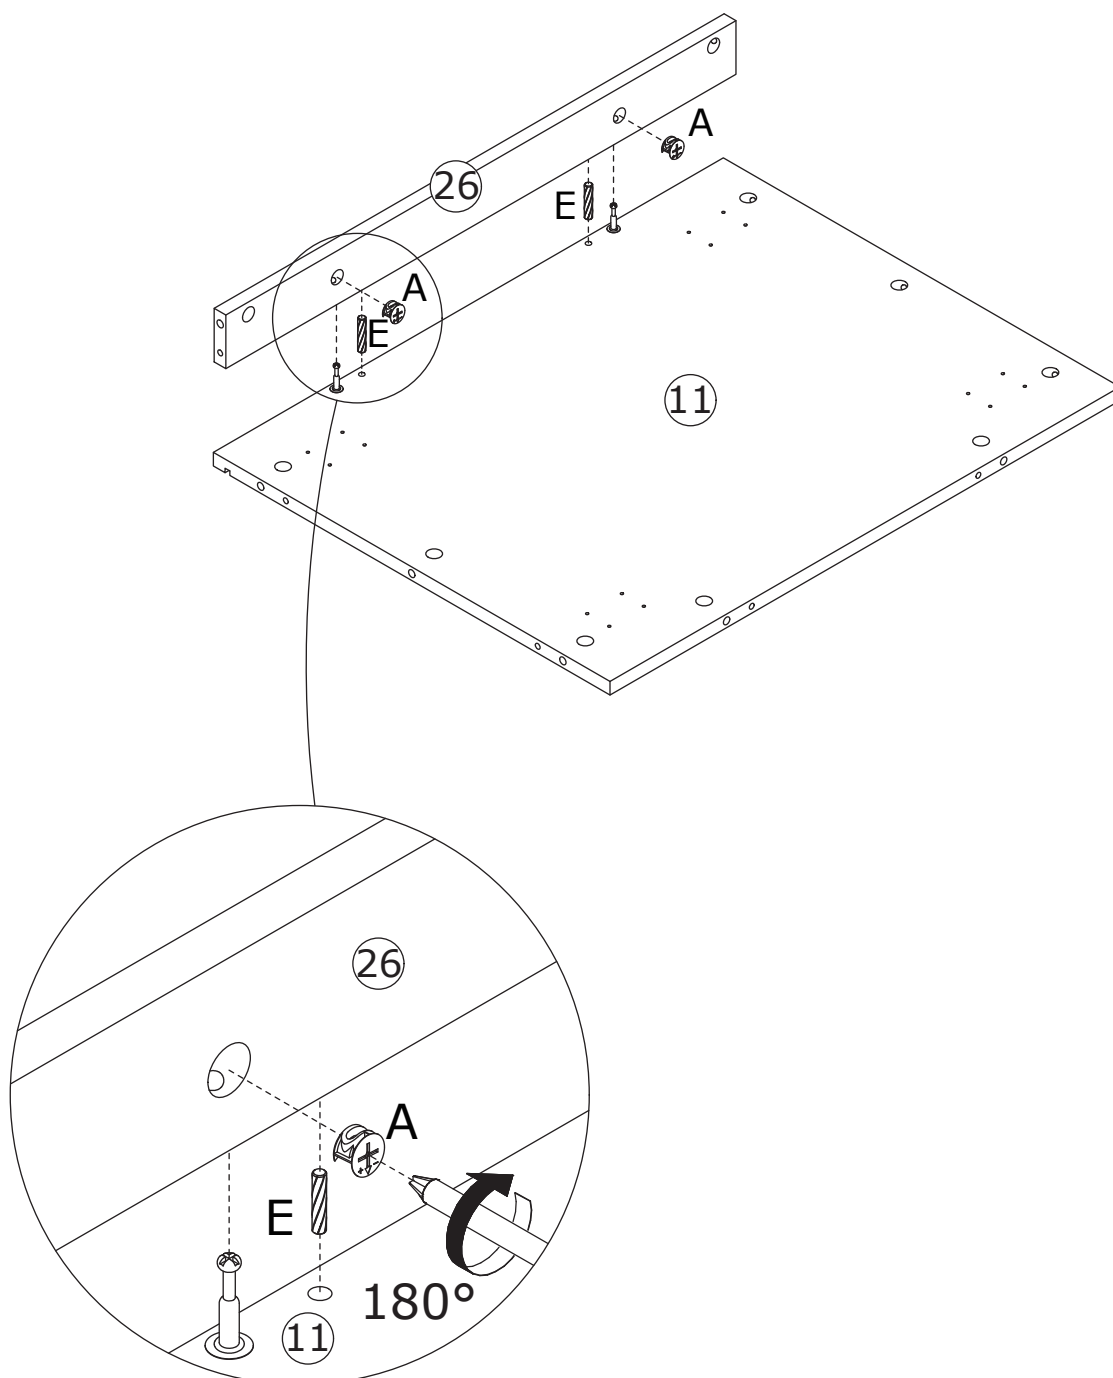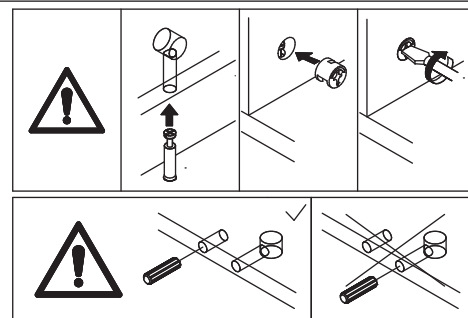

6



  
 
Connect panel 16 to panel 11 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

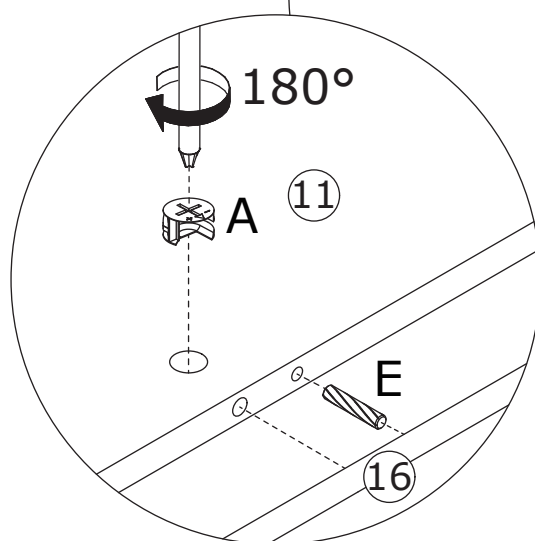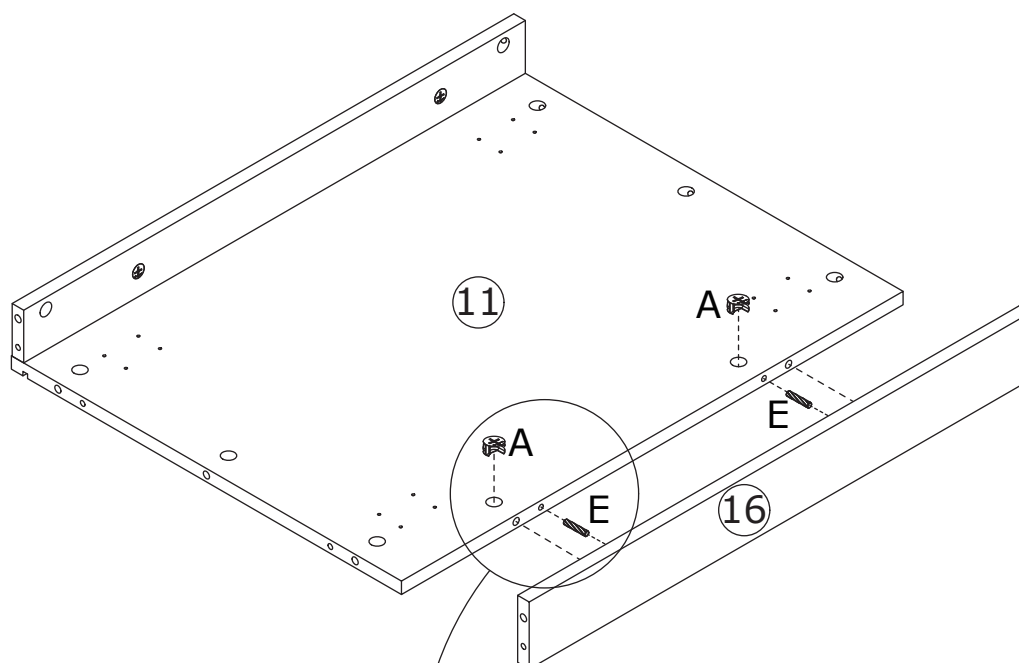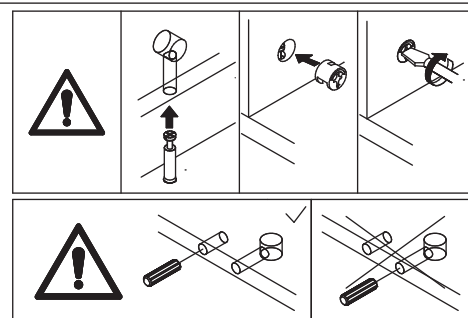




7



  Secure part (V) to panel 12 using screw (U).

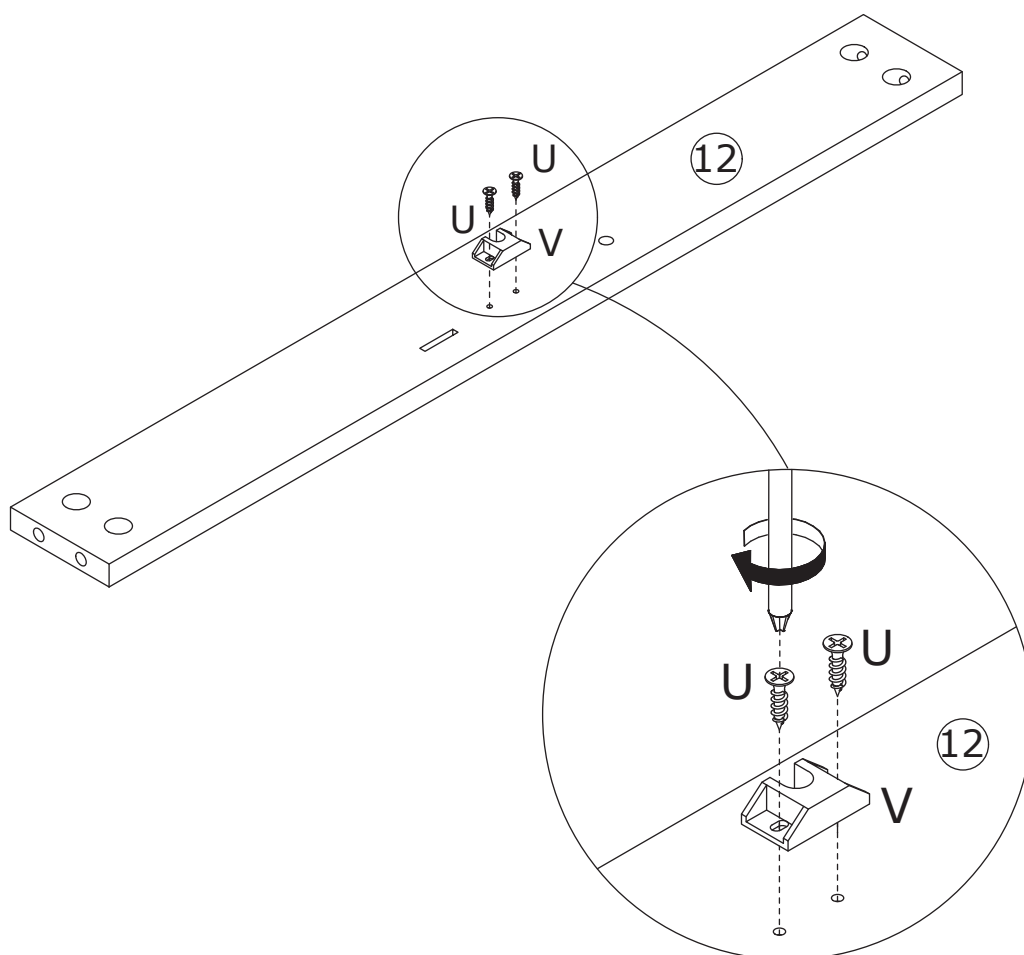
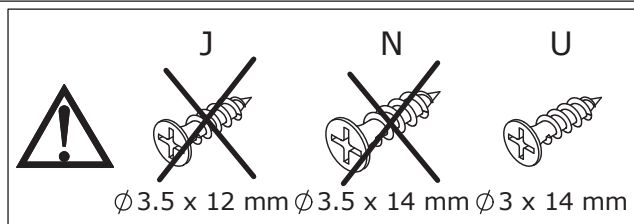


8

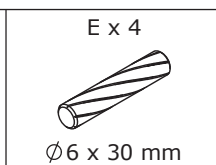  
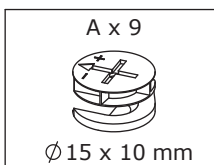 


Insert wooden dowel (E) into panels 16, 11, and 26.

  
Connect panels 11, 16 and 26 to panel 10, then tighten by turning cam lock (A) clockwise.

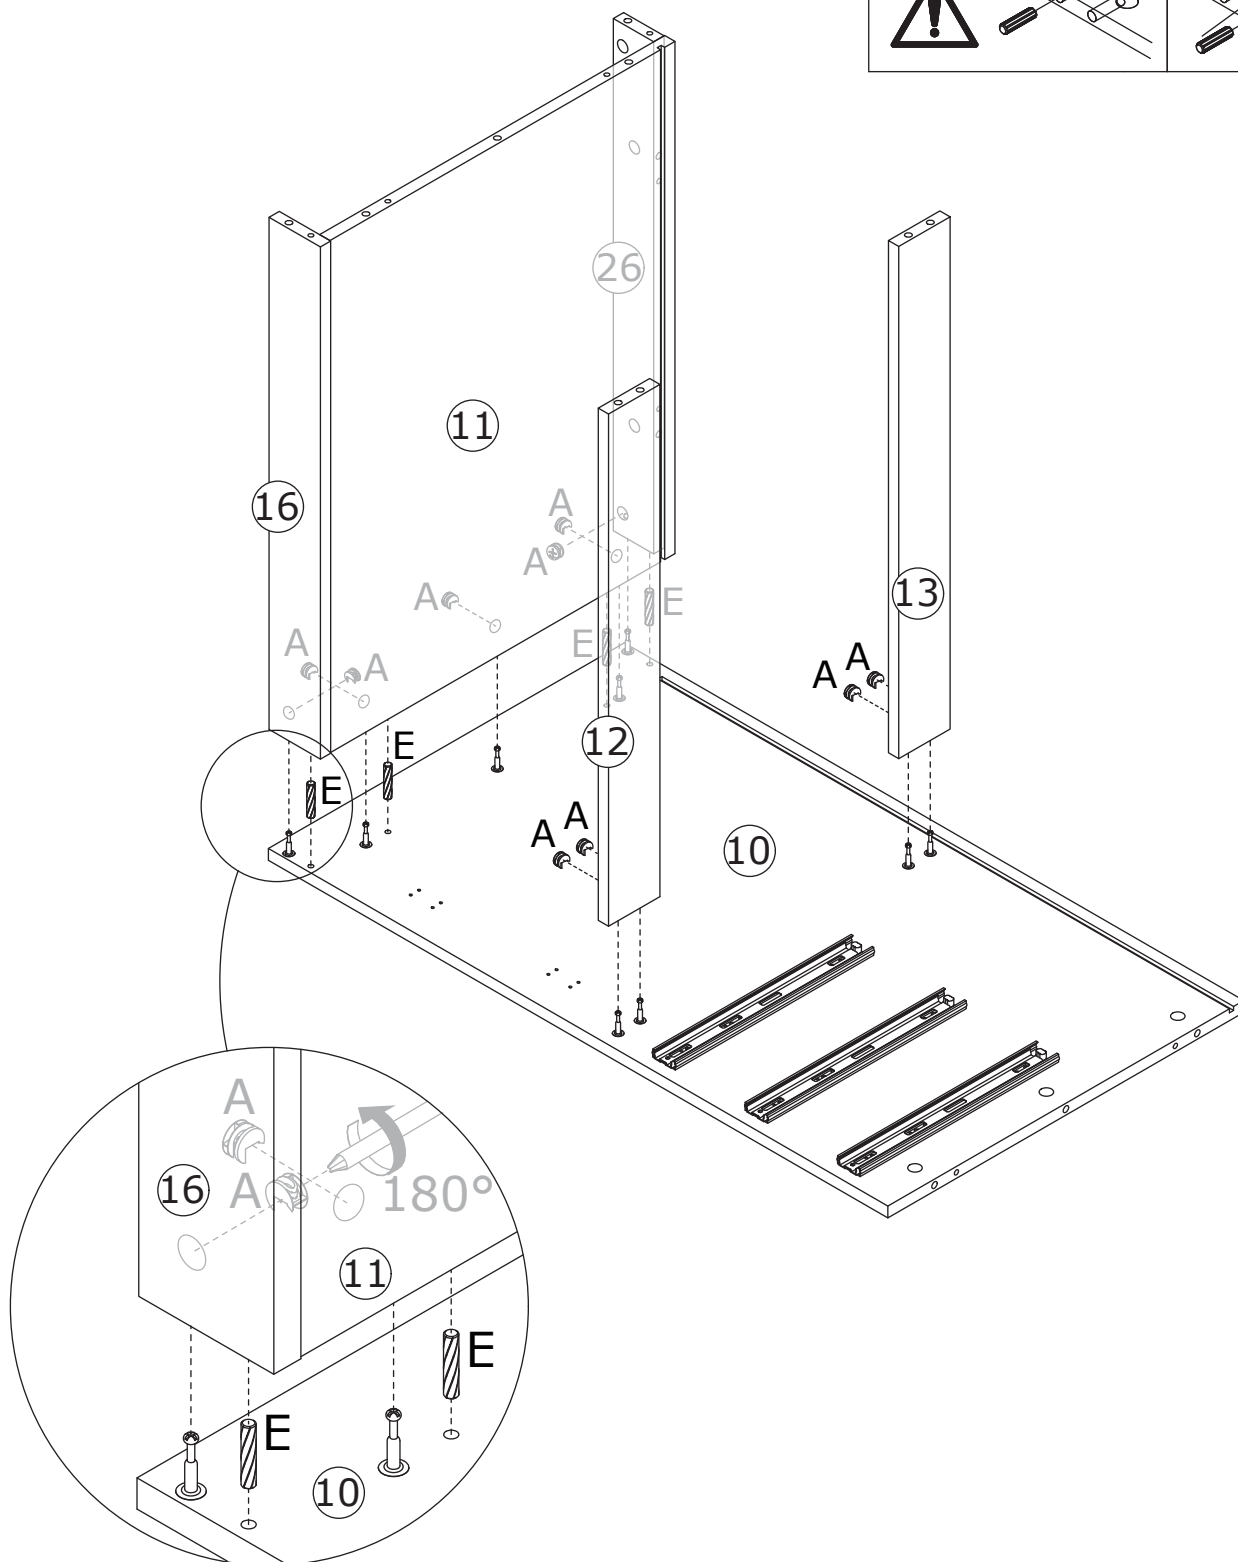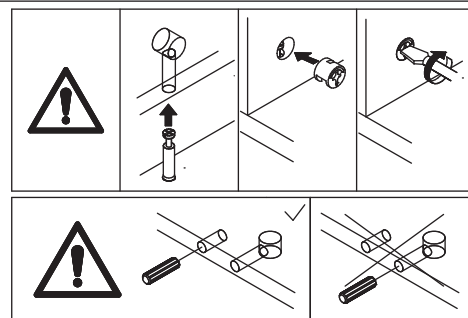



9

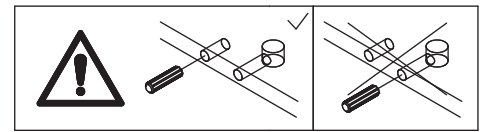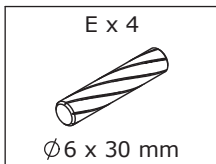  


 
Insert wooden dowel (E) into panels 11, 16 and 26.

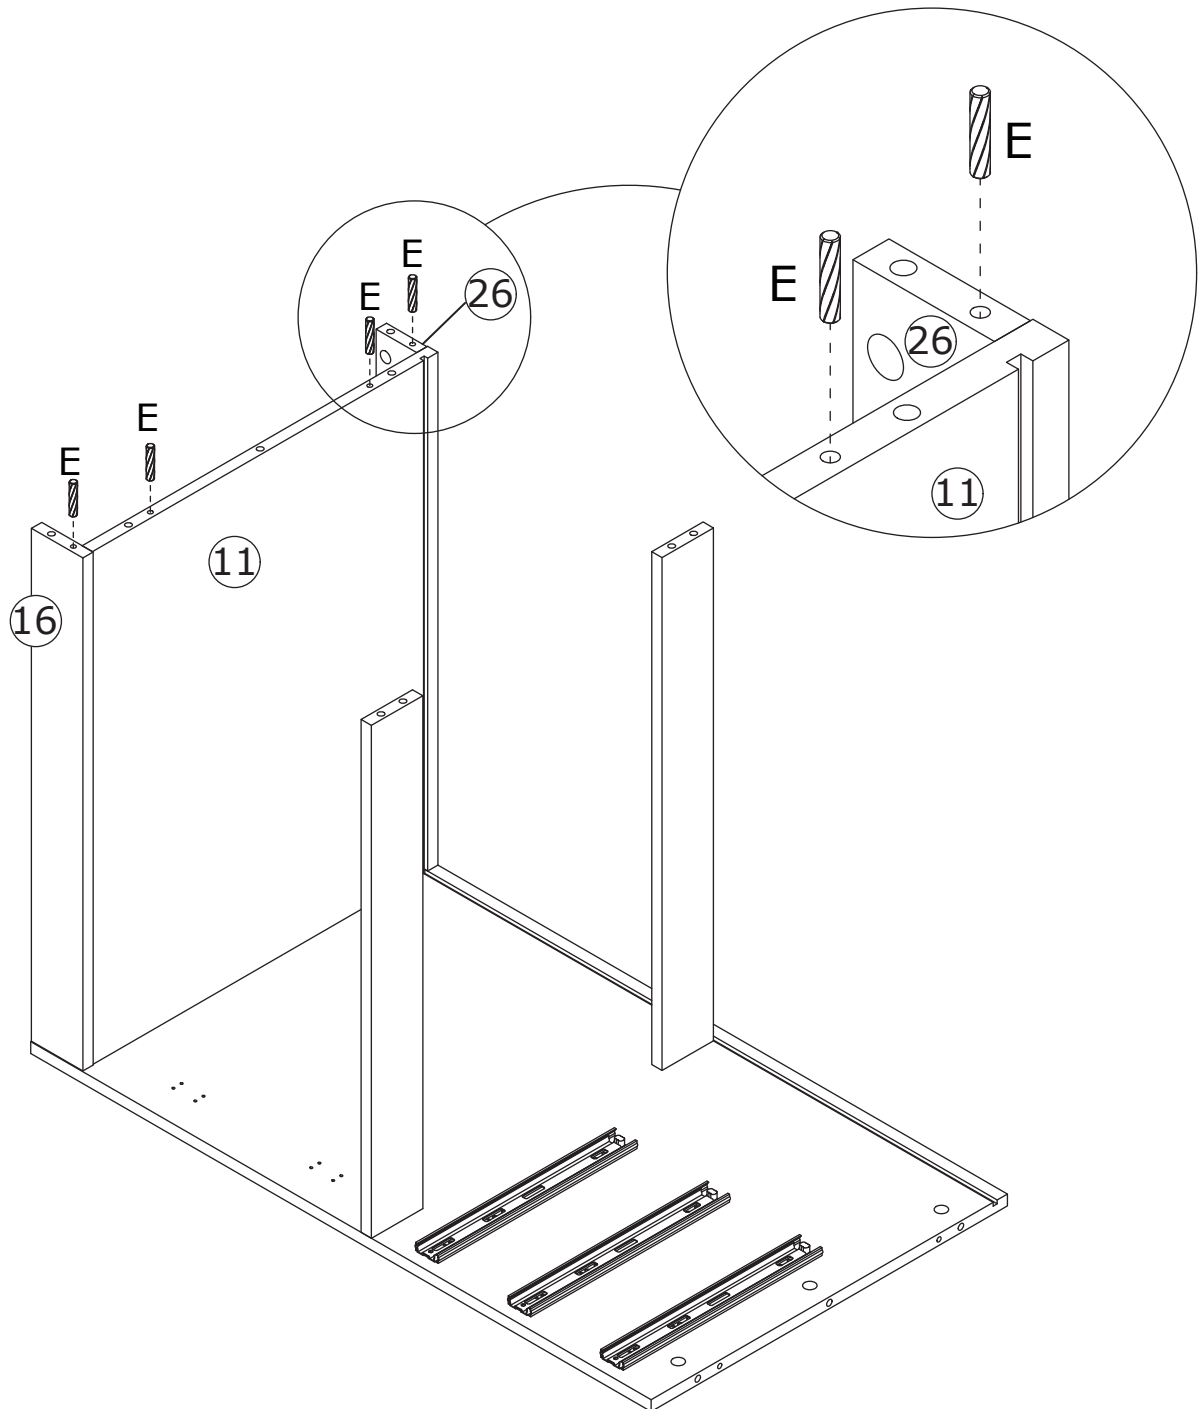

10

 
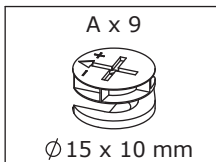 


  Connect panels 11, 16 and 26 to panel 9, then tighten by turning cam lock (A) clockwise.

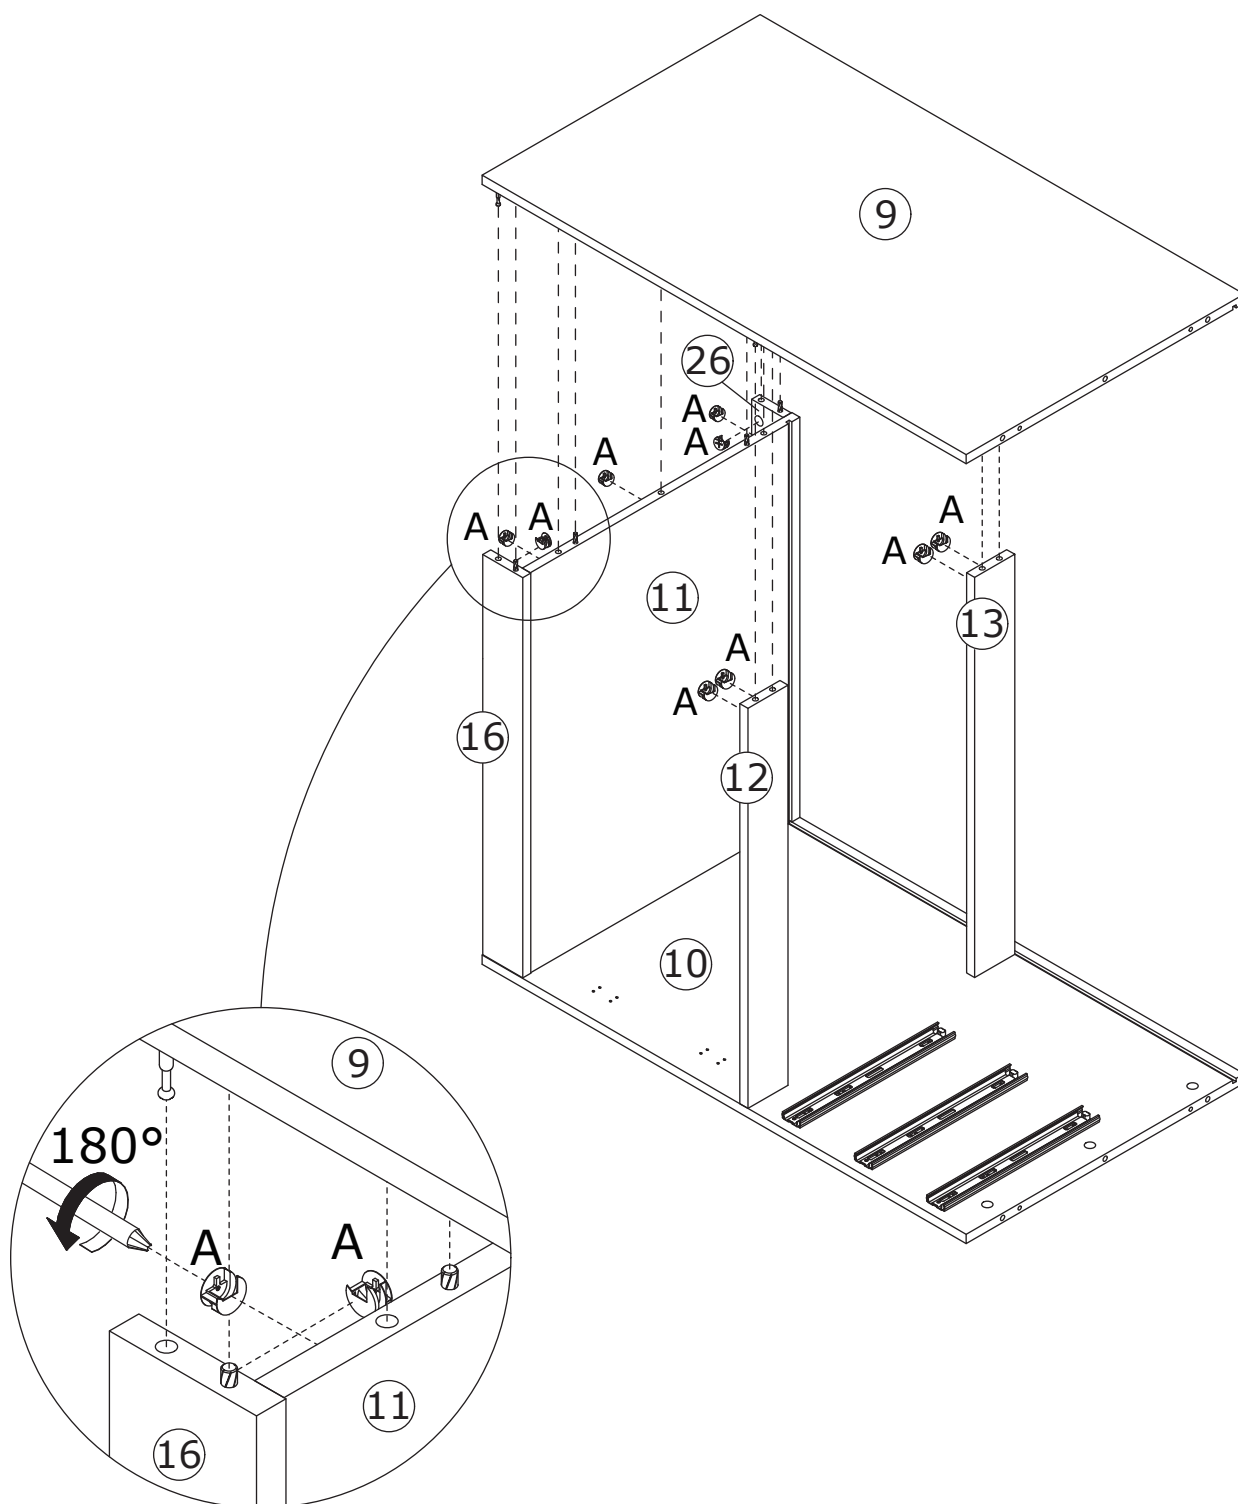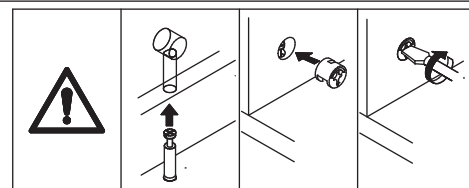


11

  Flip the cabinet body, then insert panels 14 and 15 into the available grooves.

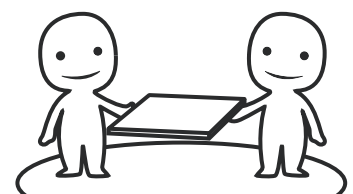
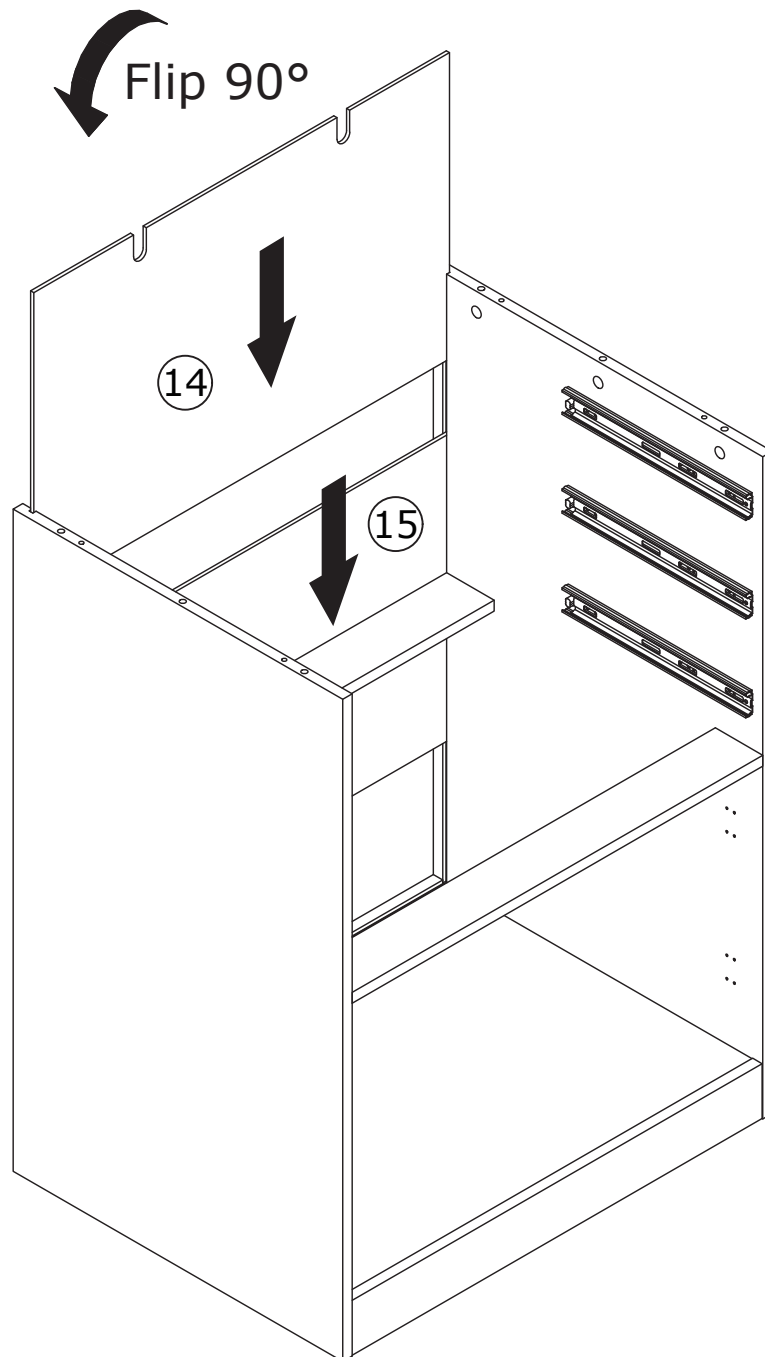


ASSEMBLED BY 2 ADULTS

 
12

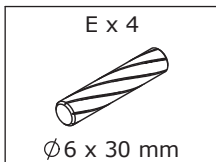

  Insert wooden dowel (E) into panels 9 and 10.





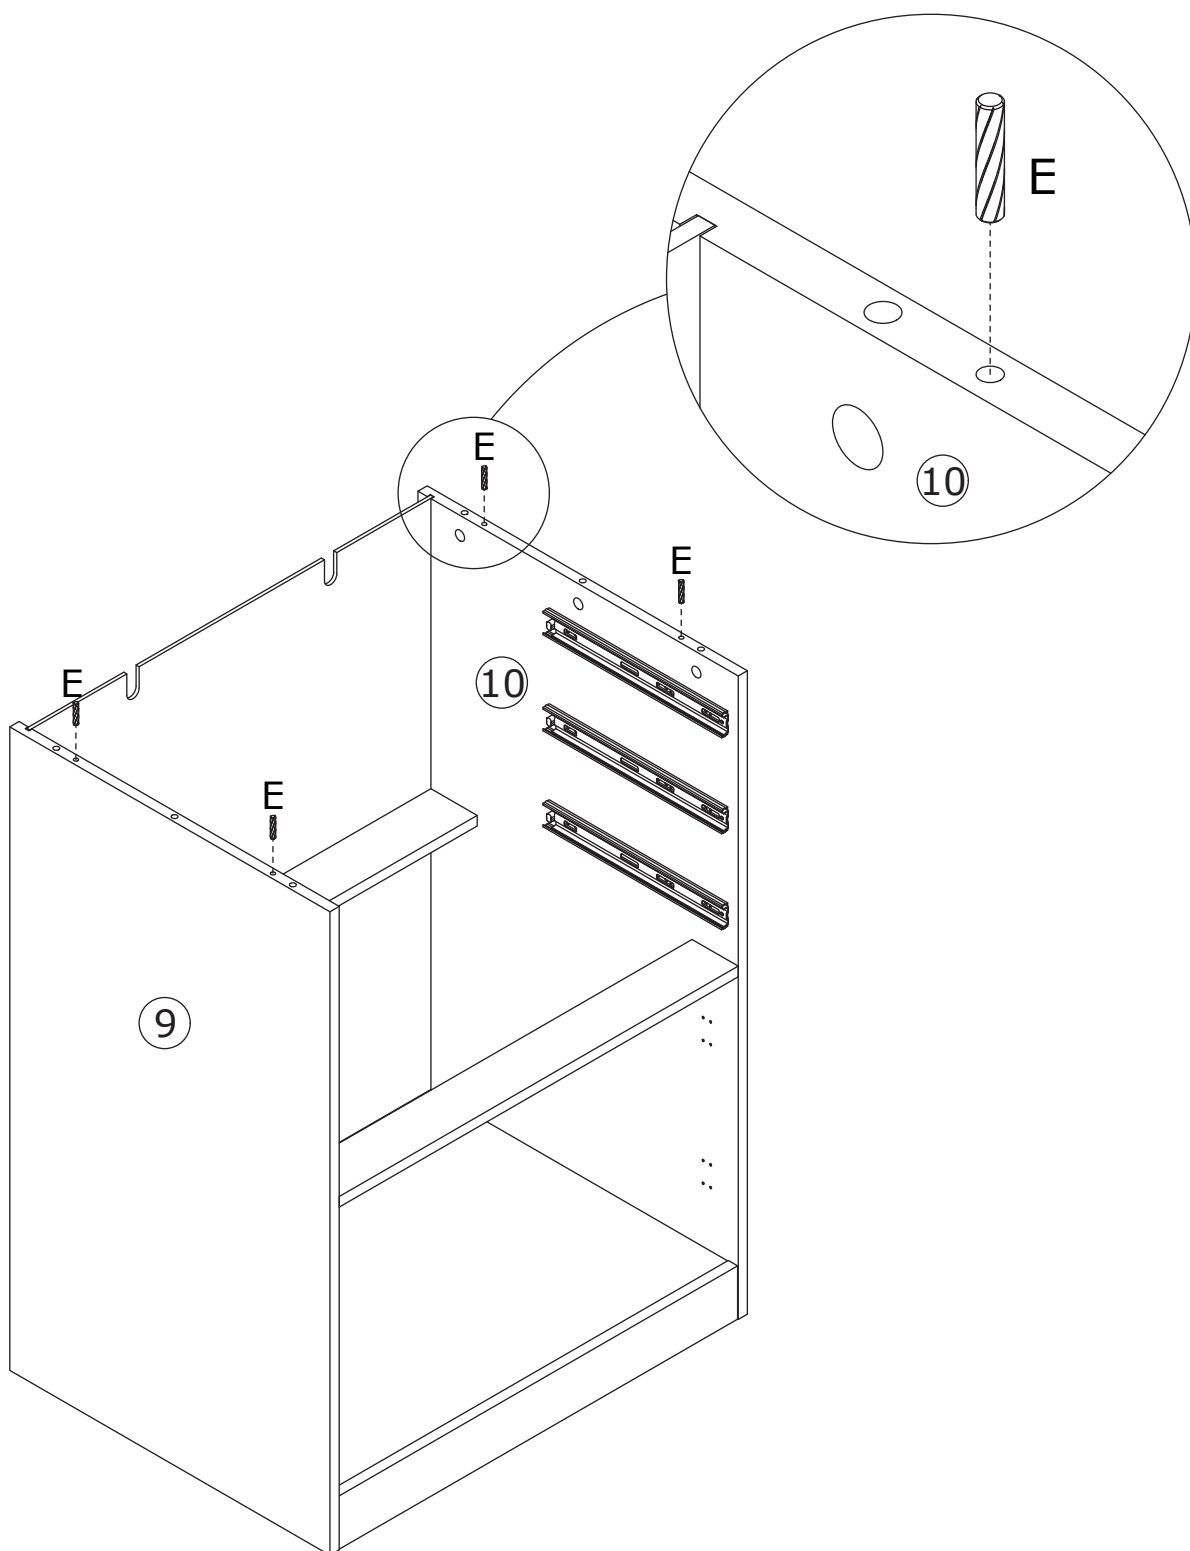
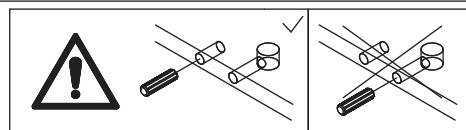


13

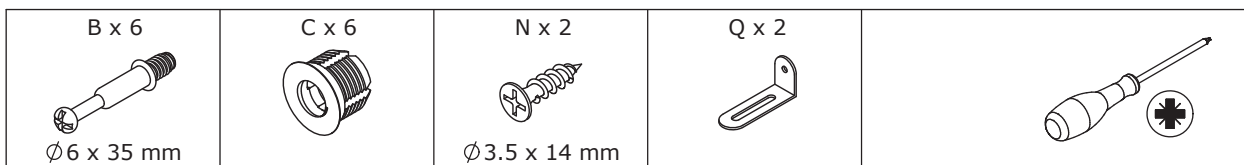 

Install plug (C) onto panel 8, then screw self-tapping rod (B) into panel 8.

      Secure bracket (Q) to panel 8 using screw (N).

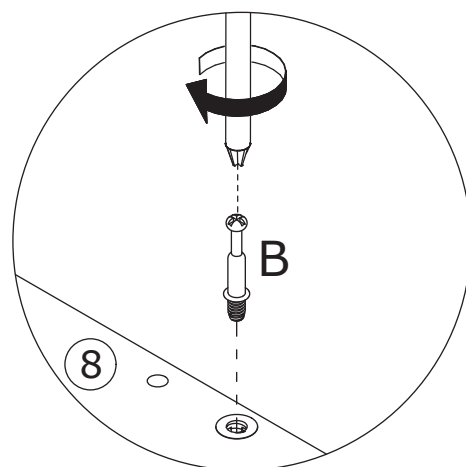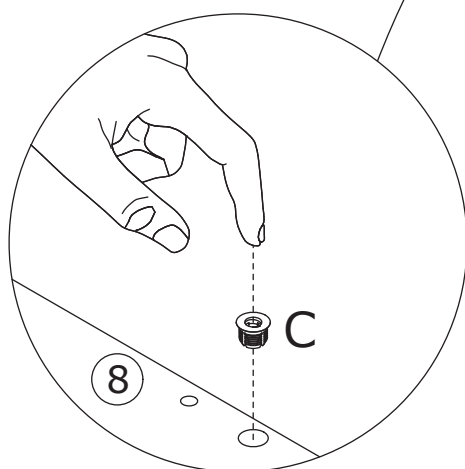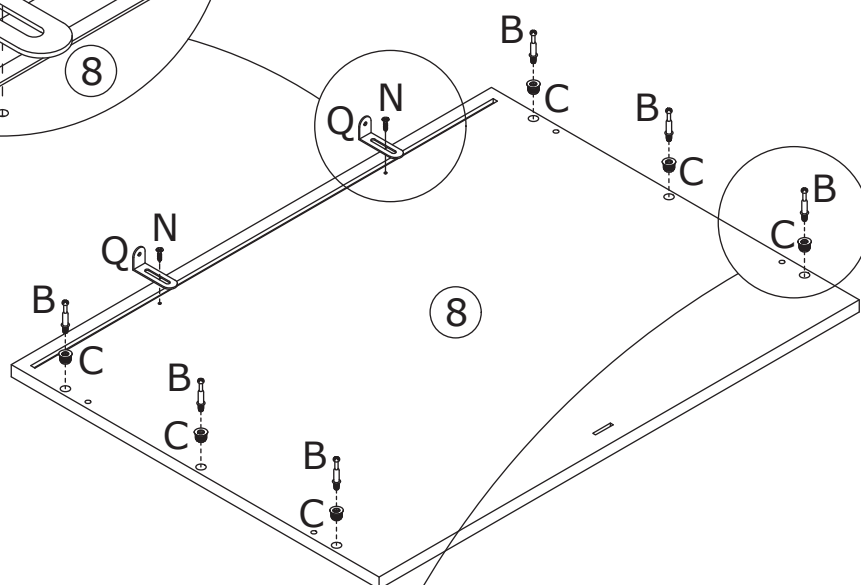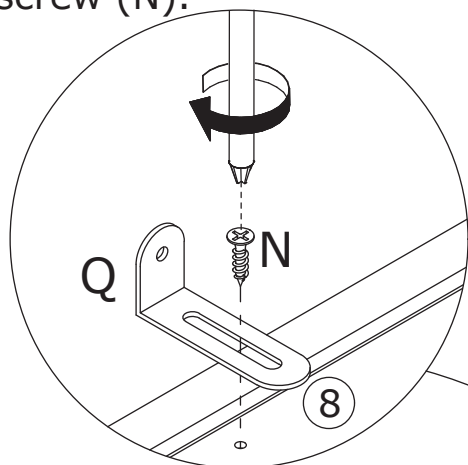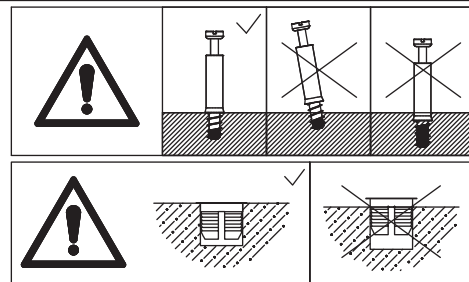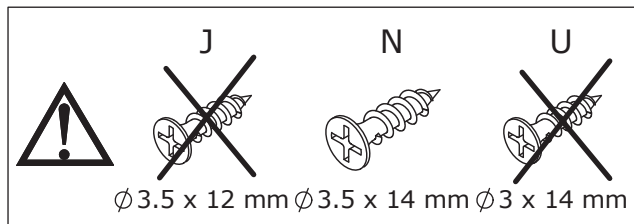


14




A x 6



 Ø15 x 10 mm



   Connect panel 8 to panels 9 and 10, then tighten by turning cam lock (A) clockwise.

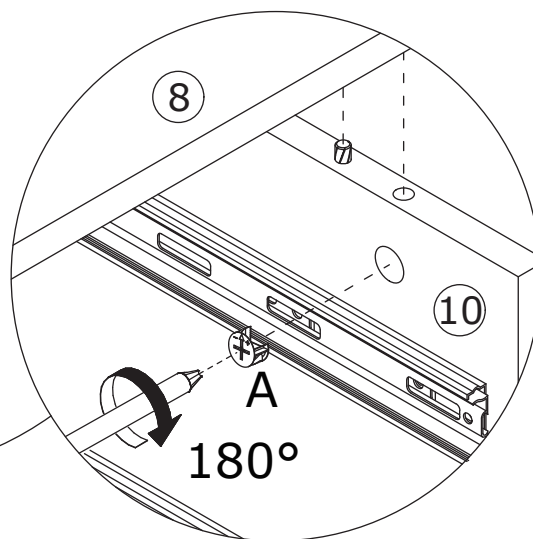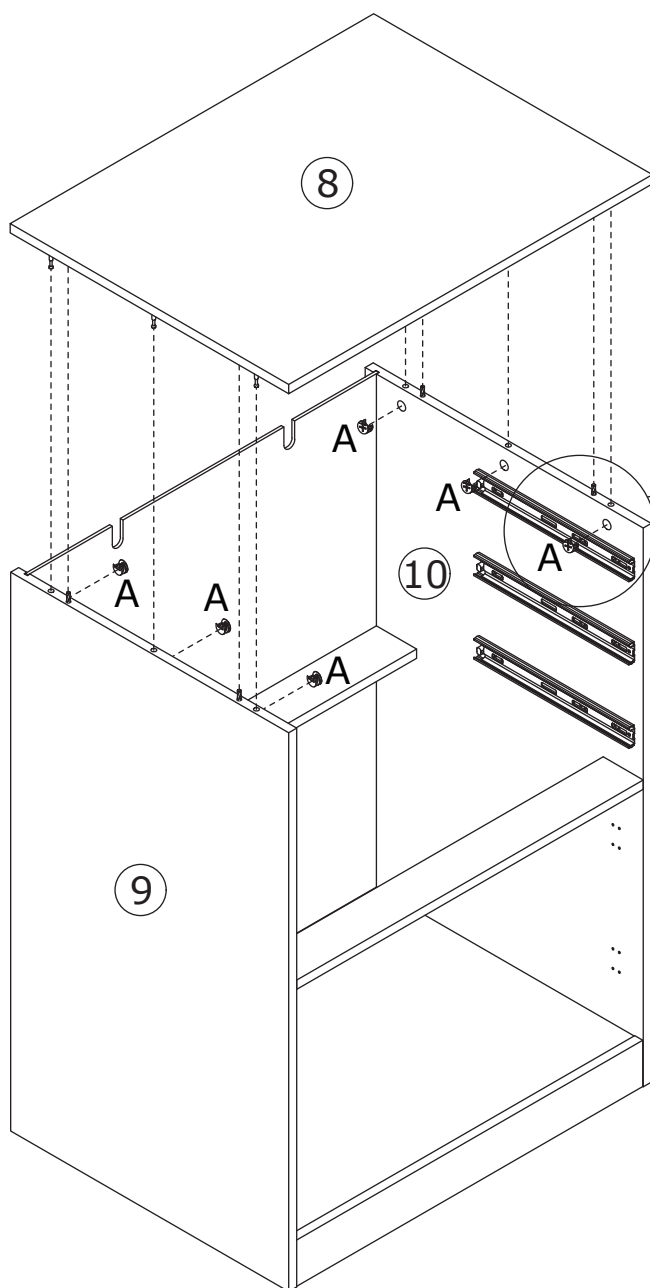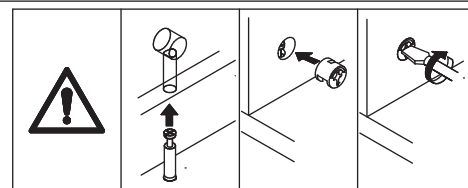


15


M x 4




 
N x 8





Ø3.5 x 14 mm

 

 
 
Secure hinge (M) to panels 24 and 25 using screw (N).

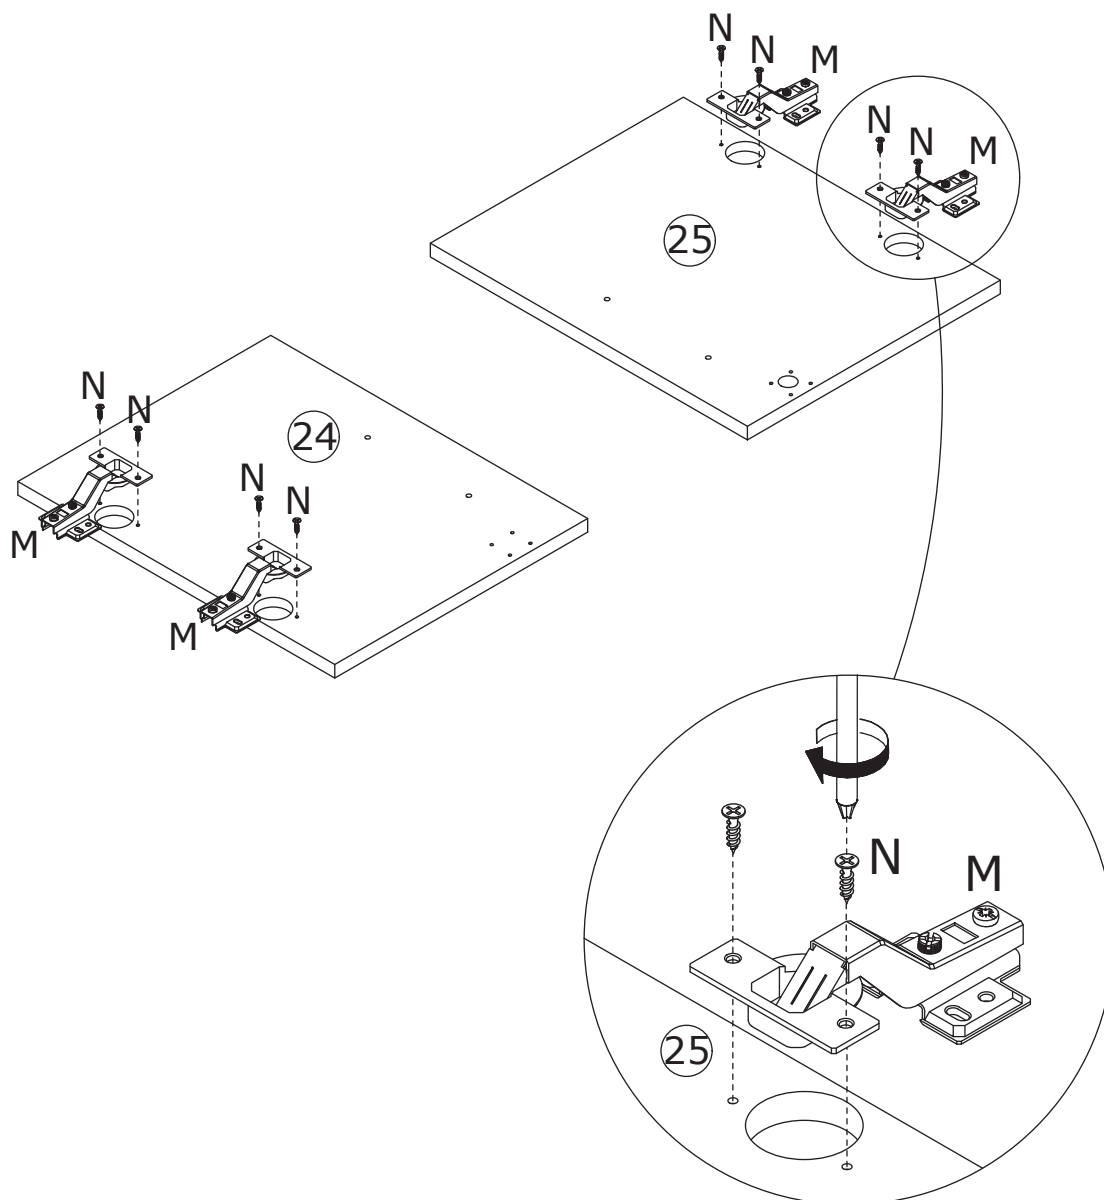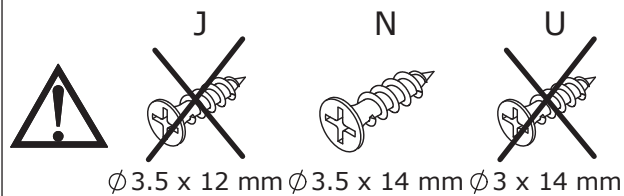


16

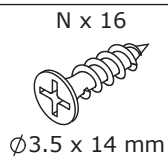  

  
Attach panels 24 and 25 to panels 9 and 10 via hinges using screw (N).

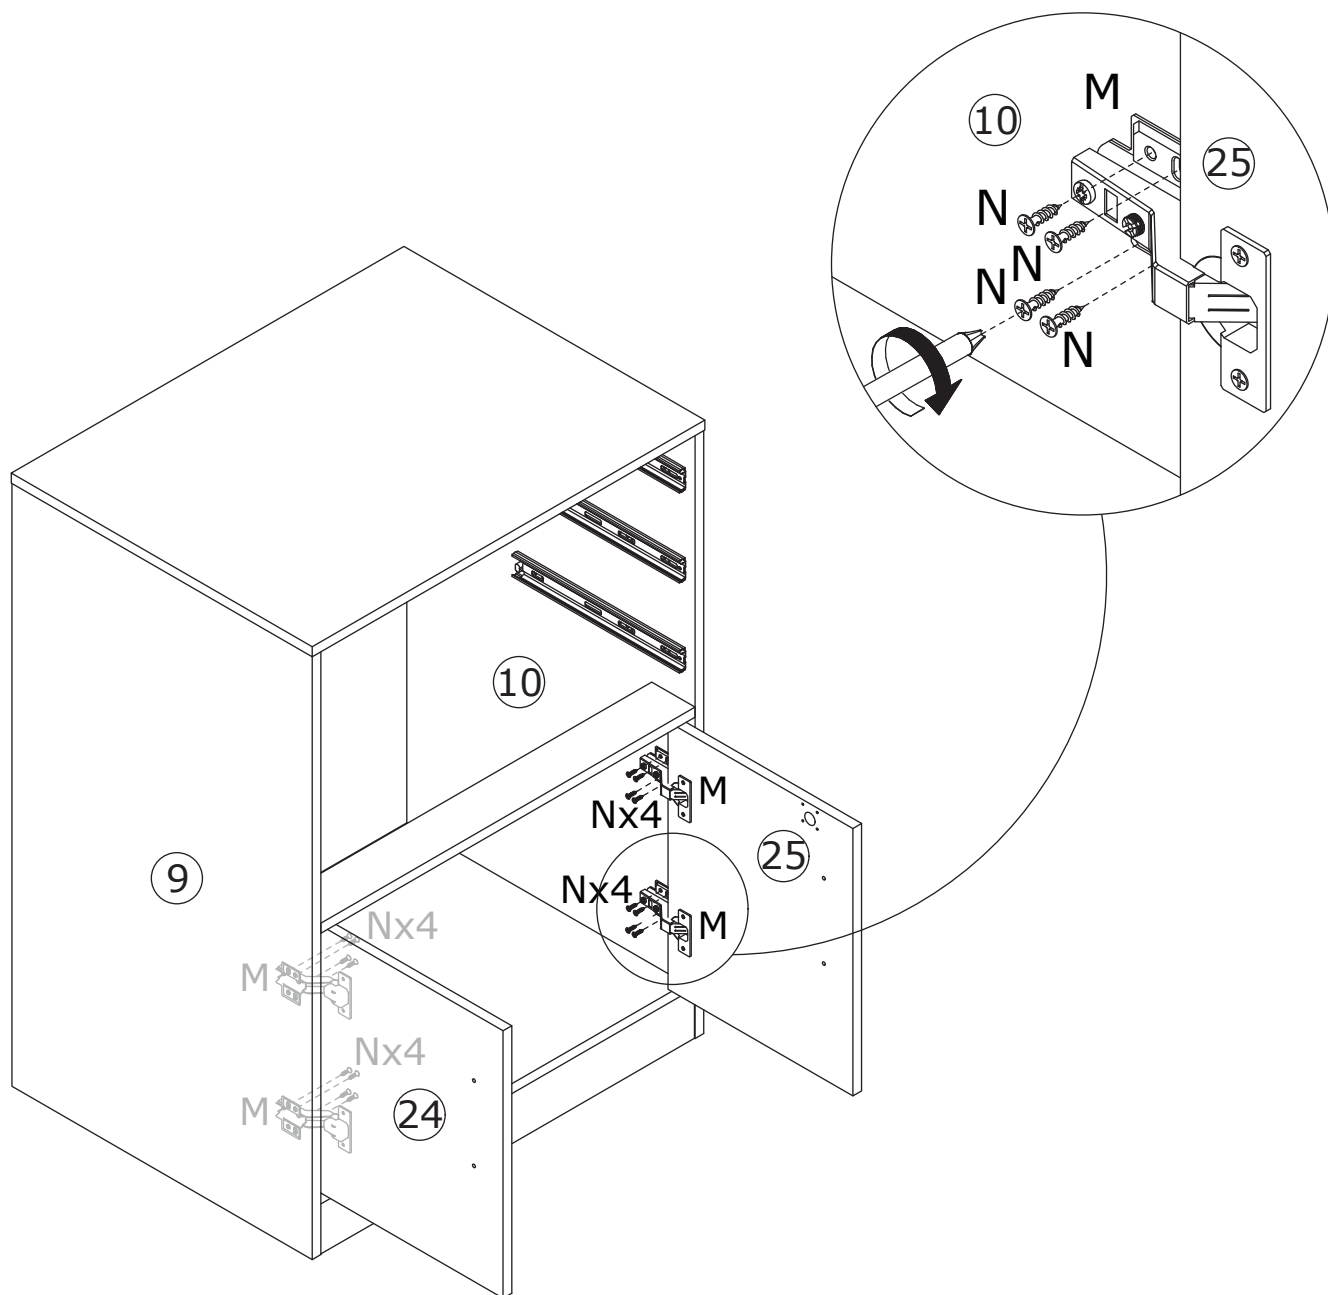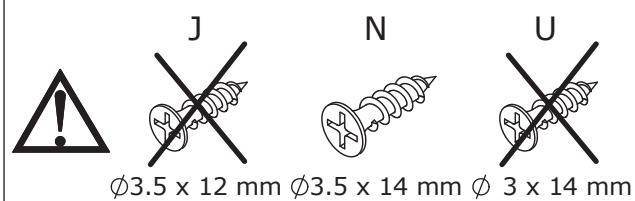

17

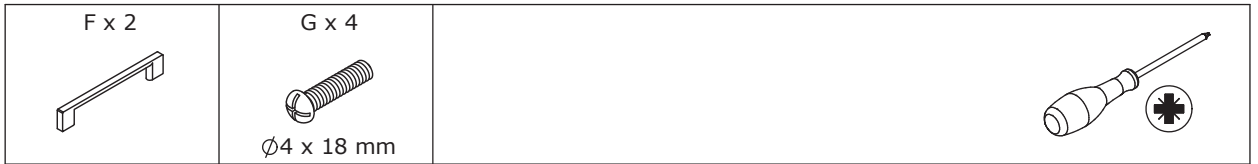 




 
Secure handle (F) to panels 24 and 25 using screw (G).

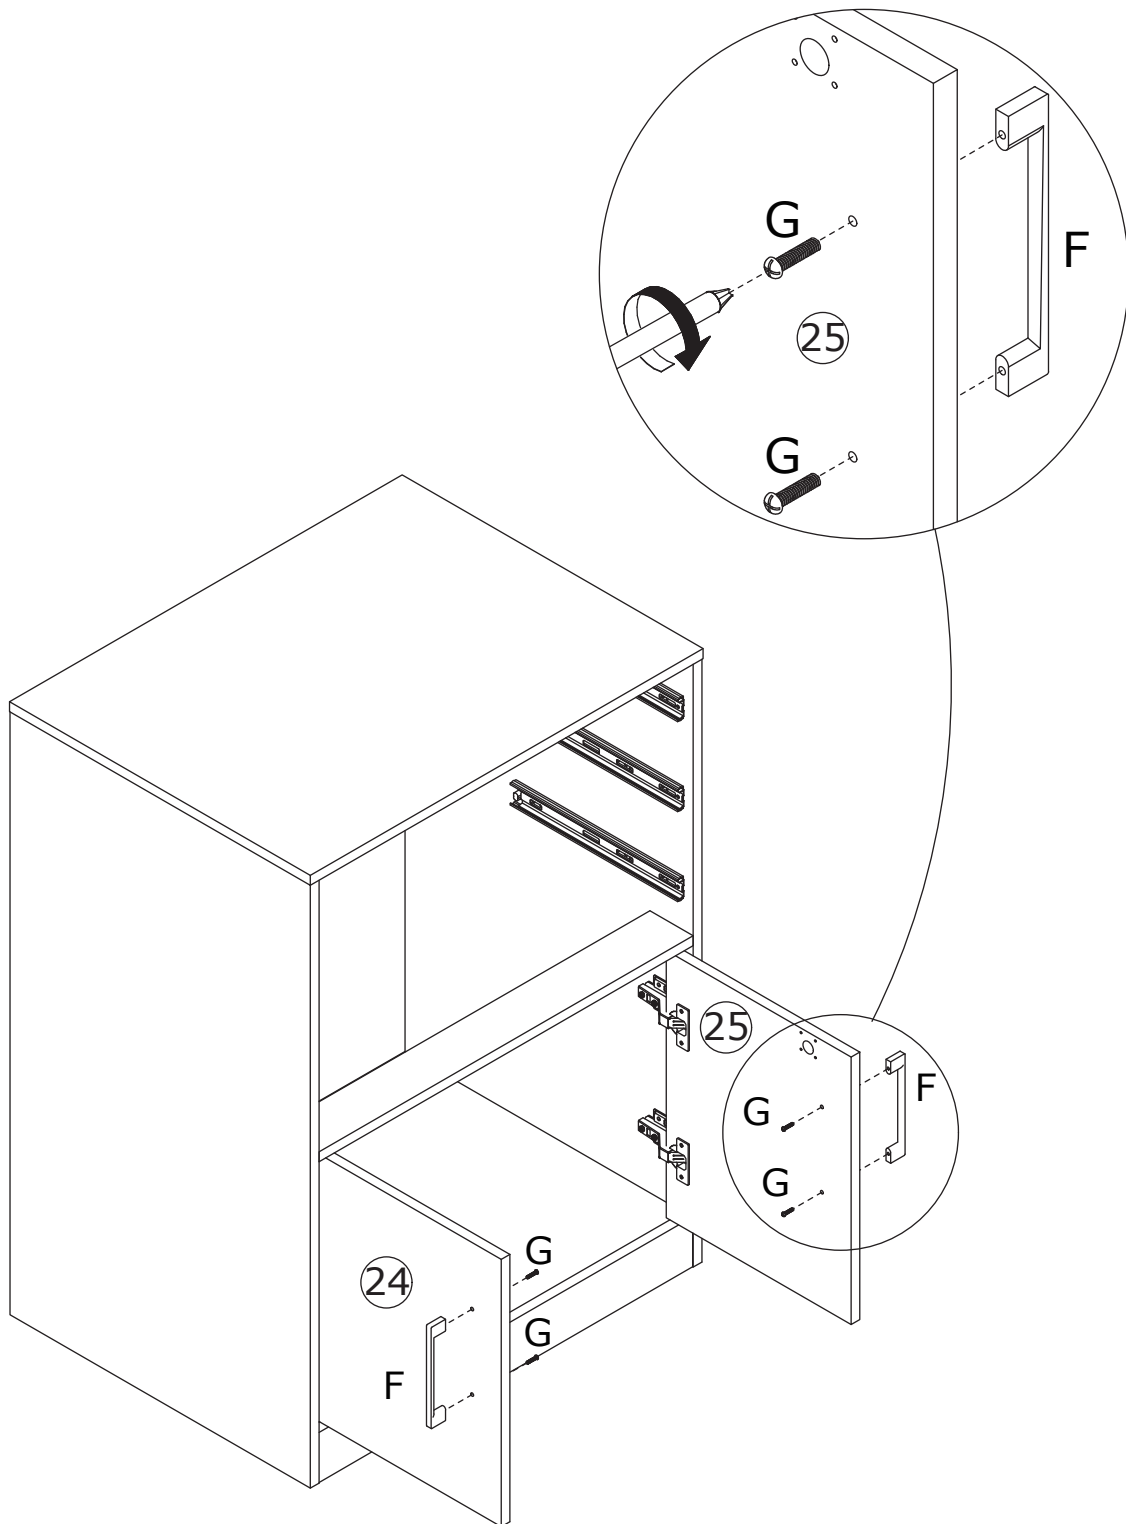




18




 
 
 
 
First secure part (K-1) to panel 25 using screw (L).
Then install part (K-2) onto part (K-1).

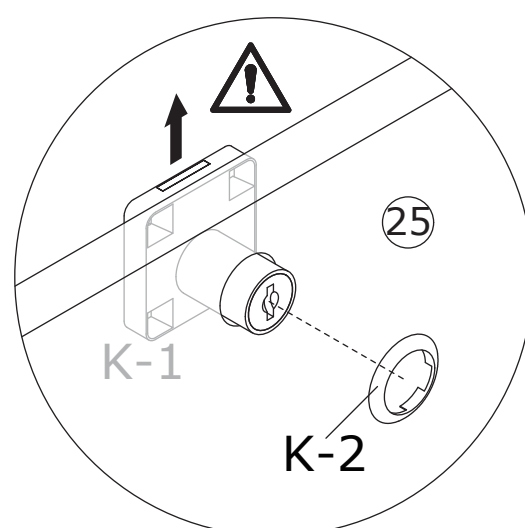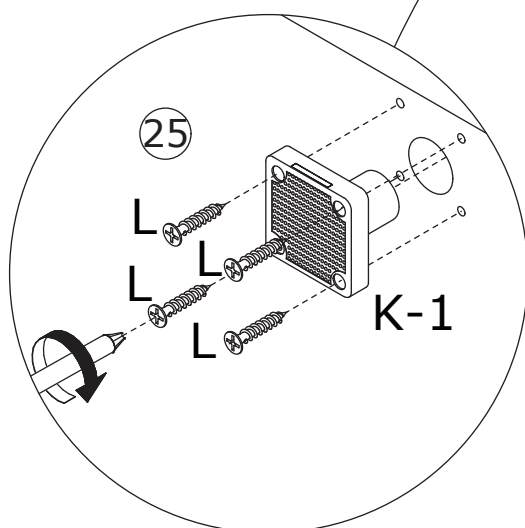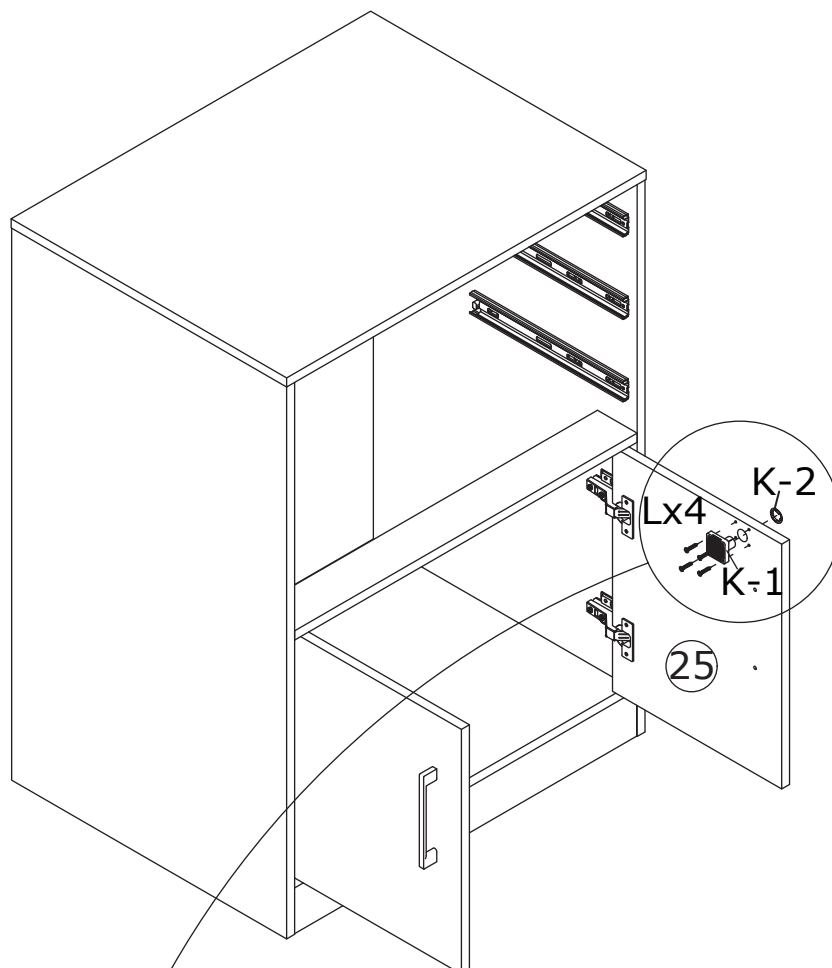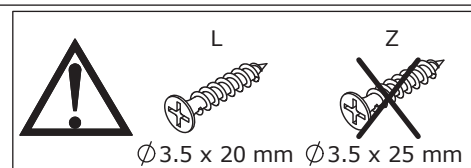

19

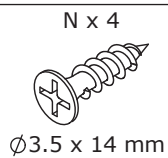   


     Secure lock (S) to panel 24 using screw (N).

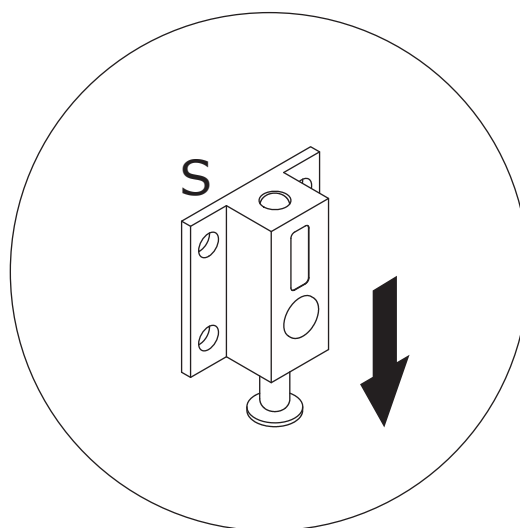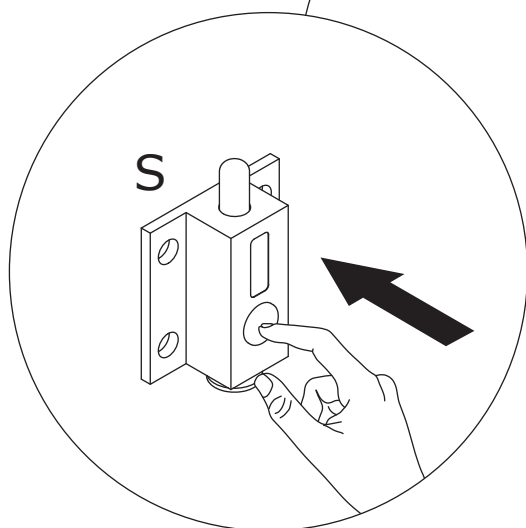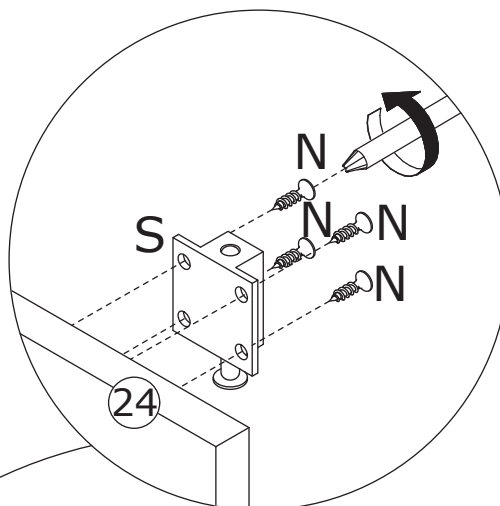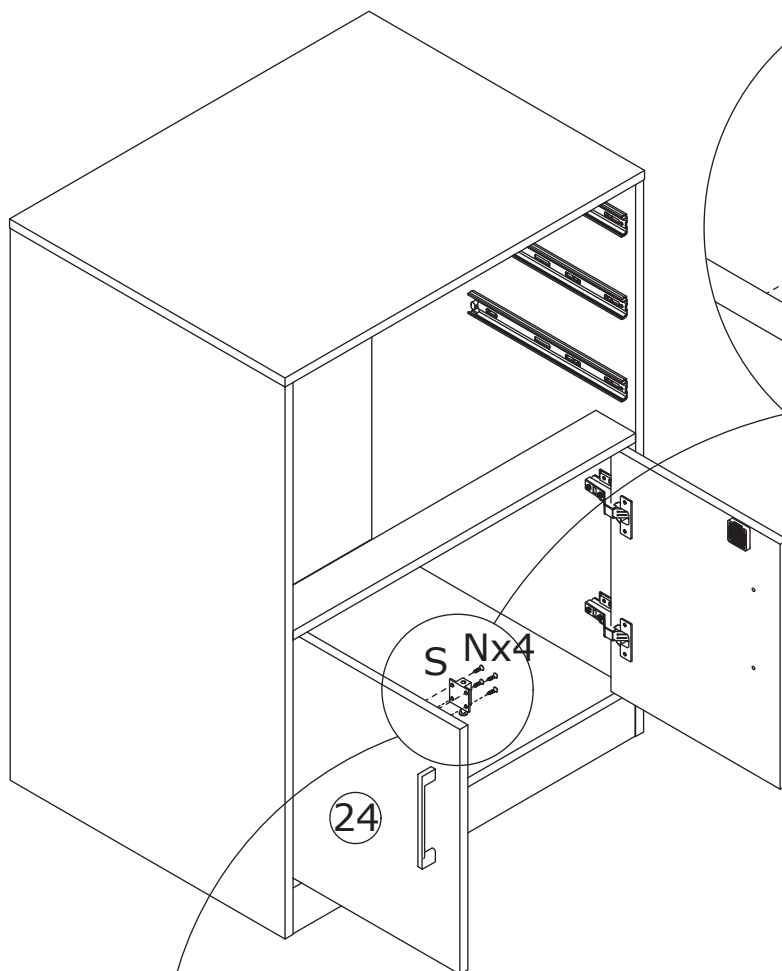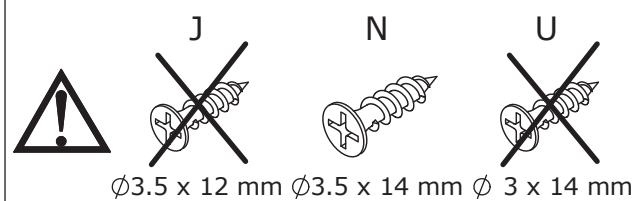

20

 Close the doors and push the latch.



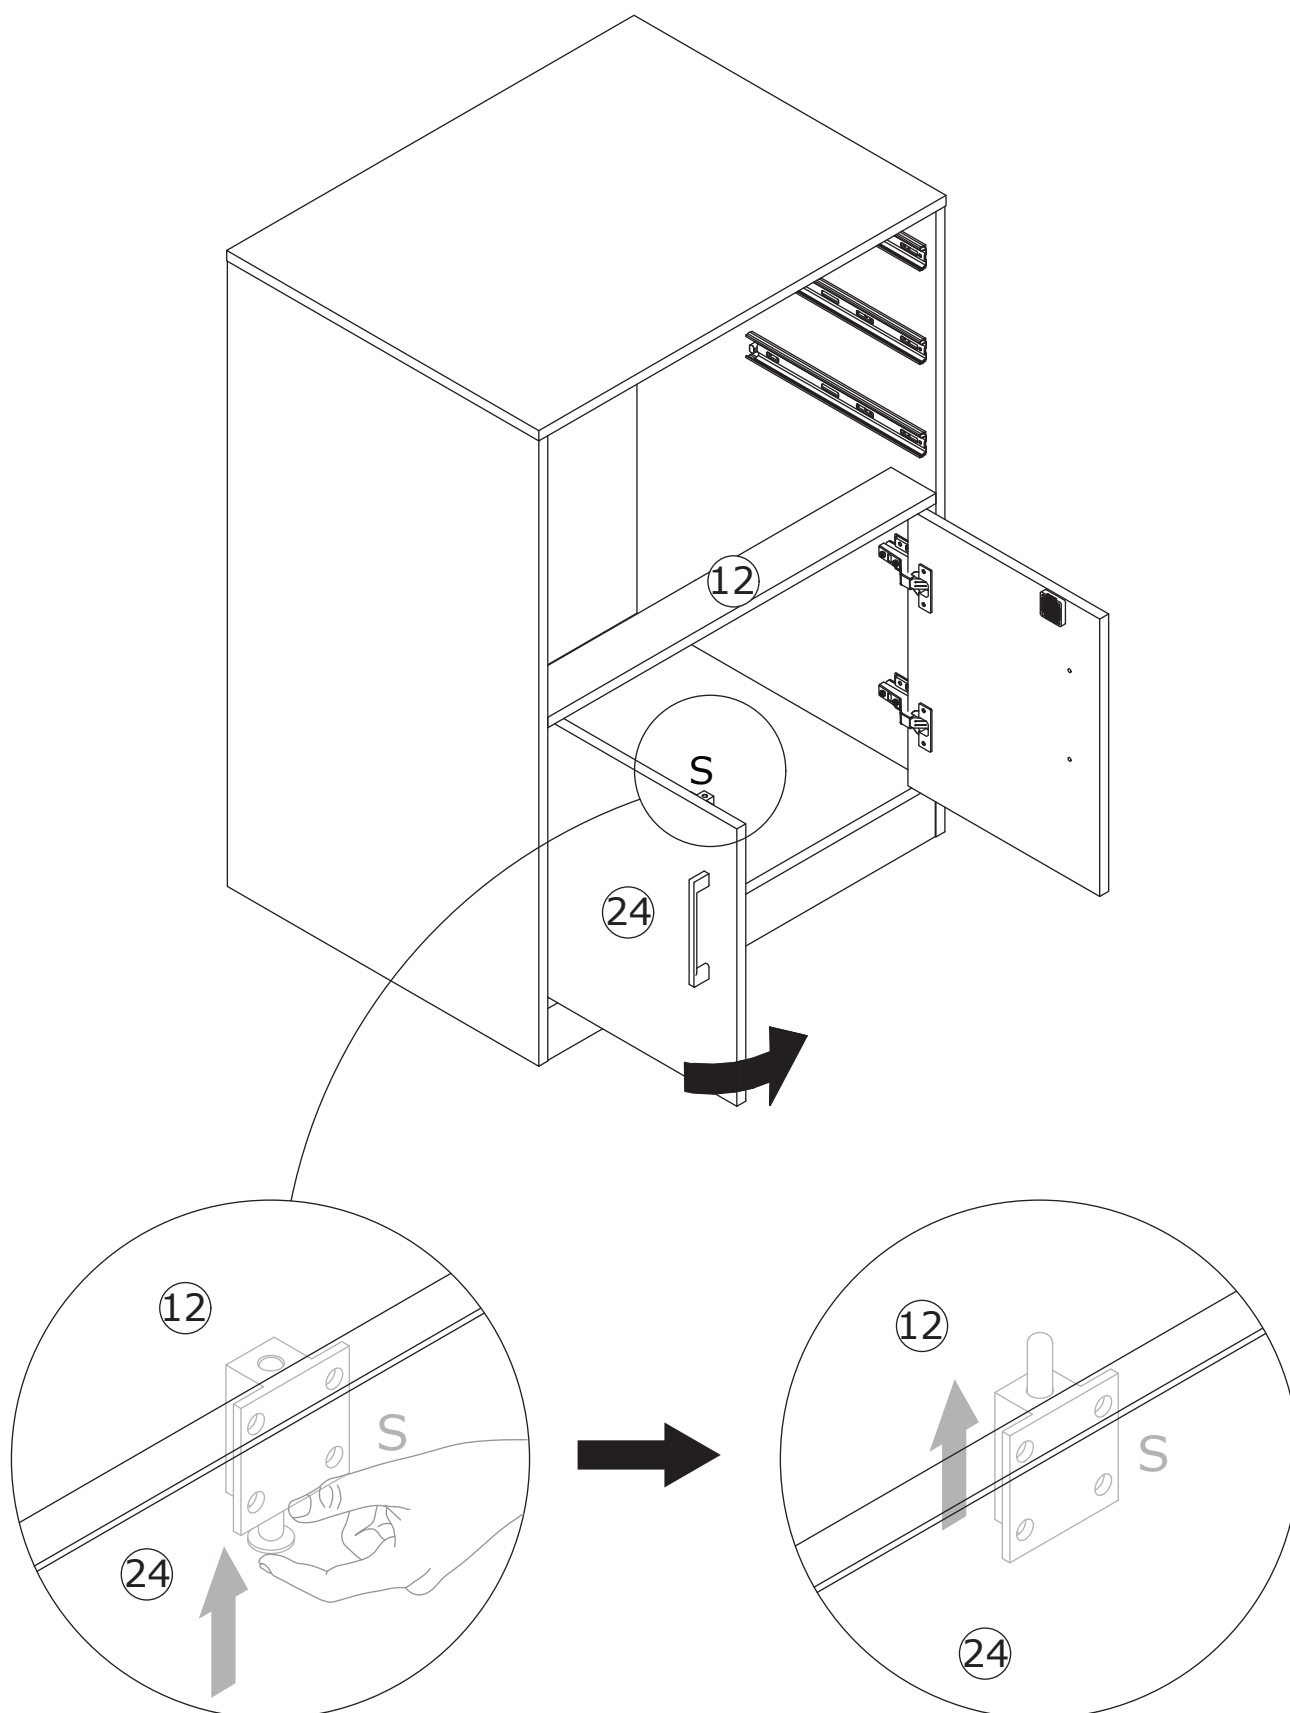


21

K x 1



 
 
 
Turn clockwise key (K-3) to lock panel 25.

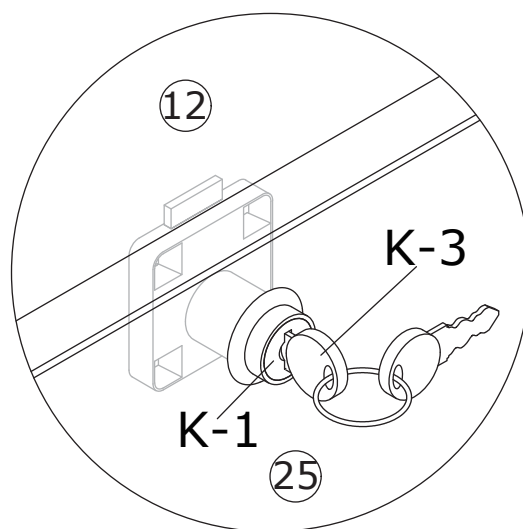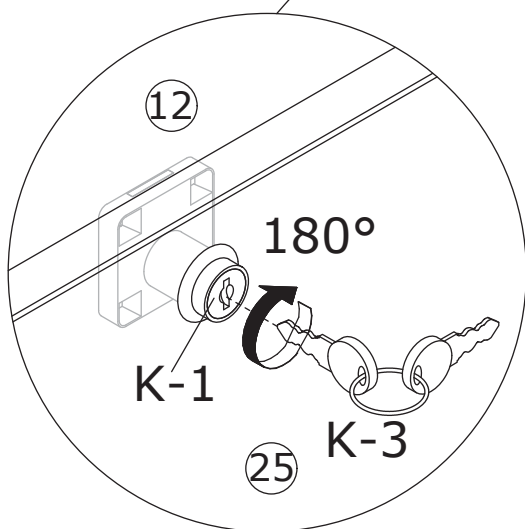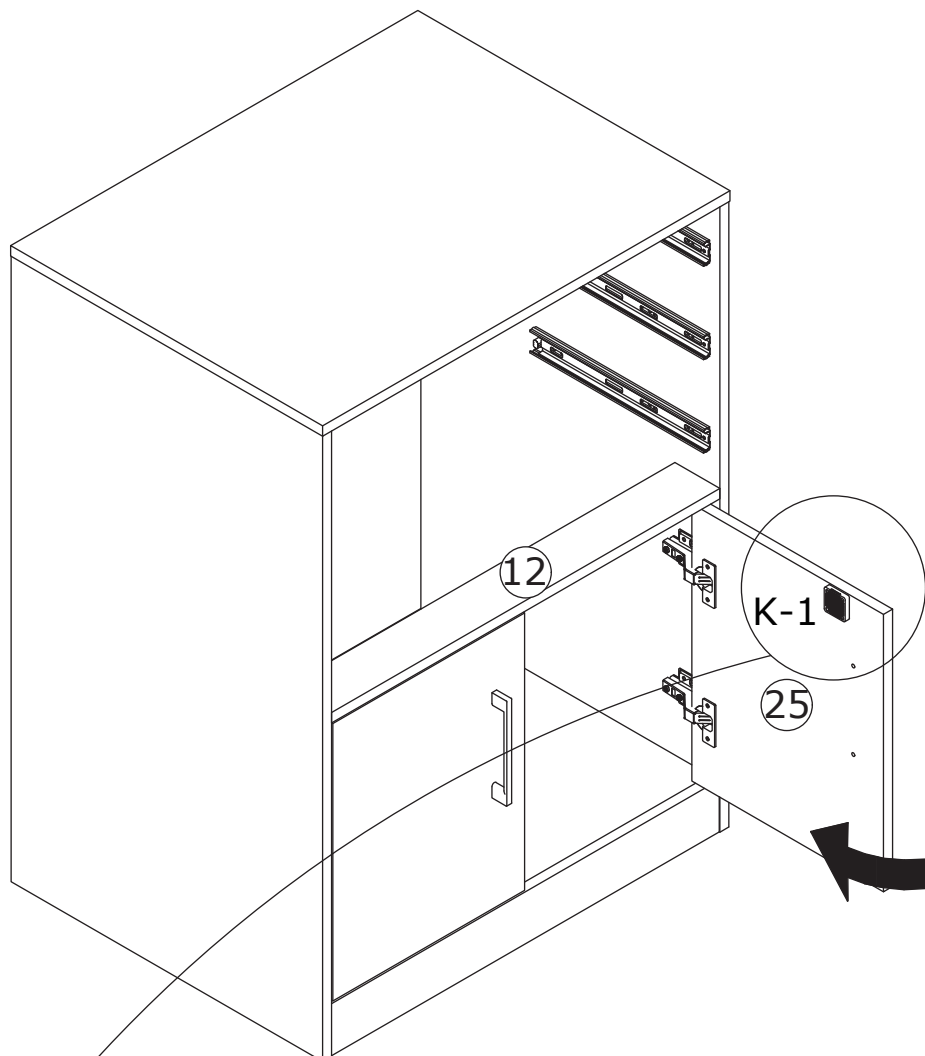

22



   First, insert clip (T) into the available slots, then secure them with screw (U).

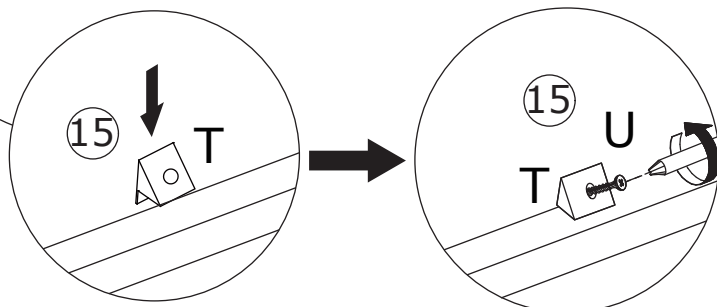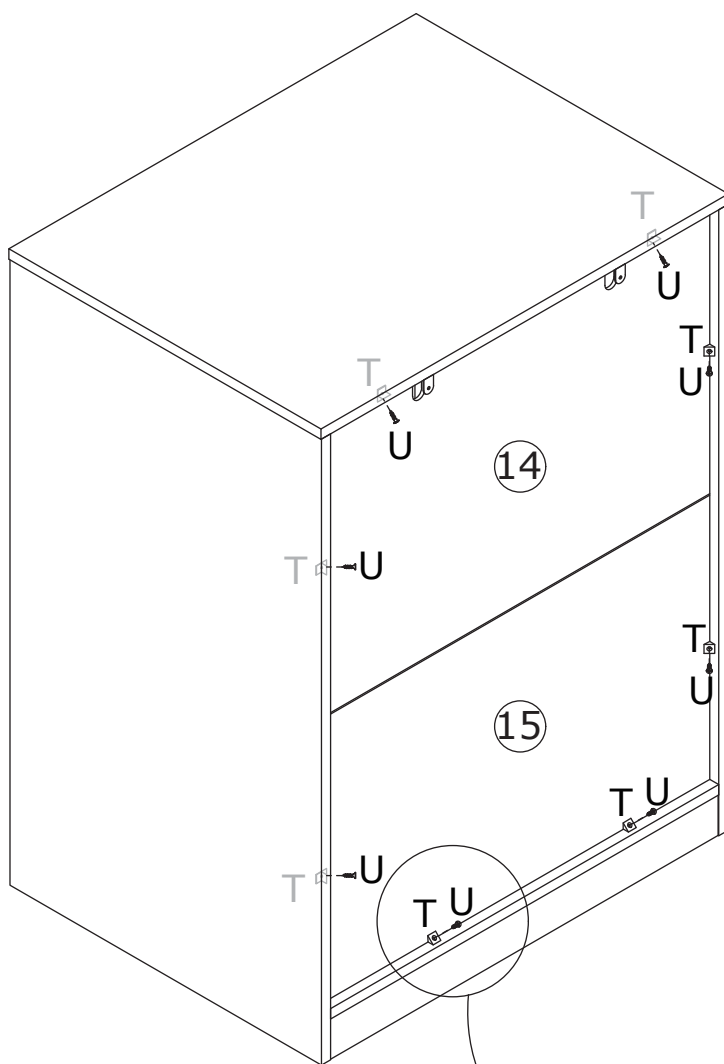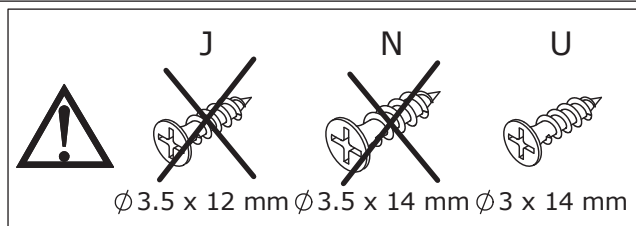


23


JJ x 3



 
KK x 3

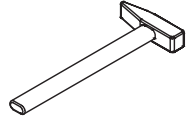


 
Secure iron sheet (JJ) to panels 13, 14 and 15 using screw (KK).

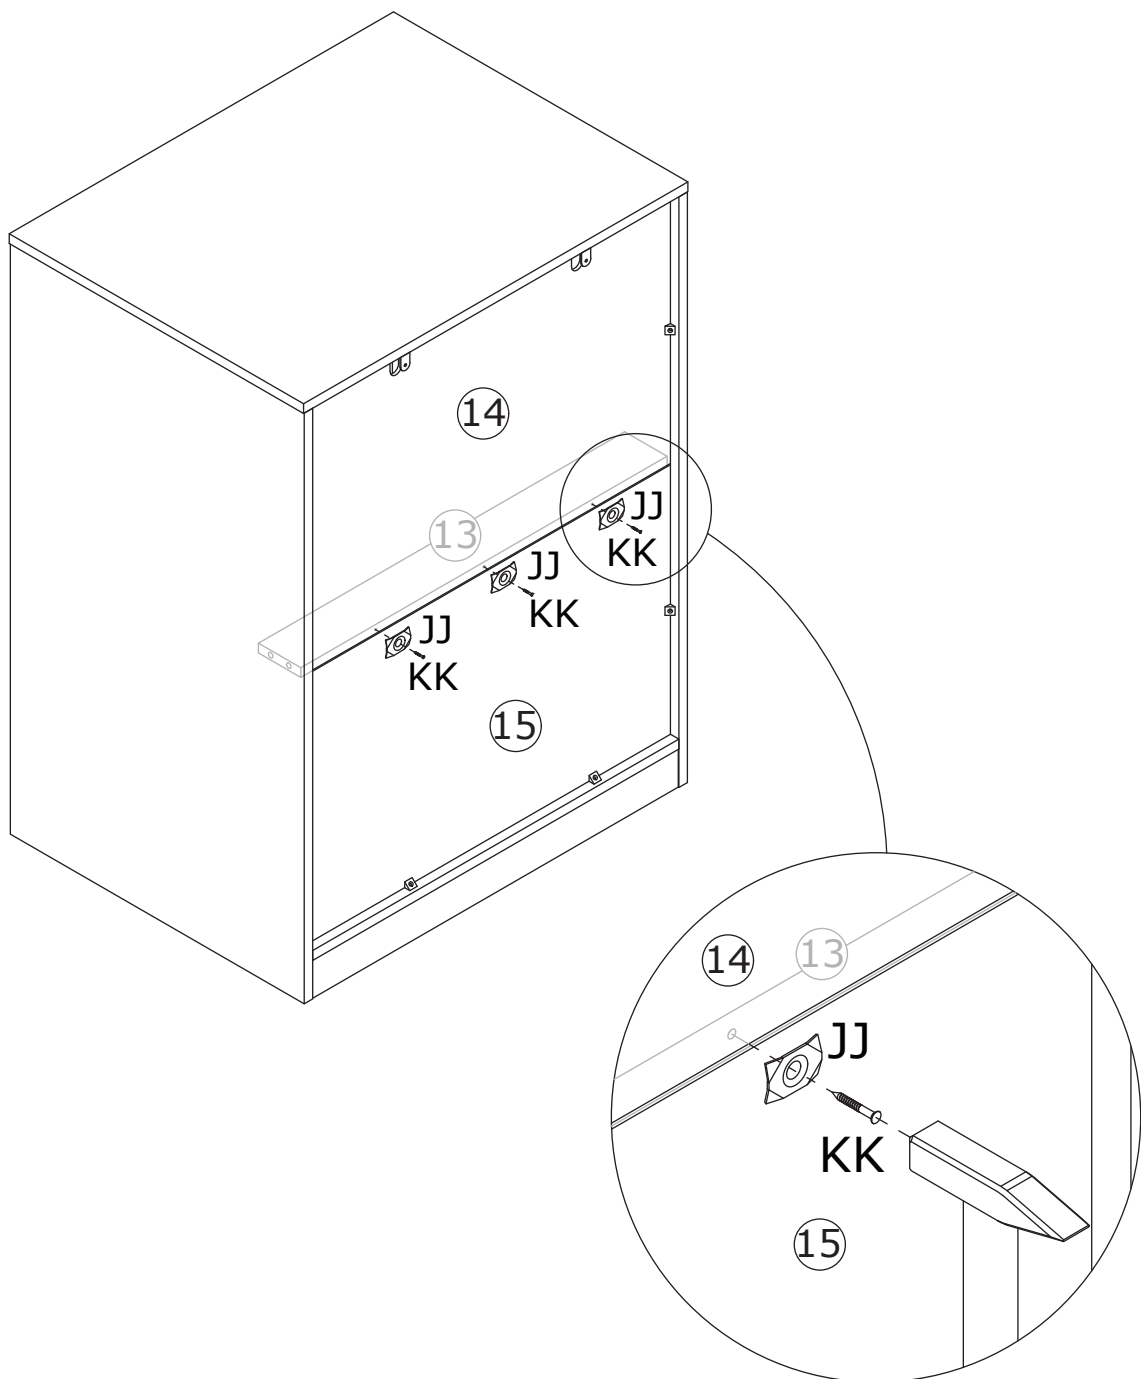



24

 N x 16

   Ø3.5 x 14 mm

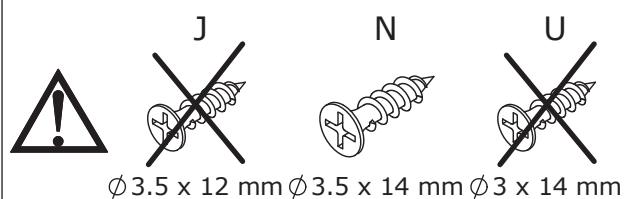P x 4


 
 
Install leg (P) to panel 11 using screw (N).

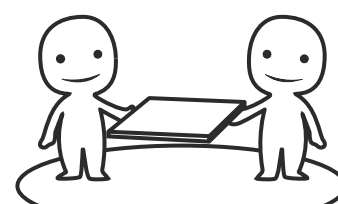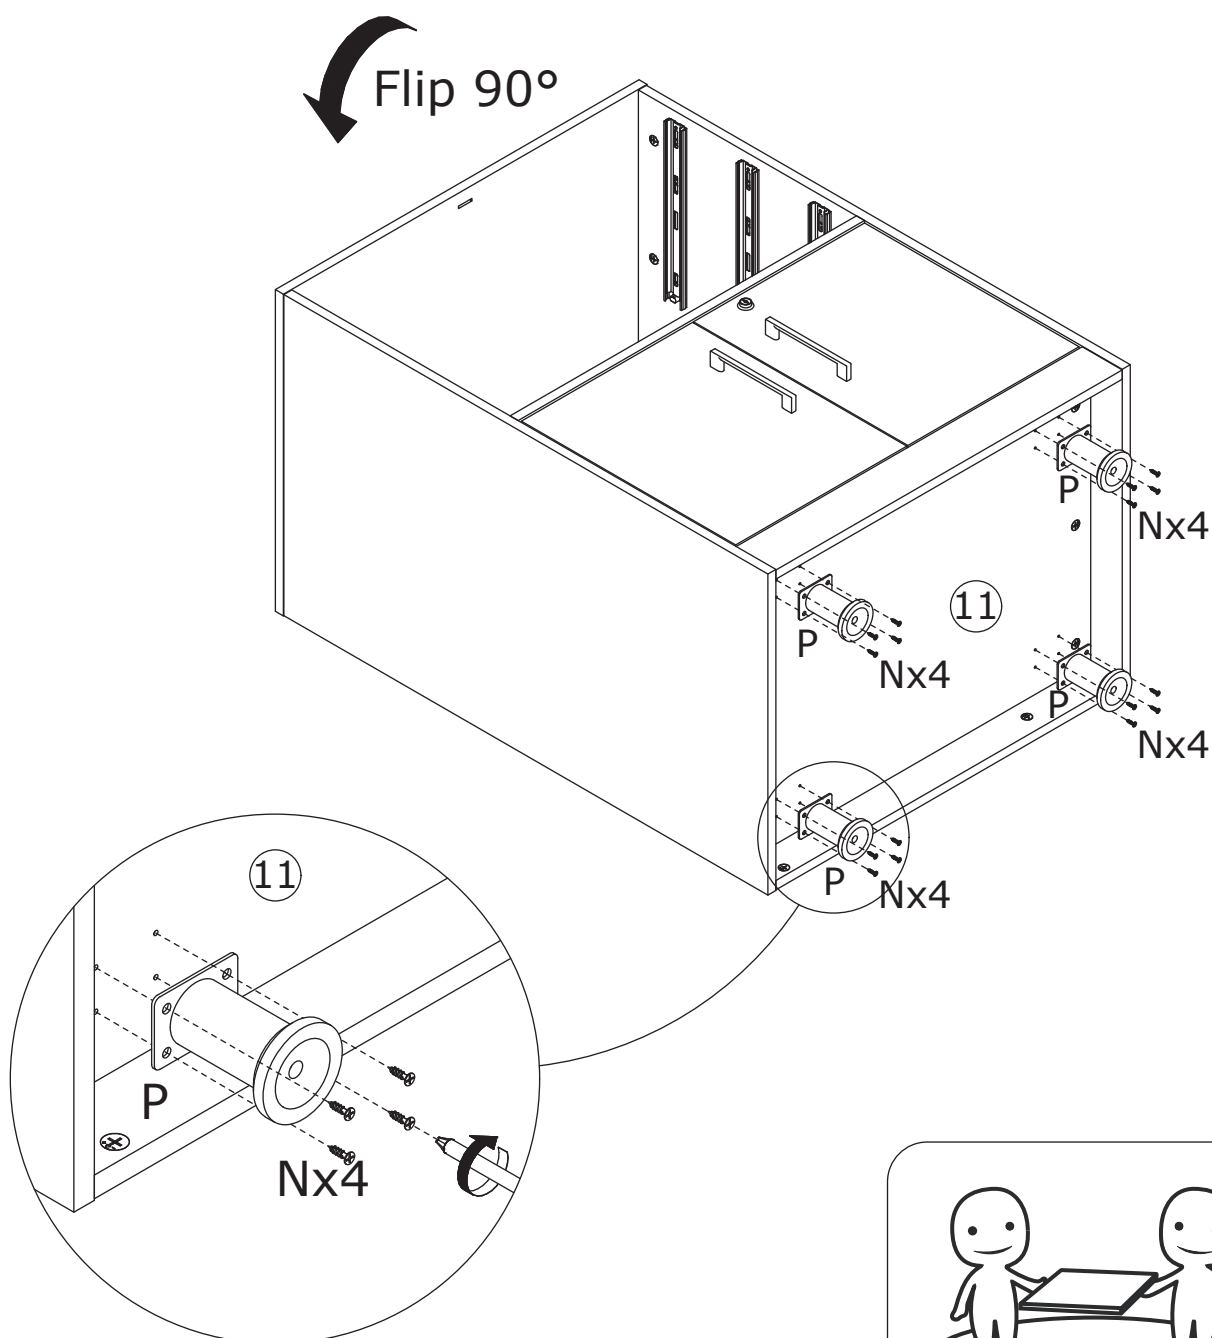

ASSEMBLED BY 2 ADULTS

25

   Flip the unit body. If the cabinet is not level, adjust leg (P).

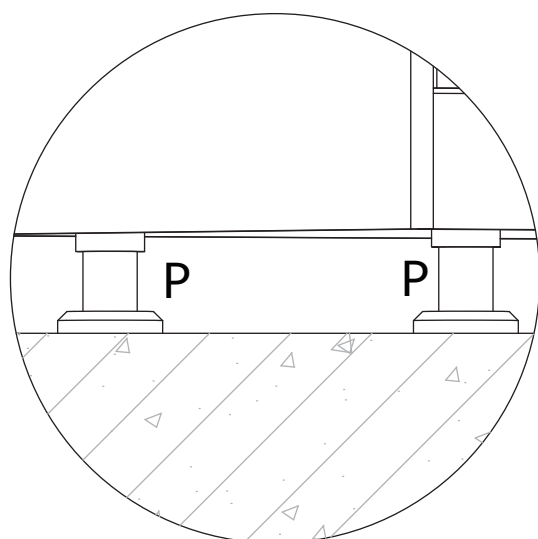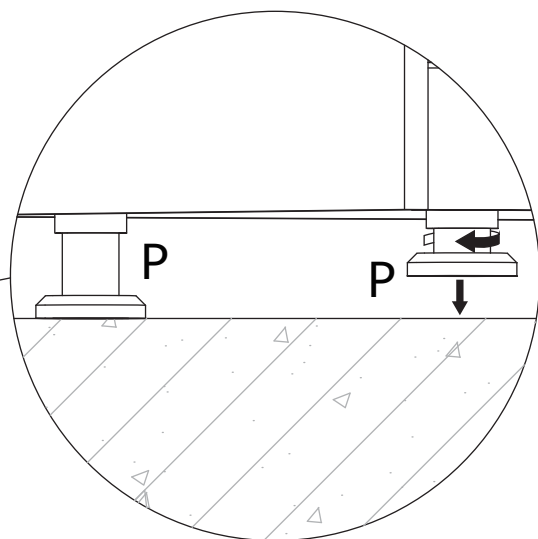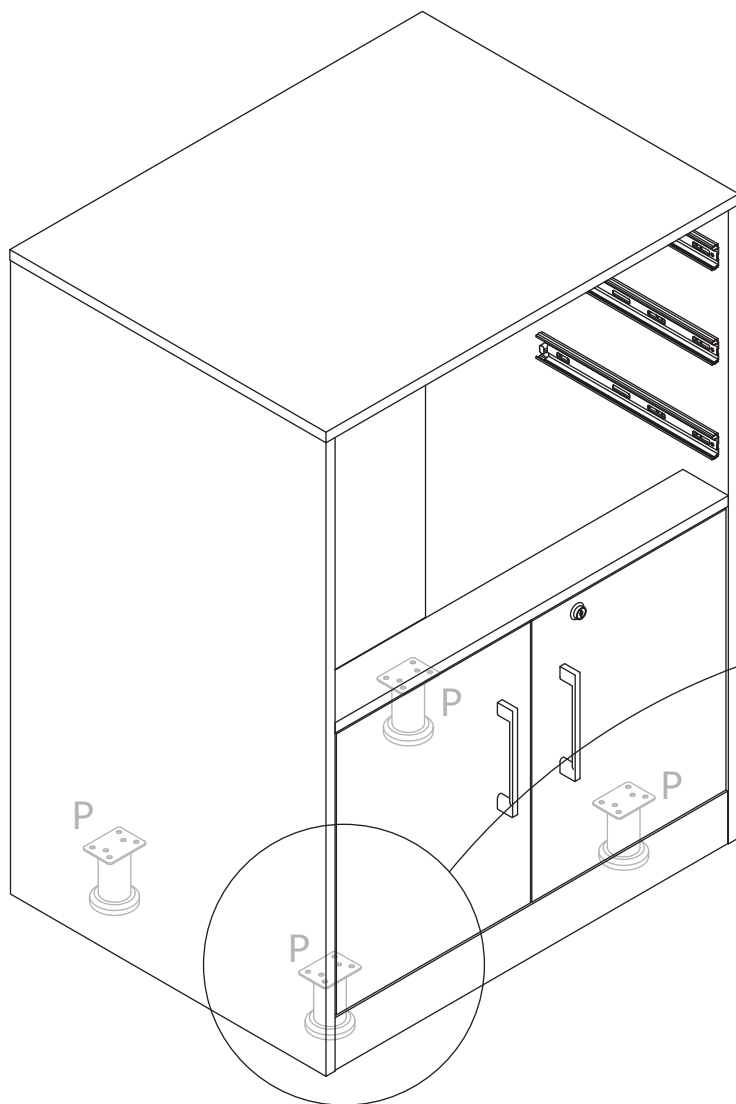


If the unit is not level with the ground, adjust the adjustable leg (P).

Choose the appropriate installation method based on the material of your wall.




- If it is a solid wall, please select Option A.
- If it is not a solid wall, please select Option B.

 
Option A

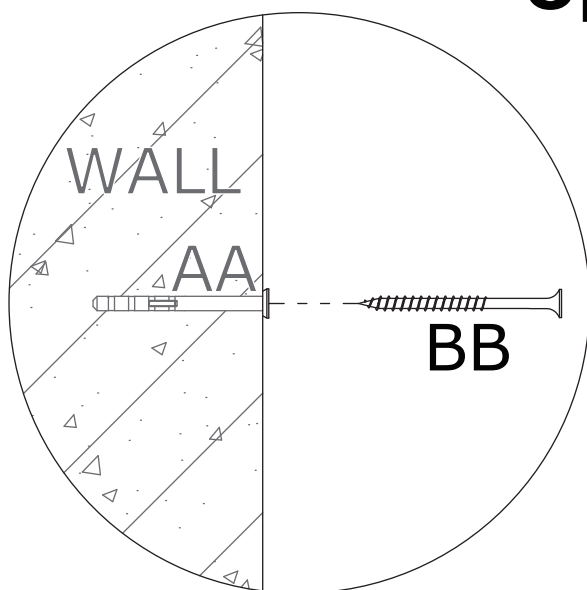

OR

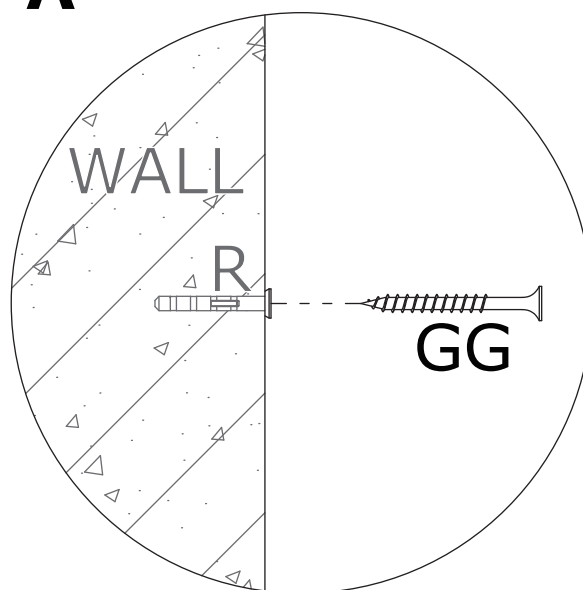 

Option B



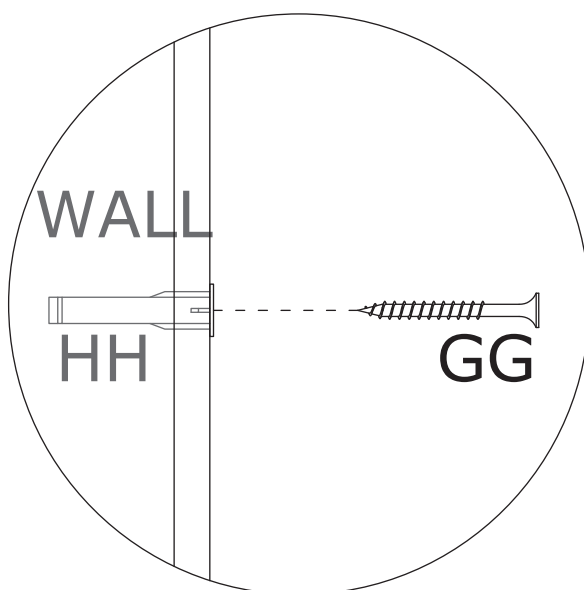 


26

R x 2



   GG x 2




****Option A:**** Install the anti-tip device.



BB



 GG

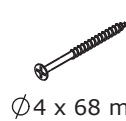


WALL

Page
32


1.




 
2.

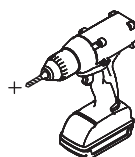

 
3.

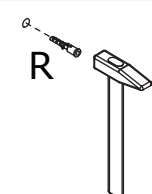


 
 
4.

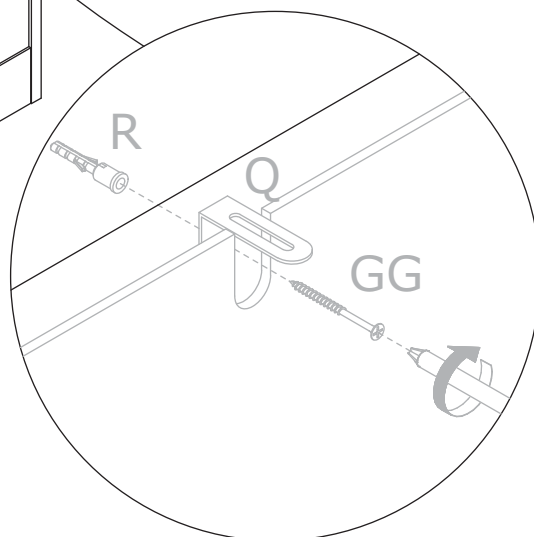
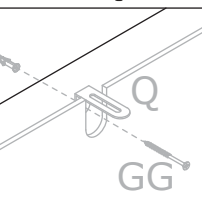



27

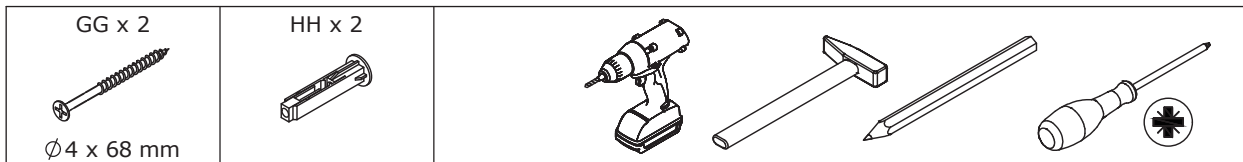 

     
****Option B:**** Install the anti-tip device.

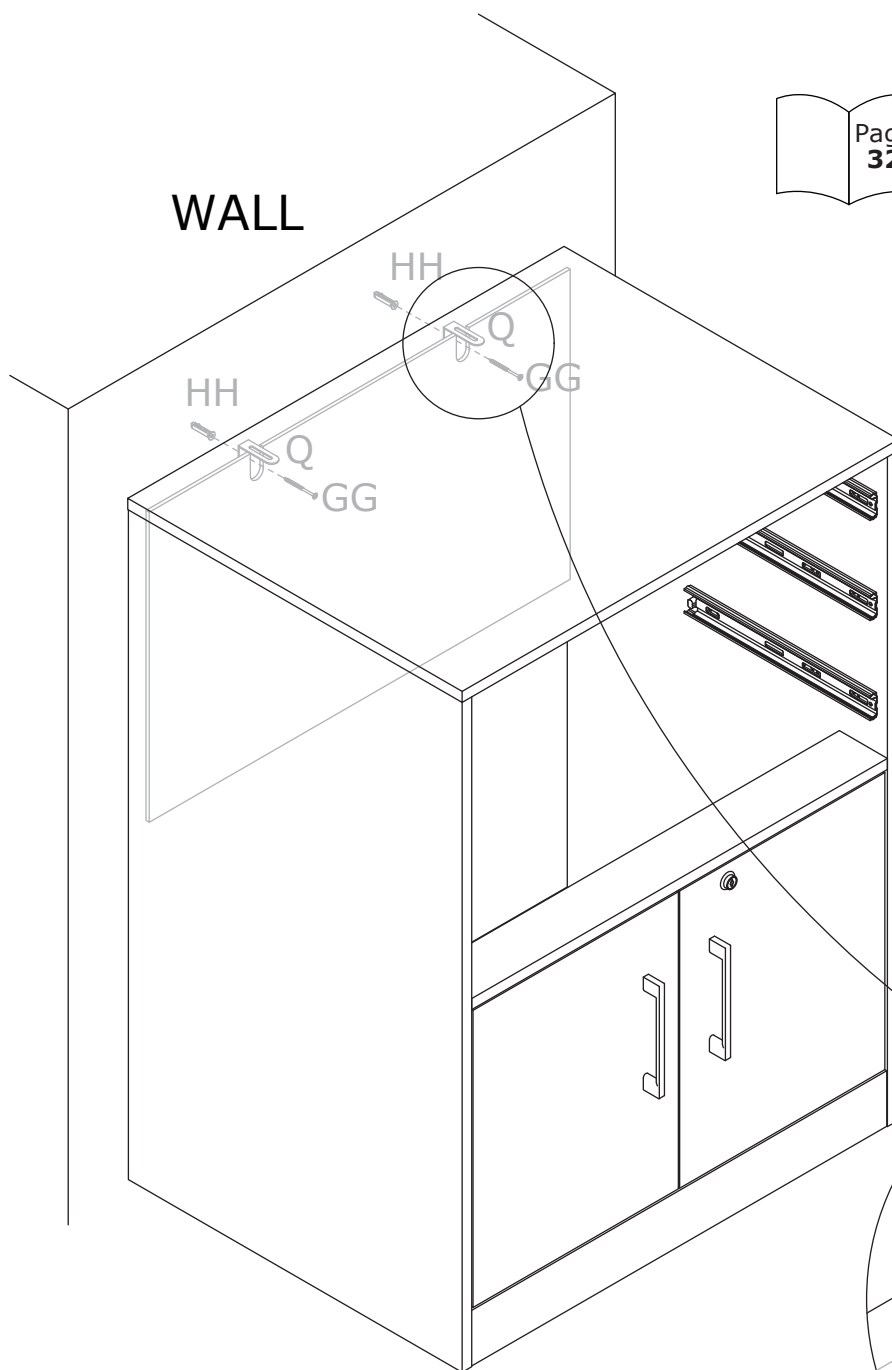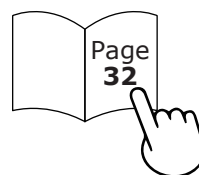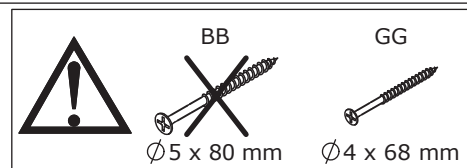

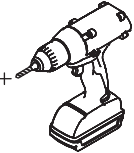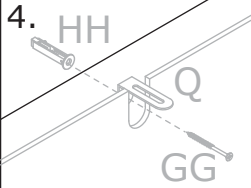 1. 
2. 
3. 
4. 



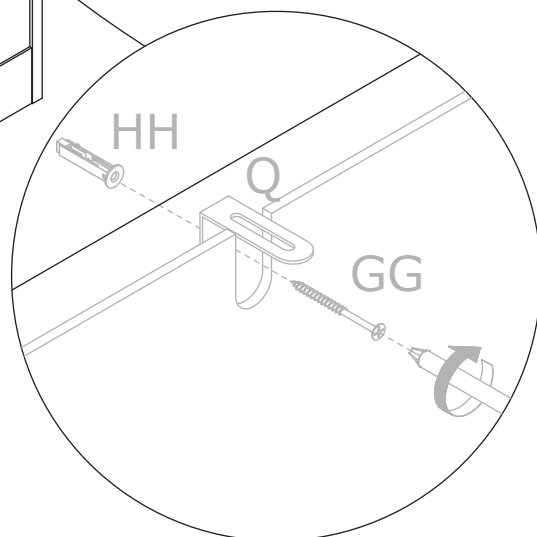


28



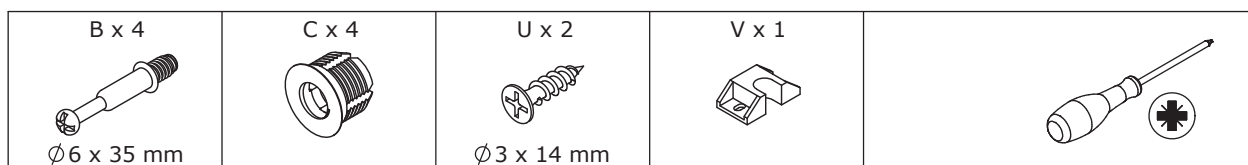 


Install plug (C) onto panels 1 and 4, then screw self-tapping rod (B) into panels 1 and 4.

   
Secure part (V) to panel 4 using screw (U).

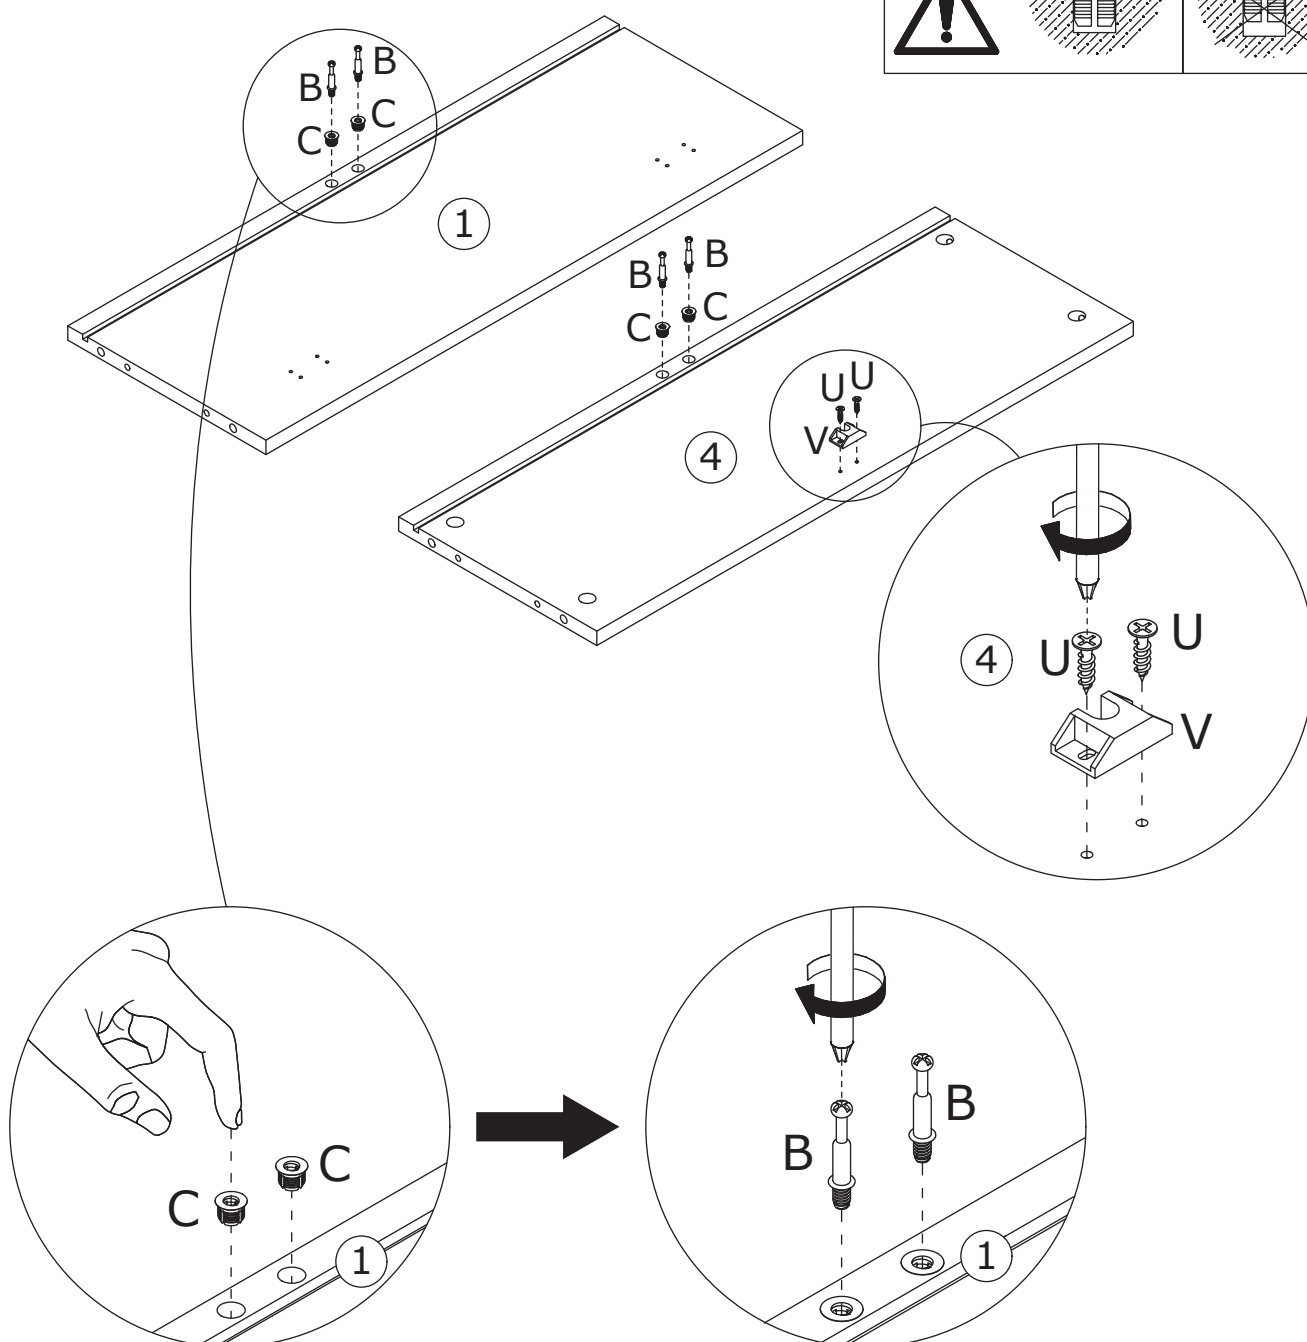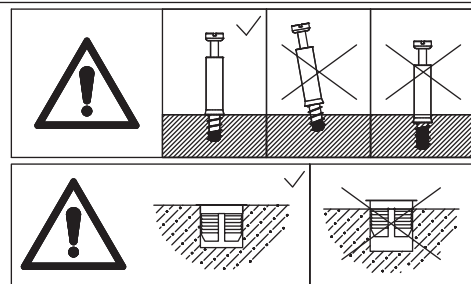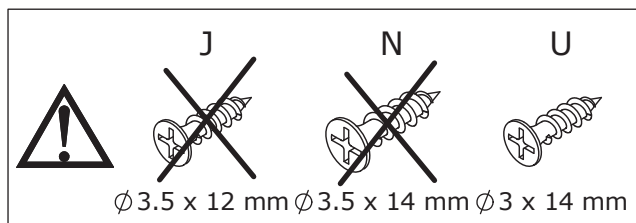




29

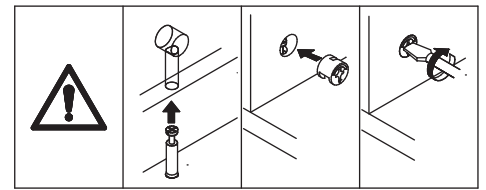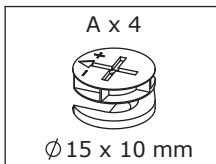   

 
Connect panels 1 and 4 to panel 6, then tighten by turning cam lock (A) clockwise.

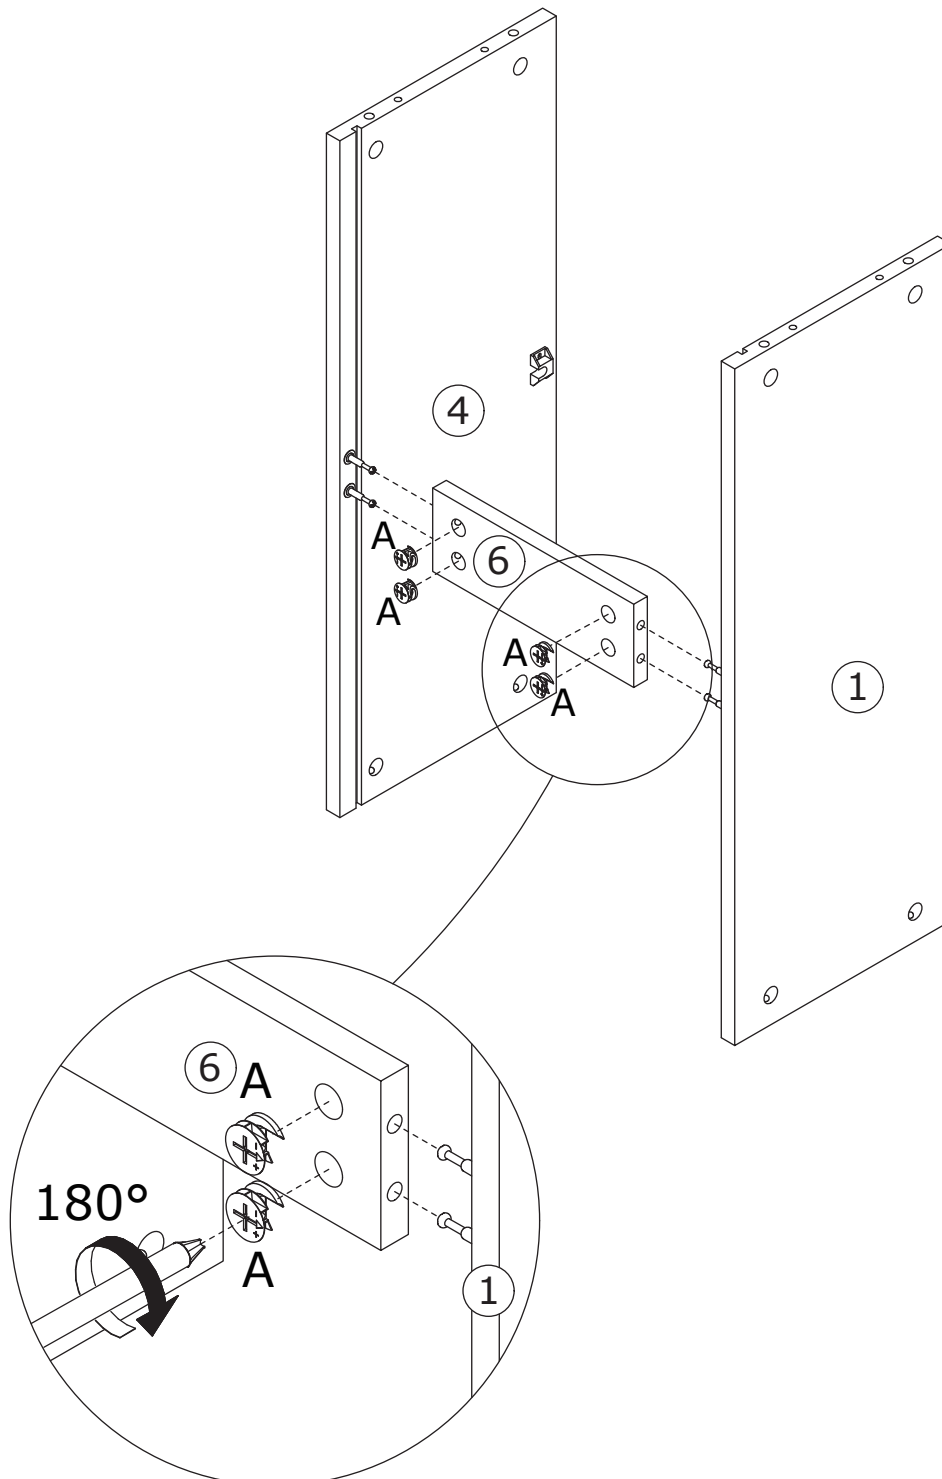



30

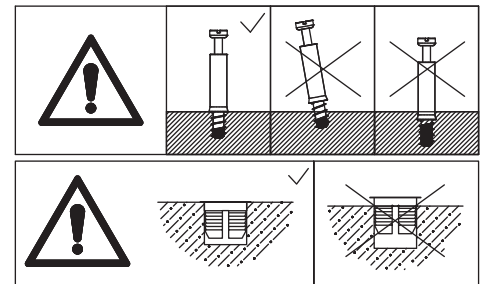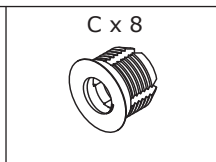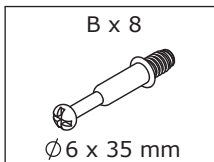   


 
Install plug (C) onto panels 2 and 3, then screw self-tapping rod (B) into panels 2 and 3.

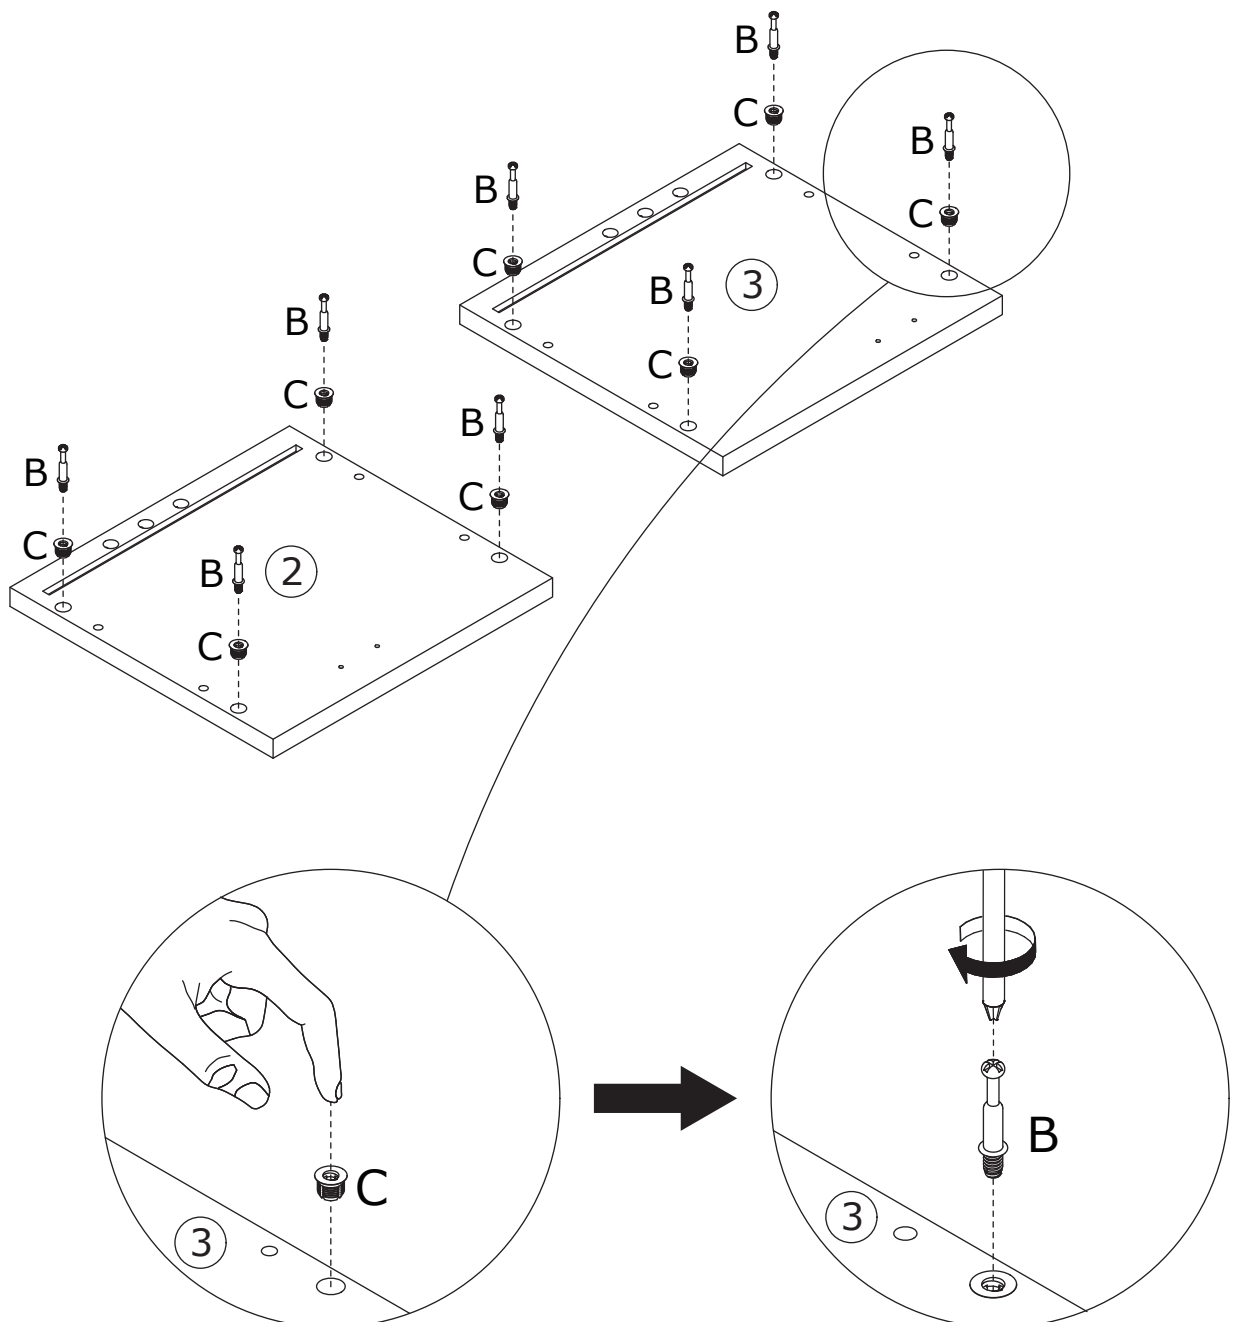

31

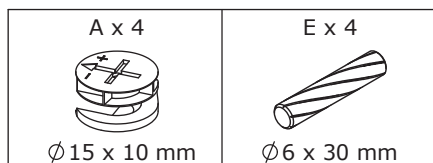  


  Connect panel 3 to panels 1 and 4 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

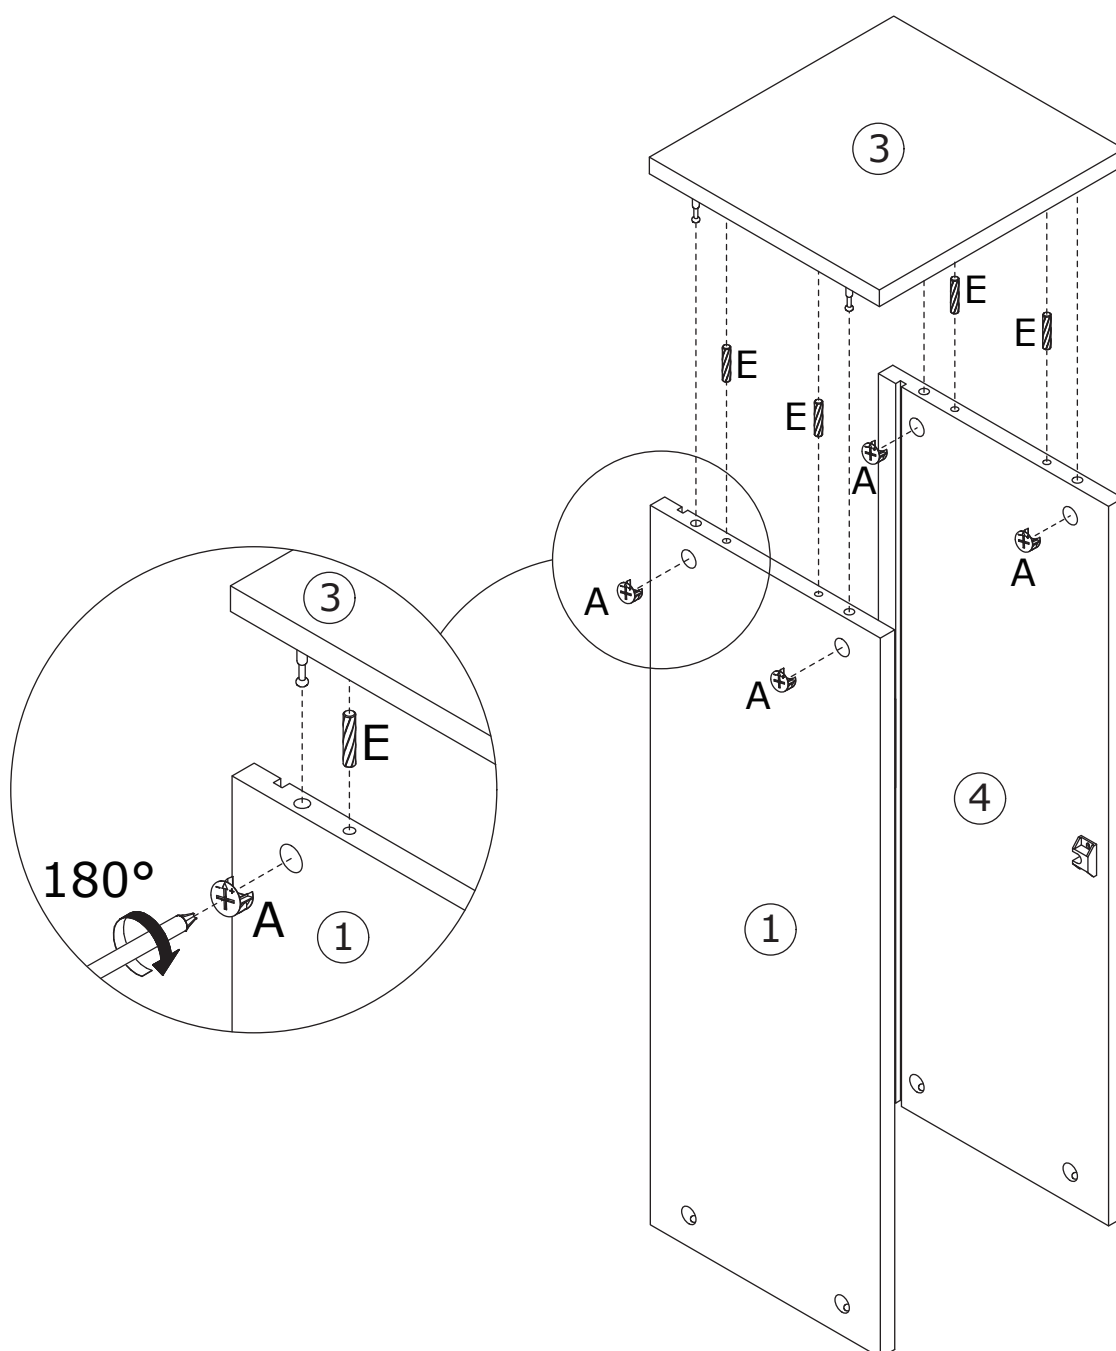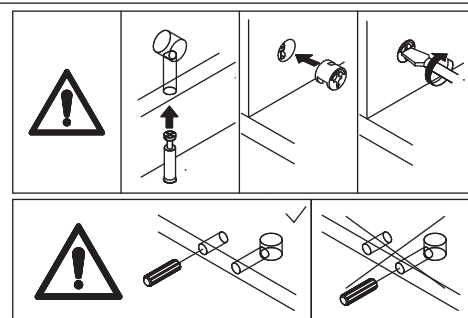


32

 Flip the cabinet body, then insert panel 5 into the available grooves.



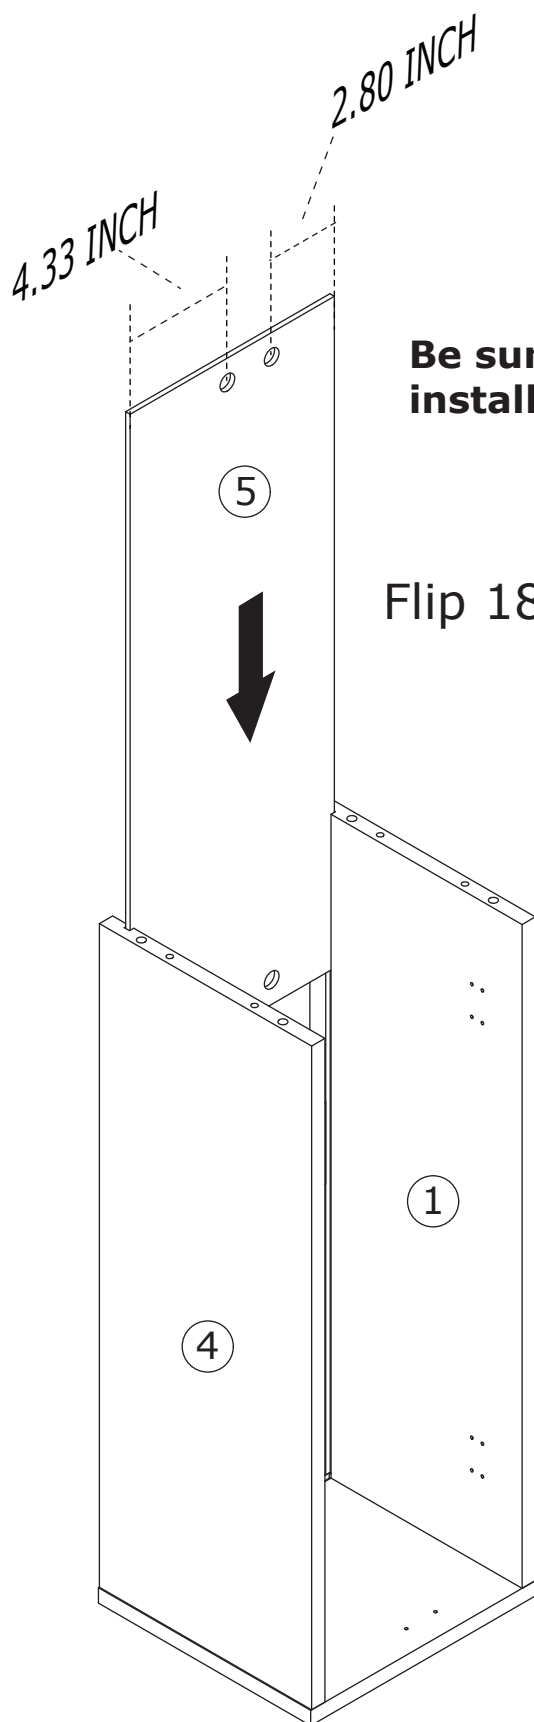


Be sure to pay attention to the installation orientation of Panel 5.


 
Flip 180°

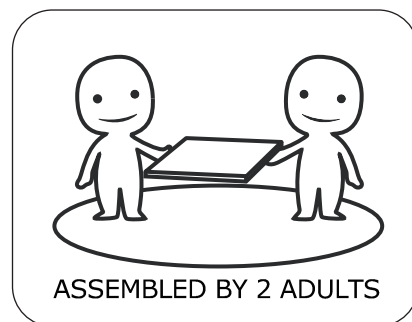

33

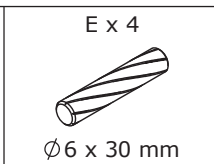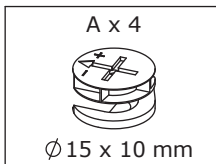   

  Connect panel 2 to panels 1 and 4 using wooden dowel (E), then tighten by turning cam lock (A) clockwise.

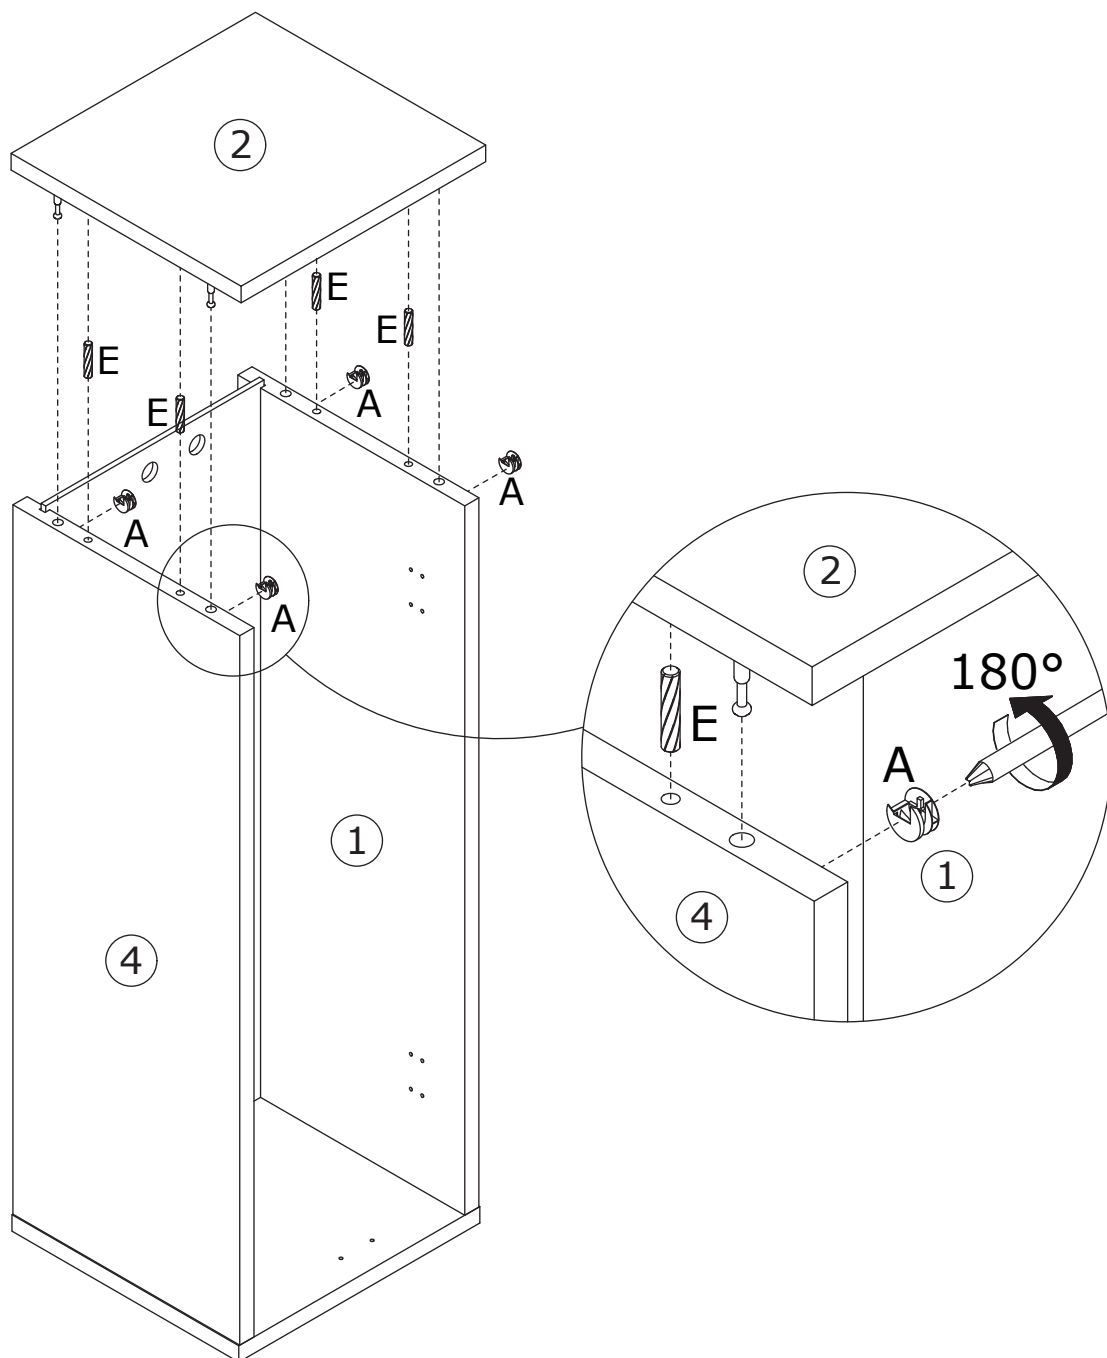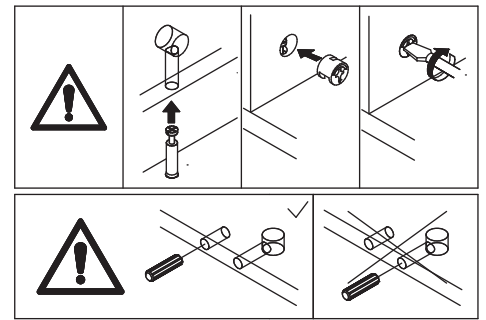

34

 
M x 2



N x 4



Ø3.5 x 14 mm



J



N

 


U





Ø3.5 x 12 mm Ø3.5 x 14 mm Ø3 x 14 mm



Secure hinge (M) to panel 7 using screw (N).

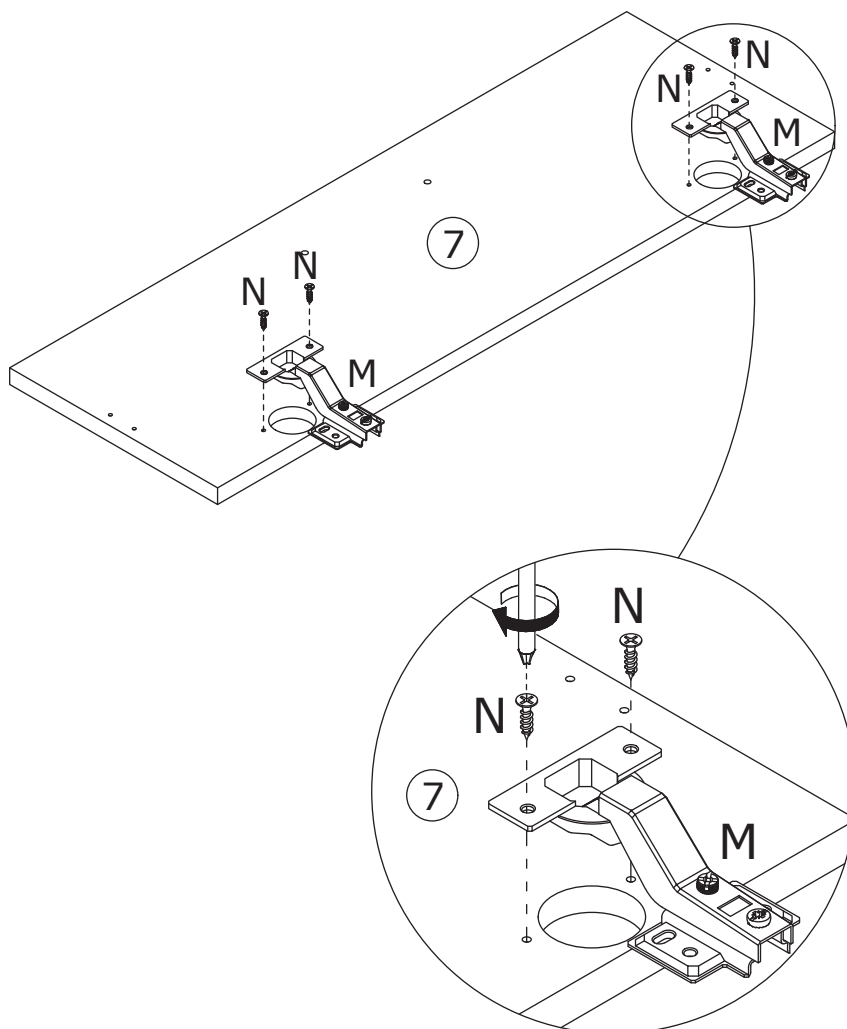

35

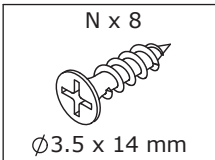  


  Attach panel 7 to panel 1 via hinges using screw (N).

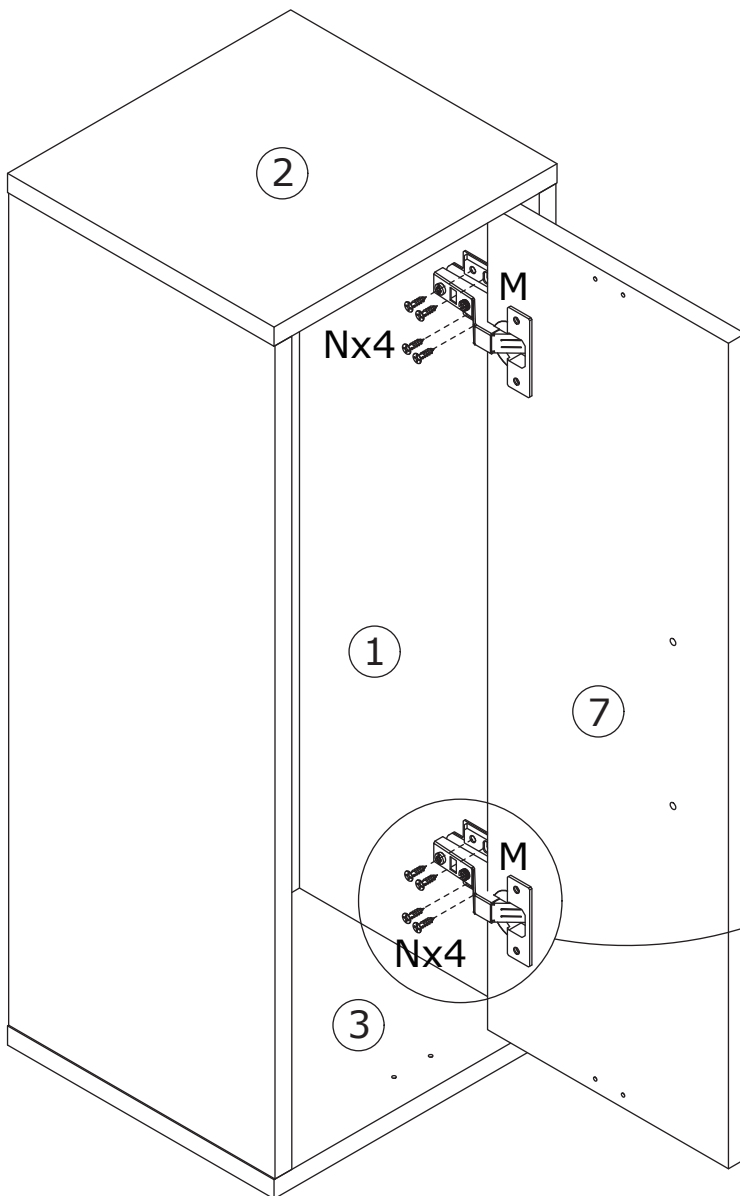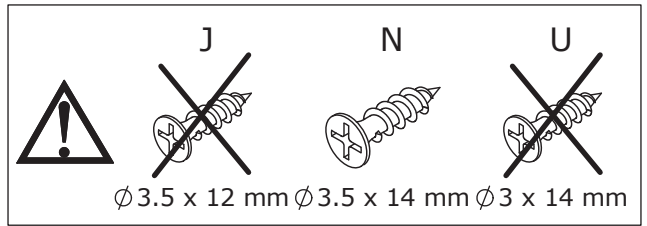


Be careful not to let the cabinet tip over

 
Left

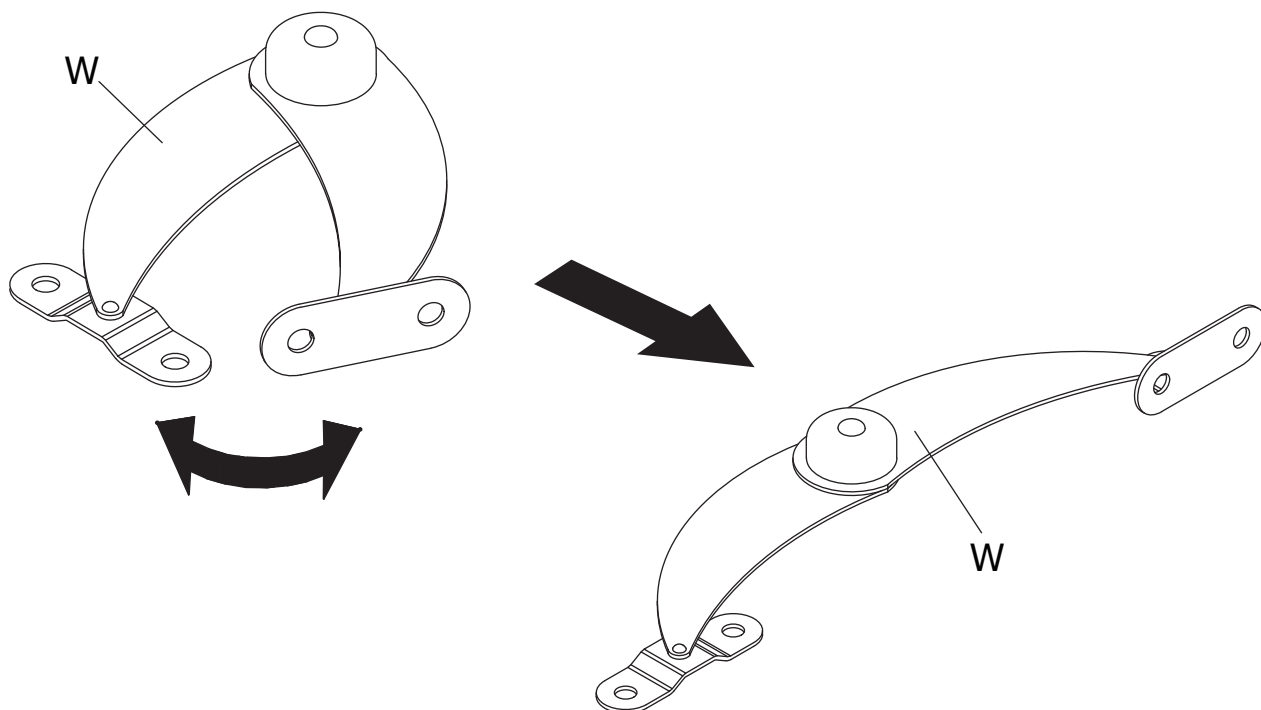


Right

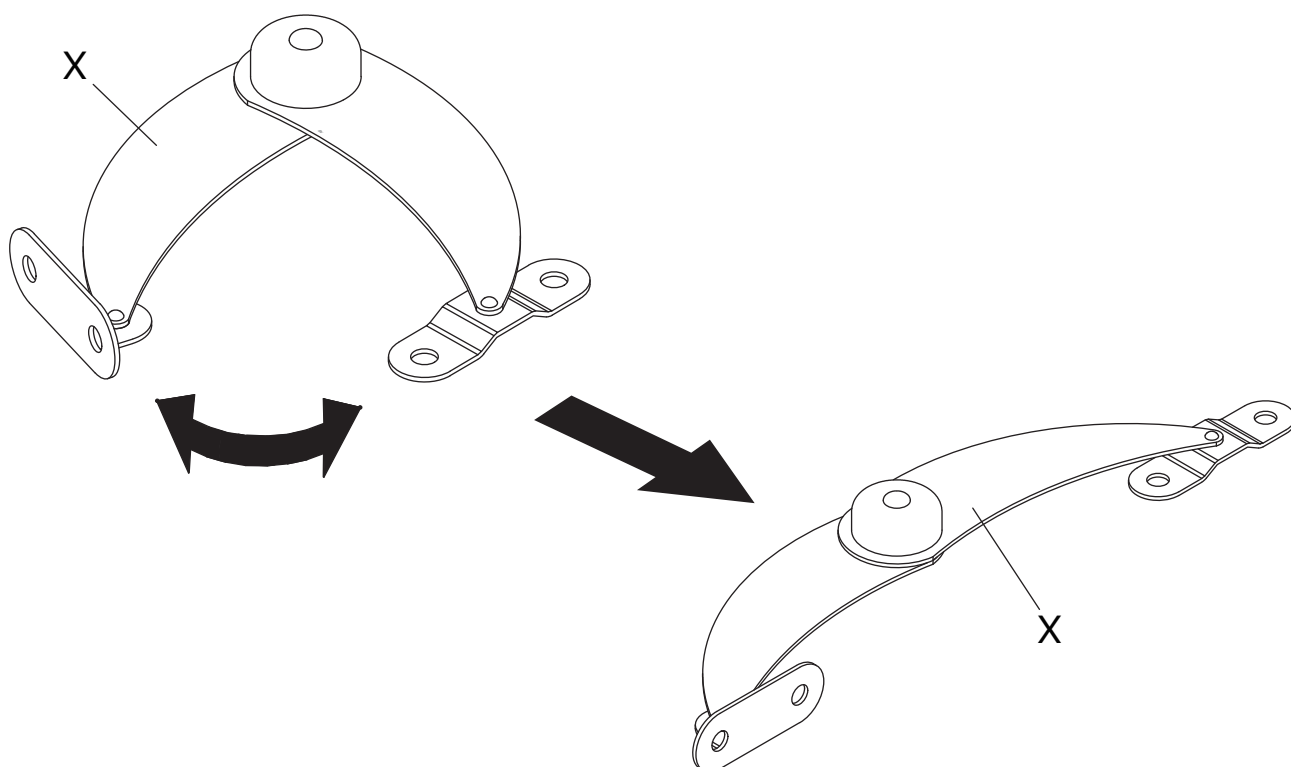 


37

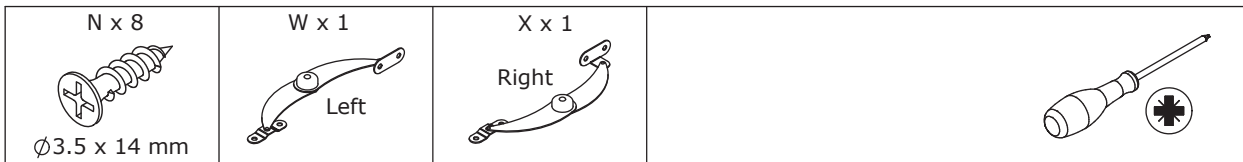 

 Secure hinge (W) and (X) to panels 2, 7, and 3 using screw (N).

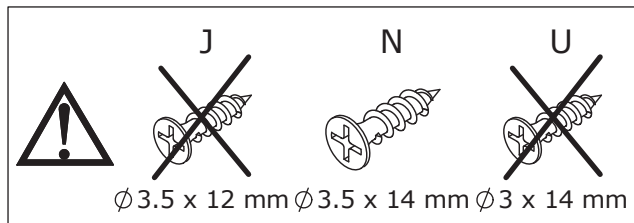


 Be careful not to let the cabinet tip over

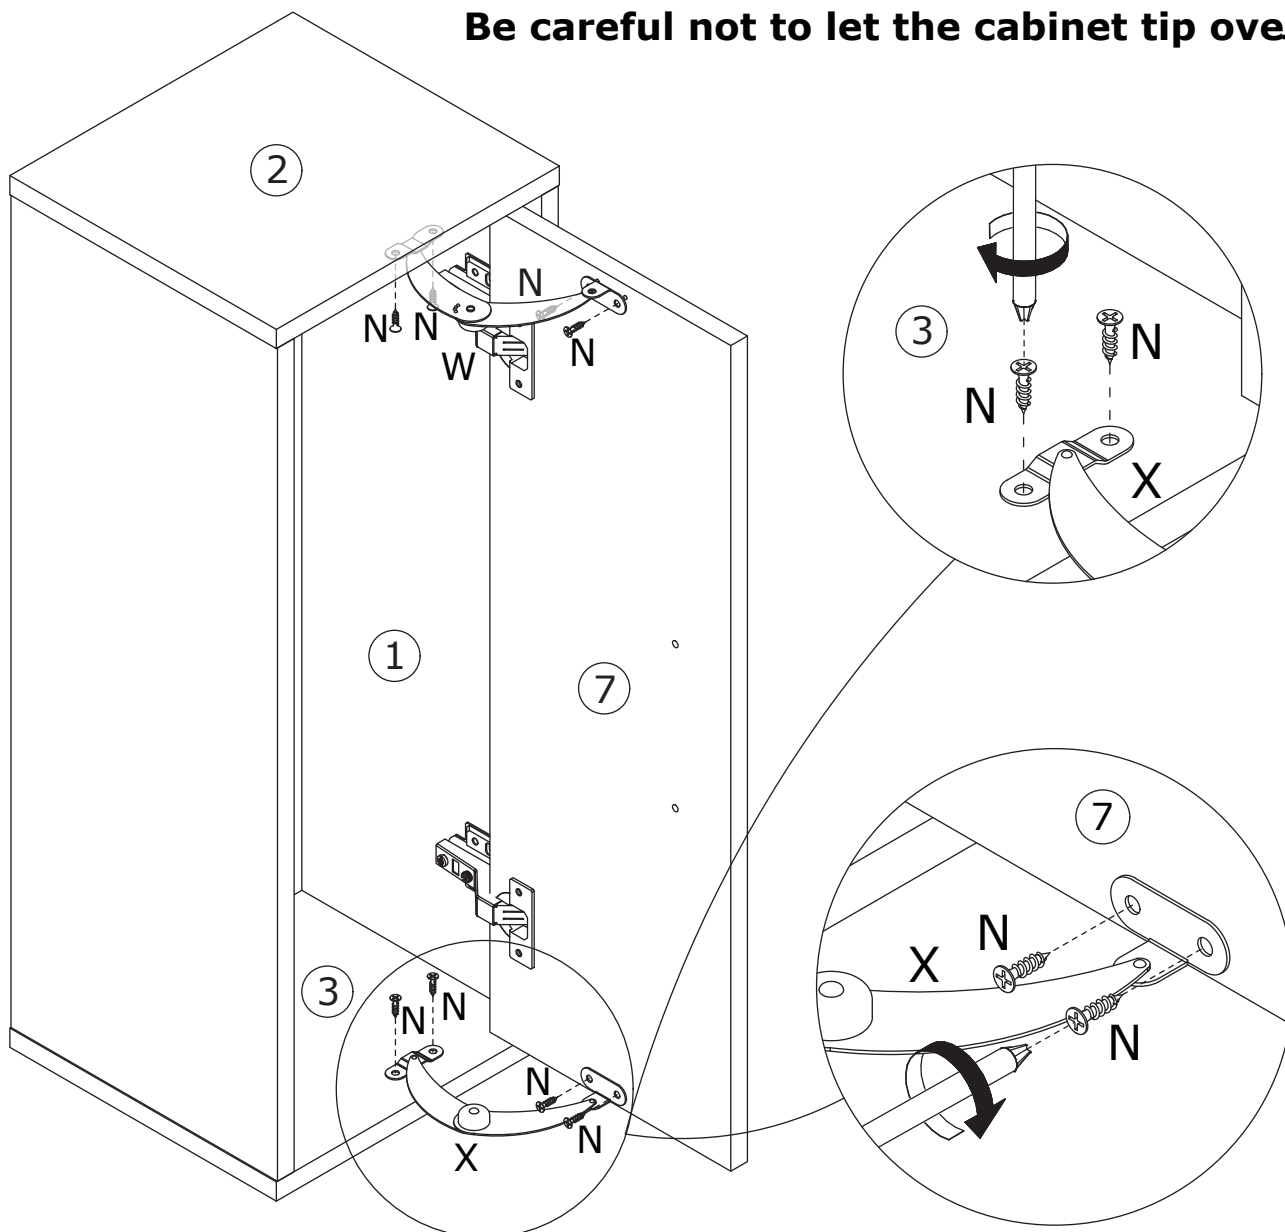

38

 
F x 1




G x 2



 Ø4 x 18 mm



 Secure handle (F) to panel 7 using screw (G).


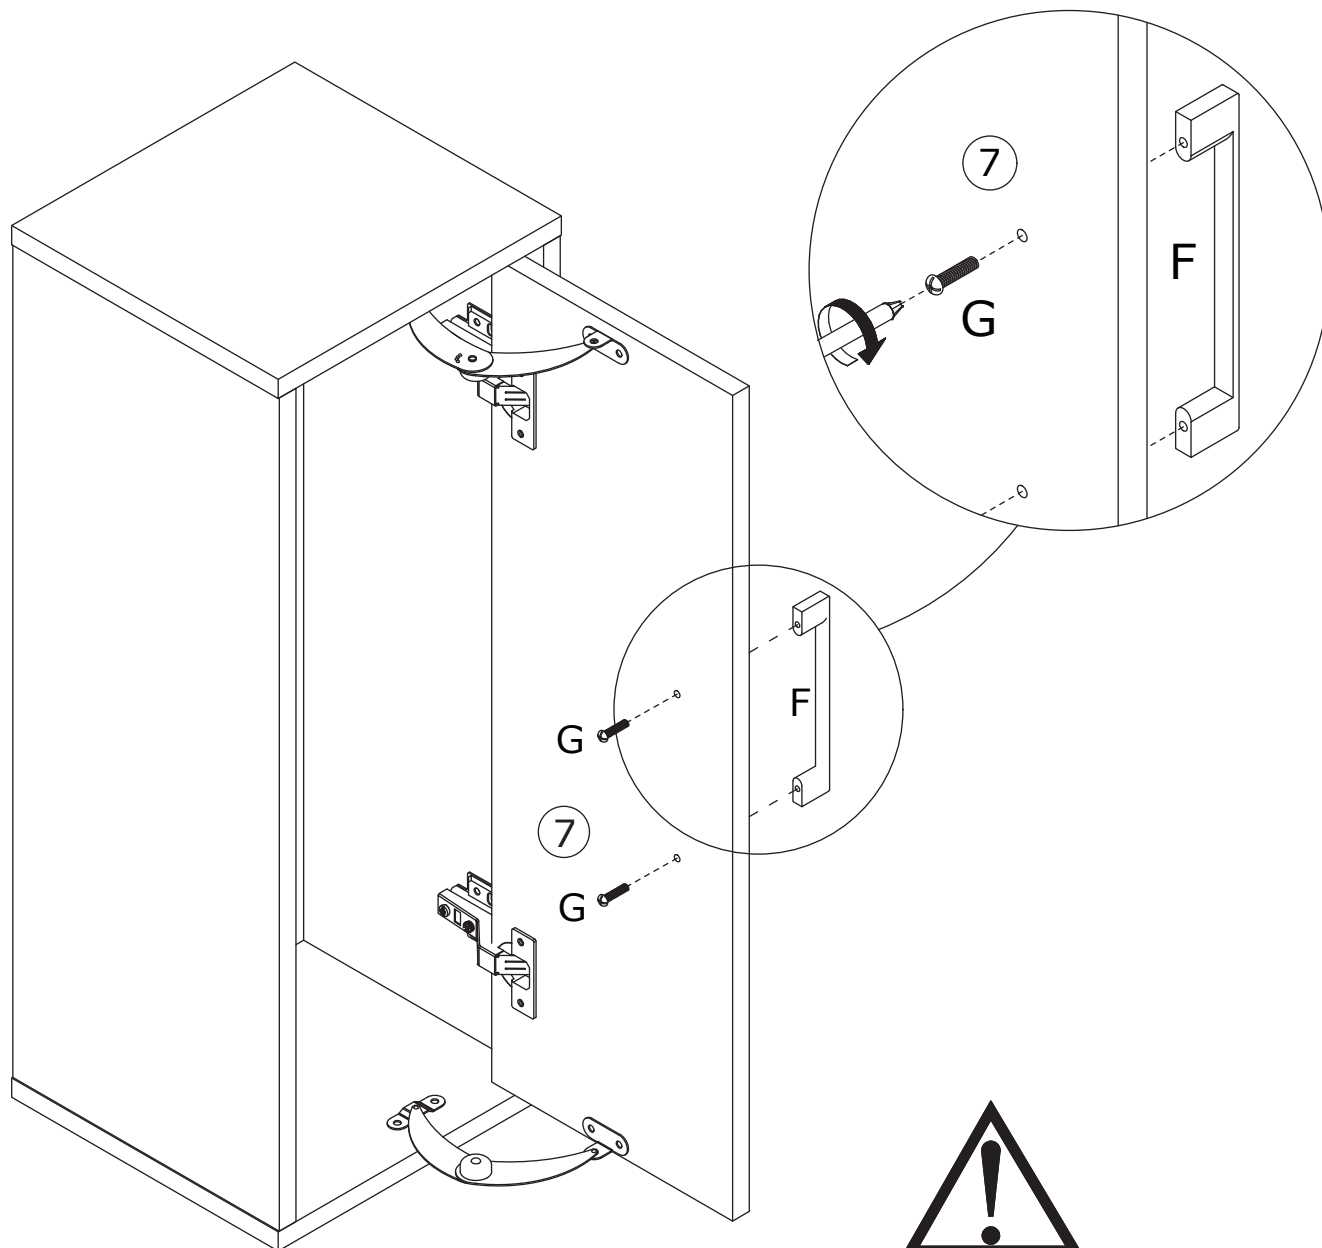


Be careful not to let the cabinet tip over








Once installation is complete, please close the door.

  39

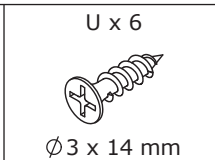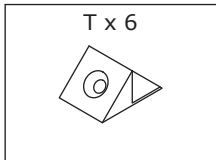

     
Flip the cabinet body, insert clip (T) into the available slots, then secure them with screw (U).

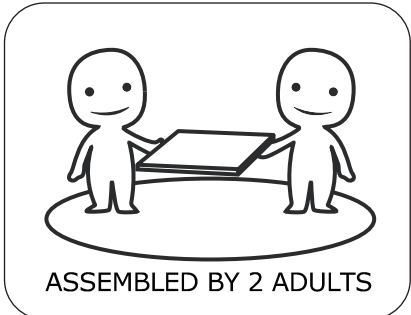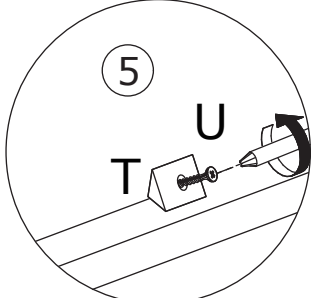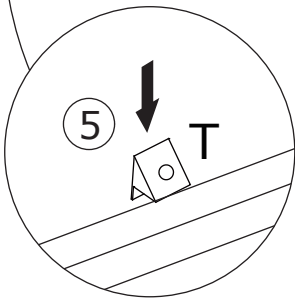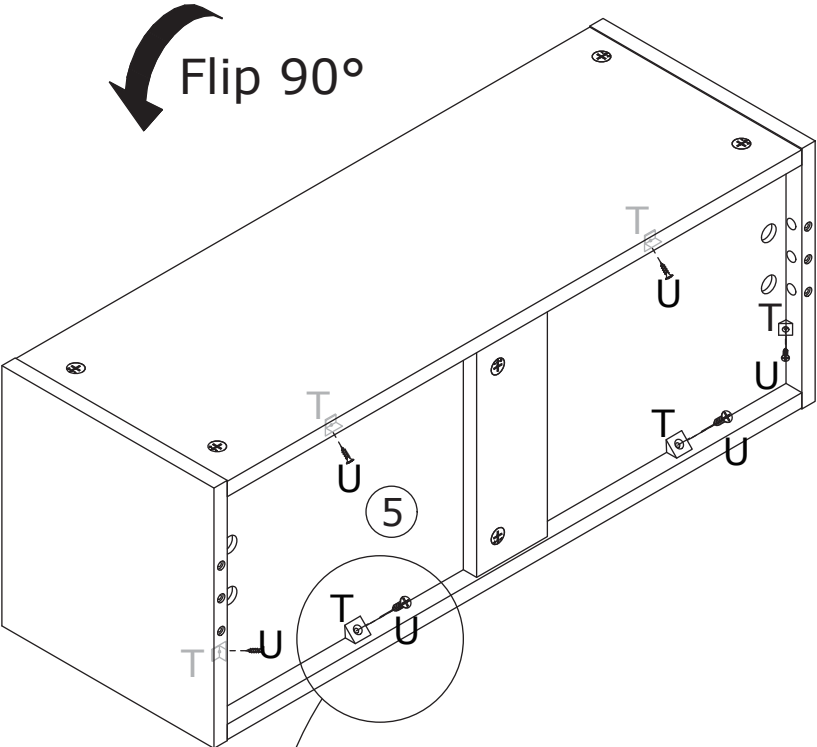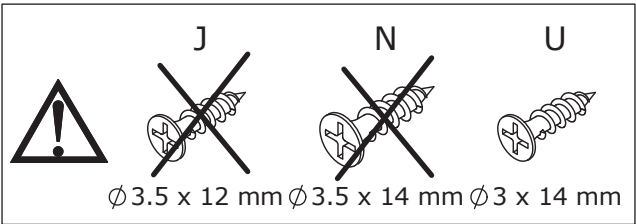

ASSEMBLED BY 2 ADULTS


Function of this knob:

 Adjust the front-rear distance of part (Y-1).

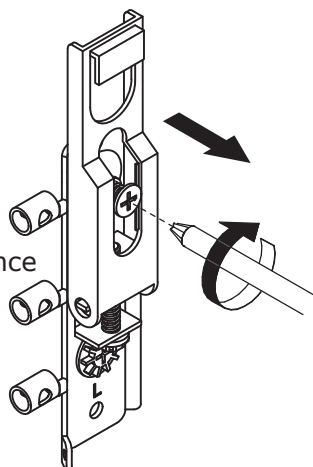

Y-1

 
OR

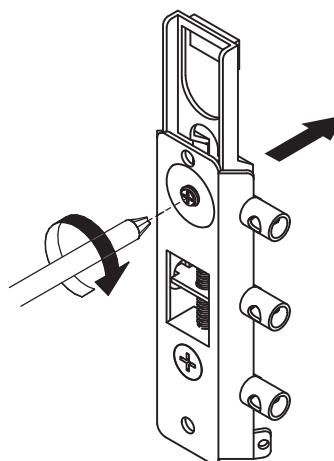


Left

Function of this knob:

 Adjust the vertical distance of part (Y-1).

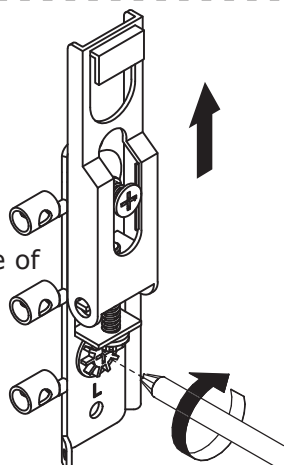


OR

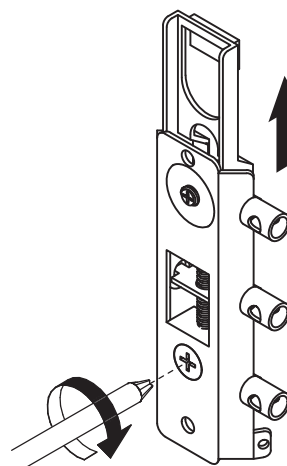 

Turning the screwdriver in the opposite direction will adjust part (Y-1) and part (Y-2) in opposite directions.


Function of this knob:

 Adjust the front-rear distance of part (Y-2).

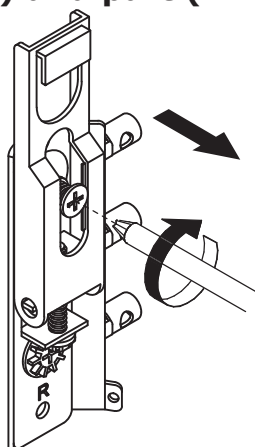

Y-2

 
OR

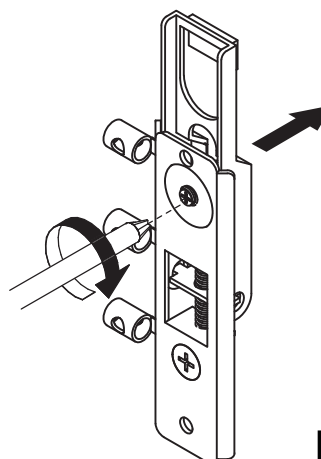


Right

Function of this knob:




 
Adjust the vertical distance of part (Y-2).

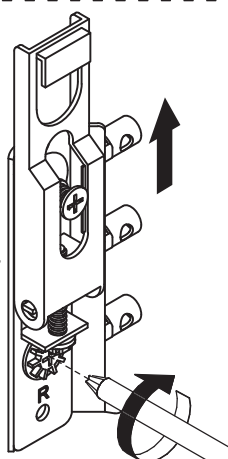






OR

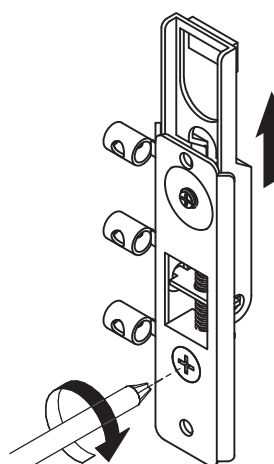 

40

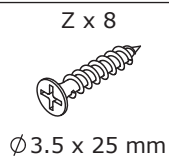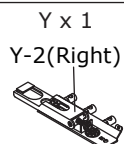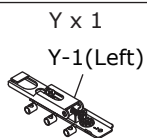    

     
Connect part (Y-1) to panel 3,
connect part (Y-2) to panel 2, then
secure them using screw (Z).

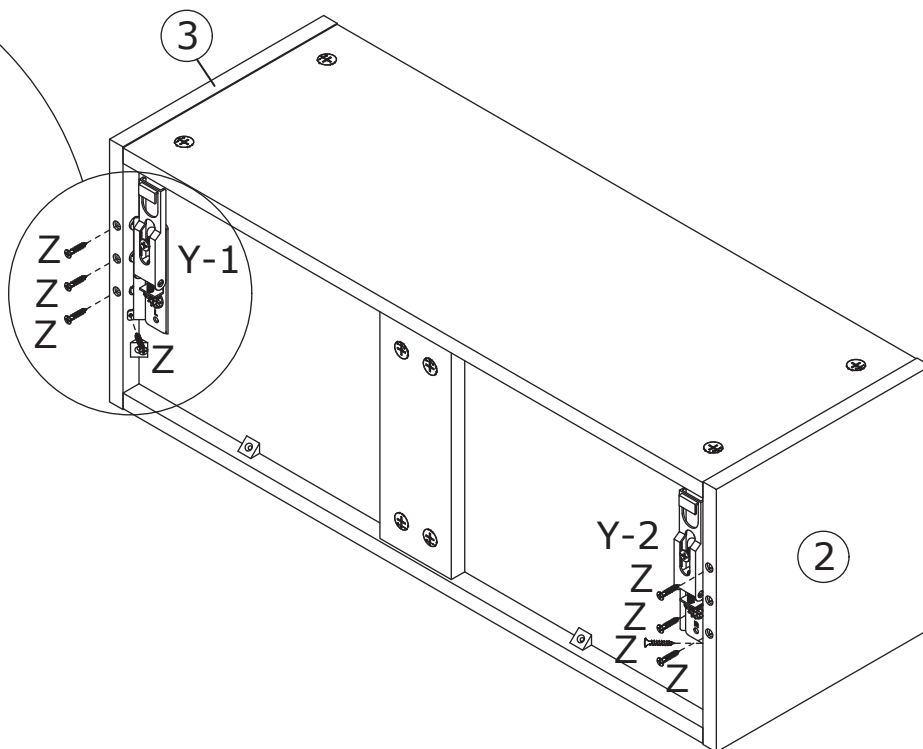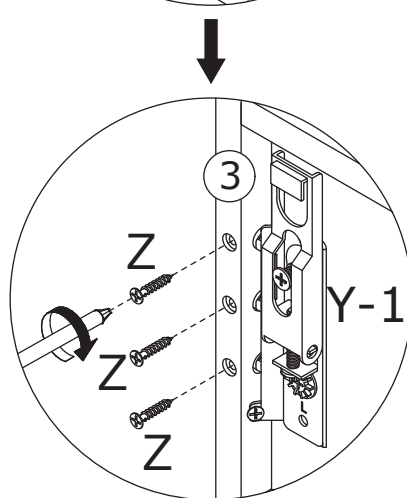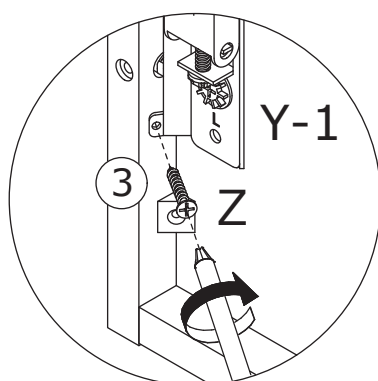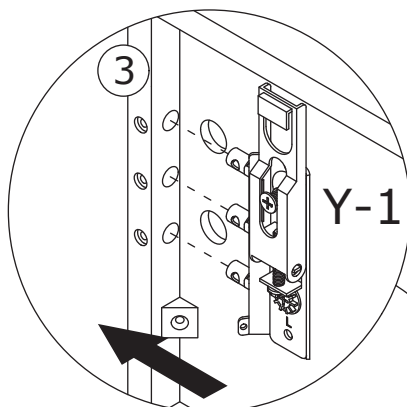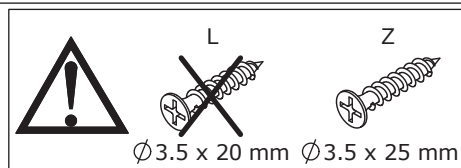

41

CC x 4  Ø6 x 12 mm	DD x 4 	EE x 2 	FF x 1 	
---	---	---	--	--

 Connect the two pieces of part (27) using screw (CC), nut (DD).



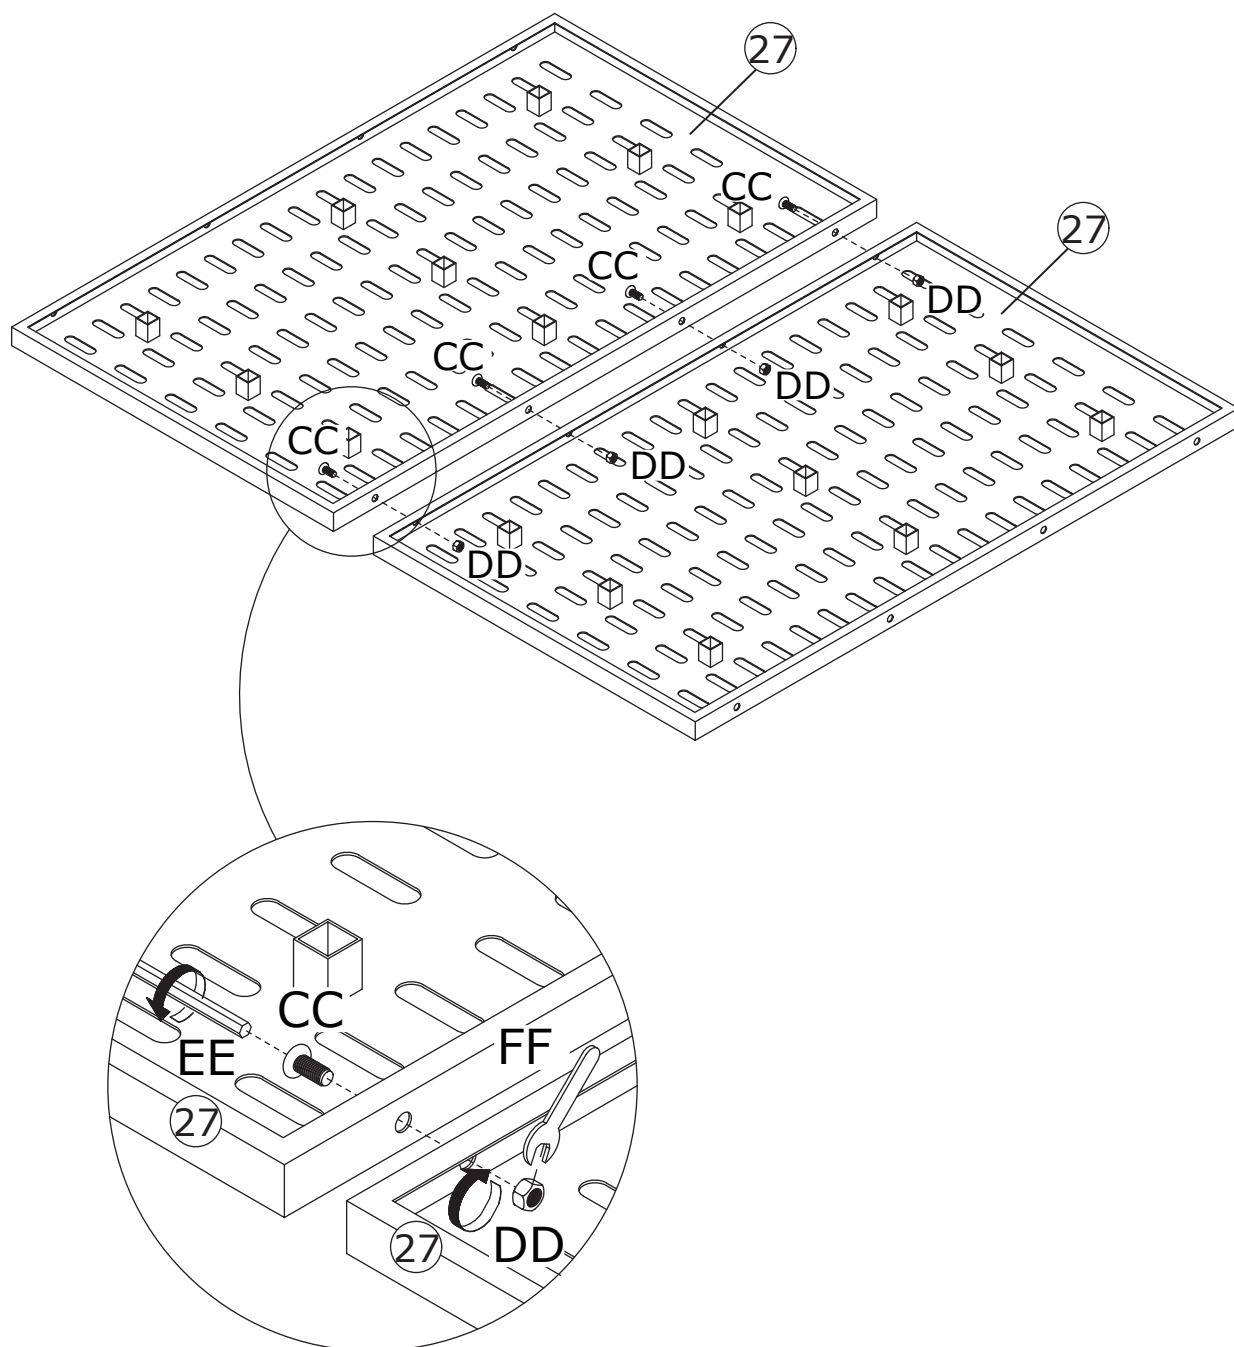


42

R x 12







 
 
 
GG x 12



****Option A:**** Drill holes to wall, and insert the expansion screw (R).

Secure the unit to the wall using screw (GG).

       Note: Align part (27) with the edge and bottom of panel 8.

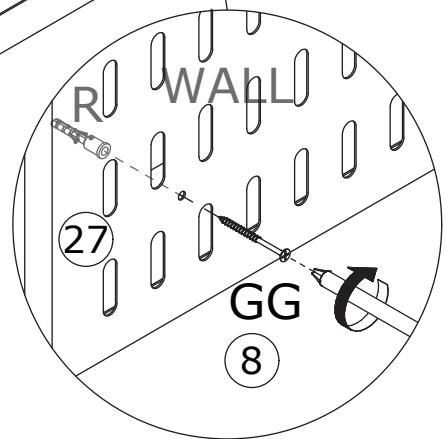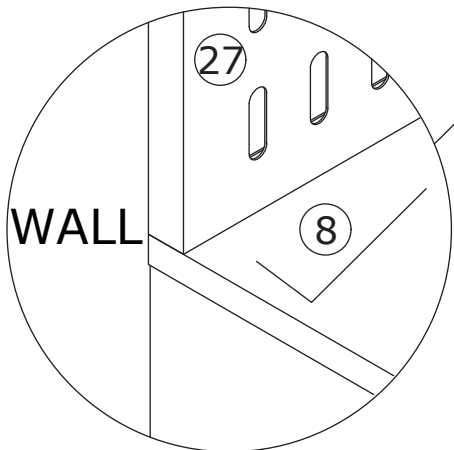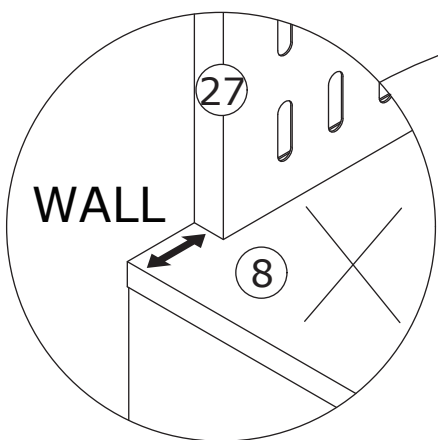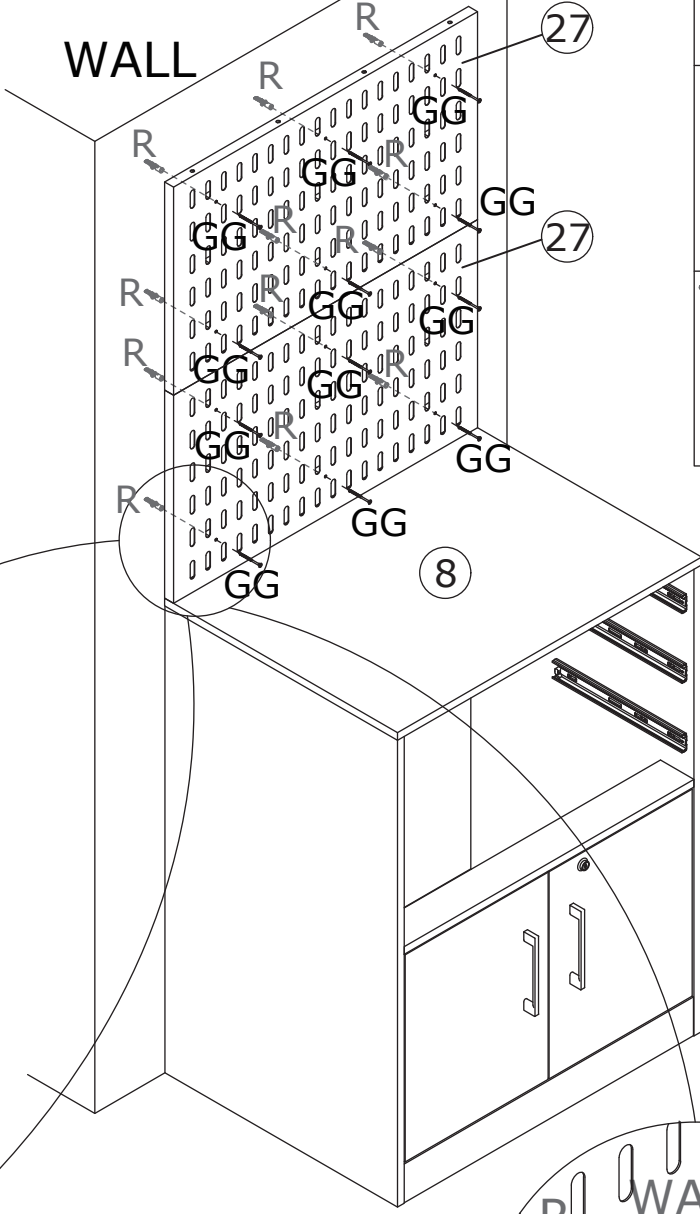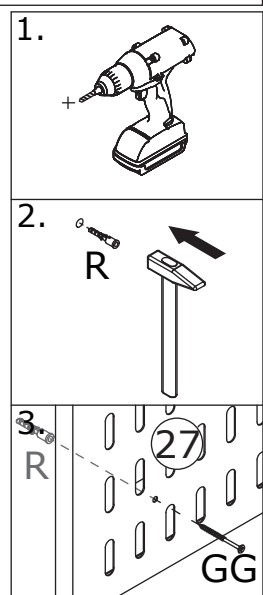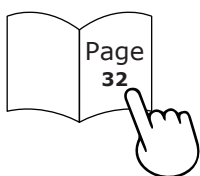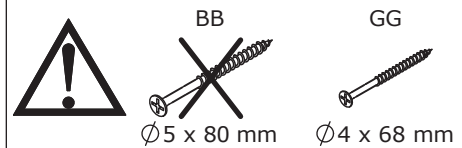




43

GG x 12



Ø 4 x 68 mm

   
HH x 12




****Option B:**** Drill holes to wall, and insert the expansion screw (HH).
Secure the unit to the wall using screw (GG).
Note: Align component (27) with the edge and bottom of panel 8.



 BB





GG

 

Ø 5 x 80 mm

  Ø 4 x 68 mm

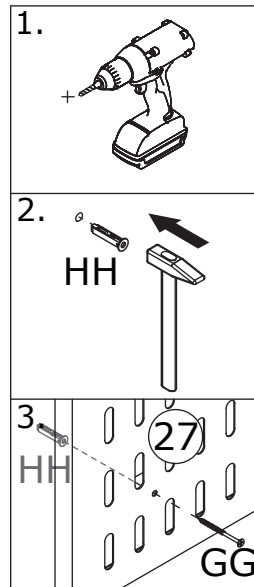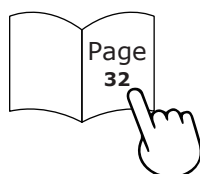

WALL

HH

27

GG

HH

GG

27

GG

GG

GG

GG

8

WALL

27

8

WALL

27

8

 
HH

WALL


27

GG

8

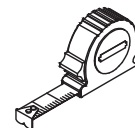

 
Ensure the position of part (Y-3) according to the mounting distance.

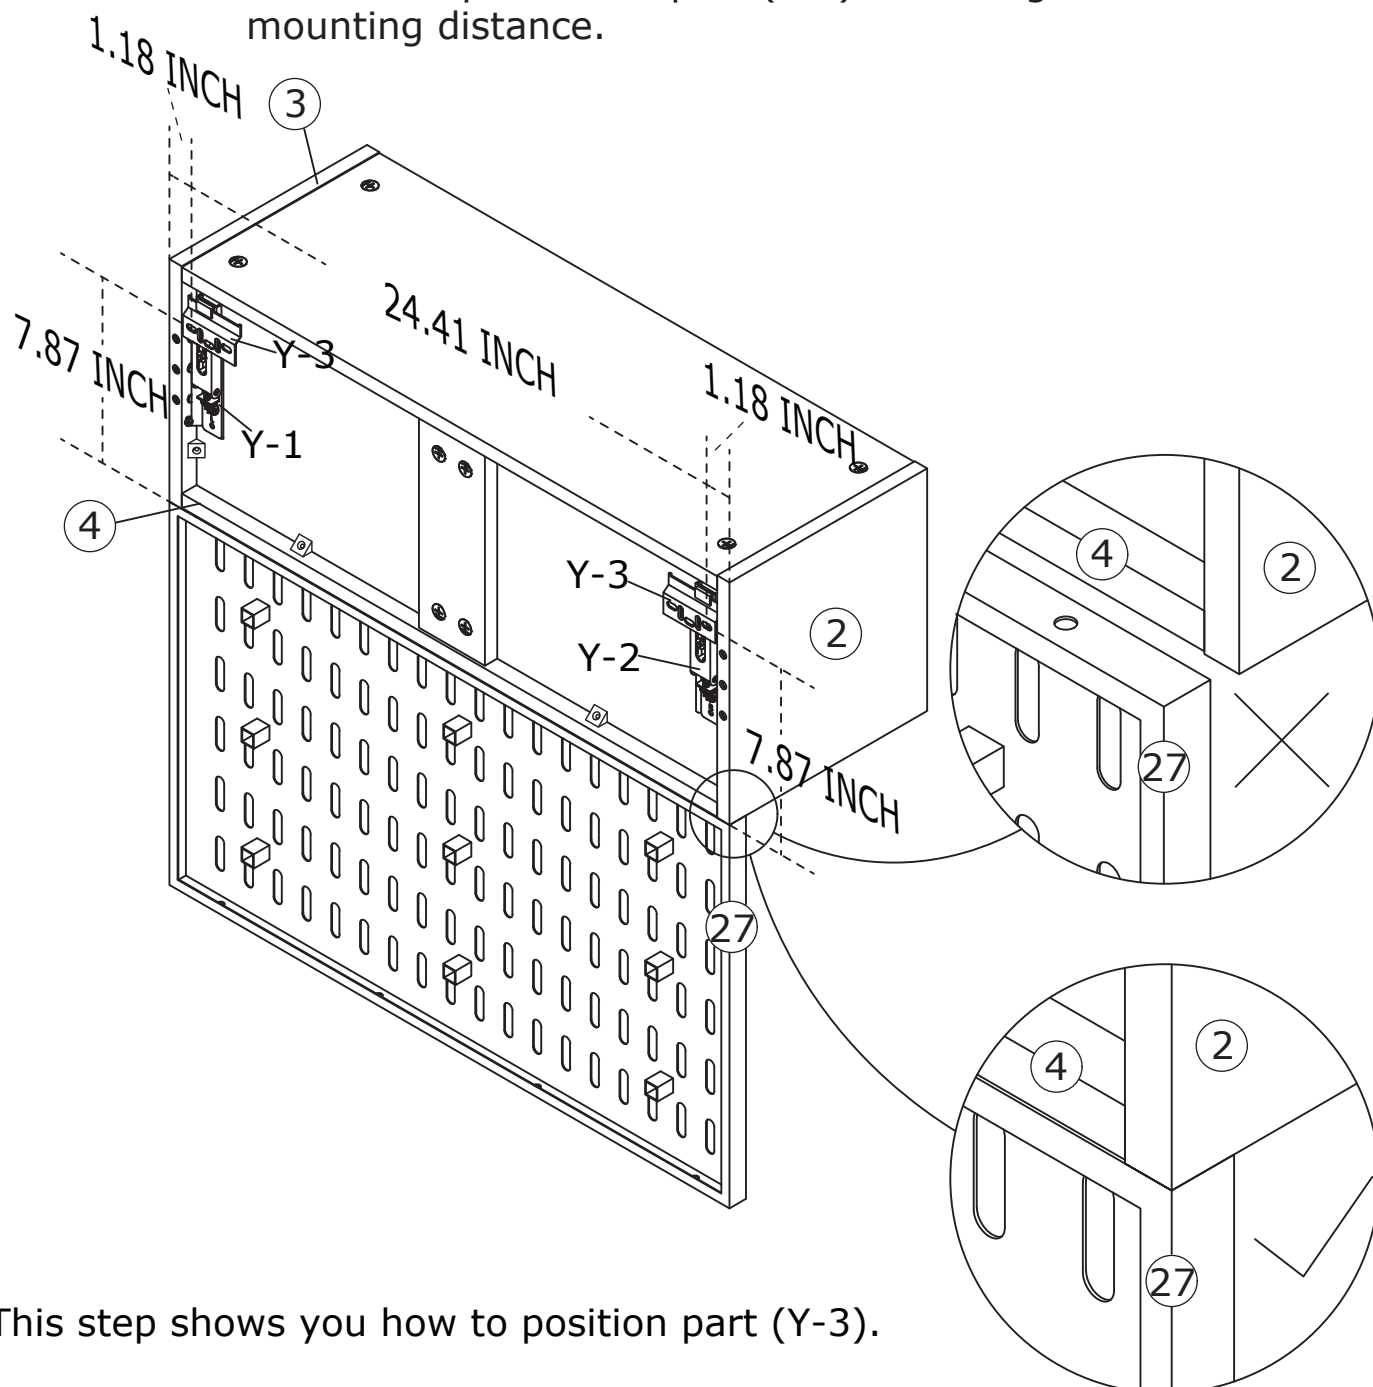




This step shows you how to position part (Y-3).



 Before positioning, align the top cabinet with the edge and top of part (27).

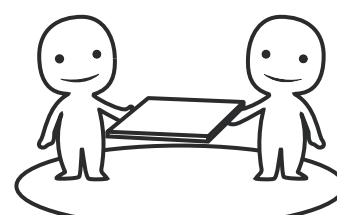


ASSEMBLED BY 2 ADULTS



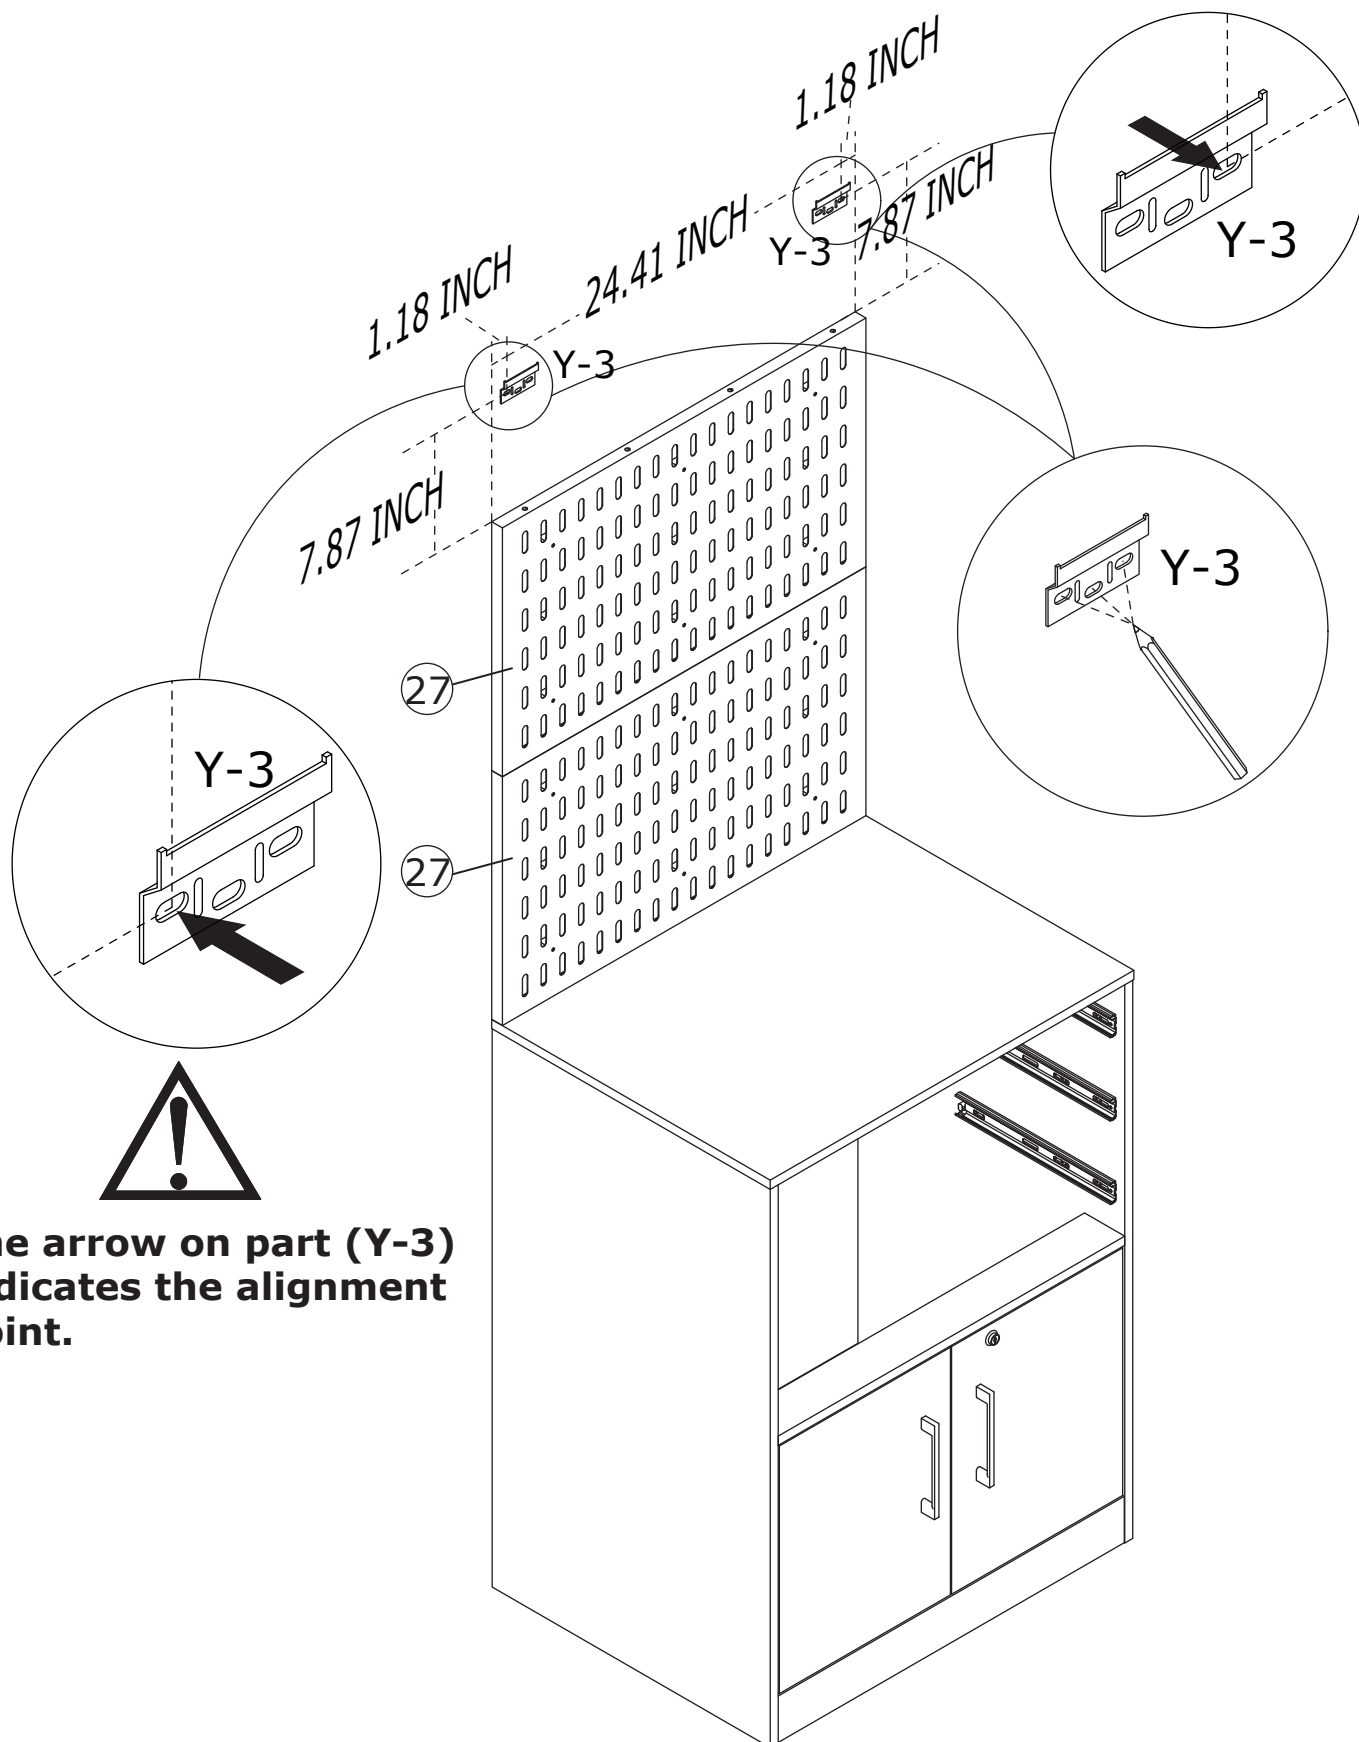 
 
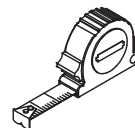 


The arrow on part (Y-3) indicates the alignment point.

 
46

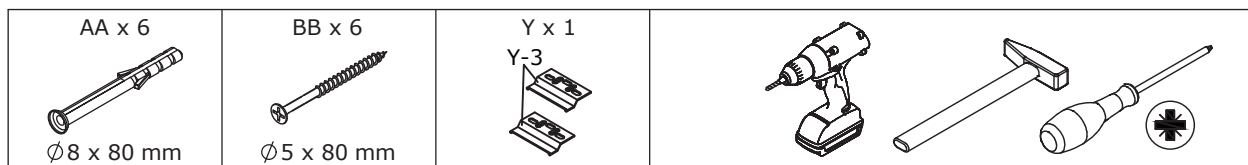

     ****Option A:**** Drill holes to wall, and insert the expansion screw (AA).
Install part (Y-3) onto the wall using screw (BB).

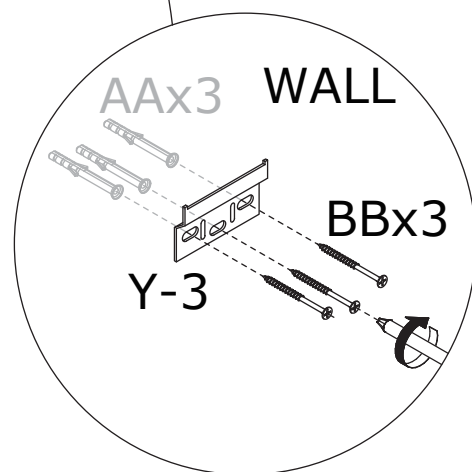
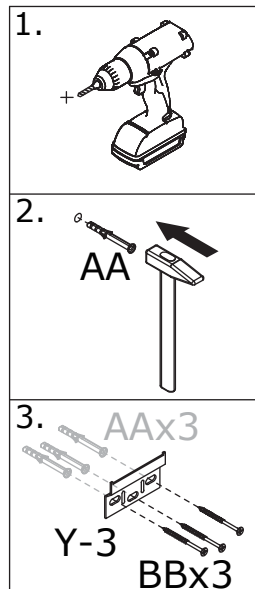
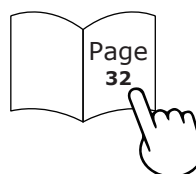
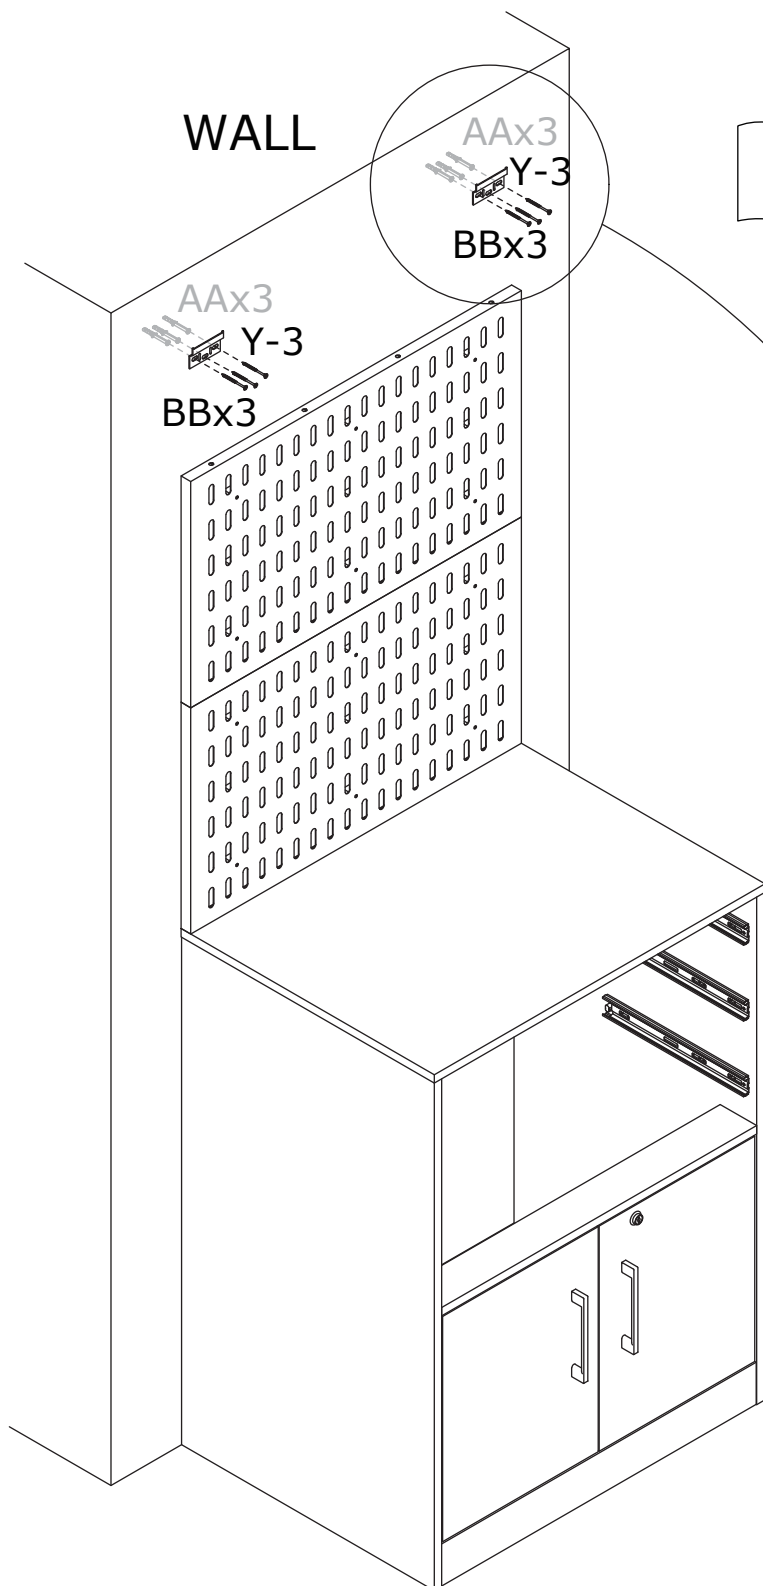
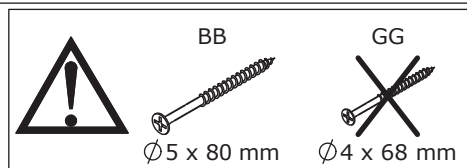


47


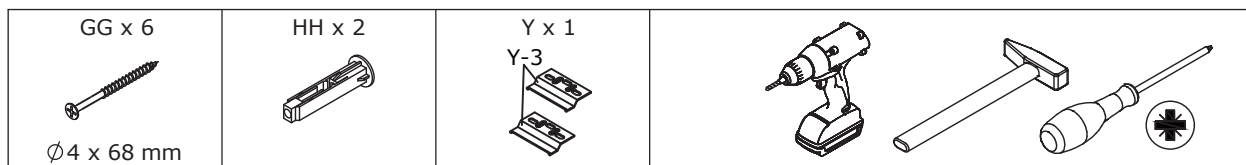 



****Option B:**** Drill holes to wall, and insert the expansion screw (HH).

     Install part (Y-3) onto the wall using screw (GG).

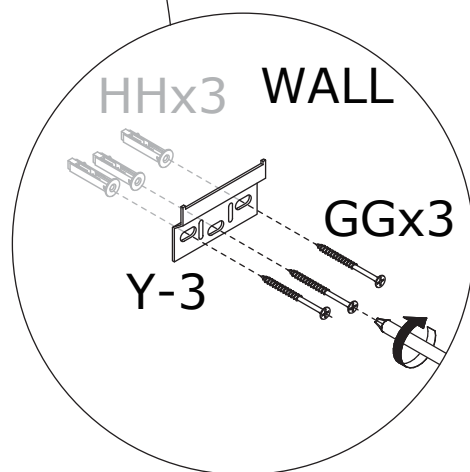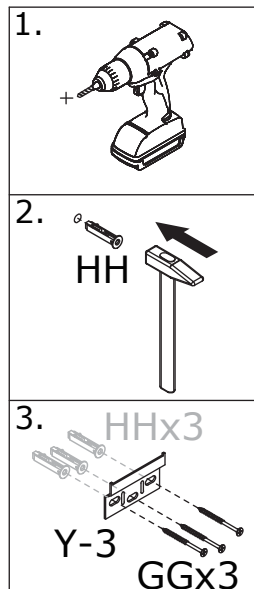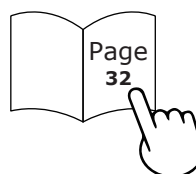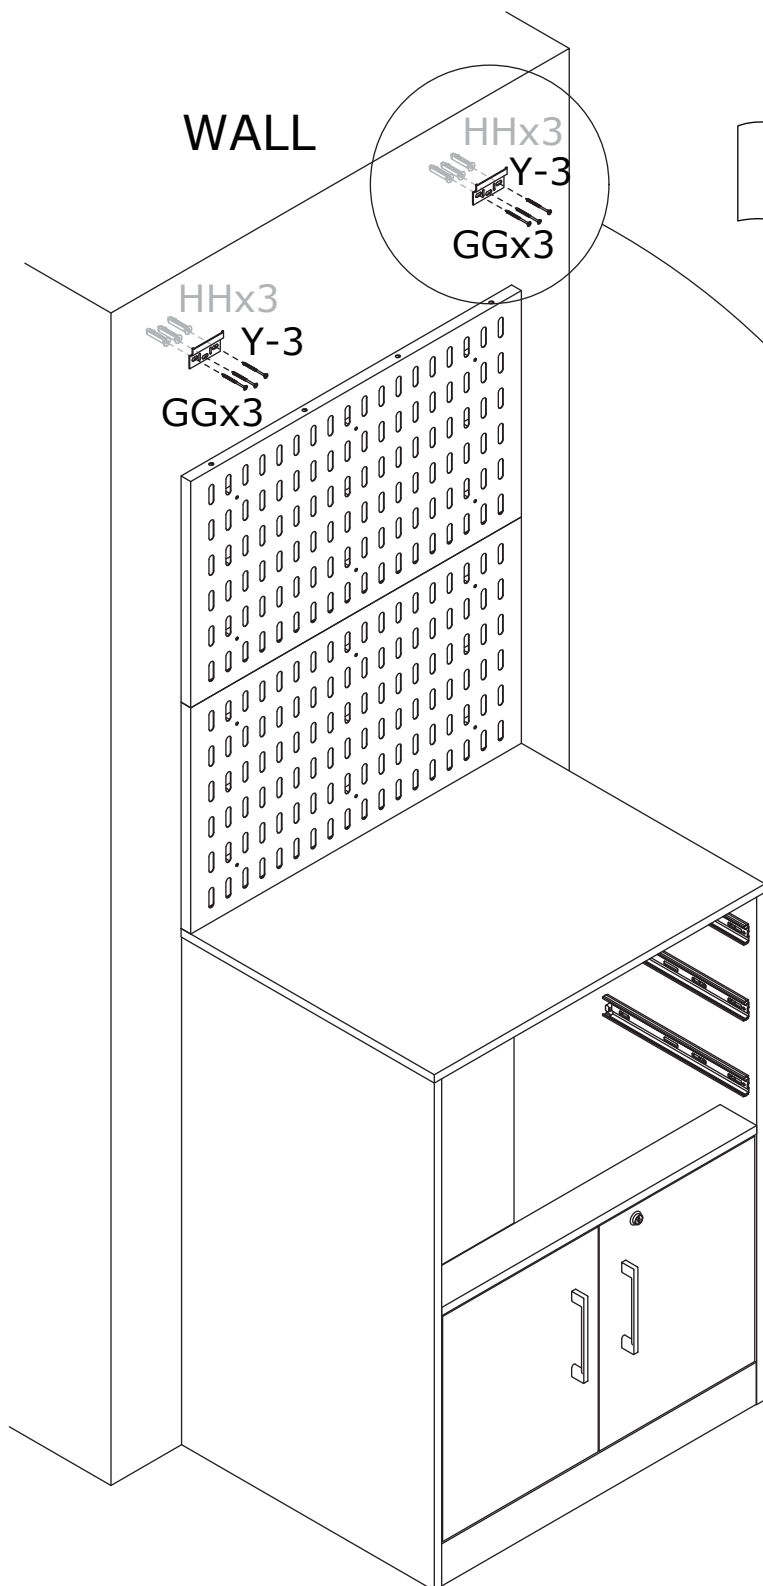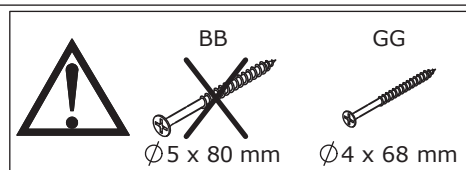

   
Install the upper cabinet body onto part (Y-3).

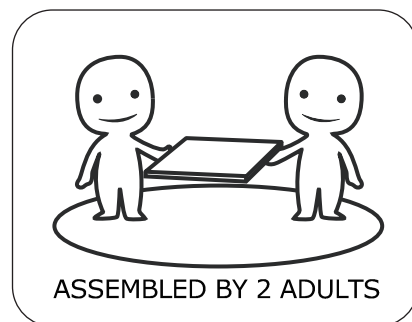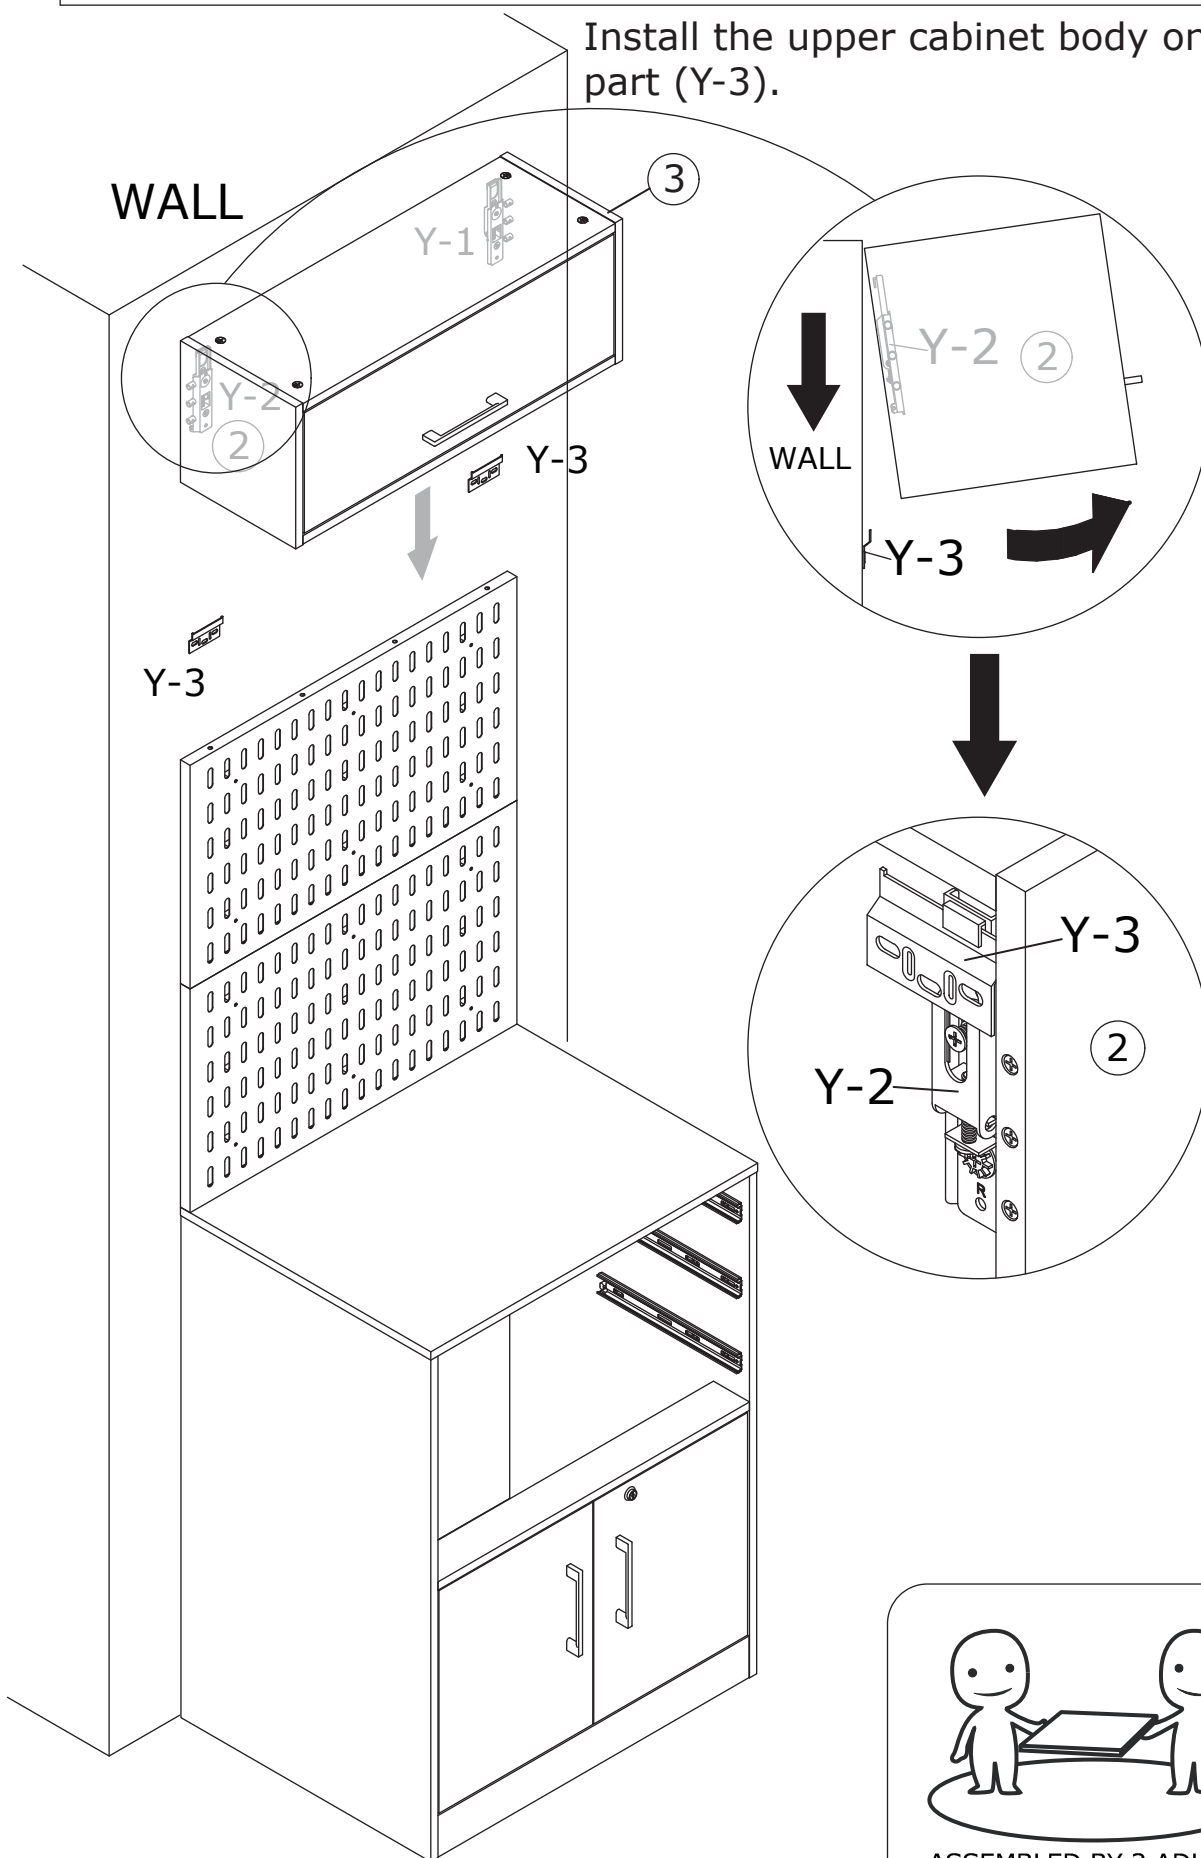




Once the wall cabinet is installed, if it is not aligned with the wall, you can adjust it using the front-to-back adjustment method described on page 47 for parts (Y-1) and (Y-2).

 Issue

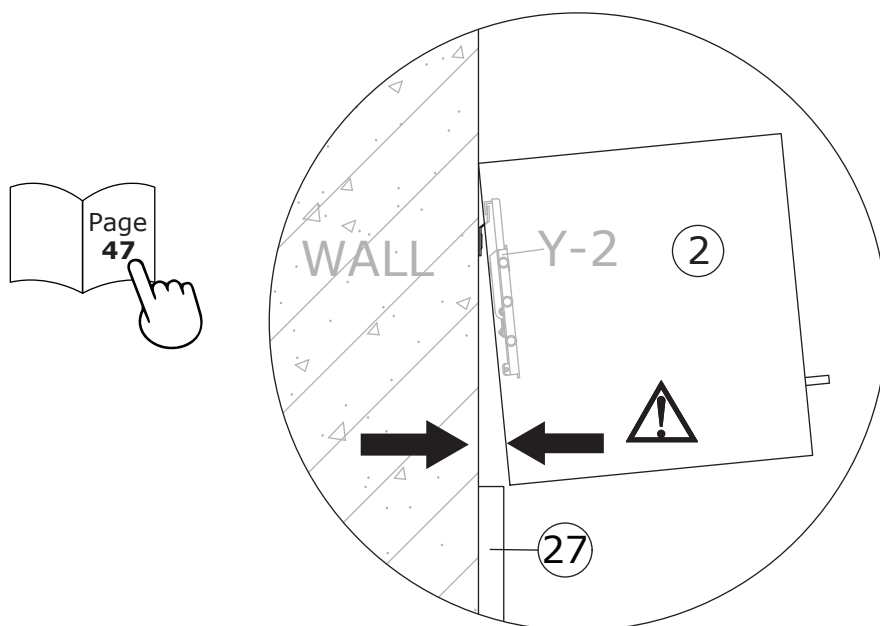


Resolve



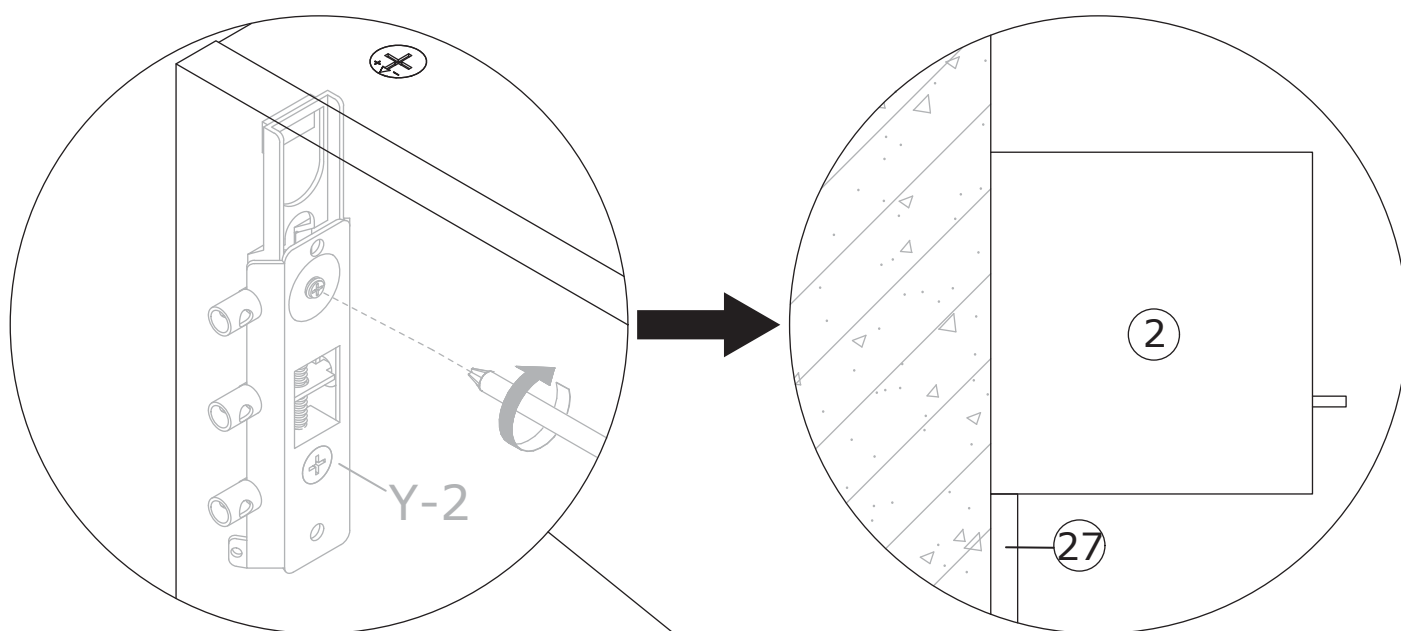 


This step requires you to open the door panel.

 50


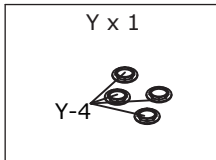


   Open panel (7) and install part (Y-4) onto panel 5.

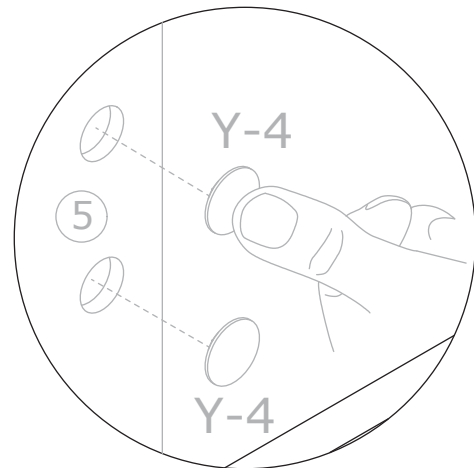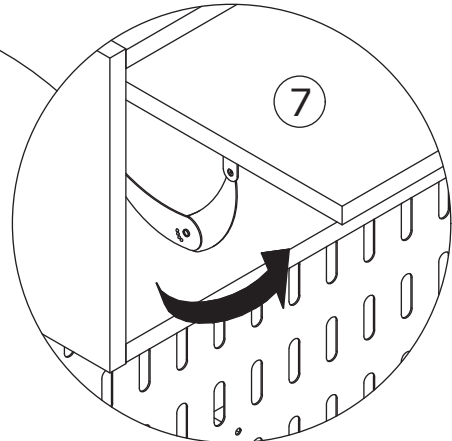
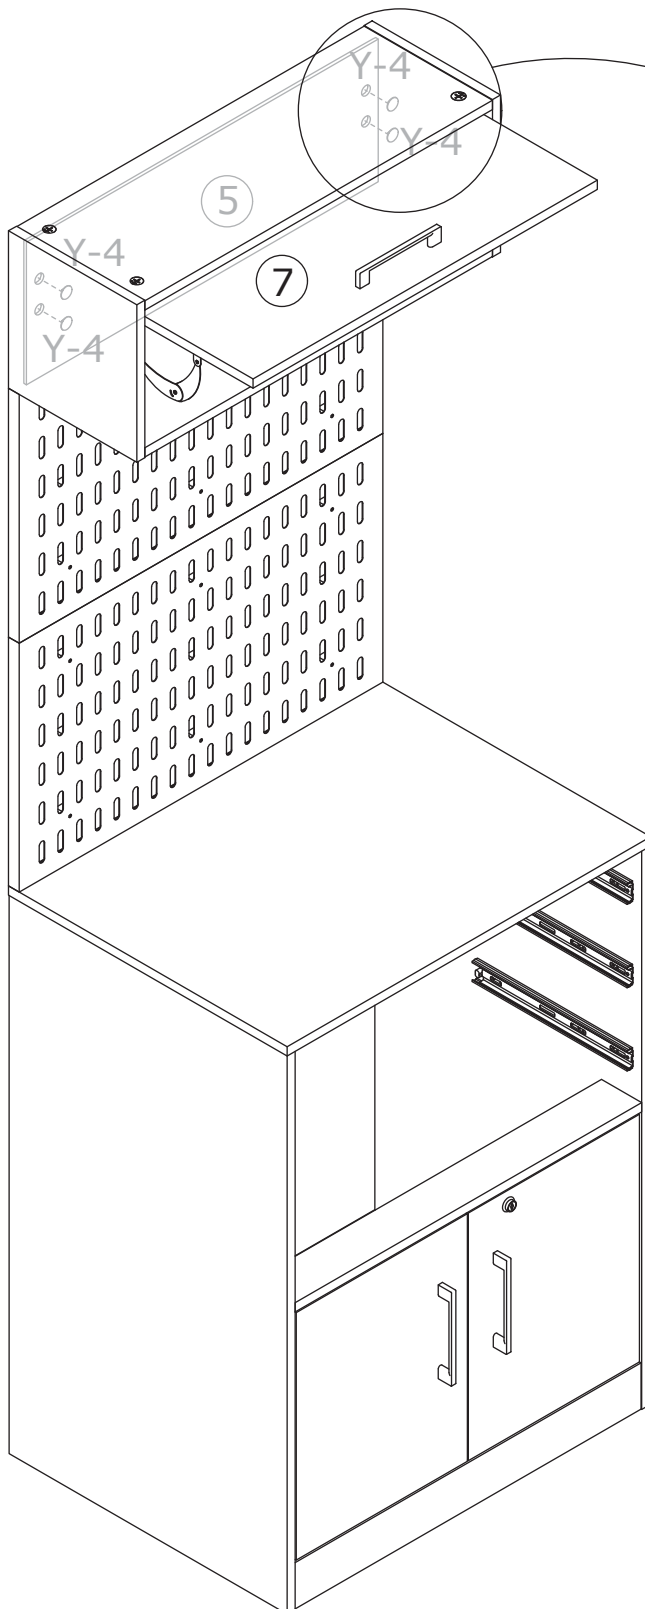


**Once installation is complete,
please close the doors.**

 
 
51

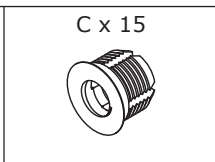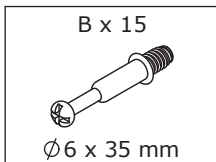

 
 
Install plug (C) onto panels 17 and 18, then screw self-tapping rod (B) into panels 17 and 18.

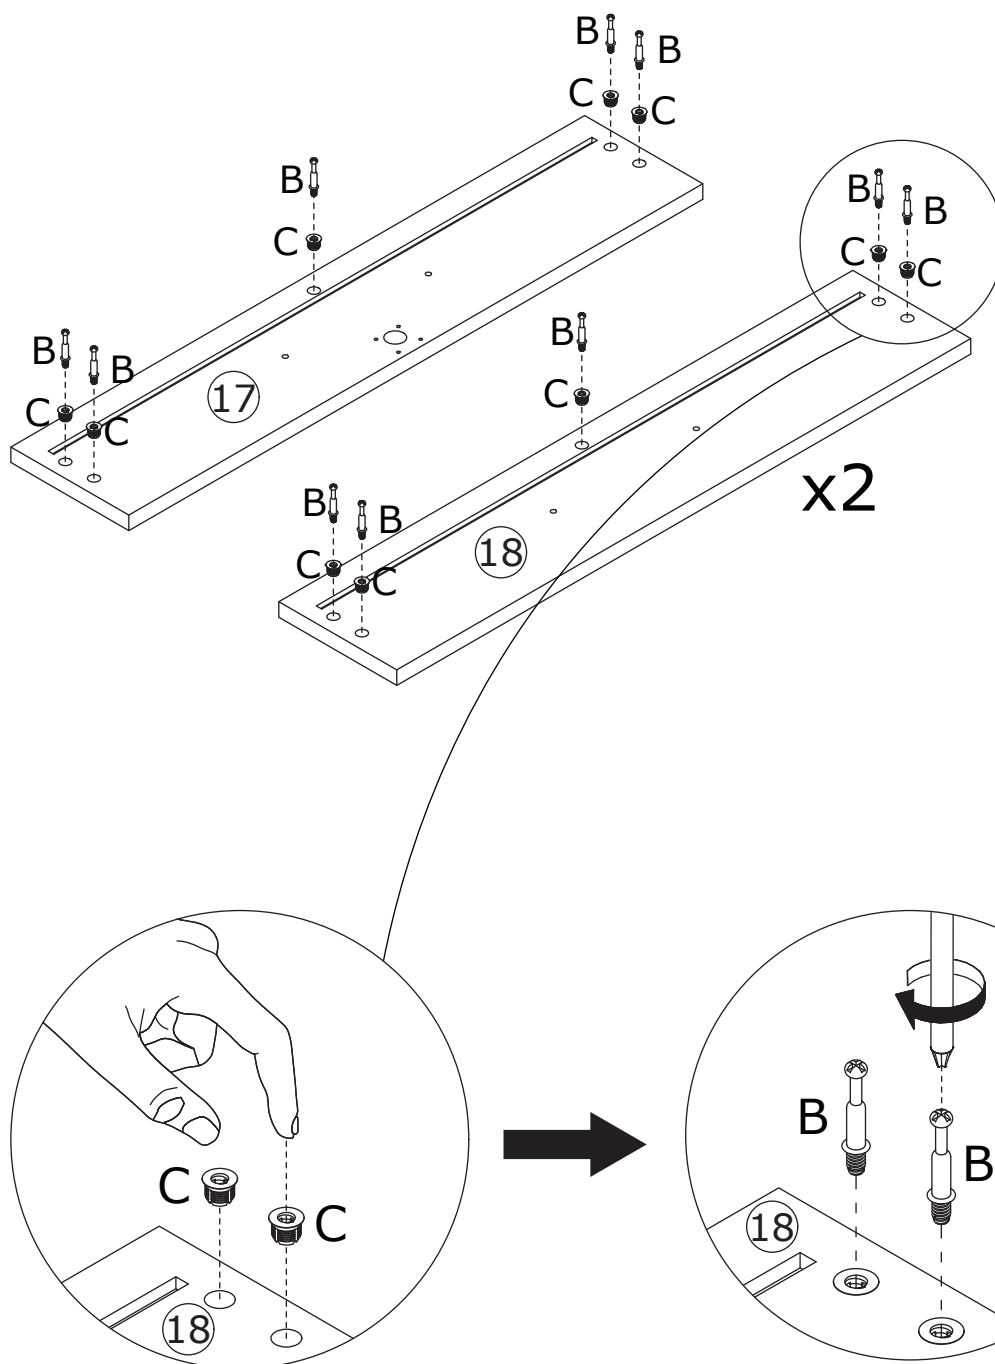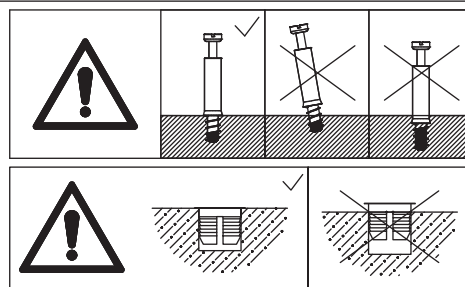

52

 
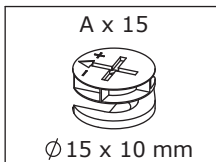 


  Connect panels 19, 20 and 23 to panels 17 and 18, then tighten by turning cam lock (A) clockwise.

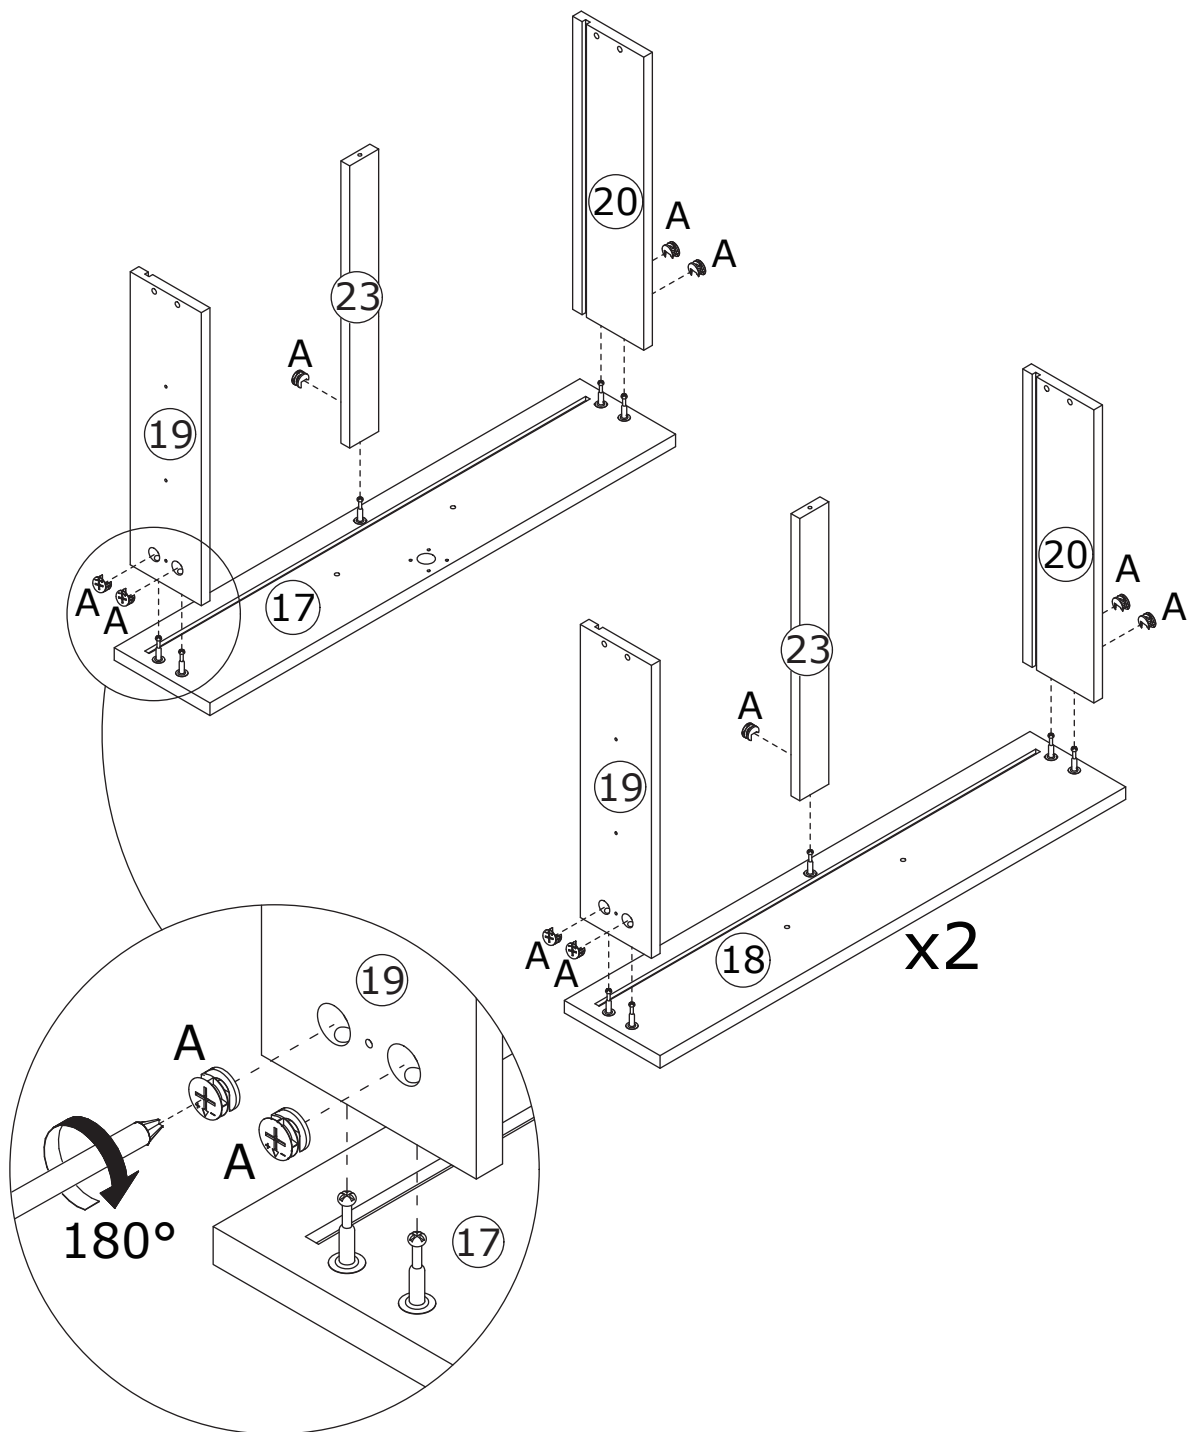
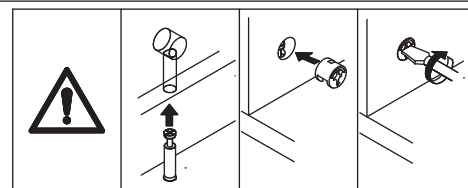


53

  
Insert panel 22 into the available grooves.

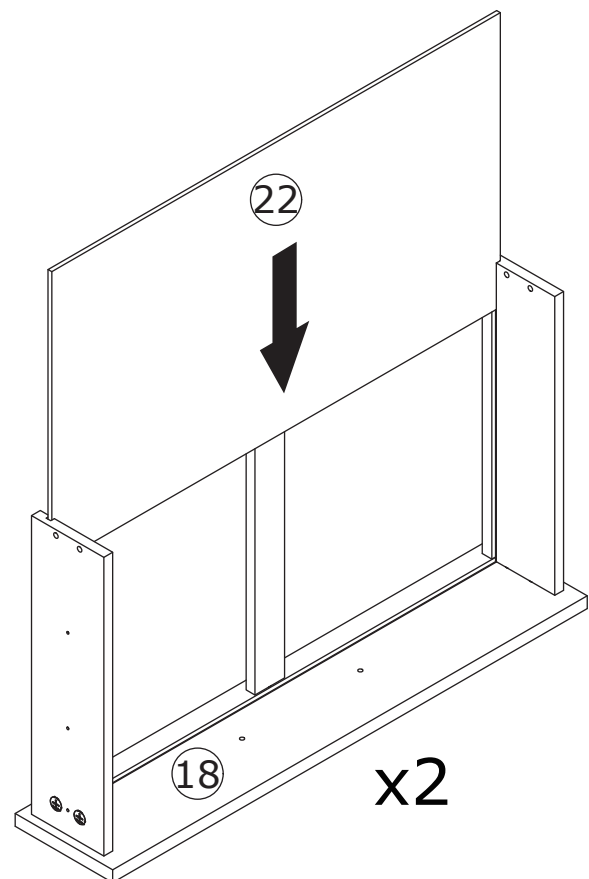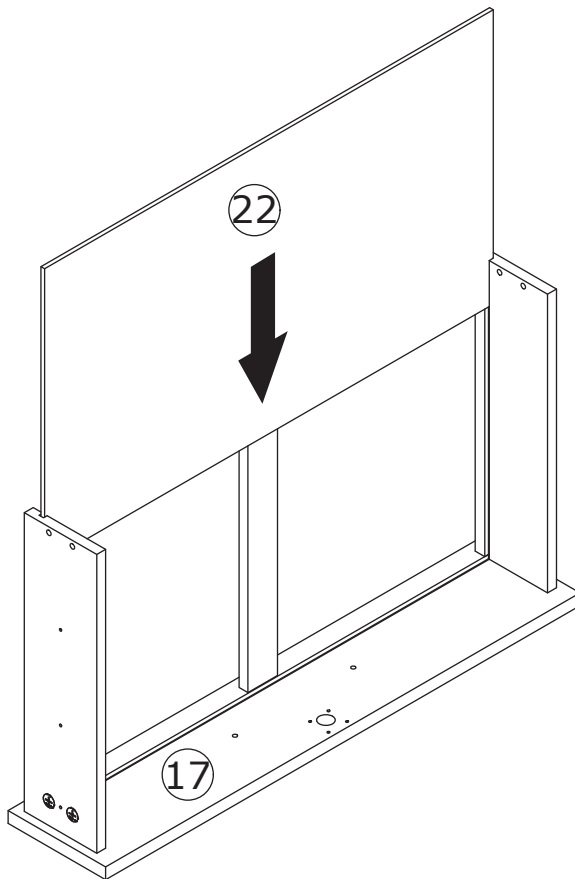


54

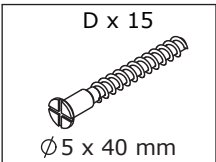  


 
Connect panels 19, 20, and 23 to panel 21 using screw (D).

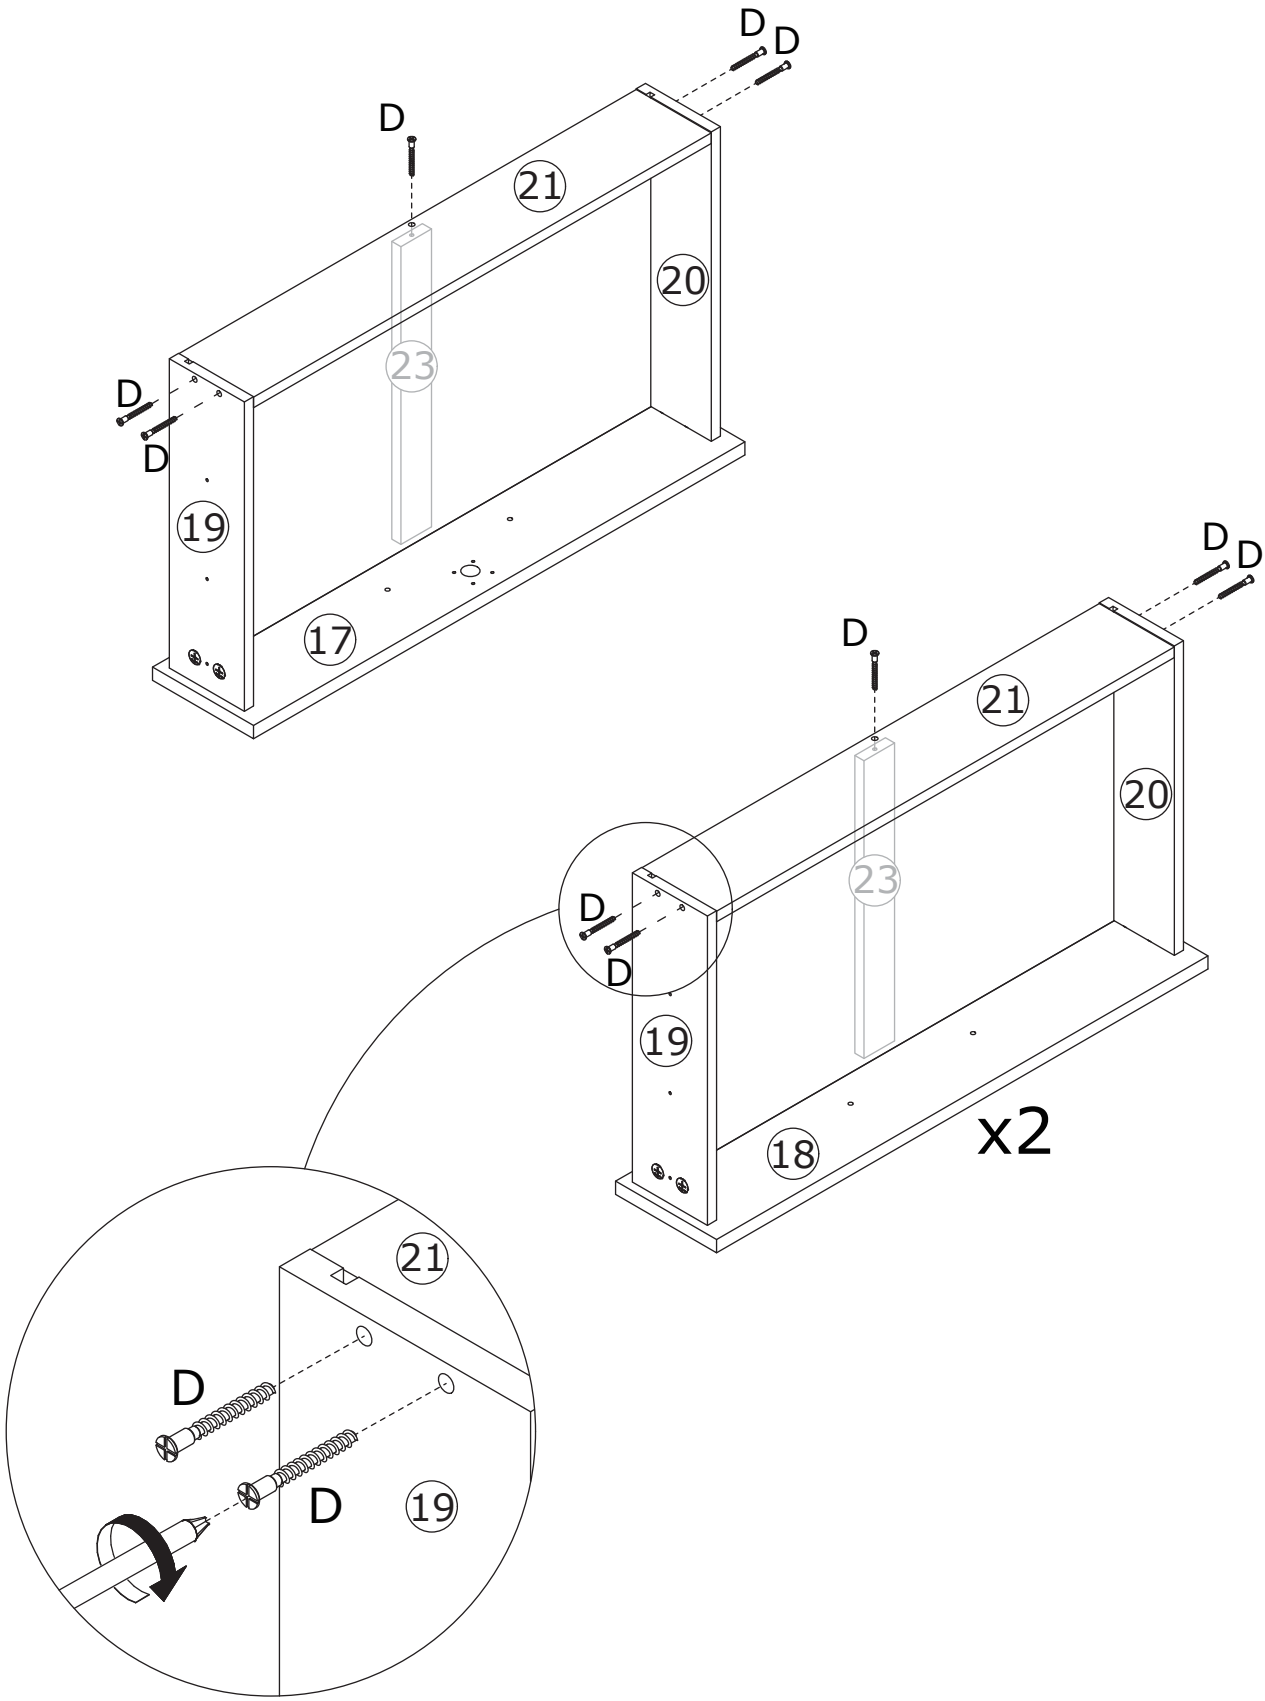

55

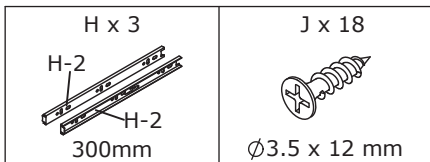 

  
Secure slide rail (H-2) to panel 19 and 20 using screw (J).

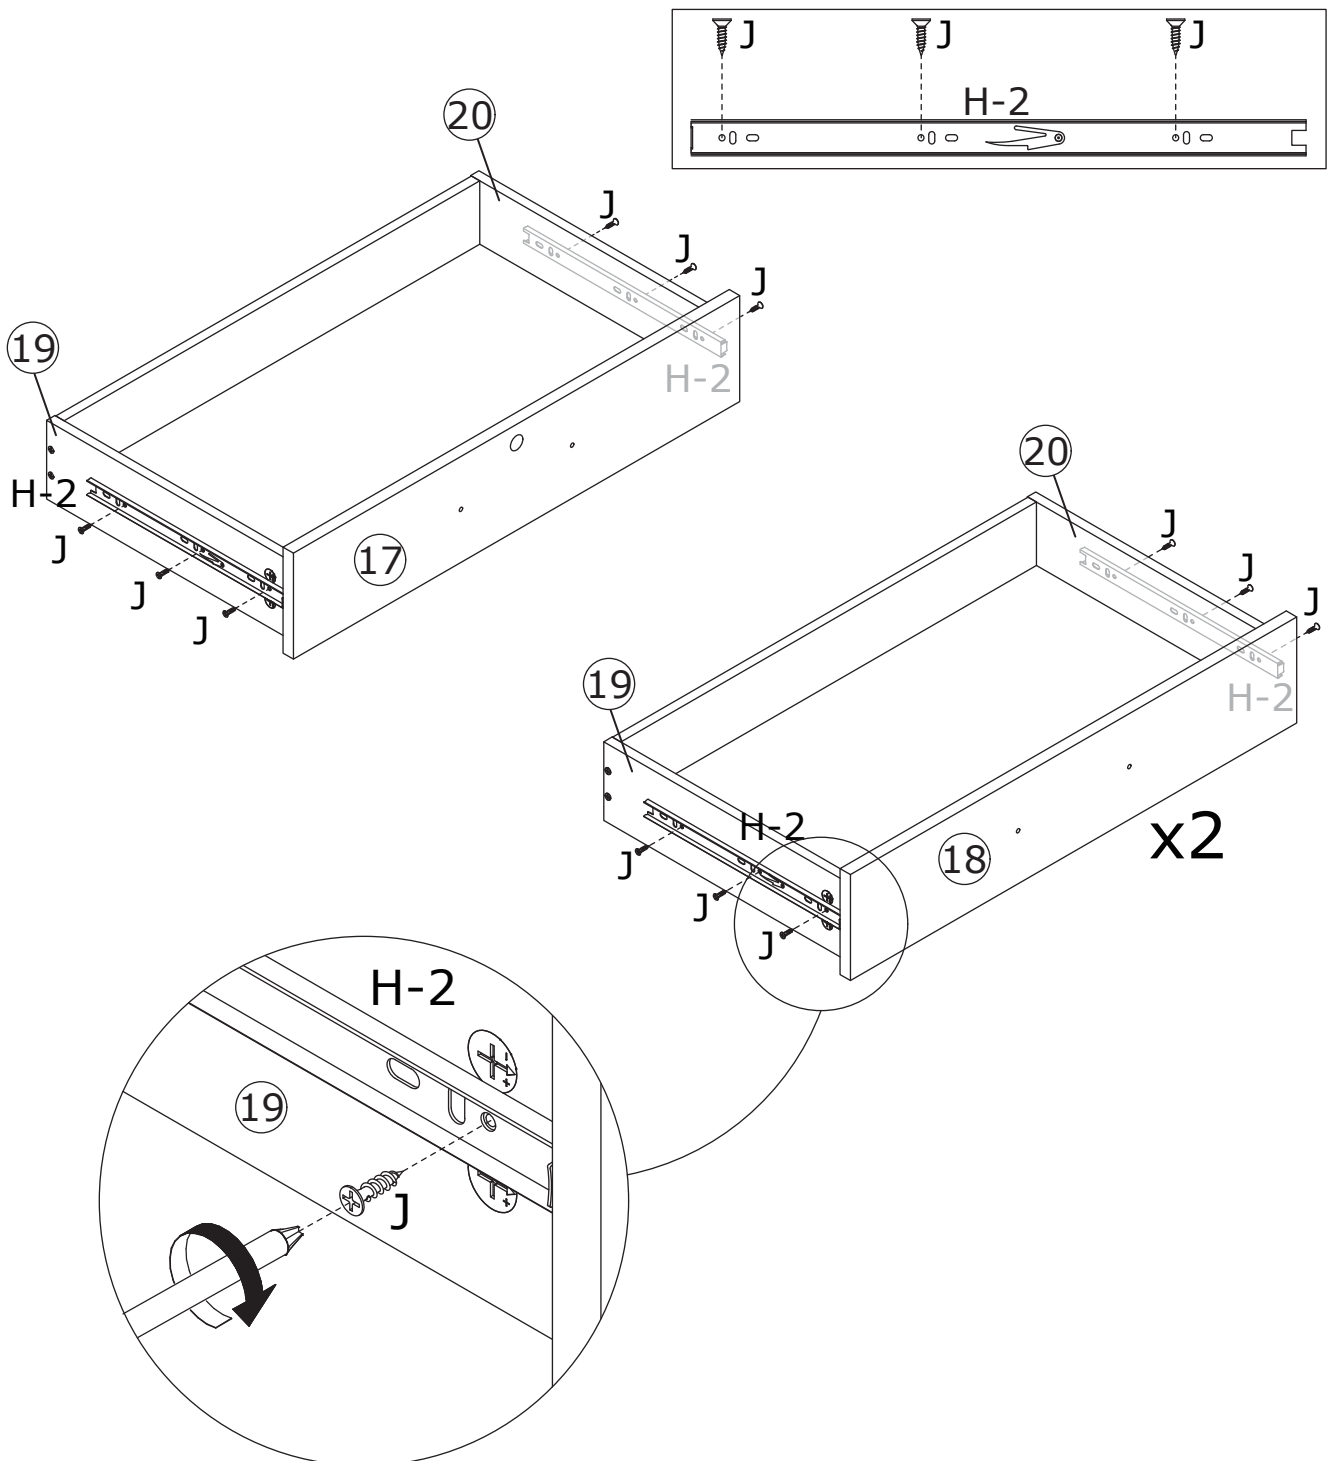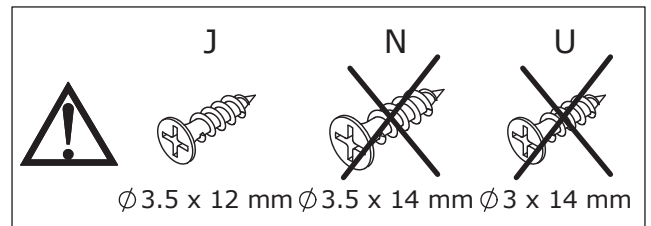



56






 
Secure handle (F) to panel 17 and 18 using screw (G).

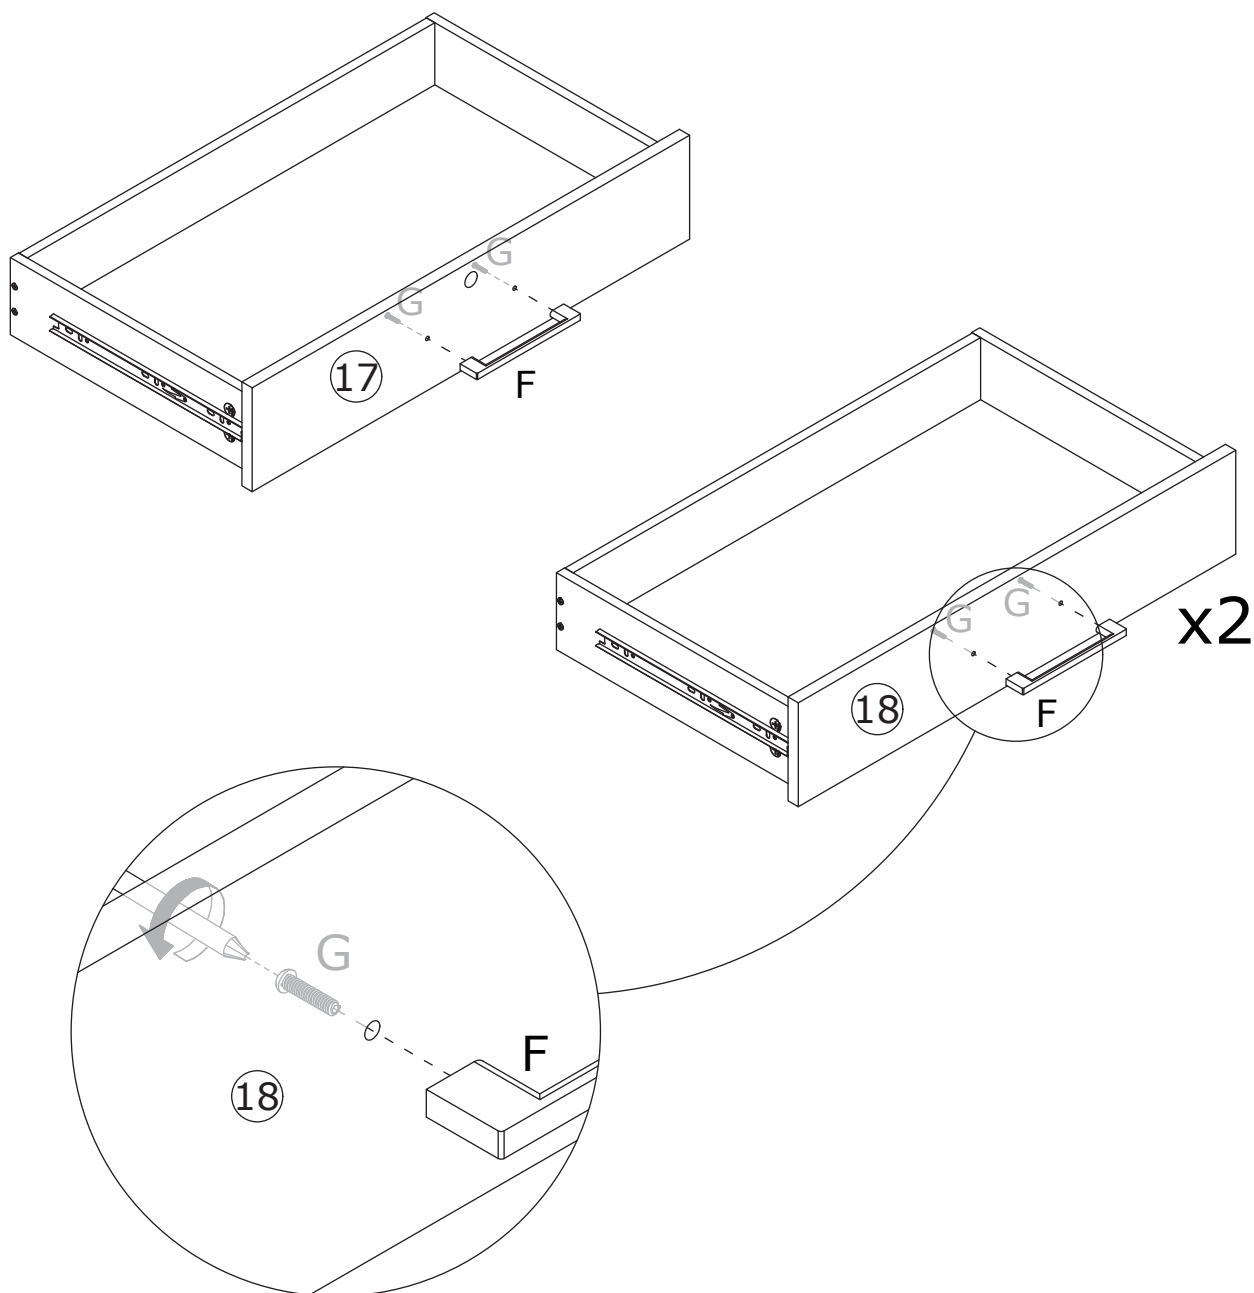


57

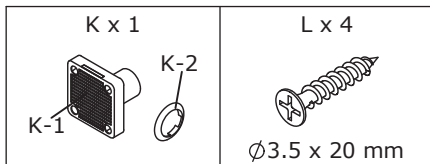  

    First install part (K-1) onto panel 17 using screw (L).
Then install part (K-2) onto part (K-1).

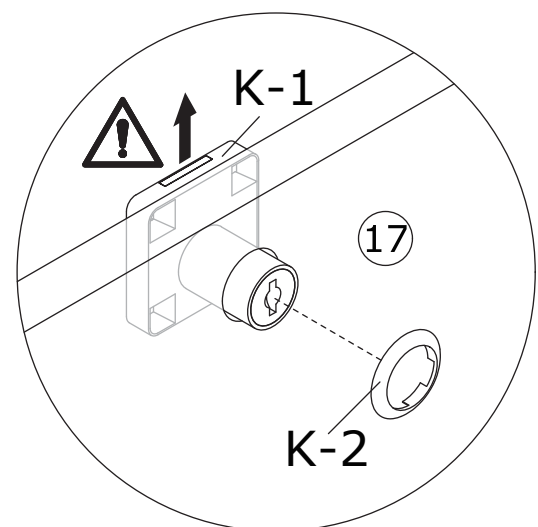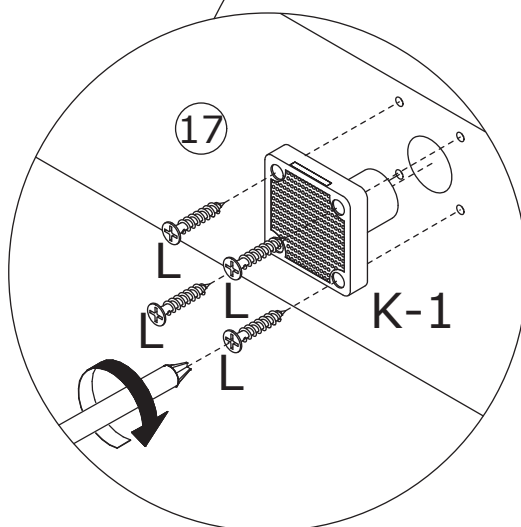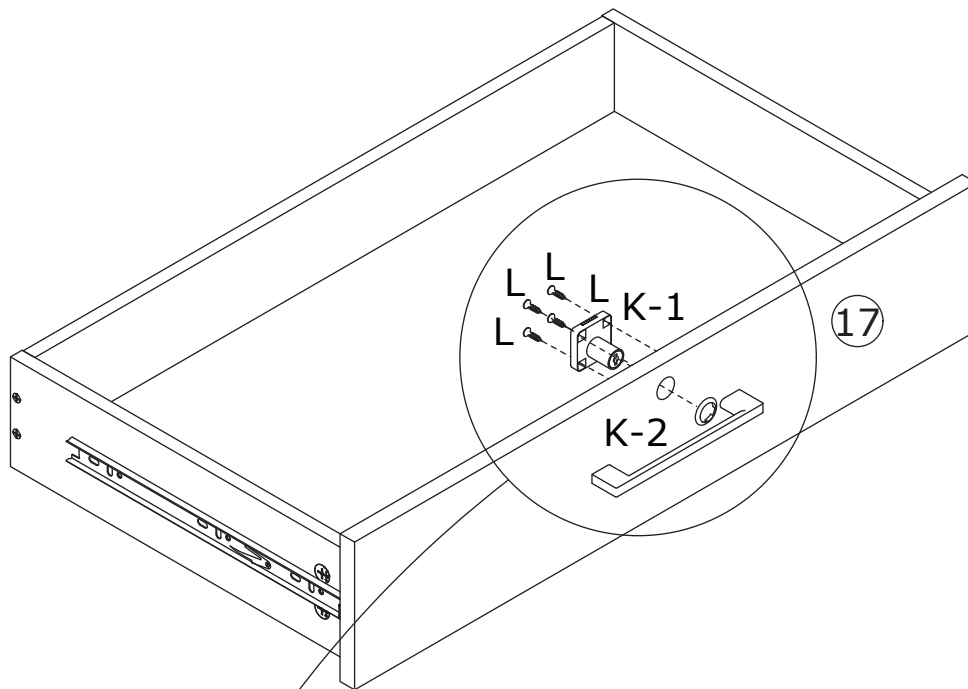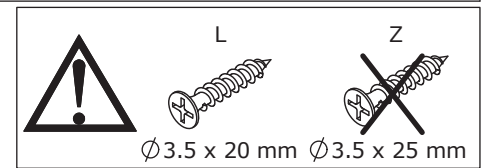

 Assemble the drawers onto the main body.



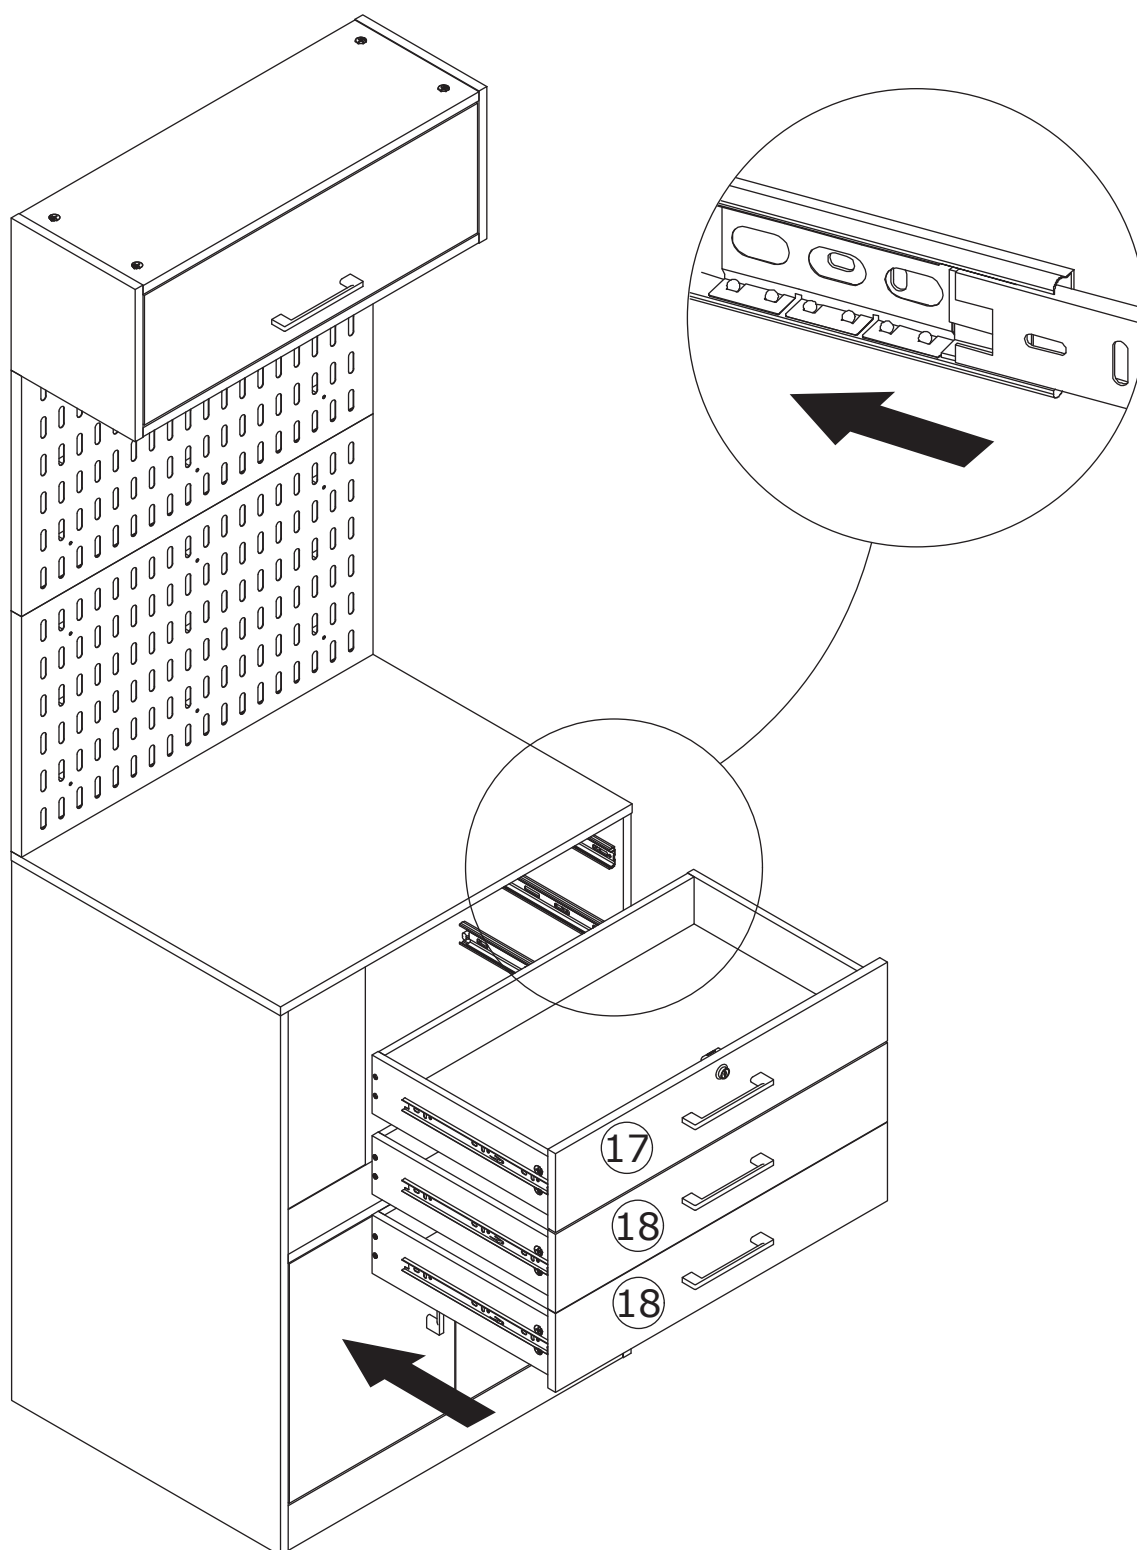



59

K x 1



    Turn key (K-3) clockwise to lock panel 17.

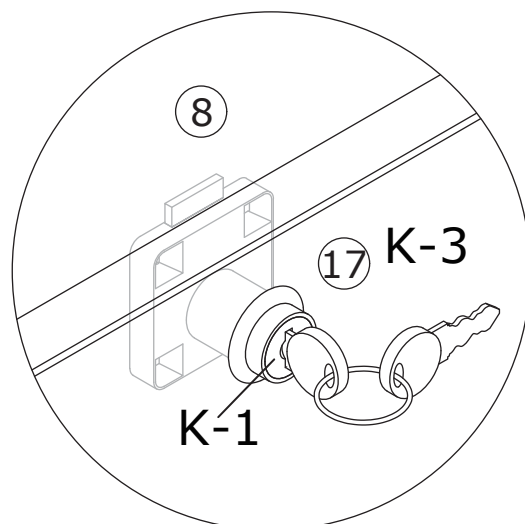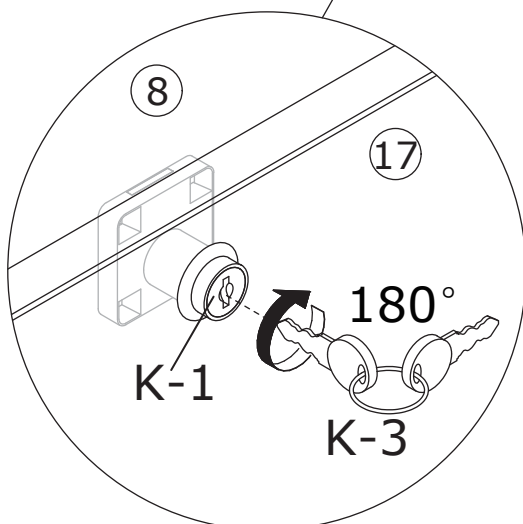
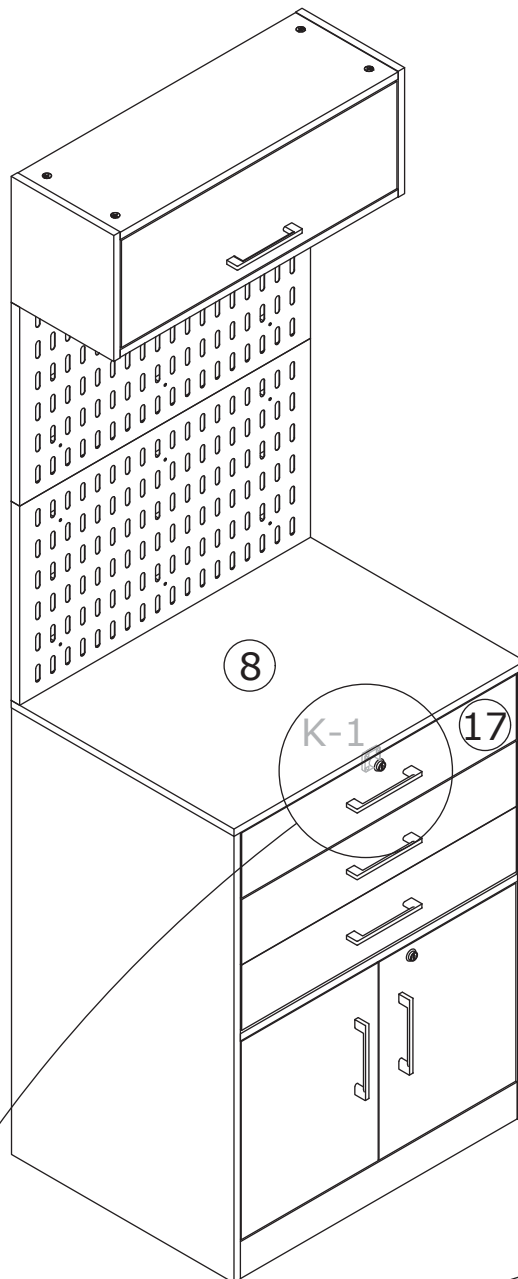





If the door panels are not aligned, please adjust the screws on the hinges according to the illustration.

Or you can search this link to view the teaching video.

  
<https://youtu.be/n0Lb36SoODM>

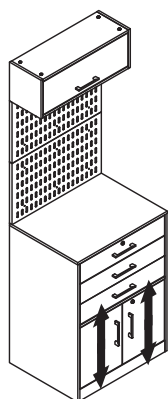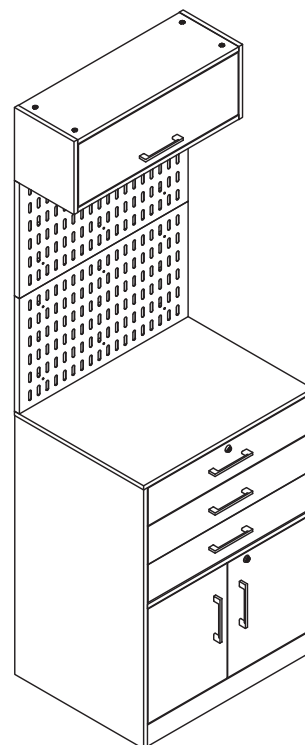



I

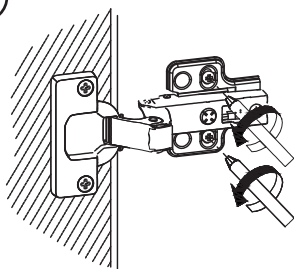 


II

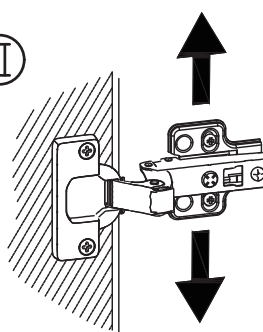 


III

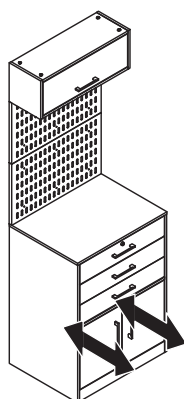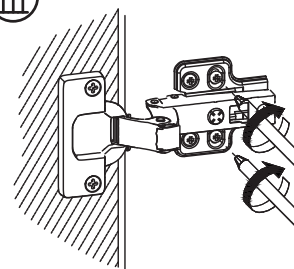  



I

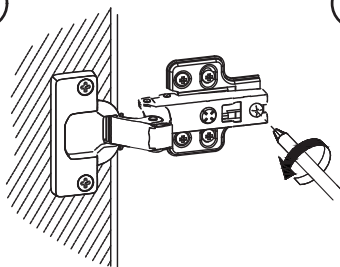 


II

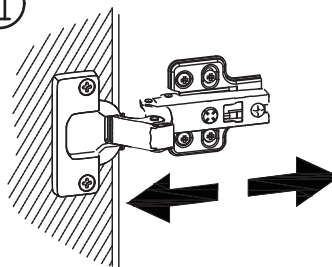 


III

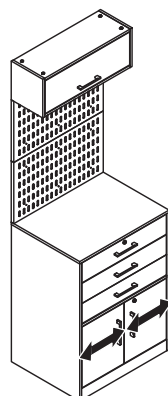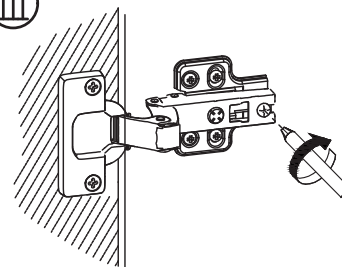  

I

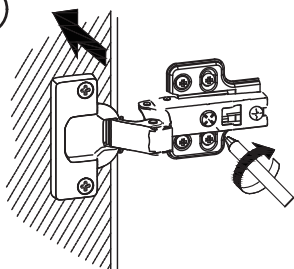 

II

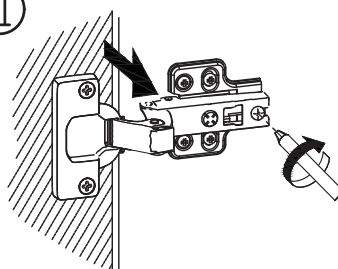 

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068