

Assembly Manual


Ax1



Bx1



 
Cx4



Dx1



1

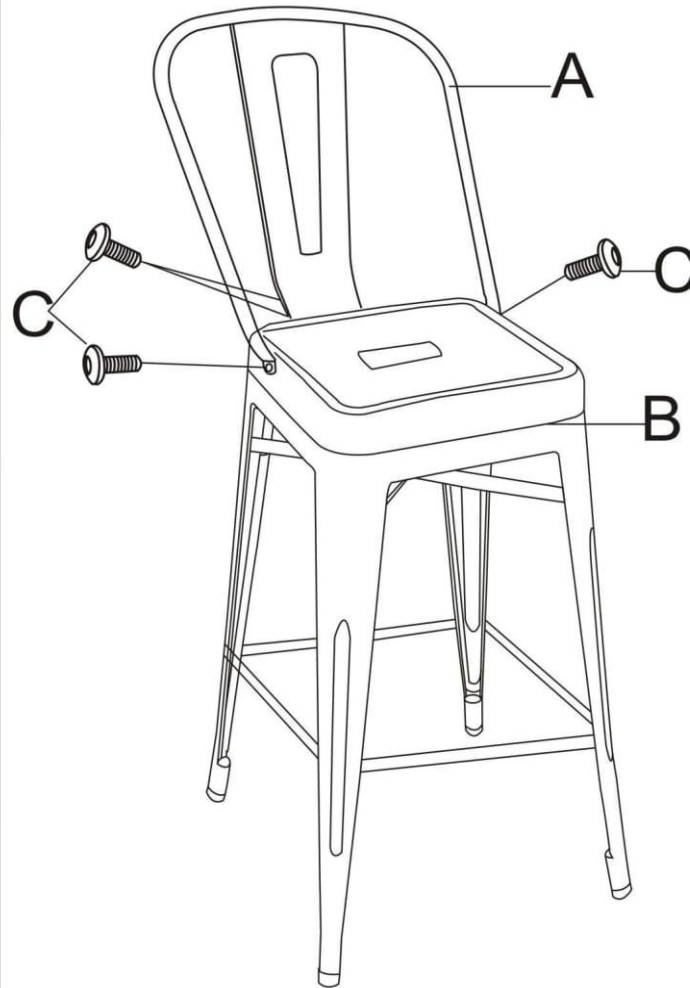

2

