



INSTALLATION INSTRUCTION

1

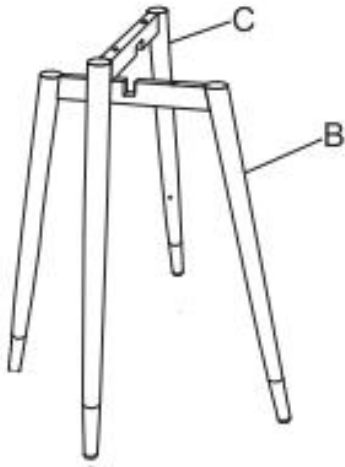


Fit the notches at B and C evenly and securely.

2

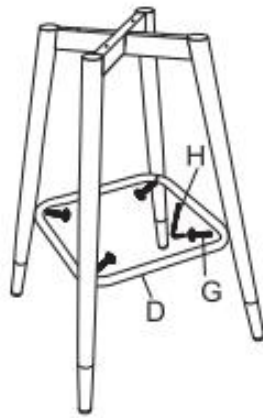


Secure Part D to B and C with four screws G, then tighten firmly.

3

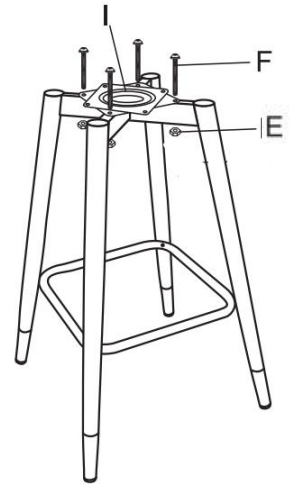

Install rotating plate I on stand BC and secure it with screw F and nut E.

4

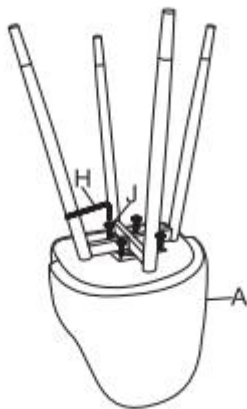

Secure seat cushion A to rotating plate I with four screws J, then tighten firmly.

5



The bottom of the chair legs is equipped with adjustable foot pads, which are used to adjust the balance among the four chair legs.

A



x1

B



x1

C



x1

D



x1

E



x4

F



x4

G



x4

H



x1

I



x1

J



x4