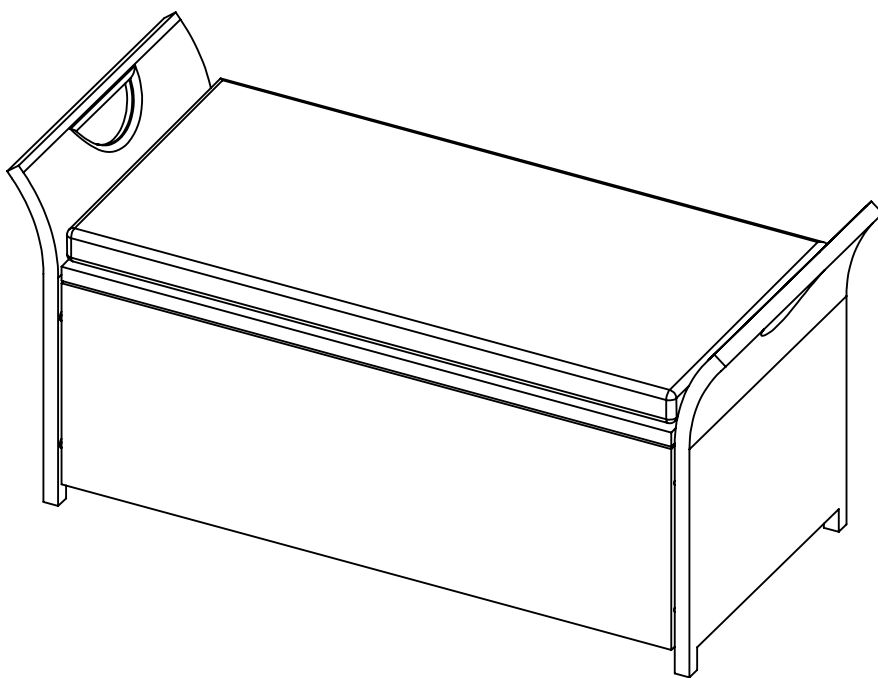


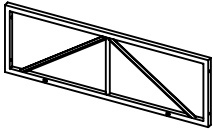
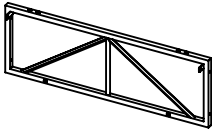

 
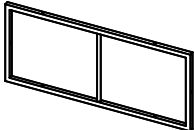
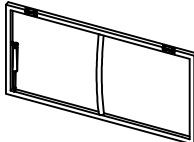

 



Outdoor Wicker Storage Bench




Read the instructions before use of this product.

Please keep this instruction manual for future reference.



 
PARTS & HARDWARE LIST

PART	FIGURE	DESCRIPTION	QTY
A		Front Panel	1
B		Back Panel	1
C		Right Panel	1
D		Left Panel	1
E		Bottom Panel	1
F		Top Panel and Hinge Support	1
G		Bolt	4
H		Cushion	1
I		M6*40 Bolt	14
J		Washer	14
N		Allen Key	1

PARTS & HARDWARE LIST

PART	FIGURE	DESCRIPTION	QTY
O		Wrench	1

EXTRA PARTS

PART	FIGURE	DESCRIPTION	QTY
G		Bolt	1
I		M6*40 Bolt	1
J		Washer	1





ATTENTION:



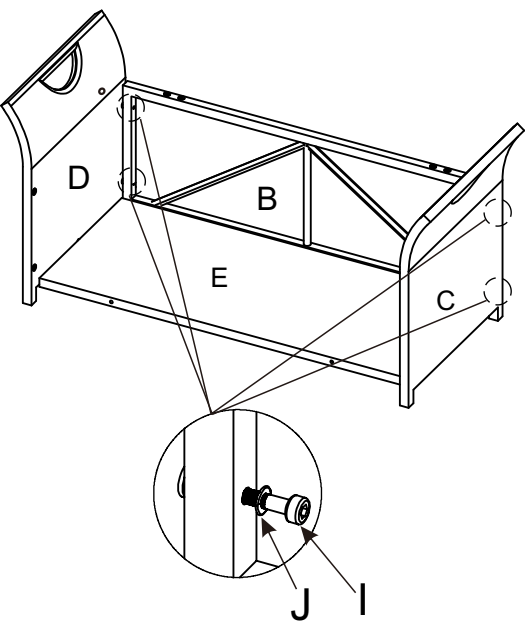


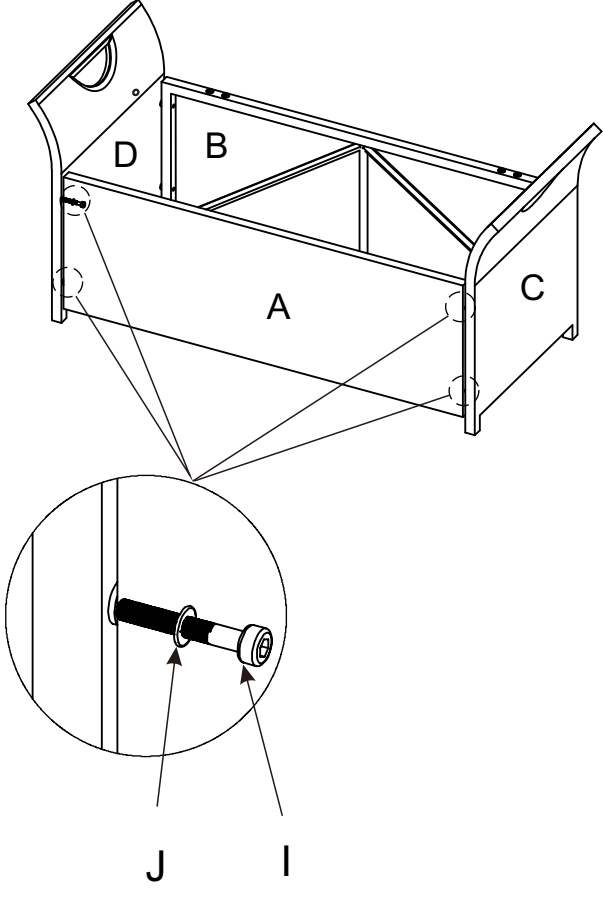
Keep children away during assembly. This item contains small parts that can be dangerous for children. Children should always be under direct adult supervision while using this product.



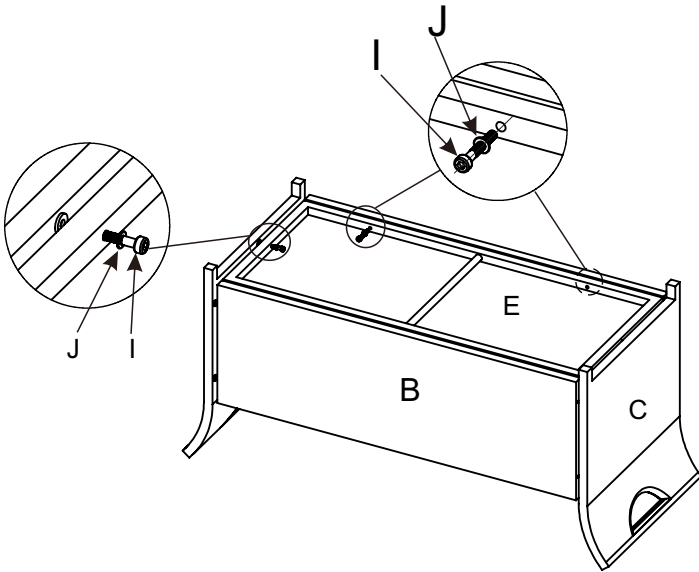

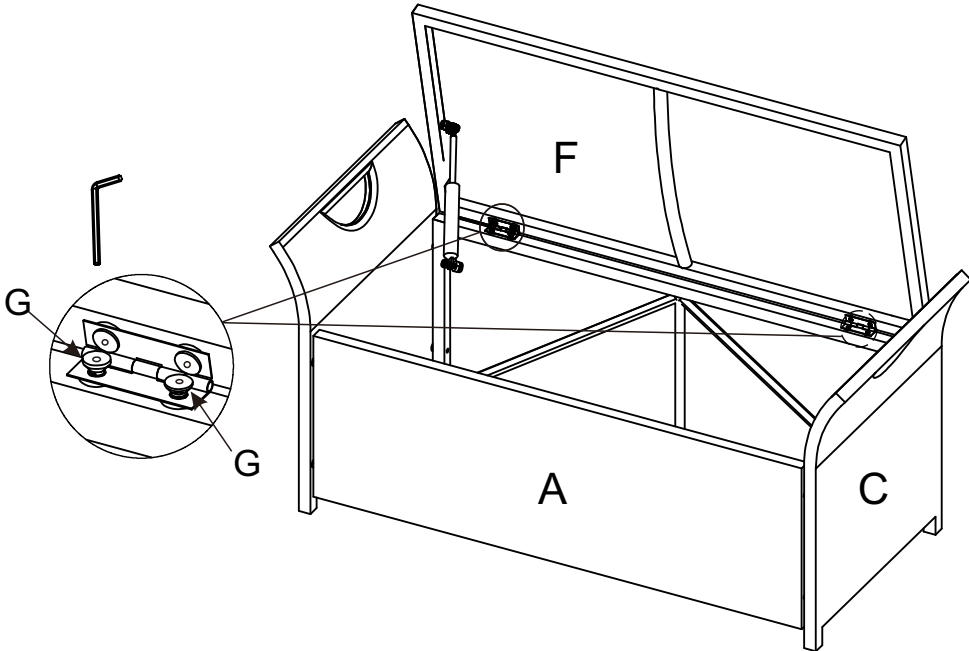
Do not discard any of the packaging until you have checked that you have all of the parts and fittings required.

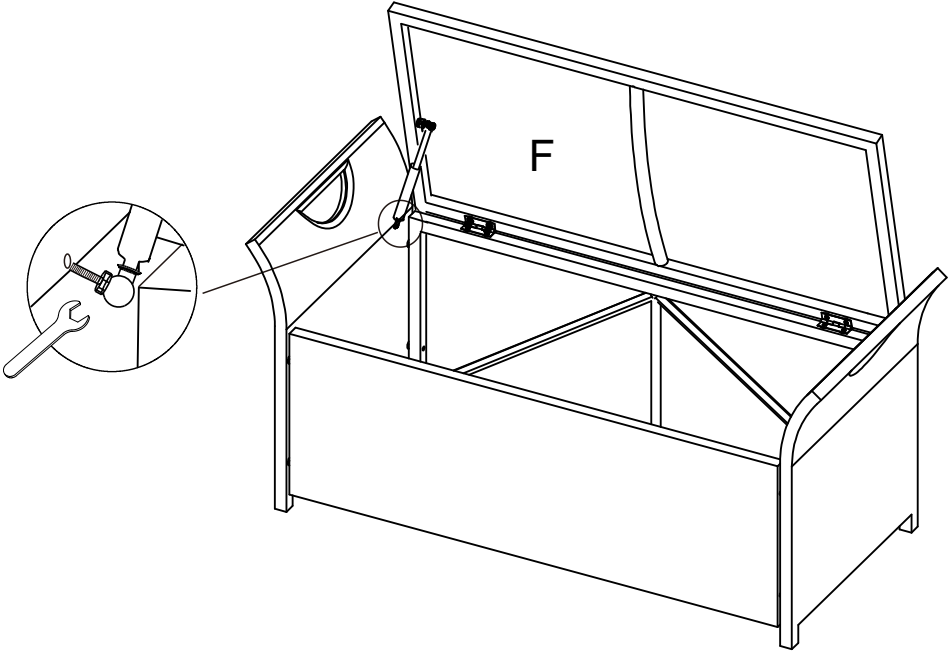

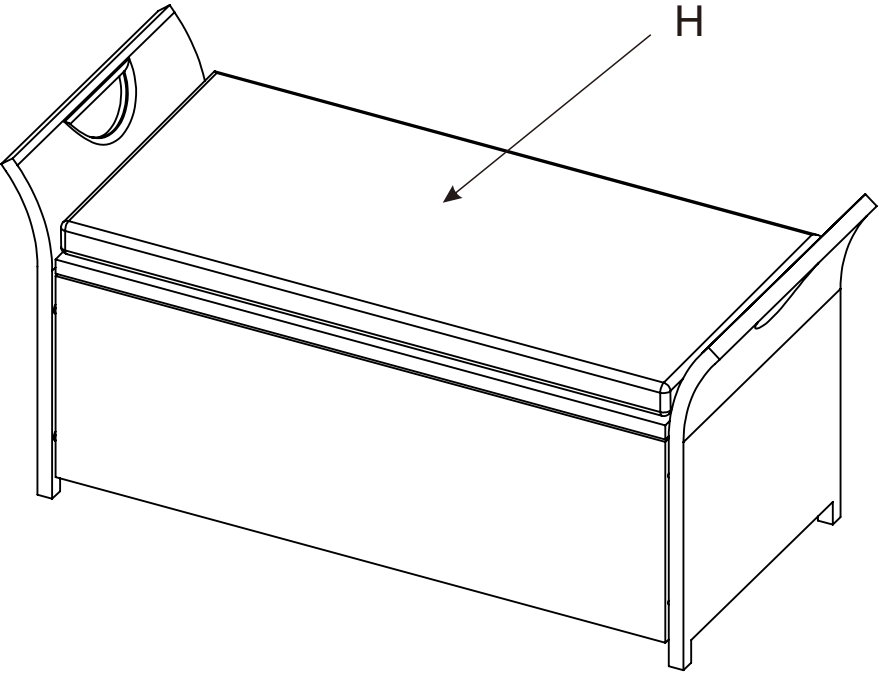
Carefully remove the contents from the package. If any parts are missing, do not attempt to use the product until they have been obtained.

Make sure that each bolt needed for all steps matches the corresponding figure to ensure proper assembly.

<div data-bbox="196 114 336 159" data-label="Section-Header"> <h1>STEP 1</h1> </div> <div data-bbox="181 300 373 421" data-label="Text"> <p>I x1 </p> <p>J x1 </p> </div>	<div data-bbox="443 103 1508 181" data-label="Text"> <p>Attach Right Panel (C) to Bottom Panel (E) using Bolts (I) and Washers (J). Hand tighten only.</p> </div> <div data-bbox="592 282 1378 804" data-label="Image"> </div>
<div data-bbox="188 945 331 990" data-label="Section-Header"> <h1>STEP 2</h1> </div> <div data-bbox="181 1097 389 1218" data-label="Text"> <p>I x2 </p> <p>J x2 </p> </div>	<div data-bbox="451 916 1465 1010" data-label="Text"> <p>Attach Back Panel (B) to Bottom Panel using Bolts (I) and Washers (J). Hand tighten only.</p> </div> <div data-bbox="494 1214 1461 1756" data-label="Image"> </div>

<p>STEP 3</p>	<p>Attach Left Panel (D) to Back Panel (B) using Bolts (I) and Washers (J). Hand tighten only.</p>
<p>I x4 </p> <p>J x4 </p>	
<p>STEP 4</p>	<p>Attach Front Panel (A) to Bottom Panel (E) using Bolts (I) and Washers (J). Hand tighten only.</p>
<p>I x4 </p> <p>J x4 </p>	

<p>STEP 5</p>	<p>Hand tighten the Bolts (I).</p>
<p>I x3 </p> <p>J x3 </p>	
<p>STEP 6</p>	<p>Attach the Top Panel (F) to Back Panel (B) using Bolts (G).</p> <p>Fully tighten all bolts using Allen Key.</p>
<p>G x4 </p>	

<p>STEP 7</p>	<p>Please fully tighten hinge support using Wrench(O).</p>
	
<p>STEP 8</p>	<p>Place cushion (H). Now please enjoy your new Wicker Storage Bench.</p>
<p>H x 1 </p>	

Cleaning and Maintenance

Clean frame with mild soapy water, rinse thoroughly. Dry frame parts completely. Do not use bleach, acid, or other solvents on the fabric and metal parts.

We recommend the use of furniture covers to protect the Wicker Storage Bench when not in use.

Inspect and tighten all bolts on a regular basis to ensure proper performance and safety.

In order to prolong the life and beauty of your Wicker Storage Bench, we recommend storing it in a dry and protective area during off season periods.