



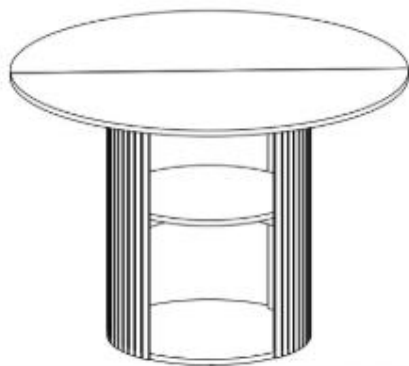

Ax2	Bx1	Cx4	Dx1	Ex4	Fx1	Gx1
Hx2	Ix20 6x14mm	Jx4 8x30mm	Kx8 6x30mm	Lx6	Mx6	Nx1
SPARE(Ersatzteile)						
Ix1 6x14mm	Jx1 8x30mm	Kx1 6x30mm	Lx1			


Step1

M		6
---	--	---

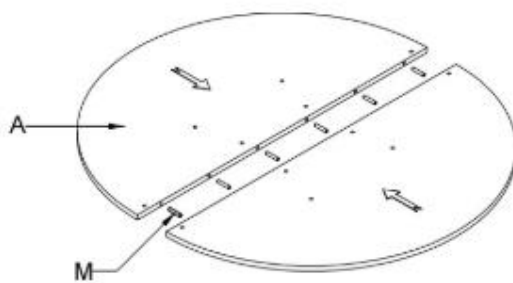


Step2

E		4
I		8
N		1

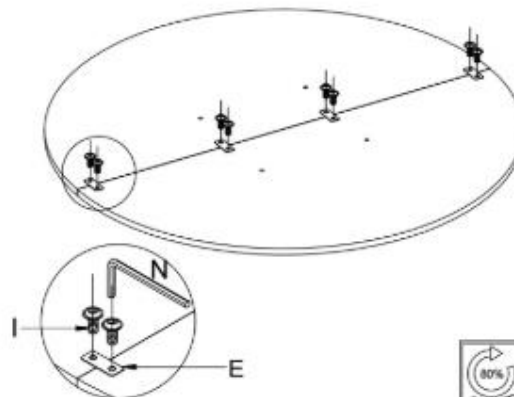


Step3

J		4
N		1

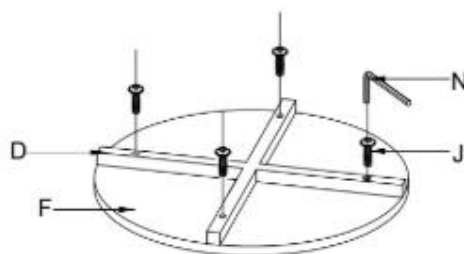


I		12
N		1

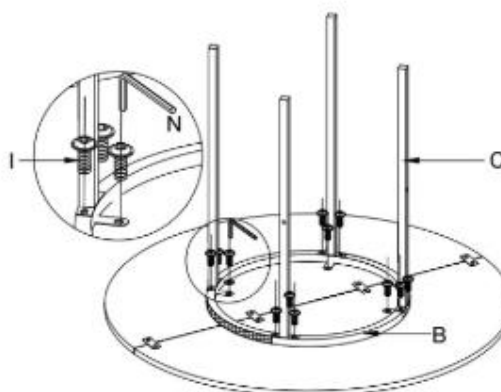


Step4

K	8x30mm	4
N	N	1

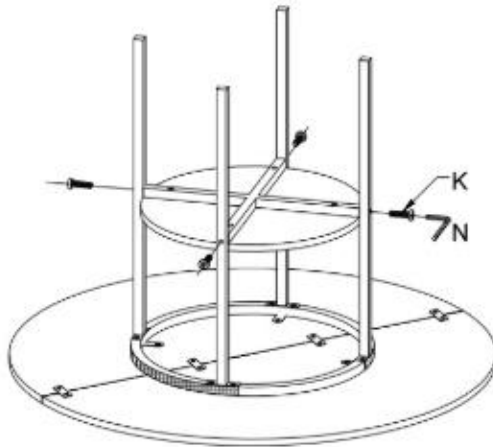

Step5

K	8x30mm	12
N	N	1

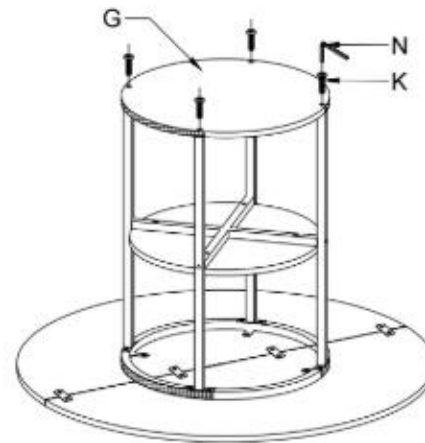

Step6

L	L	6
---	---	---

