


SPORTSPOWER™

Grand Mesa Wooden Play Set

Style # (WP-637)

OWNER'S MANUAL

ASSEMBLY, INSTALLATION, CARE, MAINTENANCE AND USER INSTRUCTIONS

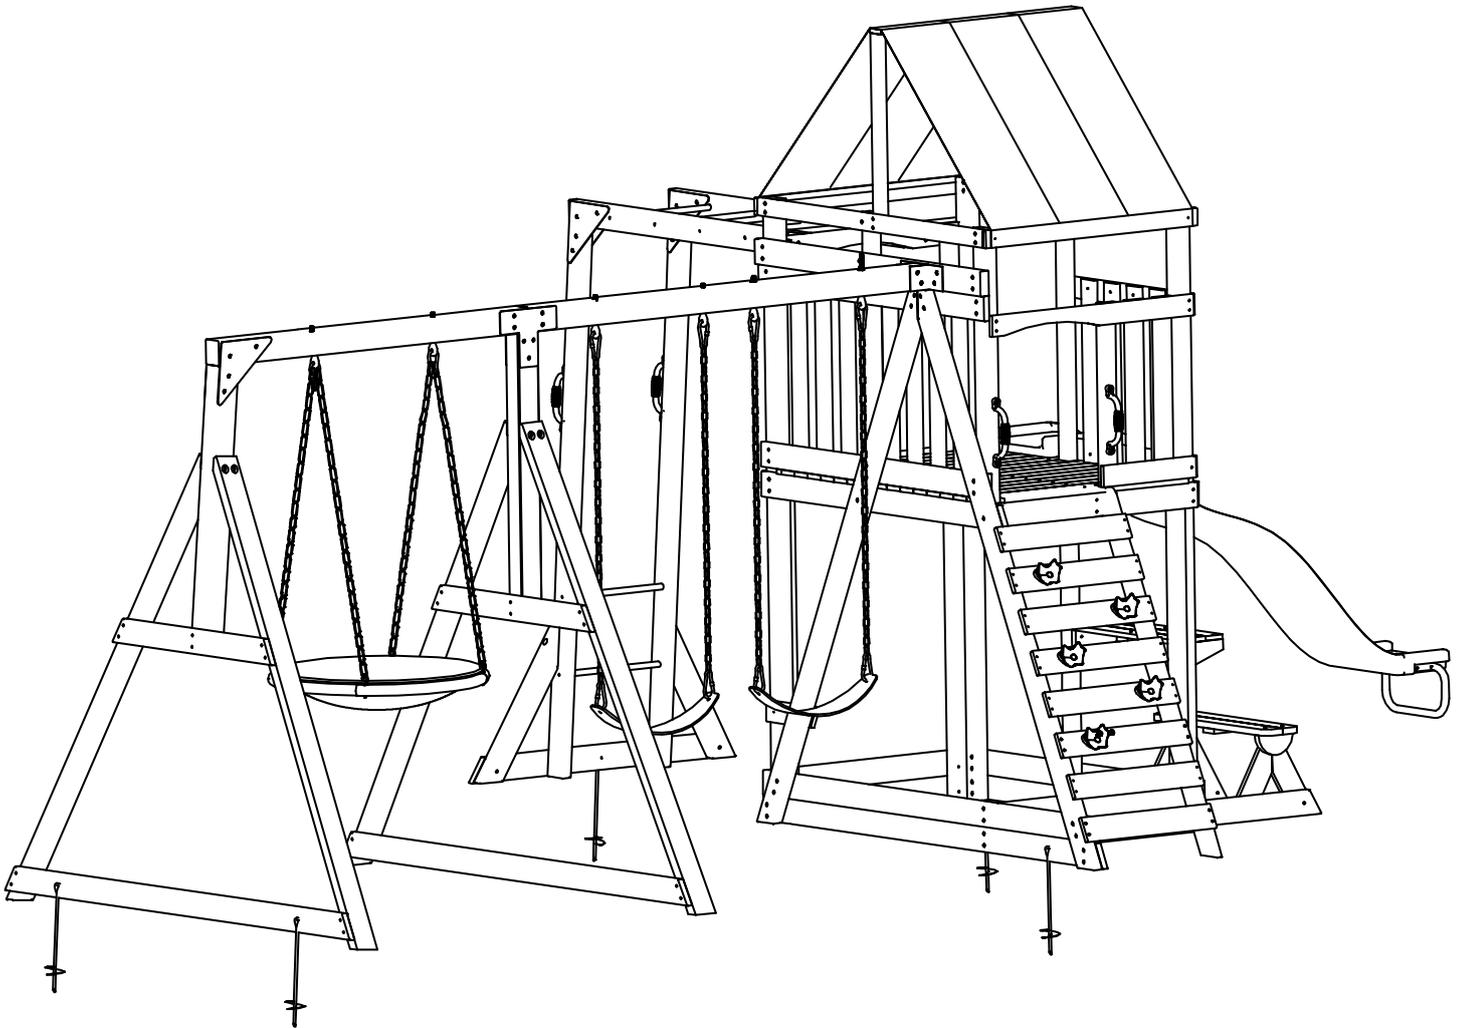

⚠ WARNING ⚠

**CHOKING HAZARD - Small parts.
Not for children under 3 years.**

**FOR RESIDENTIAL USE ONLY
ASSEMBLY REQUIRES AT LEAST FOUR ADULTS**

DO NOT RETURN TO THE STORE

For Customer Service, please call 1-866-370-2131 or visit www.sportspowerltd.net

Monday – Friday 9:00 AM – 5:00 PM Eastern Time

Sportspower Limited

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong

Dear Valued Customer,

Congratulations on your wood swing set purchase! Please read and completely understand the contents of this owner's manual. This manual contains specific instructions that must be followed to prevent injuries.

This equipment is for residential use only. This swing set is NOT intended for public or commercial use. The warranty will be voided if the swing set is used in a commercial application.

The product was designed to be used by children between the ages of 3-10. Children must NOT play on this set until it is properly assembled and inspected by an adult. Adult supervision is required at all times while children are playing on the equipment. Do not allow children under six (6) years old to be near during the assembly of this product due to choking hazards of small parts.

The equipment must be installed on level ground. Uneven ground must be leveled prior to installation. Installation on sloping or uneven ground will put stress on the joints, causing the unit to become loose and unstable which may result in serious injuries. You must ensure there are no obstructions or structures (e.g. electrical wires, branches, house, fence, garage, etc) within six (6) feet in any direction from the equipment.

The U.S. Consumer Product Safety Commission's Outdoor Home Playground Safety Handbook recommends to install and maintain the playground equipment over at least 9 inches of wood chips, mulch or shredded rubber (for equipment up to 8 feet high) or sand or pea gravel (for equipment no more than 5 feet high) as shock absorbing material. Dirt and grass, which are the most prevalent surfaces under home playground equipment, do not adequately protect children from serious head injuries. Install protective surfacing at least six feet in all directions from play equipment. For swings, the surface should extend, in back and front, twice the height of the suspending bar. Do not install your swing set over hard surface, e.g. asphalt, concrete, packed earth, tile or brick floor. Do not allow children to use the product during windy or wet weather conditions. You should consult a local licensed contractor about ways to anchor the product in your location.

Please thoroughly read and follow the instructions in this Owner's Manual to ensure proper and enjoyable play for your children. The equipment must be checked before each use and maintained regularly. This includes, but is not limited to inspecting the swing set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness or damage, you must stop using the wing set immediately, properly store the set or restrict access by users until the condition is resolved.

Your product is warranted against defects in material and workmanship. Extended warranty is also offered to those customers registering their products at www.sportspowerltd.net within 14 days from the date of purchase. Please refer to our warranty policy at the back of this manual for details.

If you experience any problems with your product, do not return to the store. For customer service, please call 1-866-370-2131 Monday-Friday 9:00am-5:00pm Eastern Time or visit www.sportspowerltd.net

TABLE OF CONTENTS

IMPORTANT WARNINGS AND INSTRUCTIONS 3

IMPORTANT CONSUMER INFORMATION SHEET 8

GROUND COVER INFORMATION 13

COMPLETE PRODUCT VIEW 14

TOOLS NEEDED 15

WOOD PARTS LIST..... 16

HARDWARE PARTS LIST 19

COMPONENT PARTS LIST 20

HARDWARE PRE-ASSEMBLE 21

ASSEMBLY AND INSTALLATION INSTRUCTIONS 22

 AREA OF INSTALLATION – PLAYHOUSE 22

 AREA OF INSTALLATION – THE SWING SUPPORT BEAM 43

 AREA OF INSTALLATION – SWING 47

 AREA OF INSTALLATION – HANDLE 50

 AREA OF INSTALLATION – SLIDE 50

PRODUCT WARRANTY 52

IMPORTANT WARNINGS AND INSTRUCTIONS

BEFORE YOU BEGIN: Carefully read all instructions in this manual before assembling and using this product. The unit must be assembled by adults. Heavy duty working gloves must be worn to avoid injuries during assembly.



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLING OR USING THIS EQUIPMENT

AGE LIMIT

- This product is designed to be used by up to ten (10) children between the ages of 3 to 10. Maximum individual user weight is 100 pounds (45kg) each with a combined maximum weight of 1000 pounds (450kg.)
- The play set is designed for children over three (3) years of age. Use by smaller children can result in entrapment and serious injury.
- On-site adult supervision is required at all times for children of all ages.
- Do not allow use by children with any physical condition that may affect his/her ability to use this equipment safely.

IMPORTANT:

- Children must NOT play on this set until it is properly assembled and inspected by an adult.
- The Wood Play Set must be properly installed and anchored BEFORE children can play on the Wooden Swing Set.
- You MUST read and follow all instructions in this manual before installing or attempting to use the Wooden Swing Set.

Failure to follow these important requirements may result in the warranty being voided and/or serious injury. Please supervise your children carefully during the installation and assembly of the Wood Play set.

Please also pay close attention to the periodic maintenance that is required to keep you Wood Play Set in a safe condition for maximum enjoyment of backyard fun!

IMPORTANT WARNINGS AND INSTRUCTIONS



BEFORE YOU BEGIN ASSEMBLY:

- Take a complete inventory of components using the parts list.
- Sort and lay out the wood pieces. Label each piece of wood for easy reference. For easy identification during the assembly process, write the board's letter on masking tape and adhere to each piece of the wood. Some wooden components may twist or warp in the carton after packaging. Usually, these parts straighten out when assembled. You may also see some cracking of the grain. This is normal.
- Sort all hardware according to size. Do not worry if extra hardware is included.

Find a safe play location.

- You **MUST** install the Wooden Swing Set on level ground. Uneven ground must be leveled prior to installation. The manufacturer cannot assume responsibility for any failure from incorrect installation. Installing on sloping ground will put stress on all the joints, which will cause the set to become loose and unstable.
- Find a location where the equipment can be placed more than 6 feet from any structure or obstruction (ex: electrical wires, branches, house, fence, garage) The safe play area refers to a zone extending 6' beyond the gym set on all sides, including the space above the gym set.
- The safe play area must be free of all structures, landscaping, trees and branches, rocks, wires and other obstacles to safe play. Children can be seriously injured running or swinging into these obstacles.
- Remove any rocks or any jagged or sharp object that could endanger your children's safety.
- Remove all tripping hazards from the safe play area. Tripping hazards include but are not limited to: roots, stumps, rocks, landscaping, sprinkler heads, railroad ties, plumbing, and electrical connections.
- Do **NOT** install your swing set over gravel, asphalt, packed earth or any other hard surface. The following is a list of recommended ground covers from the Consumer Product Safety Commission.

SUGGESTED MATERIAL	UNCOMPRESSED DEPTH
Double Shredded Bark Mulch	9"
Uniform Wood Chips	12"
Fine Gravel	12"
Fine Sand	12"

IMPORTANT WARNINGS AND INSTRUCTIONS

BEFORE YOU BEGIN: Carefully read all instructions in this manual before assembling and using this product. The unit must be assembled by adults. Heavy duty working gloves must be worn to avoid injuries during assembly.



WARNING

READ ALL INSTRUCTIONS BEFORE ASSEMBLING OR USING THIS EQUIPMENT

Observing the following statements and warnings reduces the likelihood of serious or fatal injury.

PLAY SUPERVISION

- DO NOT allow more than one child to play on the individual swing or slide at the same time.
- DO NOT allow children to stand on the swing seat.
- DO NOT allow children to walk too close to moving parts. ALWAYS keep a safe distance to avoid being struck by other children while playing.
- DO NOT allow children to twist the swing chains or ropes, or loop them over the top support bar as this may reduce the strength of the chain or rope.
- Owners shall be responsible for maintaining the legibility of the warning labels.
- Instruct children not to use the equipment in a manner other than intended.
- DO NOT swing empty seats as this may cause injuries.
- ALWAYS guide children to sit in the center of swinging parts, with their full weight placed in the seat center and holding on to the swing chains.
- DO NOT allow children to jump off the equipment while it is in motion. ALWAYS come to a full stop before dismounting.
- ALWAYS dress children appropriately for playing, e.g. wear well-fitted rubber sole shoes, and remove loose or sharp items such as jewelry, hair accessories, scarves, ponchos that may become entangled in the equipment or cause injuries.
- ALWAYS make sure children remove their bike or other sports helmets before playing on the playground. Helmets can become entrapped in the playground, posing a strangulation hazard.
- DO NOT allow children to climb onto swing or jump to and from different play areas of the equipment. ALWAYS return safely to the ground before approaching another play area.
- DO NOT allow children to climb on structural parts (e.g. legs, top bar). These are structural components and are not designed for play.
- ALWAYS check the slide or other parts exposed to the body for extreme heat from the sun before allowing children to use the equipment.
- ALWAYS prevent access and secure from any unauthorized use when there is no adult supervision.
- DO NOT allow pets or other animals near the equipment to prevent damage or injuries.

IMPORTANT WARNINGS AND INSTRUCTIONS

INSPECTION PRIOR TO EACH USE OR DAILY INSPECTION

- DO NOT use the equipment if any bolts or nuts are missing or loose. ALWAYS check to ensure the equipment and all parts are well secured and stable before each use.
- ALWAYS clear the play area of any rocks, sharp objects, or any materials that could be potentially hazardous to users.
- DO NOT attach items to the equipment that are not specifically designed for use with the equipment, including, but not limited to, jump ropes, clothesline, pet leashes, cables and chains as they may cause choke hazards.
- The wood, steel and plastic parts used in your product are subject to normal wear. Gradual deterioration of the material will occur, the speed of which will depend on the level of exposure to UV rays, airborne pollution, outdoor weather conditions such as rain and wind and the amount of use. You must inspect the equipment prior to every use. This includes, but is not limited to inspecting the set for cracks, excess wear, missing parts, loose connections, and for overall integrity. When the set shows any signs of weakness, you must stop using the play set immediately, properly store the set or restrict access by users until the condition is resolved.
- Verify that the suspended climbing ropes, chain or cable are secured at both ends and tightened, so that there is no loose ropes, chain or cable hanging that can result in choking hazard.

WEATHER CONDITIONS

- DO NOT use this equipment if the swing seat, slide or other parts are wet. Use the swing set only when the parts are clean and dry. If the equipment is wet, the user could slip and suffer injuries.
- Please be aware of weather conditions when using the equipment. If it is too windy, users could lose control and suffer injuries. The playground equipment must be properly anchored, stored away or restricted from use during inclement weather such as heavy winds or severe weather storms. You should consult a local contractor about ways to anchor the product in your location.

DISPOSAL INSTRUCTIONS

- Please use care when disassembling the equipment. Wear heavy duty working gloves to avoid injuries.
- Fully disassemble the entire swing and climber before disposal. Do not leave partially disassembled equipment parts in areas accessible by children.
- All plastic and steel parts could be recycled. Take it to your local recycling center. Do not let children play with any disassembled parts destined for disposal, such as chains, slide, tubing, bolts, nuts, screws, etc.

IMPORTANT WARNINGS AND INSTRUCTIONS

AT THE BEGINNING OF EACH PLAY SEASON:

- Tighten all hardware.
- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.
- Check metal parts for rust. If found, sand and repaint using a nonlead-based paint meeting the requirements of 16 CFR 1303.
- Check all wood members for deterioration and splinters. Sand down splinters and replace deteriorating wood members.
- Reinstall any plastic parts, such as swing seats or any other items that were removed for the cold season.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

TWICE A MONTH DURING PLAY SEASON:

- Tighten all hardware.
- Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

ONCE A MONTH DURING PLAY SEASON:

- Lubricate all metallic moving parts per manufacturer's instructions.
- Check all moving parts including swing seats, ropes, cables, and chains for wear, rust, or other deterioration. Replace as needed.

At the end of each play season or when the temperature drops below 32°F (temperature to be selected by the manufacturer):

- Remove plastic swing seats and other items as specified by the manufacturer and take indoors or do not use.
- Rake and check depth of loose fill protective surfacing materials to prevent compaction and to maintain appropriate depth. Replace as necessary.

When conducting inspections, it is recommended that you use the Outdoor Home Playground Safety Checklist published by the US Consumer Product Safety Commission, a copy of which is contained in this user manual.

IMPORTANT CONSUMER INFORMATION SHEET

The Consumer Product Safety Commission estimates there are about 200,000 playground related injuries involving children each year. Injuries involving this hazard pattern tend to be among the most serious of all playground injuries and have the potential to be fatal, particularly when the injury is to the head. The surface under and around playground equipment can be a major factor in determining the injury-causing potential of a fall. It is self evident that a fall onto a shock absorbing surface is less likely to cause a serious injury than a fall onto a hard surface. Playground equipment should never be placed on hard surfaces such as concrete or asphalt and while grass may appear to be acceptable it may quickly turn to hard packed earth in areas of high traffic. Shredded bark, mulch, wood chips, fine sand or fine gravel are considered to be acceptable shock absorbing surface when installed and maintained at a sufficient depth under and around playground equipment.

Table below lists the maximum height from which a child would not be expected to sustain a life-threatening head injury in a fall onto four different loose-fill surfacing materials if they are installed and maintained at depths of 6" (15.25CM), 9" (22.9CM), and 12" (30.5CM).


FALL HEIGHT IN FEET FROM WHICH A LIFE THREATENING HEAD INJURY WOULD NOT BE EXPECTED			
TYPE OF MATERIAL	6"(15.25CM) DEPTH	9"(22.9CM) DEPTH	12"(30.5CM) DEPTH
Double shredded bark mulch	6"(15.25CM)	10"(25.4CM)	11"(27.94CM)
Wood Chips	6"(15.25CM)	7"(17.8CM)	12"(30.5CM)
Fine Sand	5"(12.7CM)	5"(12.7CM)	9"(22.86CM)
Fine Gravel	6"(15.25CM)	7"(17.8CM)	10"(25.4CM)

However, it should be recognized that all injuries due to falls cannot be prevented no matter what surfacing material is used. We recommend that a shock absorbing material should extend a minimum of 6ft in all directions from the perimeter of stationary equipment such as climbers and slides. However, because children may deliberately jump from a moving swing, the shock absorbing material should extend in the front and rear of a swing a minimum distance of 2 times the height of the pivot point measured from a point directly beneath the pivot on the supporting structure.

This information is intended to assist in comparing the relative shock-absorbing properties of various materials. No particular material is recommended over another. However, each material is only effective when

Properly maintained. Materials should be checked periodically and replenished to maintain correct depth as determined necessary for your equipment. The choice of a material depends on the type and height of the playground equipment, the availability of the material in your area and its cost.

Note: The maximum fall height for this product is 6 feet. The minimum ground Clearance between the bottom of the suspended plays and the playing or ground service must be 8 inches.

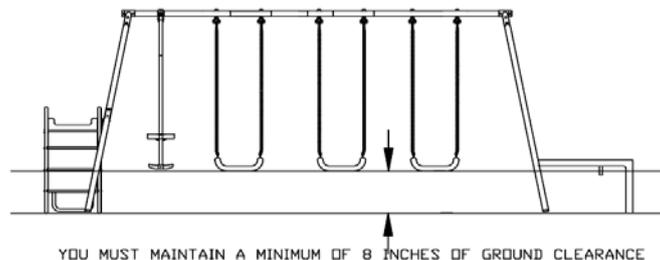

This information has been extracted from the CPSC publication on "Playground Safety". You can obtain more information by sending a postcard to the: Office of public Affairs, U.S. Consumer Product Safety Commission, Washington, D.C.20207

IMPORTANT CONSUMER INFORMATION SHEET

The following guidelines are extracts from the Consumer Product Safety Commission Outdoor Home Playground Safety Handbook. It is recommended that you read the entire handbook and take necessary precautions to prevent serious injuries to your children, including:

CHOOSING A SITE

- When you choose a home playground, a location away from roads and driveways and readily visible from inside the home and patios or porches, is important.
- Create a site free of obstacles that could cause injuries such as low overhanging tree branches, overhead wires, tree stumps and/or roots, large rocks, bricks and concrete.
- Choose a level location for the equipment. This can reduce the likelihood of the play set tipping over and loose-fill surfacing materials washing away during heavy rains. Some sites may need regrading to improve drainage or to reduce the slope.
- Locate play set at least 6 feet from any structure or obstacles, such as a house, fence, sheds, trees or poles. Swings should be further away from structures to the front and rear of the swings-a distance equal to twice the height of the top bar from which the swing is suspended.
- Locate bare metal platforms and slides out of direct sunlight to reduce the likelihood of serious burns. A slide that faces north will receive the least direct sunlight.

SELECT PROTECTIVE SURFACING

One of the most important things you can do to reduce the likelihood of serious head injuries is to install shock-absorbing protective surfacing under and around your play set. The protective surfacing should be applied to a depth that is suitable for the equipment height in accordance with ASTM F1292. There are different types of surfacing to choose from; whichever product you select, follow these guidelines:

Do not install home playground equipment over concrete, asphalt, or any other hard surface. A fall onto a hard surface can result in serious injury to the equipment user. Grass and dirt are not considered protective surfacing because wear and environmental factors can reduce their shock absorbing effectiveness. Carpeting and thin mats are generally not adequate protective surfacing.

Loose-Fill Materials

- Maintain a minimum depth of 9 inches of loose-fill materials such as wood mulch/chips, engineered wood fiber (EWF), or shredded/recycled rubber mulch for equipment up to 8 feet high; and 9 inches of sand or pea gravel for equipment up to 5 feet high. NOTE: An initial fill level of 12 inches will compress to about a 9-inch depth of surfacing over time. The surfacing will also compact, displace, and settle, and should be periodically refilled to maintain at least a 9-inch depth.
- Use containment, such as digging out around the perimeter and/or lining the perimeter with landscape edging. Don't forget to account for water drainage.
- Check and maintain the depth of the loose-fill surfacing material. To maintain the right amount of loose-fill materials, mark the correct level on play equipment support posts. That way you can easily see when to replenish and/or redistribute the surfacing.
- **Do not** install loose fill surfacing over hard surfaces such as concrete or asphalt.

IMPORTANT CONSUMER INFORMATION SHEET

Poured-In-Place Surfaces or Pre-Manufactured Rubber Tiles

You may be interested in using surfacing other than loose-fill materials-like rubber tiles or poured-in-place surfaces.

- Installations of these surfaces generally require a professional and are not “do-it-yourself” projects
- Review surface specifications before purchasing this type of surfacing. Ask the installer / manufacturer for a report showing that the product has been tested to the following safety standard: *ASTM F1292 Standard Specification for Impact Attenuation of Surfacing Materials within the Use Zone of Playground Equipment*. This report should show the specific height for which the surface is intended to protect against serious head injury. This height should be equal to or greater than the *fall height*-vertical distance between a designated play surface (*elevated surface for standing, sitting, or climbing*) and the protective surfacing below-of your play equipment.
- Check the protective surfacing frequently for wear.

PLACEMENT

Proper placement and maintenance of protective surfacing is essential. Be sure to:

- Extend surfacing at least 6 feet from the equipment in all directions.
- For to-fro swings, extend protective surfacing in front of and behind the swing to a distance equal to twice the height of the top bar from which the swing is suspended.

IMPORTANT CONSUMER INFORMATION SHEET

Outdoor Home Playground Safety Checklist

Use this to help make your home playground a safe place to play!

Supervision	Be sure to always supervise children on play equipment.
Surfacing	<p>Install a protective surface under and around play equipment to reduce the likelihood of serious head injuries.</p> <p>For most play equipment, install protective surfacing 6 feet in all directions beyond the equipment.</p> <p>For swings, extend protective surfacing in front and back of the swing to a distance that is twice the height of the bar from which the swing is suspended.</p> <p>For tire swings, install protective surfacing outward from the swing equal to the suspension chain plus 6 feet.</p>
Types of Surfacing	<p>Carpeting and thin mats are not adequate as protective surfacing. Maintain at least 9 inches of loose-fill material (see page6) or use an ASTM F1292 rated material at the depth required for the equipment height.</p> <p>Use wood mulch/chips, shredded rubber mulch, or engineered wood fiber for equipment up to 8 feet high.</p> <p>Use sand, pea gravel, or mulch products listed above for play equipment up to 5 feet high; or</p> <p>Use surface mats tested to provide impact protection equal to or greater than the height of the play equipment.</p>
Equipment Maintenance	Periodically check nuts, bolts, caps, swing seats, suspension ropes, chains, and cables and replace as necessary. Maintain loose-fill surfacing and surface mats.
Opening	Eliminate openings that can trap a child's head or neck, such as openings in guardrails or ladders. Openings should be smaller than 3 1/2 inches to prevent entry of a small child's body, or larger than 9 inches to allow a child's head and body to slide completely through.
Ropes	Never attach jump ropes, clotheslines, pet leashes, or cords of any kind to play equipment. Anchor any climbing ropes at both ends. Remove drawstrings from children's clothes. Children can strangle on these.
Anchors	Bury or cover anchors with adequate surfacing material to prevent tripping. Play equipment should not tip over.
Guardrails or Barriers	Make sure that platforms and ramps over 30 inches high have guardrails and barriers to prevent falls.
Repair	Repair sharp points and edges on equipment that can cause injuries.
Upkeep of Hardware	Replace missing hardware, eliminate protruding bolts, and close "S" hooks that can cause injuries.

IMPORTANT CONSUMER INFORMATION SHEET

What to Inspect:

Hardware:

Inspect all nuts and bolts and tighten if required. Hardware should be firmly against, but not crushing the wood. Over-tightening hardware crushes wood fibers and can split wooden components resulting in the bolt thread extending beyond the wood. This poses a severe safety hazard. If bolt threads protrude beyond the wood surface, replace the bolt with a shorter one that will not protrude. If splintering has occurred from over-tightening, larger washers can be purchased at your local hardware store and installed under the bolt head. Be sure to reuse or replace your lock washers.

Major Wooden Parts:

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with an exterior water repellent stain. Seasonal checking or cracking of the grain on wooden parts is quite natural and water and heat are the most frequent causes of expansion and contraction of wood fibers. Our wood set has been treated with stain to resist weathering. But it needs to be maintained periodically by applying new stain or paint.

Dowels (Rungs)

Inspect for structural defects and splintering. If necessary, lightly sand and refinish with a clear water repellent, exterior sealant or boiled linseed oil. Do NOT paint, varnish or finish rungs with any substance that may reduce your child's ability to firmly grasp or step on the rungs.

Swing hangers

Inspect for correct installation. Assure the bend of the swing hanger is positioned tightly against the stop washer and the ladder or swing beam. The axis of the swing hanger bushing must be perpendicular to the swing motion. Spray the nylon bushings with a household lubricant such as WD-40, if you hear squeaking.

Plastic Swing Seats

Check for evidence of deterioration. Replace any swing seat that has developed cracks in the seat or has exposed metal in the edges of the swing seat. If there are already exposed metal inserts on the edge of the seat, remove the seats and chains to prevent serious injury. Remove plastic swing seats and take indoors or do NOT use when the temperature drops below 32 degrees F.

Ropes, Cables and Chains

Check for evidence of deterioration. Ropes, cables and chains should be removed and replaced if excessive wear is found. Contact our service center for replacement parts.

Metallic Components

Check for rusted areas on components such as monkey bars, hand supports, brackets, etc. Sand and repaint using a non lead-based paint that meets the requirements of Title 16 CRF part 1303.

Play Area

Inspect to assure that the swing set has settled properly and the location of the set is still level.

GROUND COVER INFORMATION

SELECTING THE CORRECT LOCATION FOR YOUR PLAY PRODUCT IS IMPORTANT FOR YOUR CHILDREN'S SAFETY AND THE PRODUCT'S LONGEVITY

Dimensions:


Product Dimension: 234.25" x 133.50"

General Information:

The play set has been designed and engineered for up to 10 children.


Maximum of 100 lb. (45kg) per child Combined weight is not to exceed 1000 pounds (450 kg).

RECOMMENDED PLAY AREA DIAGRAM

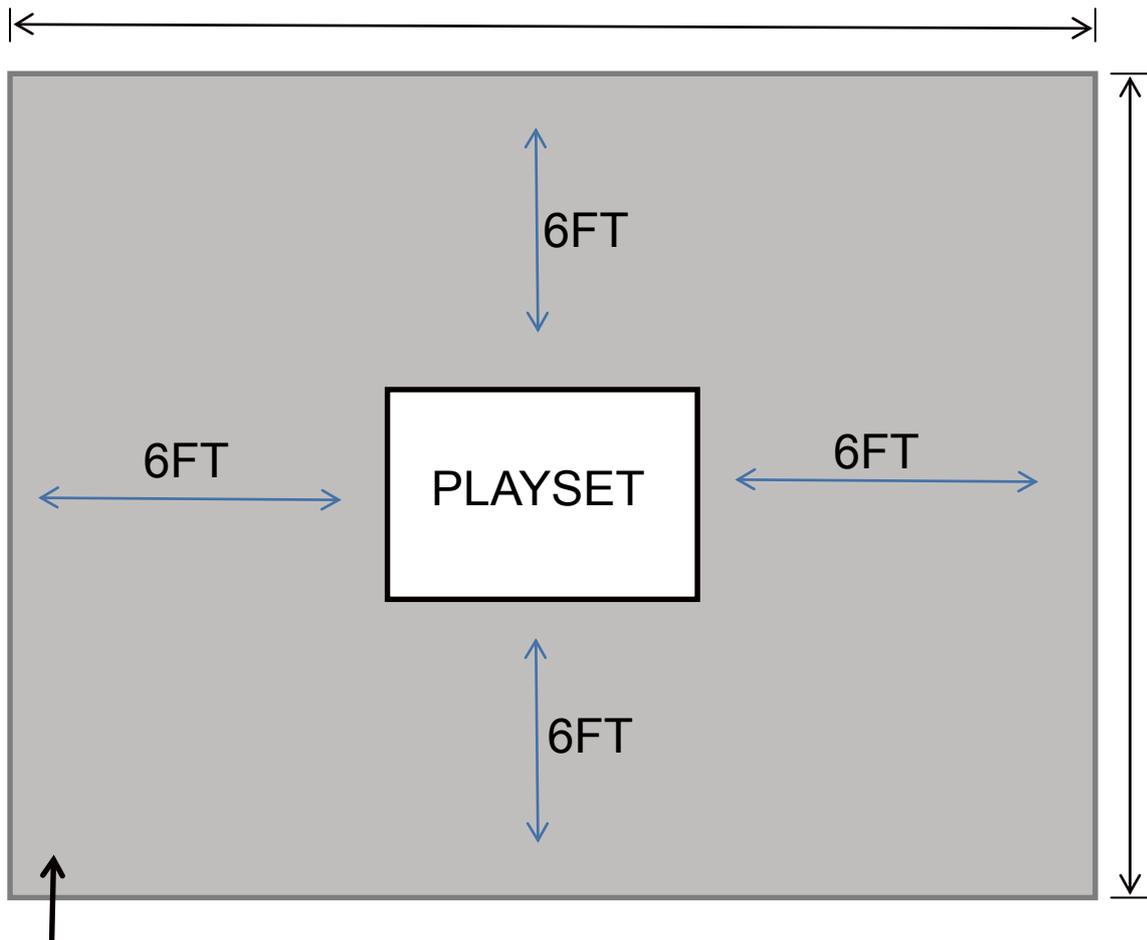


Recommended dimension of play area using appropriate ground cover

FRONT VIEW OF COMPLETE PRODUCT

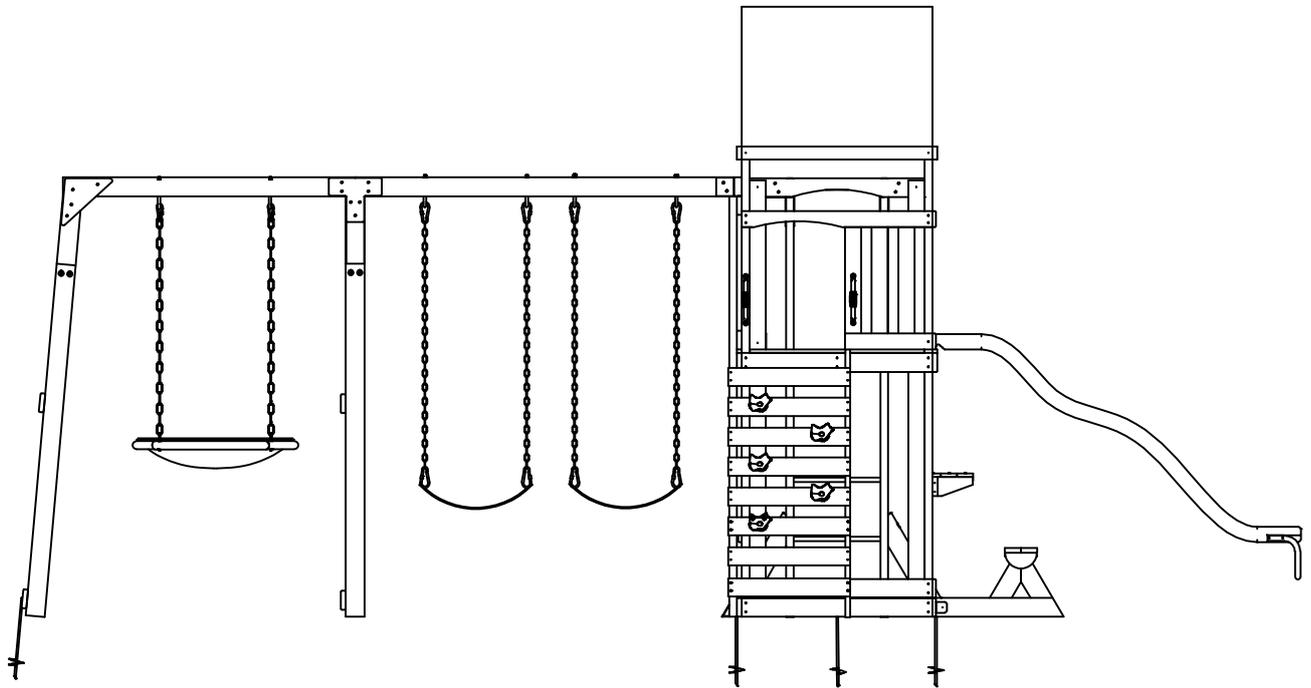


BACK VIEW OF COMPLETE PRODUCT

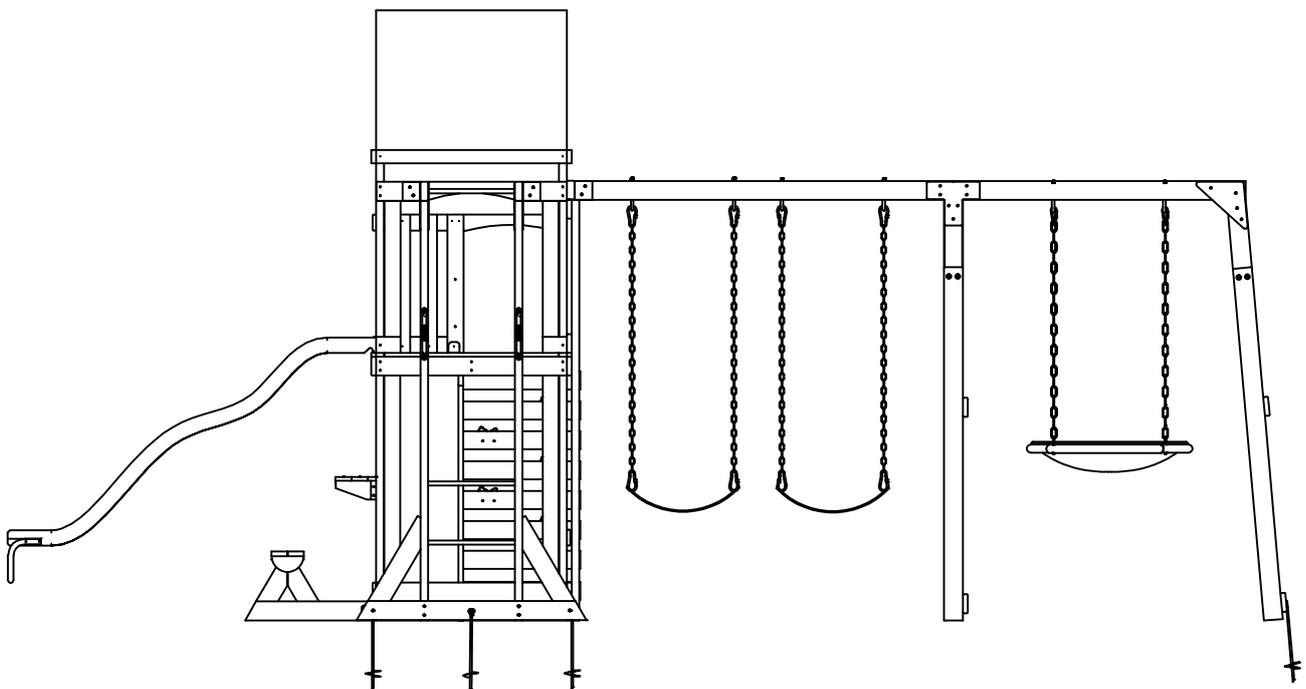

TOOLS NEEDED

These are the tools that are generally required for installation.
These tools are not included in the purchased packaging unless stated below.

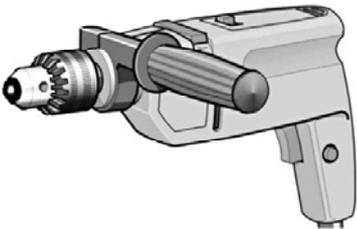


Electric Drill



Phillips Head Screw Driver



Ladder or Step Tool

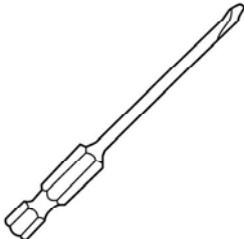

Phillips Head Screwdriver



Tape Measure



Working Gloves

INCLUDED



Special Socket Wrench




**Big Allen Wrench
(#6)**



**Small Allen Wrench
(#5)**


WOOD PARTS LIST

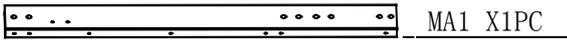

MA1 X1PC




MA2 X3PC

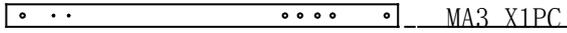

MA3 X1PC




MA4 X1PC

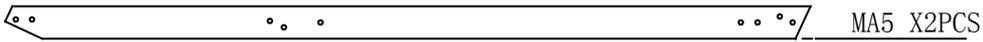


MA5 X2PCS



MA6 X1PC

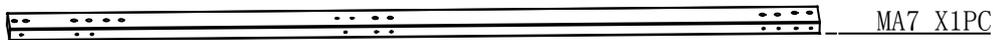


MA7 X1PC

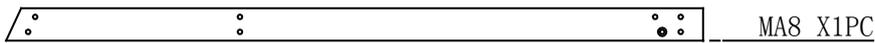

MA8 X1PC




MA9 X1PC

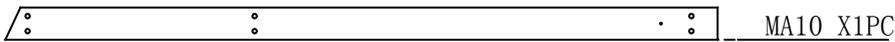

MA10 X1PC



MA11 X1PC

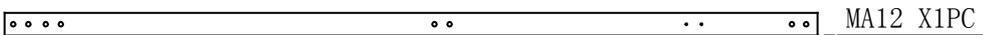


MA12 X1PC




MA13 X1PC



MA14 X1PC

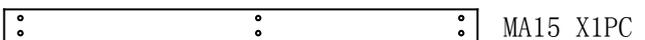

MA15 X1PC

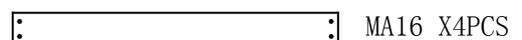


MA16 X4PCS



MA17 X1PC




MA18 X1PC

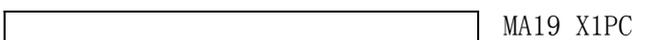

MA19 X1PC


WOOD PARTS LIST

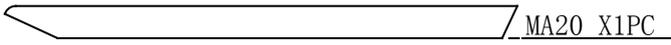


MA20 X1PC




MA21 X5PCS

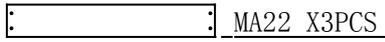


MA22 X3PCS

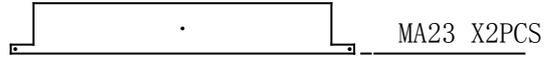


MA23 X2PCS

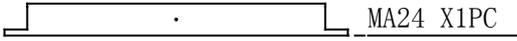


MA24 X1PC

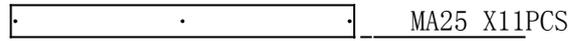


MA25 X11PCS

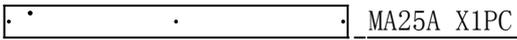


MA25A X1PC

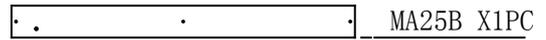


MA25B X1PC

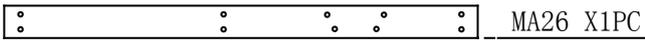


MA26 X1PC

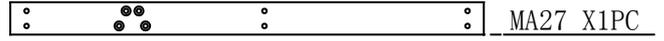

MA27 X1PC

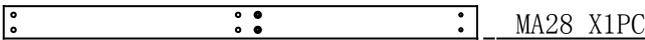

MA28 X1PC

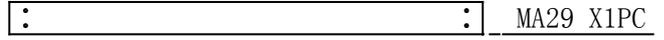

MA29 X1PC



MA30 X1PC



MA31 X1PC




MA32 X1PC



MA33 X2PCS



MA34 X2PCS

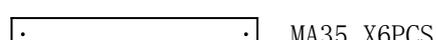

MA35 X6PCS



MA36 X2PCS




MA37 X7PCS




MA38 X1PC




MA39 X2PCS

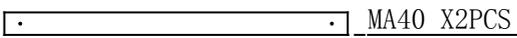


MA40 X2PCS

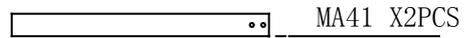


MA41 X2PCS

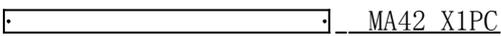

MA42 X1PC

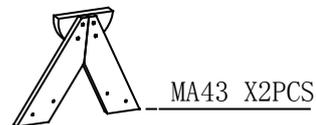

MA43 X2PCS

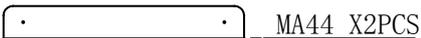

MA44 X2PCS



MA45 X1PC



MA46 X2PCS



MA47 X2PCS



MA48 X3PCS




MA49 X1PC




MA50 X1PC


WOOD PARTS LIST

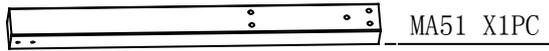


MA51 X1PC

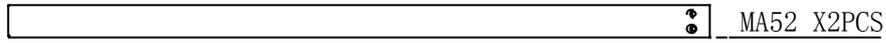


MA52 X2PCS

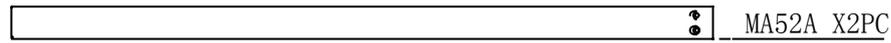

MA52A X2PC

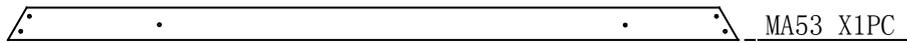

MA53 X1PC

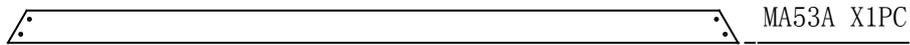

MA53A X1PC



MA54 X1PC



MA55 X1PC



MA56 X1PC




MA57 X2PCS



MA58 X1PC




MA59 X1PC

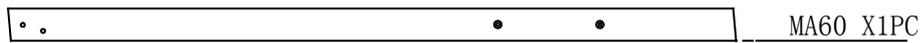


MA60 X1PC




MA61 X1PC

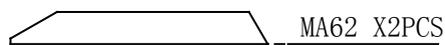

MA62 X2PCS

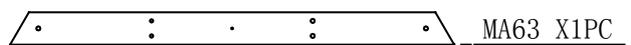

MA63 X1PC


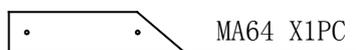


MA64 X1PC



MA65 X1PC

HARDWARE PARTS LIST

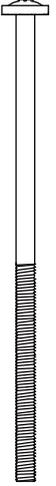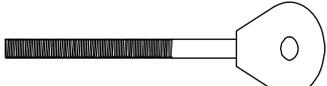									
S14-9PC 3/16X18MM	S5-47PC M4X28MM	S6-108PCS M4X35MM	S7-10PCS M4X45MM	B1-24PC 5/16X28MM	B2-19PCS 5/16X38MM	B3-40PCS 5/16X50MM	B4-19PC 5/16X60MM	B6-3PCS 5/16X78MM	B9-4PCS 5/16X110MM
									
B12-14PCS 1/4X30MM	B28-14PCS 1/4X22MM	S18-4PCS ST7X50MM	S1-11PC 1/4X30MM	S2-39PC 1/4X40MM	S3-37PC 1/4X50MM	S4-4PC 1/4X60MM	S15-2PCS 1/4X80MM	V18-4PCS 5/6	V3-4PCS 5/16
									
V4-6PCS 5/16	V6-10PCS 5/16	V31-14PCS 1/4	V9-109PCS 5/16	V1-12PCS 5/16	V2-24PCS 1/4	V24-54PCS 3/8	V8-80PCS 5/16	V20-96PCS 1/4	V7-6PCS


NOTE: EXTRA HARDWARE MAY BE INCLUDED

Measuring Hardware

It is very important that you get the right hardware in the correct place when assembling the unit. You can use a ruler to measure your hardware or you can compare the hardware to the hardware identification page.


NOTES:

- 1) Do not include bolt head when measuring length of bolt.
- 2) Include full length of deck screw when measuring

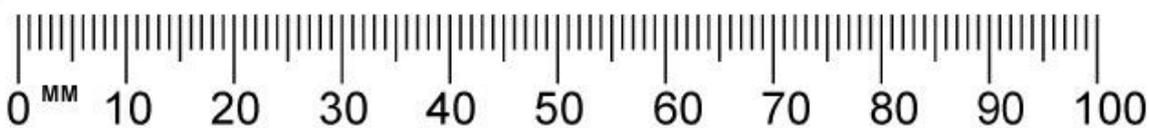


NOT TO SCALE


COMPONENT PARTS LIST

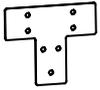

U74 x2pcs

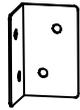


U2 x4pcs

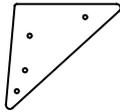


U3 x6pcs



U50 x5pc

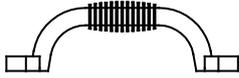

U42 x4pcs

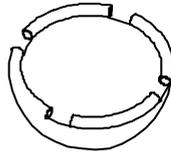


U83 x1pcs



U4 x5pc



U32 x5pc

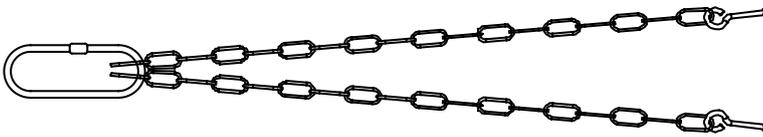


U77 x2pcs




U84 x4pcs




U210 x7pc

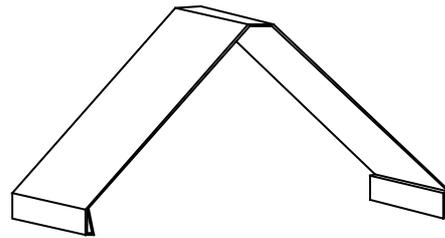


U637 x1pc

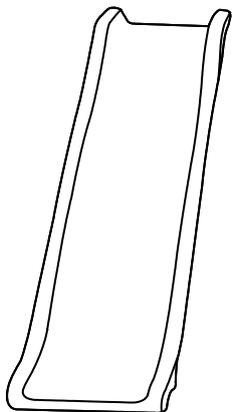

U7 x1pc

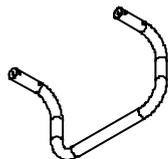


U10D x1pc

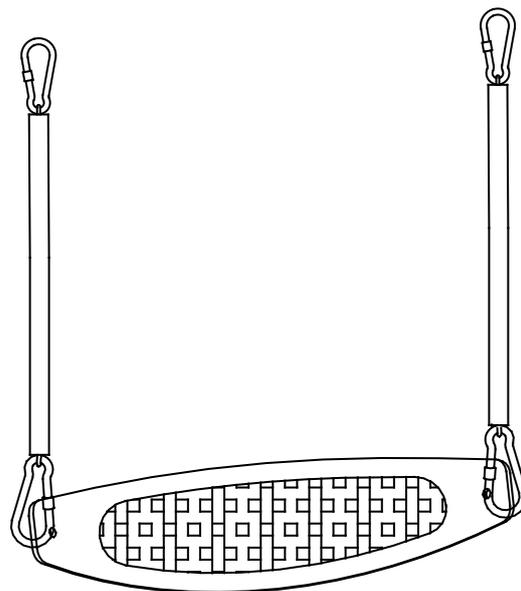


U5 x2pcs

HARDWARE PRE-ASSEMBLE



Please pre-assemble the wood boards listed below before you begin to assemble the product.
Hammer the square head rivets into the pre-drilled holes as shown below.

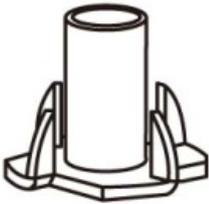

V4
Large Square

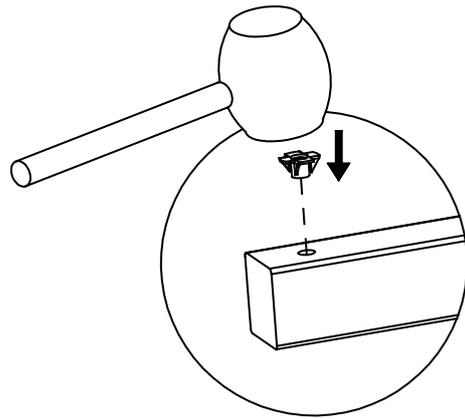

Head Rivet for the following:

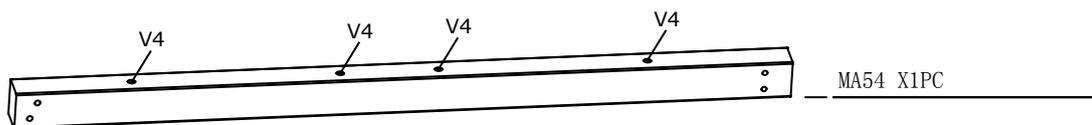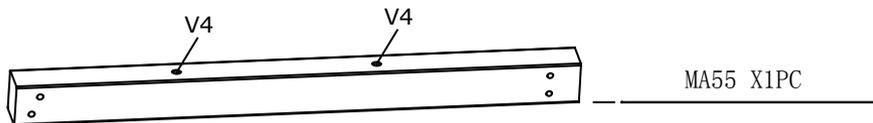


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 1

Part#	Qty	Hardware#	Qty
MA9	1 pc	B2	6 pcs
MA12	1 pc	B3	6 pcs
MA13	1 pc	V8	12 pcs
MA14	1 pc	V9	12 pcs
MA15	1 pc		

- Connect MA9 to MA12, MA13 and MA14 using B2, V8 and V9 (6 sets).
- Connect MA15 to MA12, MA13 and MA14 using B3, V8 and V9 (6 sets).

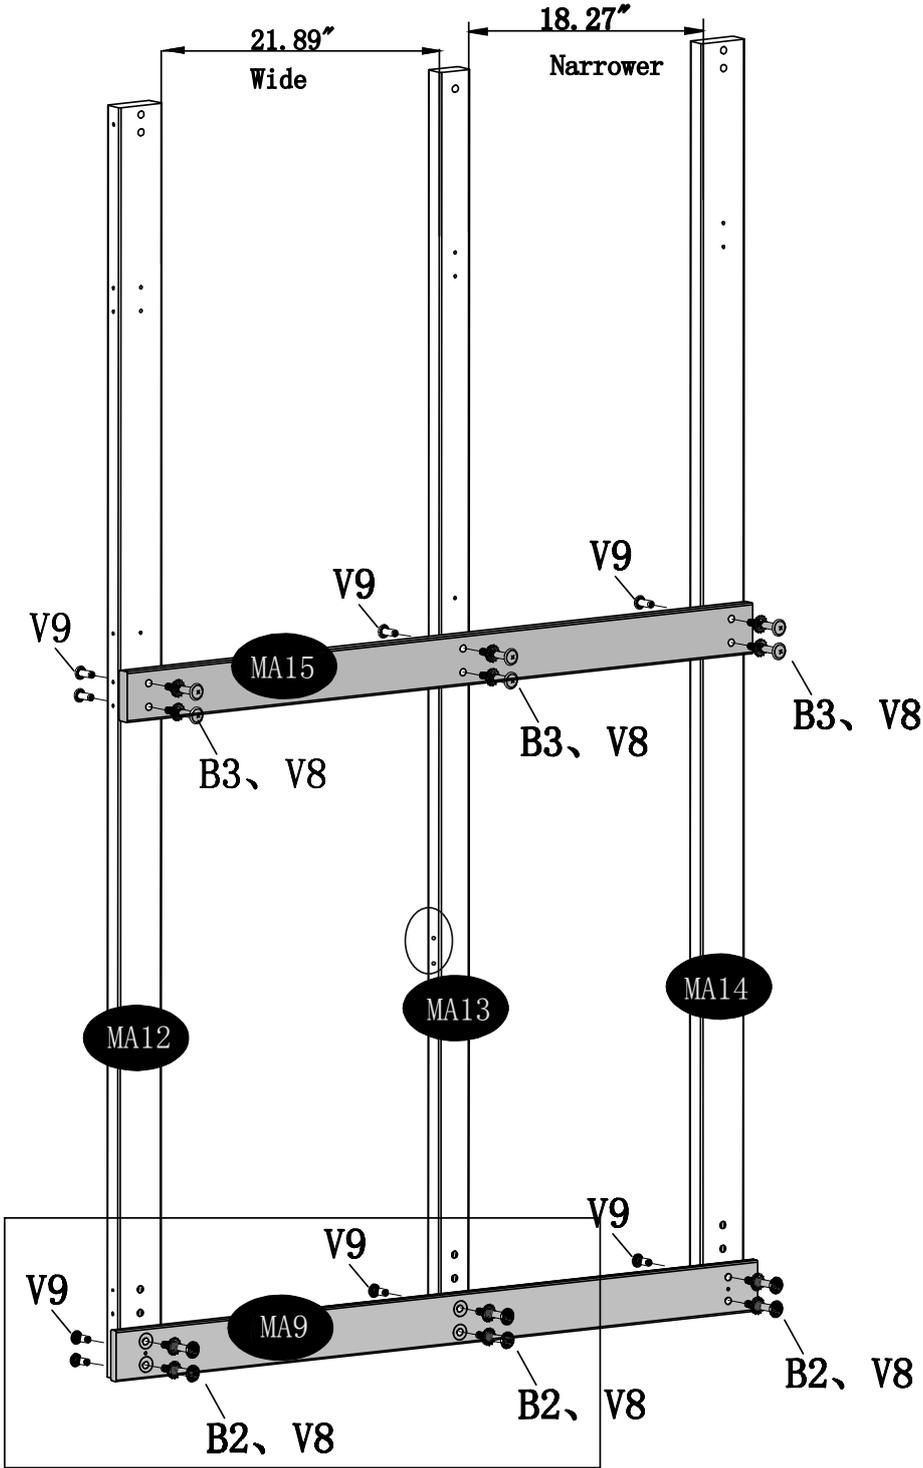


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 2

Part#	Qty	Hardware#	Qty
MA6	1 pc	B2	6 pcs
MA29	1 pc	B3	5 pcs
MA39	1 pc	S2, V20	4 sets
		V8	11 pcs
		V9	11 pcs

- Connect MA6 to MA12, MA13 and MA14 using B2, V8 and V9 (6 sets).
- Connect MA29 to MA12 and MA13 using S2 and V20 (4 sets).
- Connect MA39 to MA12, MA13 and MA14 using B3, V8 and V9 (5 sets).

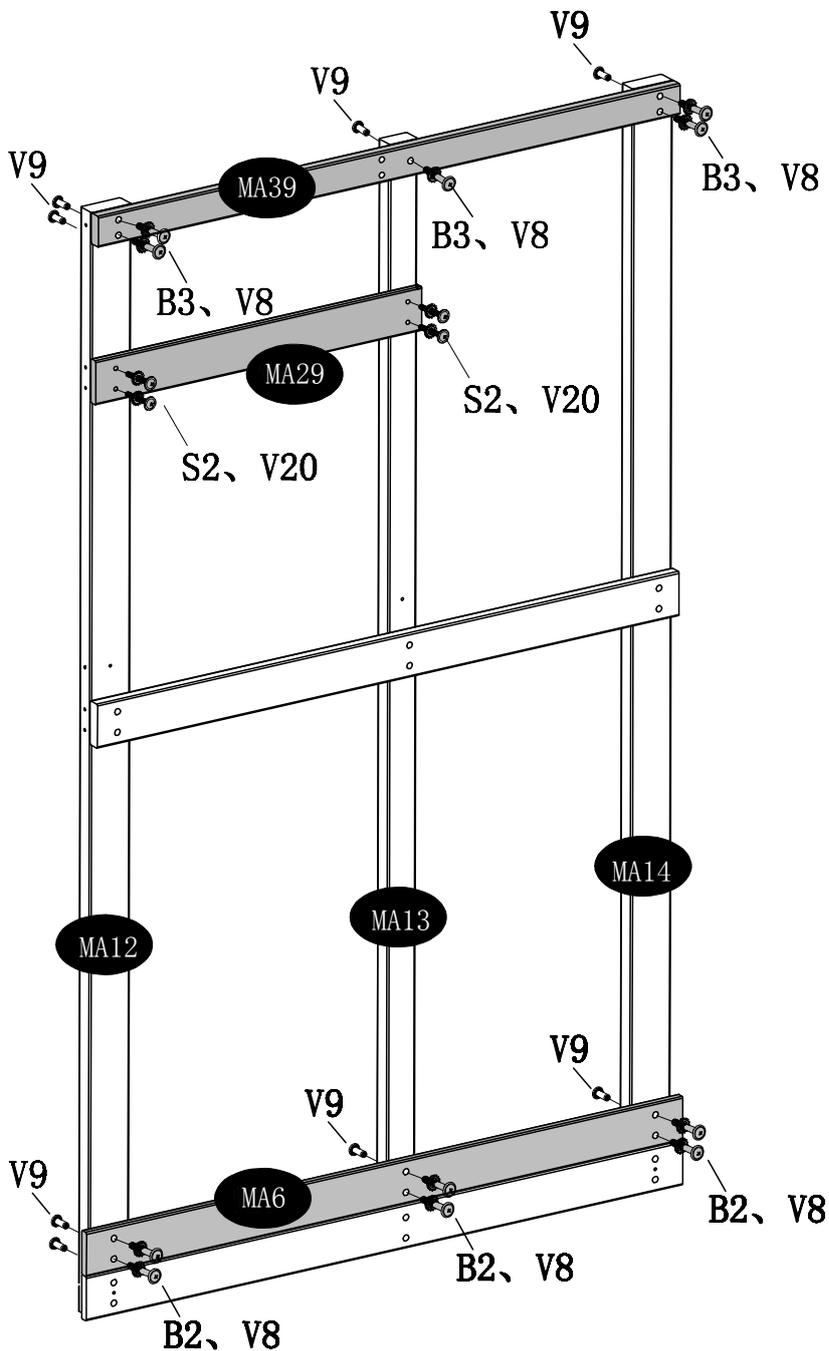


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 3

Part#	Qty	Hardware#	Qty
MA1	1 pc	B3	15 pcs
MA3	1 pc	B4	6 pcs
MA7	1 pc	V8	21 pcs
MA11	1 pc	V9	21 pcs
MA26	1 pc		
MA27	1 pc		
MA39	1 pc		

- Connect MA11 to MA1 and MA7 using B3, V8 and V9 (4 sets).
- Connect MA27 to MA1, MA3 and MA7 using B3, V8 and V9 (6 sets).
- Connect MA26 to MA1, MA3 and MA7 using B4, V8 and V9 (6 sets).
- Connect MA39 to MA1, MA3 and MA7 using B3, V8 and V9 (5 sets).

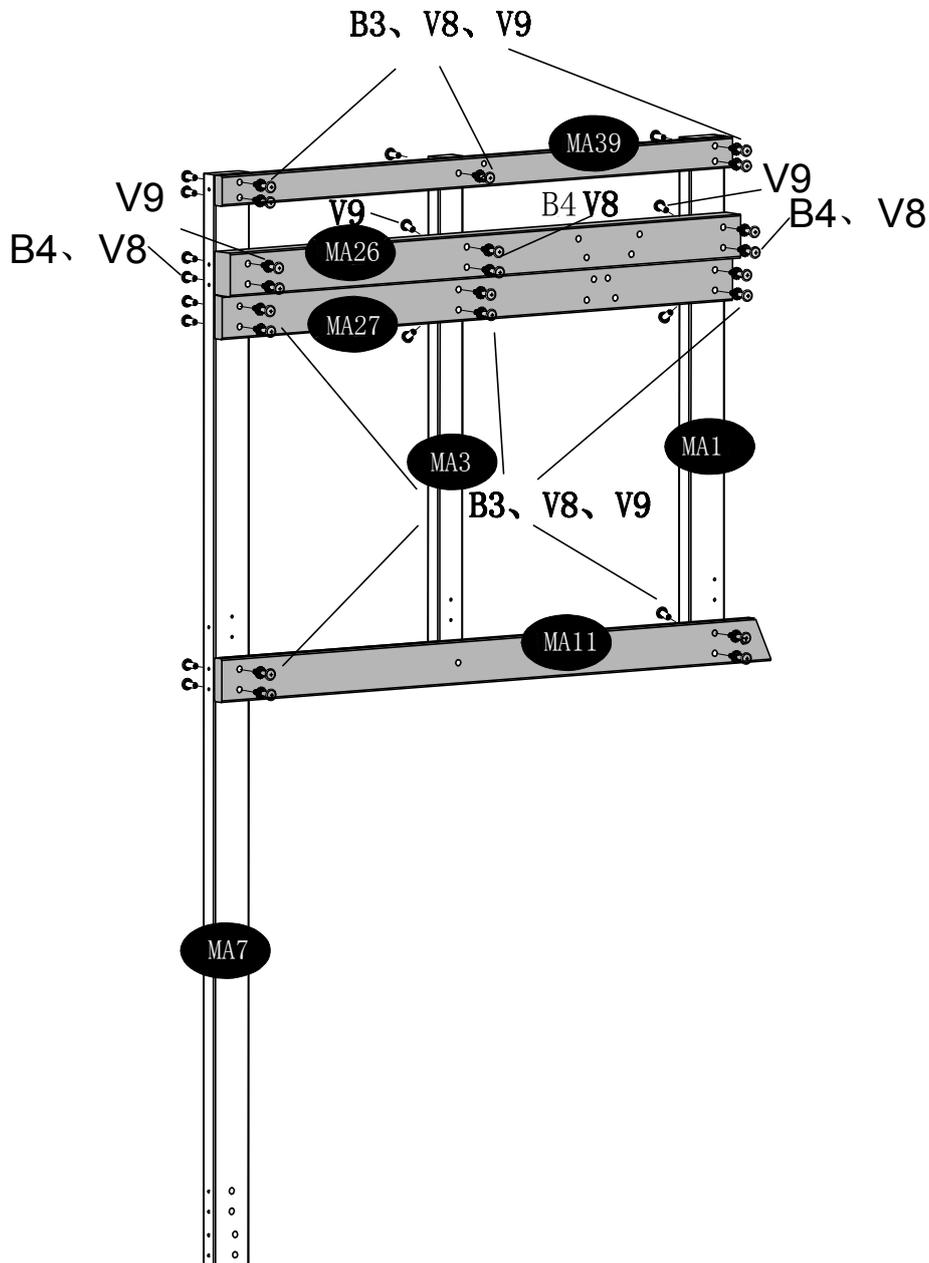


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 4

Part#	Qty	Hardware#	Qty
MA4	1 pc	B2	4 pcs
MA5	1 pc	B3	9 pcs
MA8	1 pc	V8	13 pcs
MA10	1 pc	V9	14 pcs

- Connect MA5 to MA11 and MA27, using B2, V8 and V9 (3 sets).
- Connect MA8 to MA5 and MA7, using B3, V8 and V9 (3 sets) and B2, V8 and V9 (1 set).
- Connect MA10 to MA5 using B3, V8 and V9 (2 sets).
- Connect MA4 to MA8 and MA10, using B3, V8 and V9 (4 sets).

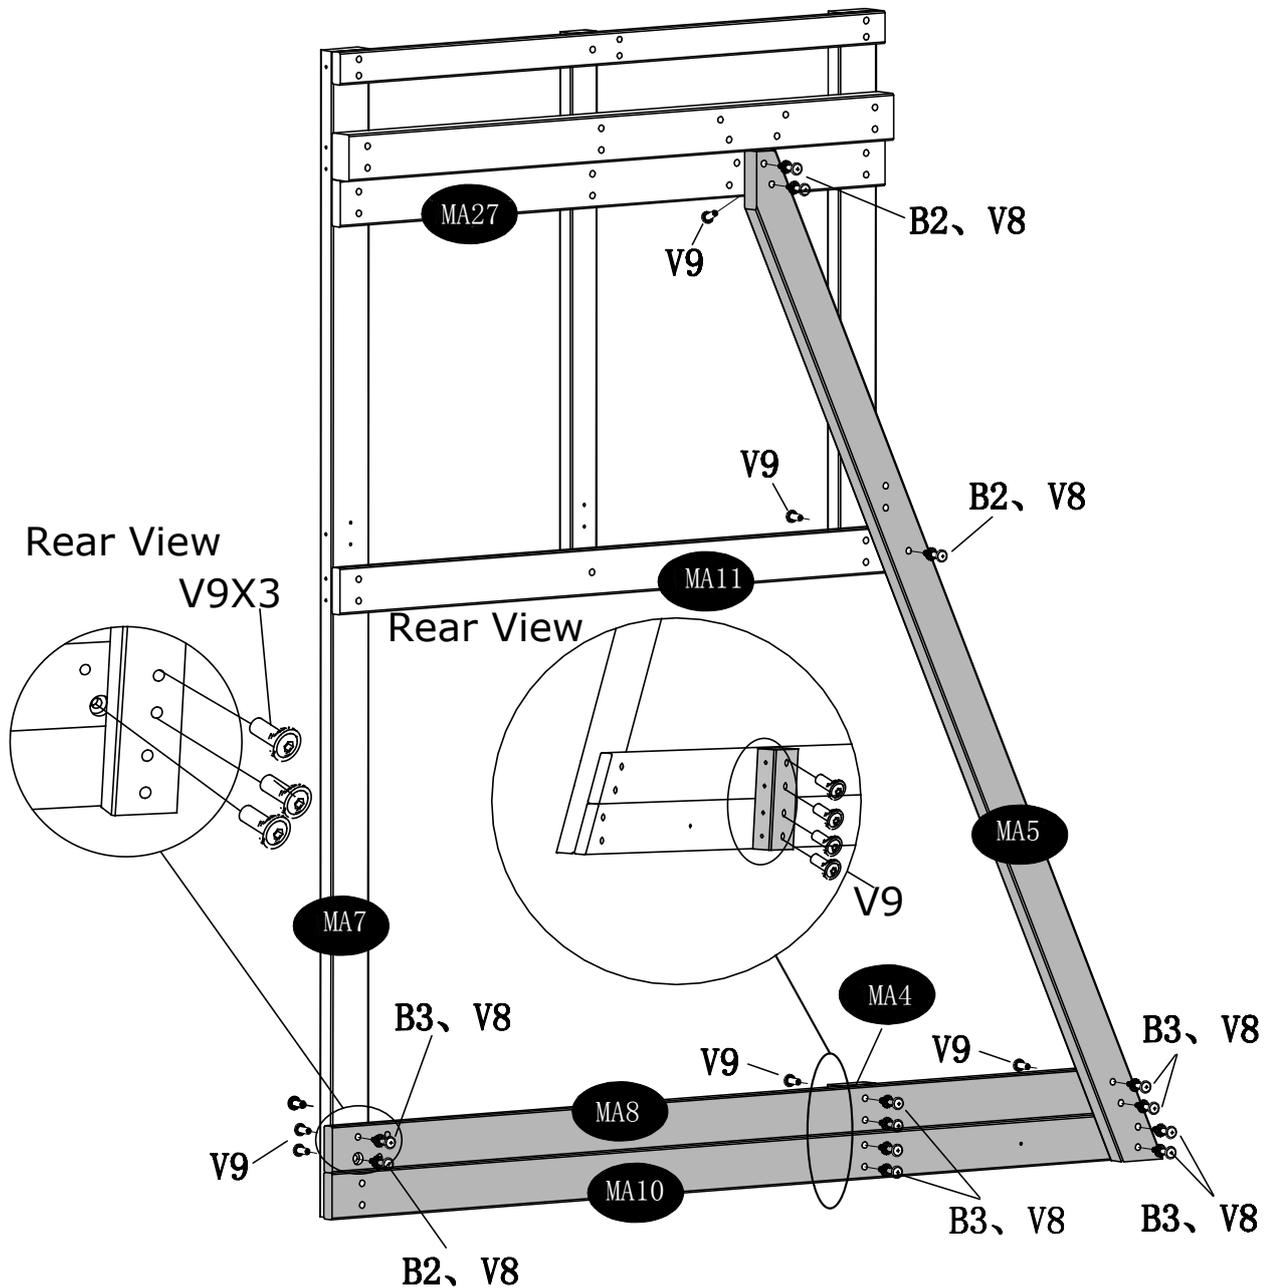


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 5

Part#	Qty	Hardware#	Qty
MA16	4 pcs	S2	24 pcs
MA17	1 pc	V20	24 pcs
MA18	1 pc		

- Connect MA17 to MA1 and MA12, using S2 and V20 (4 sets).
- Connect MA18 to MA7 and MA14, using S2 and V20 (4 sets).
- Connect MA16 to MA7 and MA14, using S2 and V20 (8 sets).
- Connect MA16 to MA4 and MA12, using S2 and V20 (8 sets).

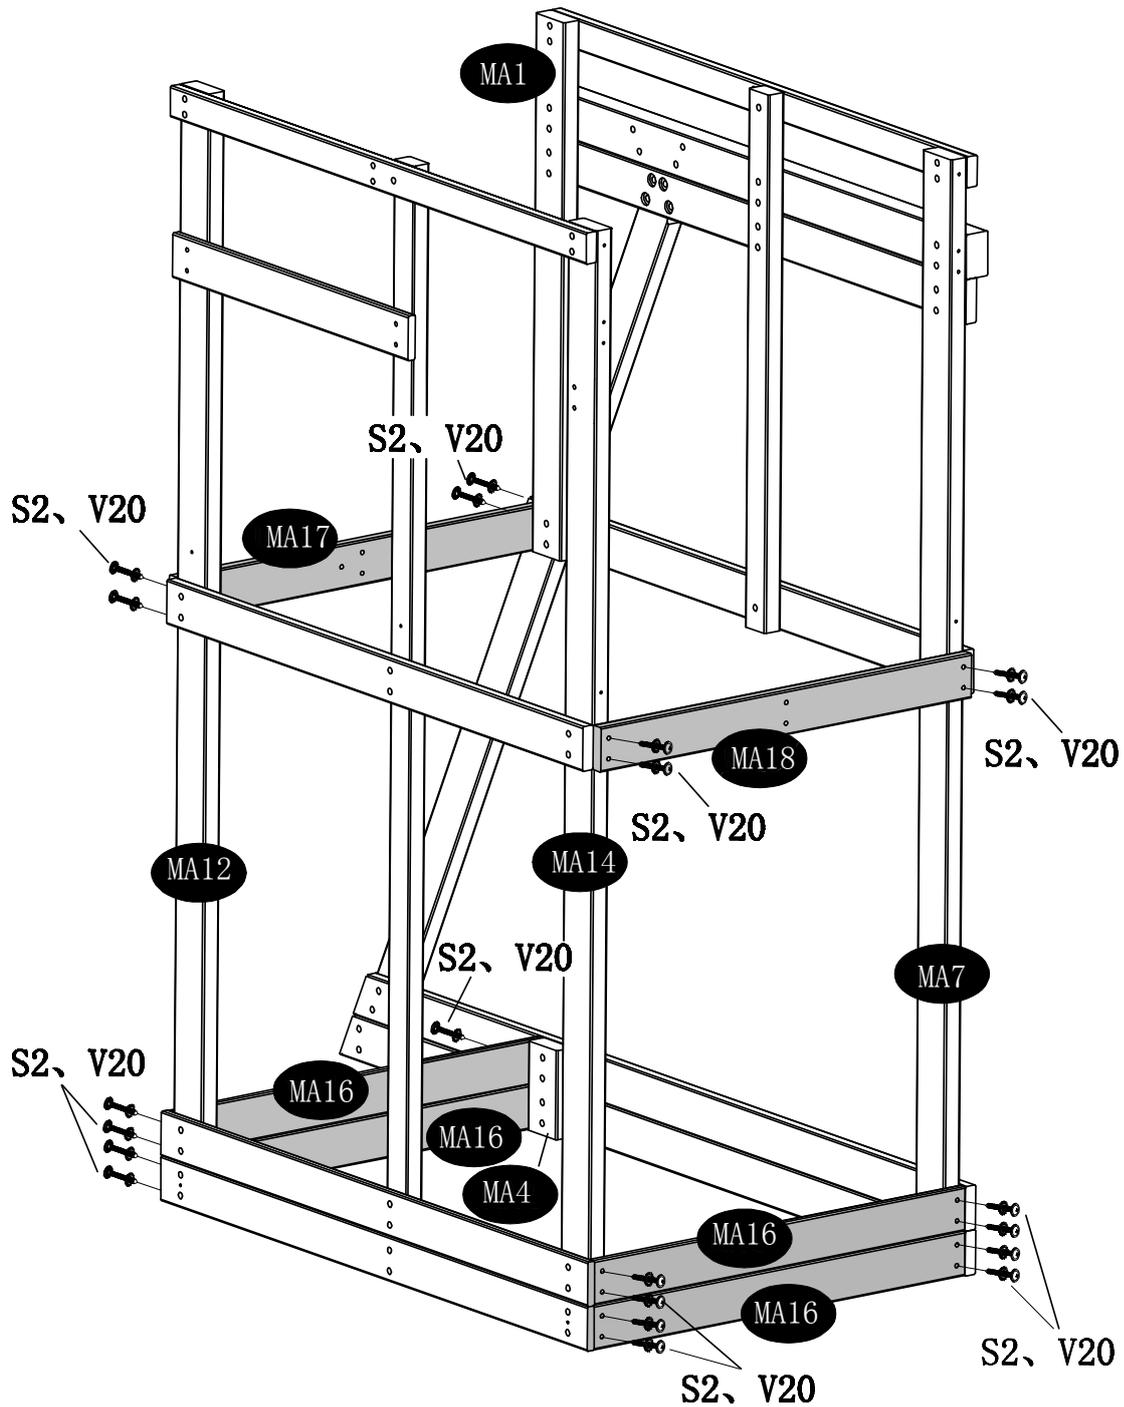


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 6

Part#	Qty	Hardware#	Qty
MA2	3 pcs	S3,V20	4 sets
MA19	1 pc	S5	9 pcs

- Connect MA19 to MA17 and MA18 using S3 and V20 (4 sets).
- Connect MA2 to MA16 and MA18 using S5 (6 pcs).
- Connect MA2 to MA16 and MA17 using S5 (3 pcs).

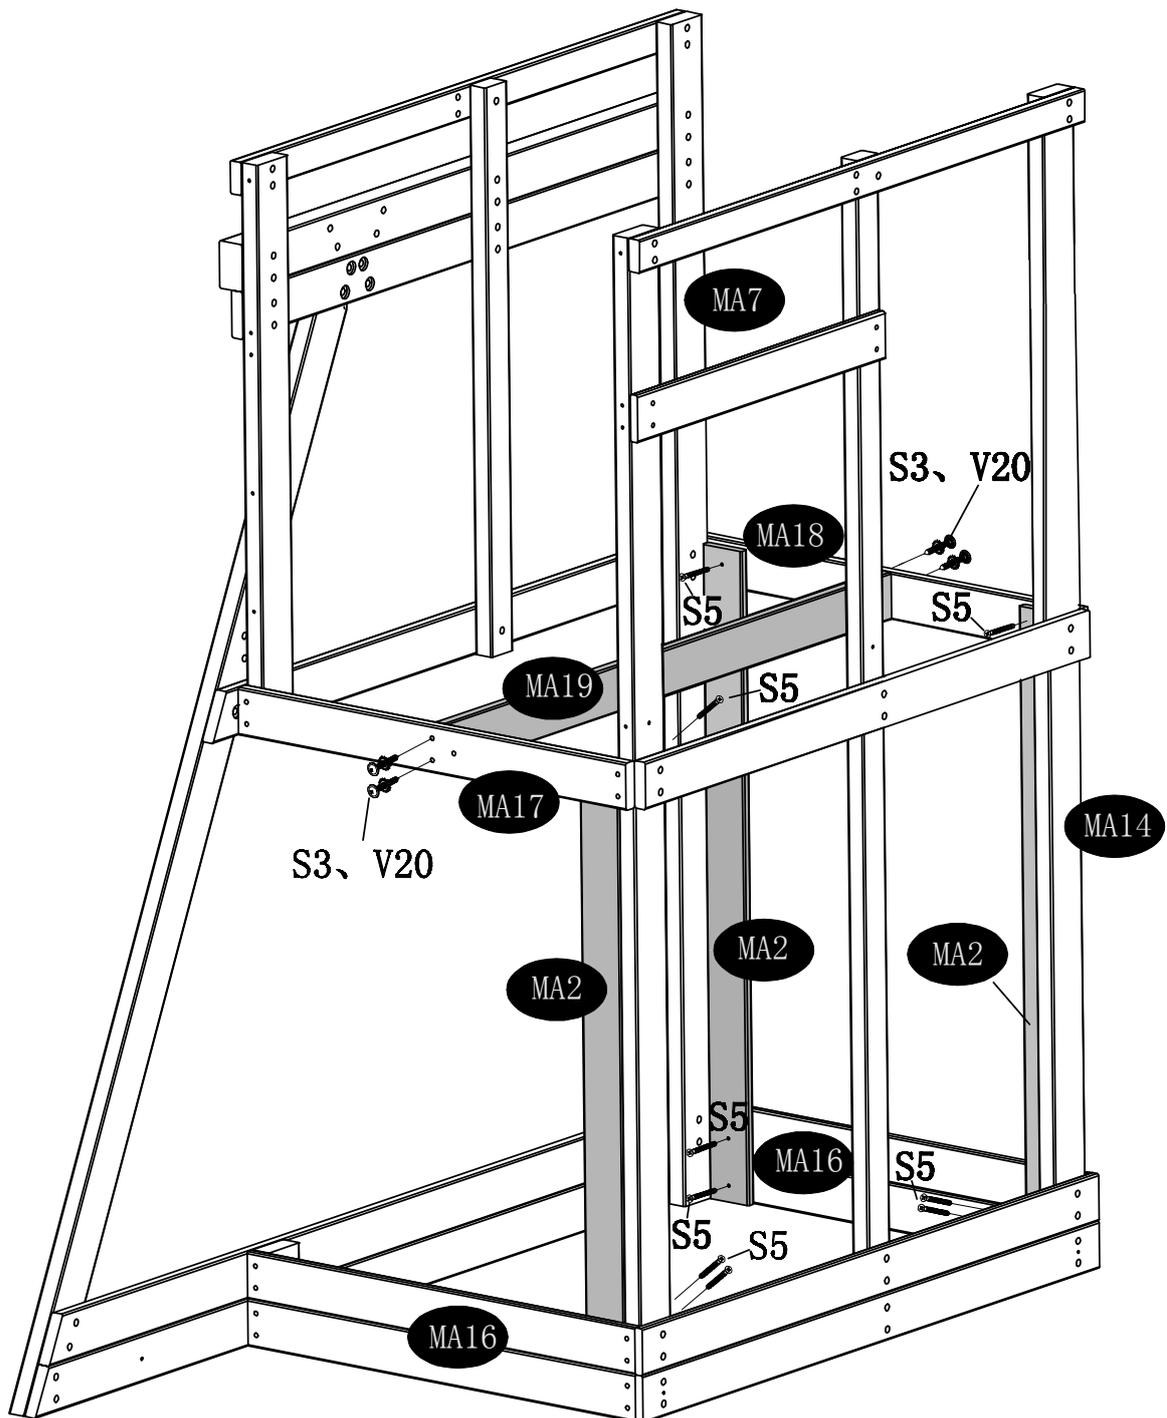


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 7

Part#	Qty	Hardware#	Qty
MA20	1 pc	S3,V20	1 set
MA21	5 pcs	S6	32 pcs
MA22	3 pcs	B28, V2, V31	10 sets
U4	5 pcs		

- Connect MA20 to MA17 using S3 and V20 (1 set).
- Connect MA21 (5 pcs) and MA22 (3 pcs) to MA5 and MA20 using S6 (32 pcs).
- Connect U4 to MA21 using B28, V2 and V31 (10 sets).

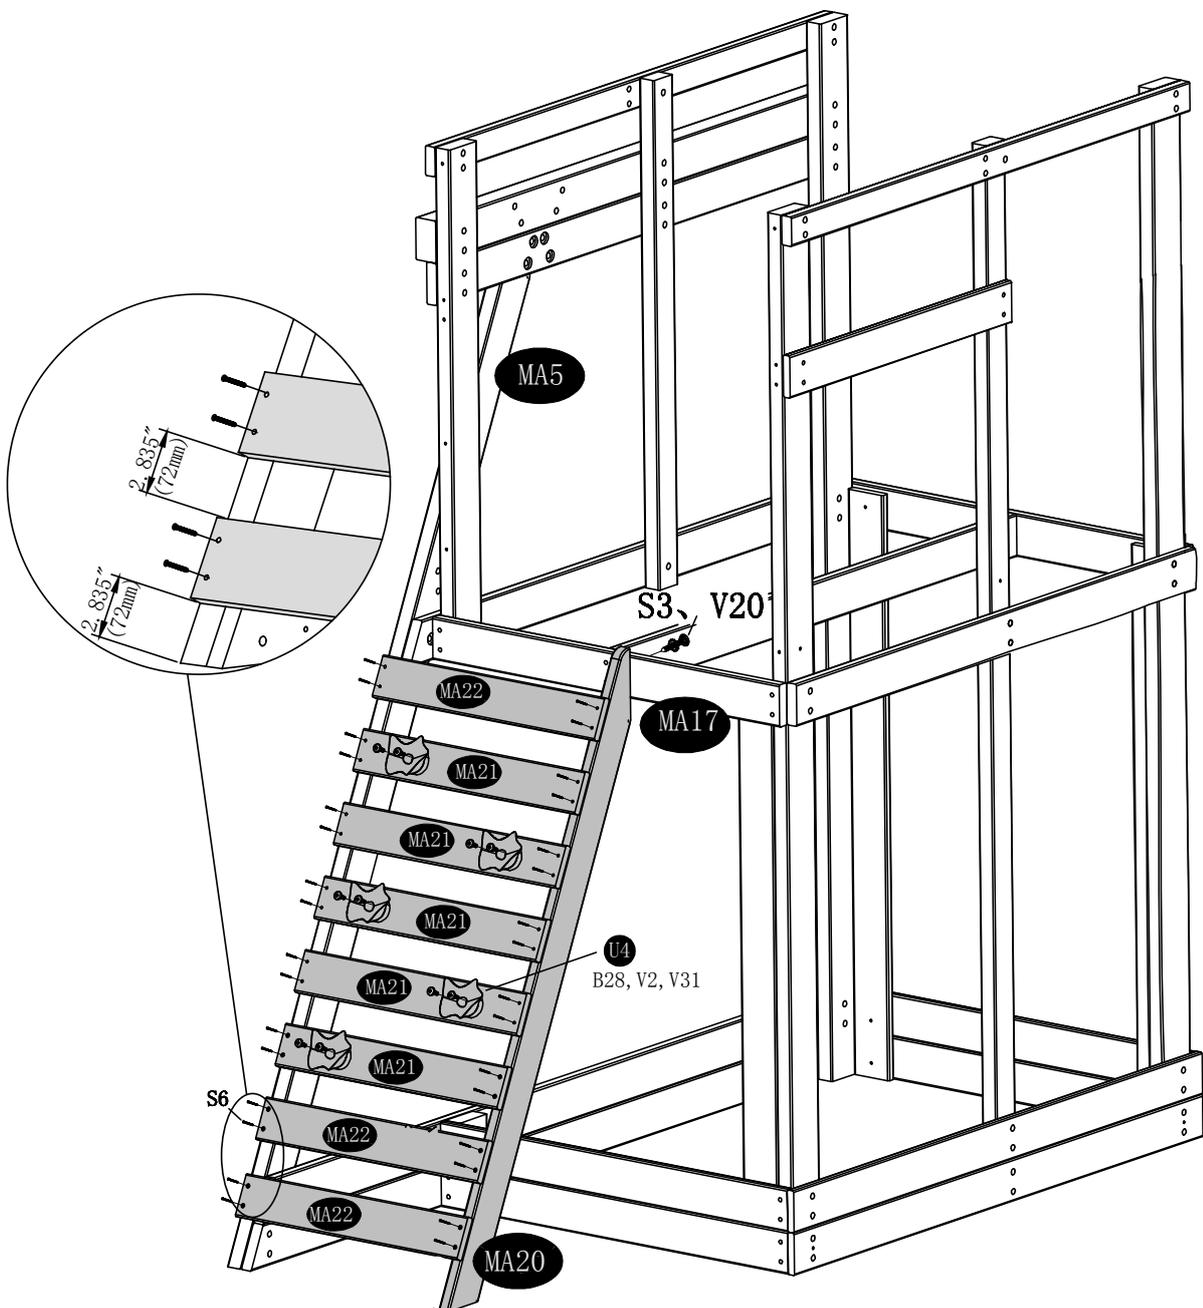


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 8

Part#	Qty	Hardware#	Qty
MA31	1 pc	S2,V20	4 sets
MA56	1 pc	S4,V20	4 sets

- Connect MA31 to MA1 and MA12 using S2 and V20 (4 set).
- Connect MA56 to MA7 and MA14 using S4 and V20 (4 set).

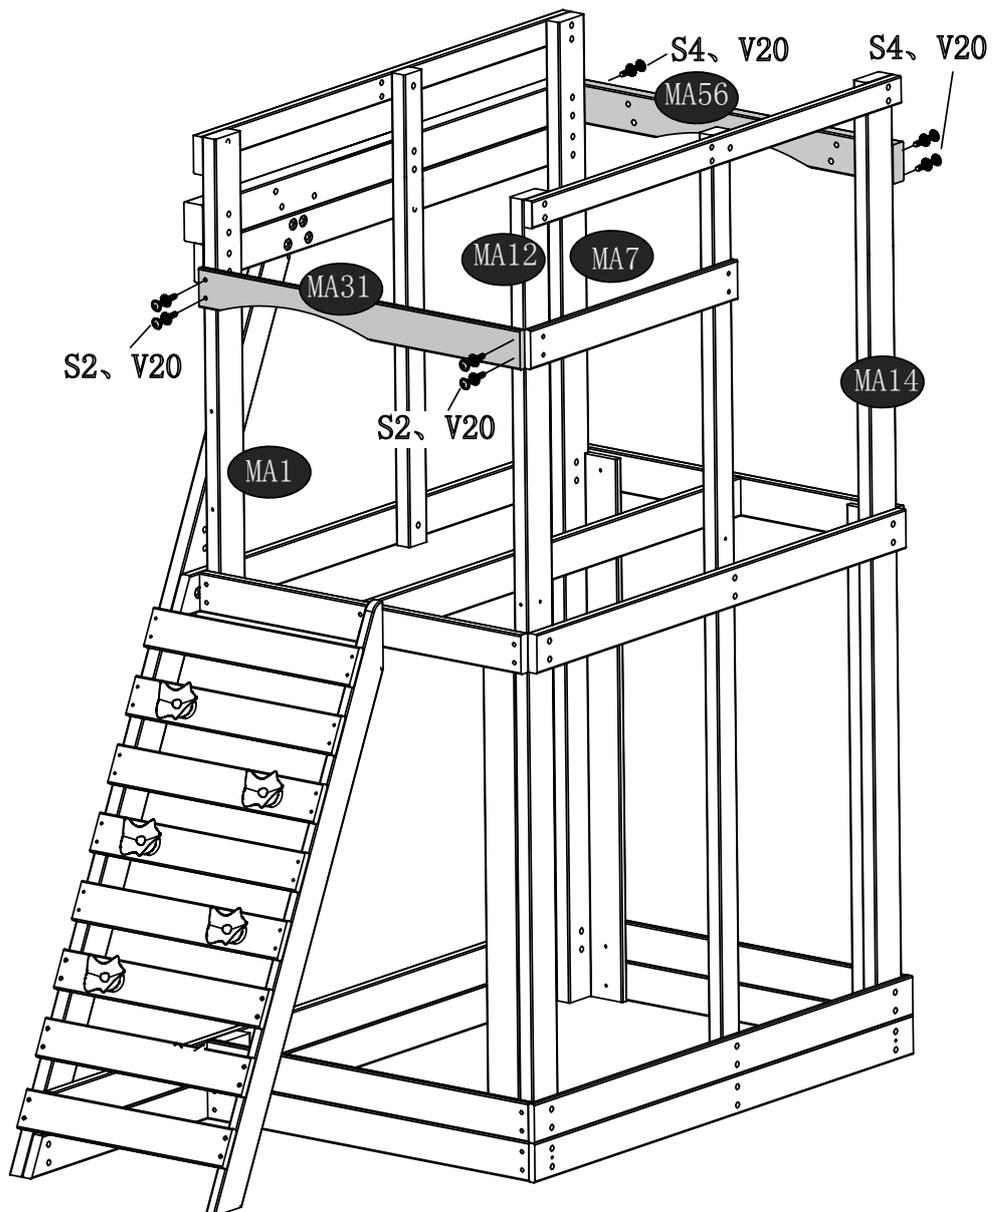


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 9

Part#	Qty	Hardware#	Qty
MA23	2 pcs	S6	48 pcs
MA24	1 pc		
MA25	11 pcs		
MA25A	1 pc		
MA25B	1 pc		

- Connect MA23 on the 2 ends of the playhouse using S6 (6pcs).
- Connect MA24, MA25B and MA25A using S6 (9 pcs).
- Connect all 11 pieces of MA25 using S6 (33 pcs).

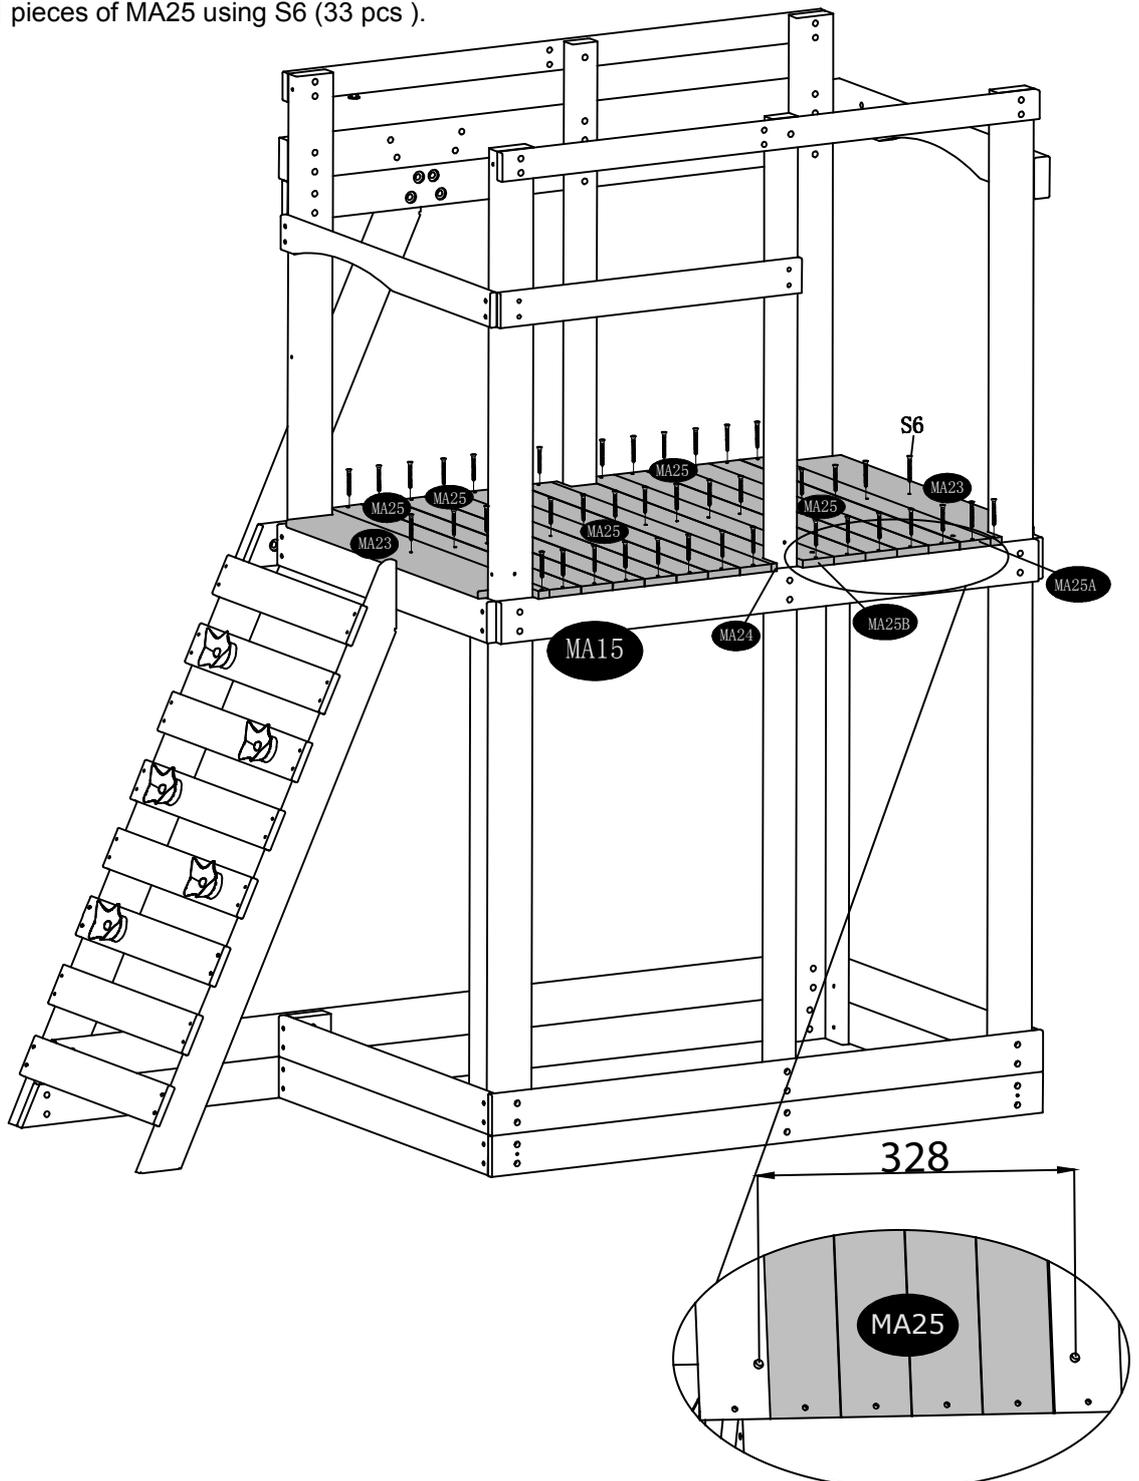


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 10

Part#	Qty	Hardware#	Qty
MA28	1 pc	S2	4 pcs
MA33	2 pcs	S3	2 pcs
MA65	1 pc	S15	2 pcs
		V20	8 pcs
		S7	2 pcs

- Connect MA28 to MA5 using S15 and V20 (2 sets), to MA3 using S2 and V20 (2 sets), to MA7 using S3 and V20 (2 sets).
- Connect MA33 to MA7 and MA14 using S2 and V20 (2 sets).
- Connect MA65 to MA3 from inside using S7 (2 pcs).

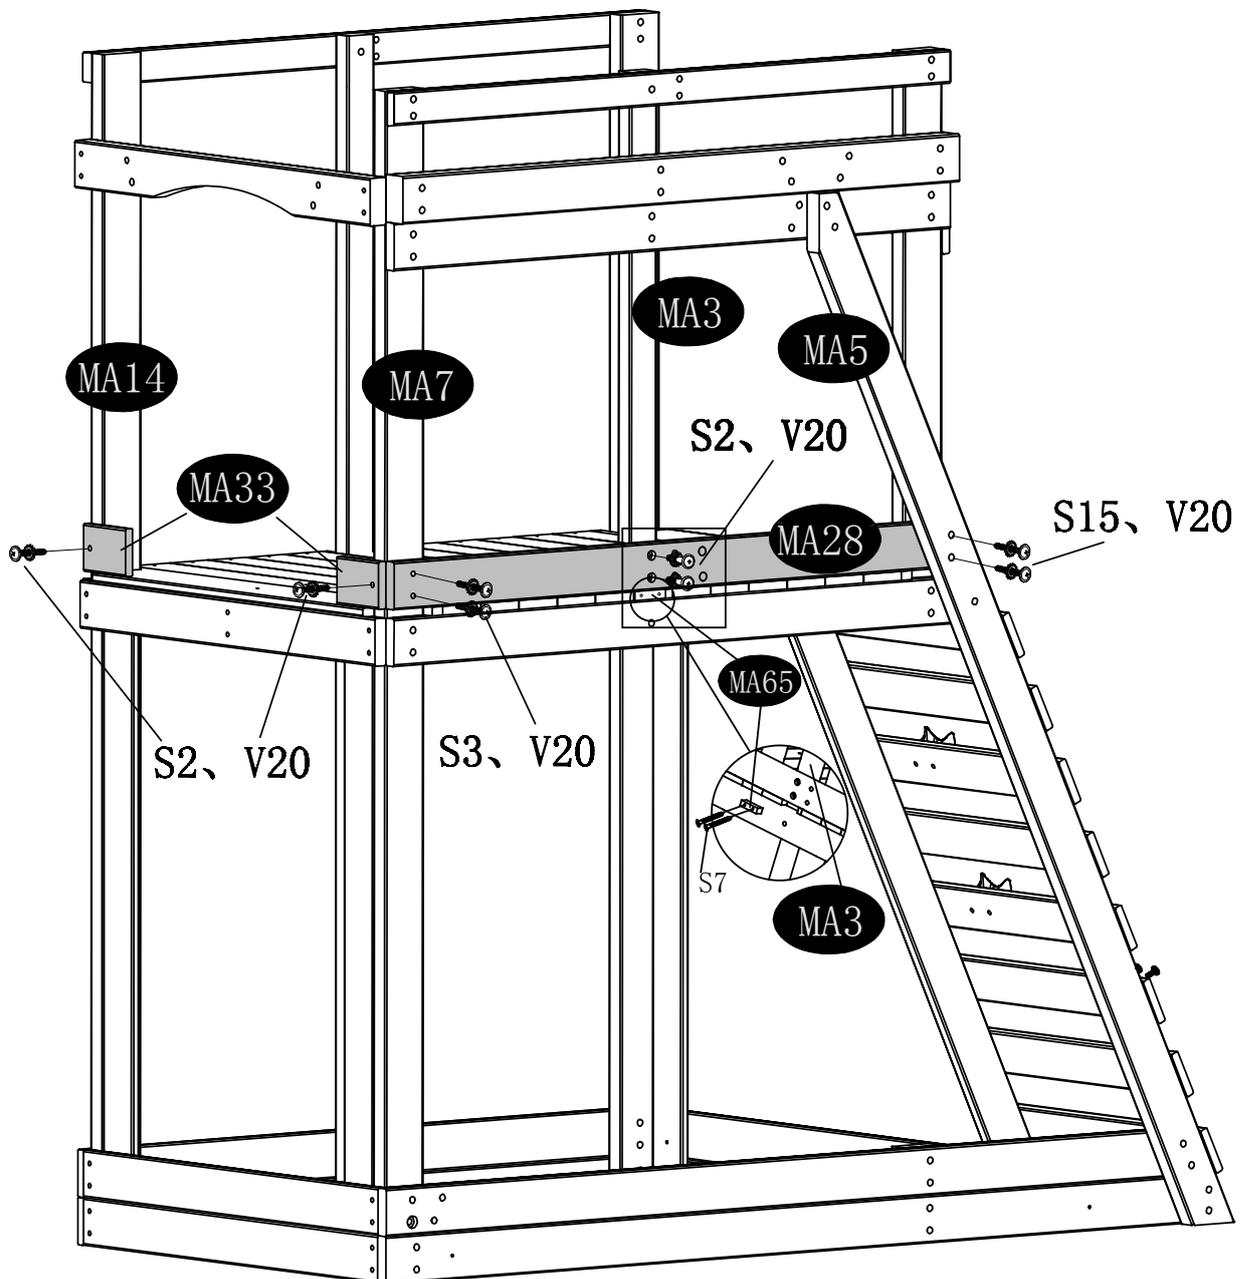


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 11

Part#	Qty	Hardware#	Qty
MA5	1 pc	B2	3 pcs
		B3	3 pcs
		B6	3 pcs
		V9	8 pc
		V8	9 pcs

- Connect MA5 to MA27 using B2, V8 and V9 (2 sets).
- Connect MA5 to MA28 using B3, V8 and V9 (2 sets).
- Connect MA5 to MA10 and MA11 using B6, V8 and V9 (3 sets).
- Connect MA5 to MA8 using B2 and V8 (1 set) on bottom and B3, V8 and V9 (1 set) on top.

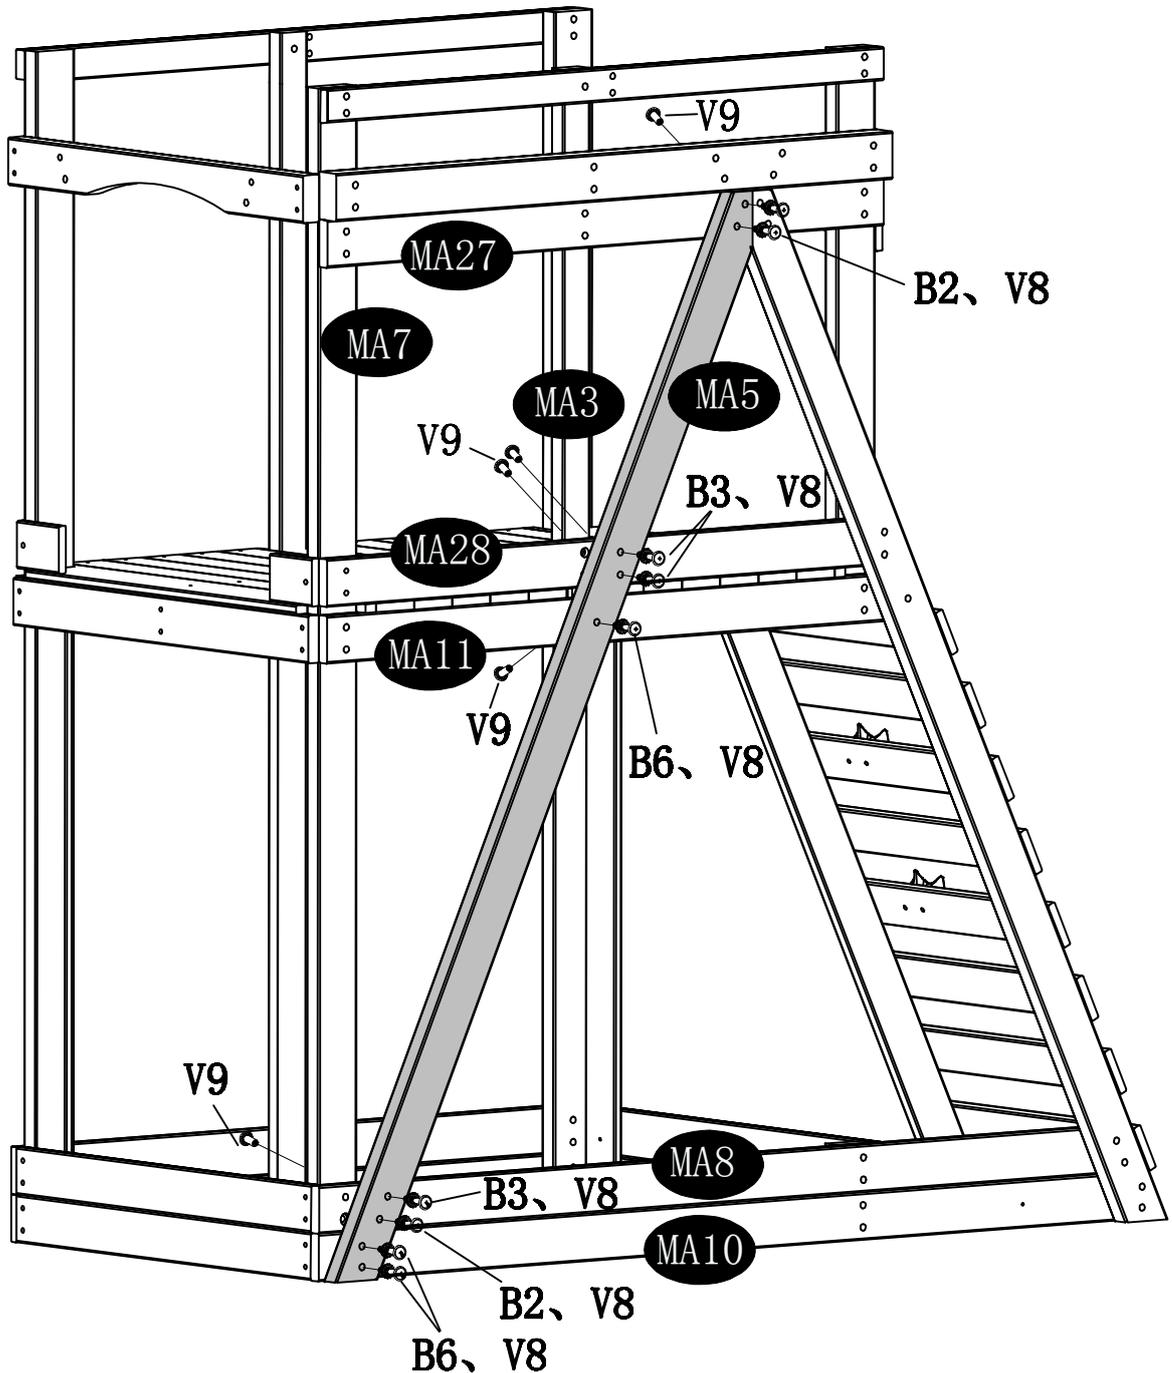


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 12

Part#	Qty	Hardware#	Qty
MA30	1 pc	S2	3 pcs
MA32	1 pc	S5	4 pcs
MA36	2 pcs	V20	3 pcs

- Connect MA30 to MA12 and MA13 using S2 and V20 (2 sets).
- Connect MA32 to MA12 using S2 and V20 (1 set).
- Connect MA36 to MA33 and MA56 using S5 (4 pcs).

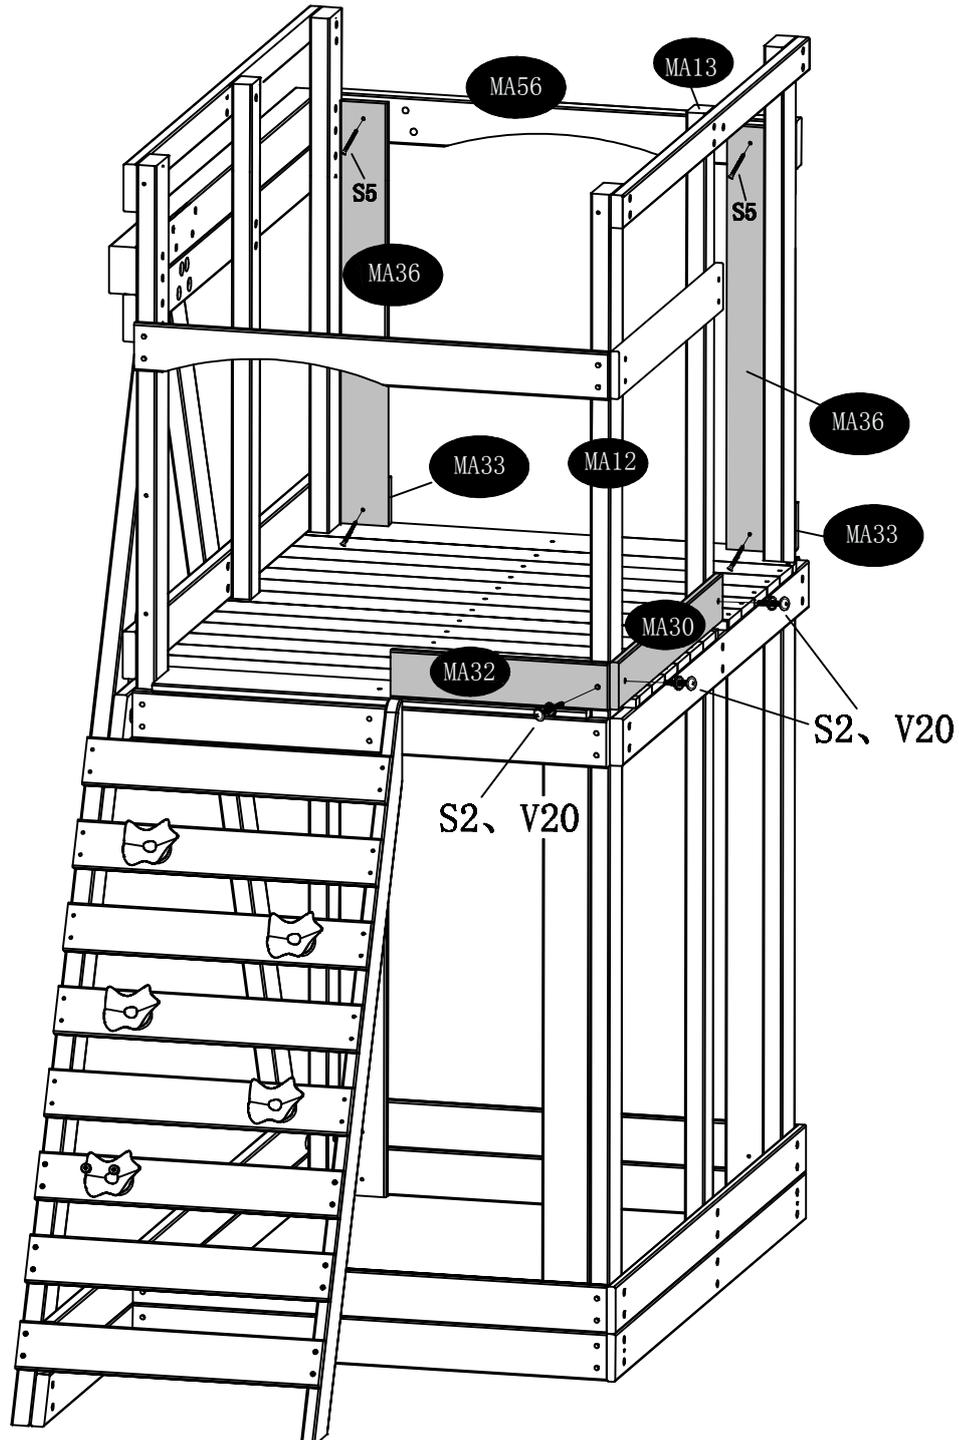


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 13

Part#	Qty	Hardware#	Qty
MA35	2 pcs	S5	22 pcs
MA37	7 pcs		
MA38	1 pc		

- Connect MA35 and MA38 to MA31 and MA32 using S5 (8 pcs).
- Connect MA37 to MA27 and MA28 using S5 (14 pcs).

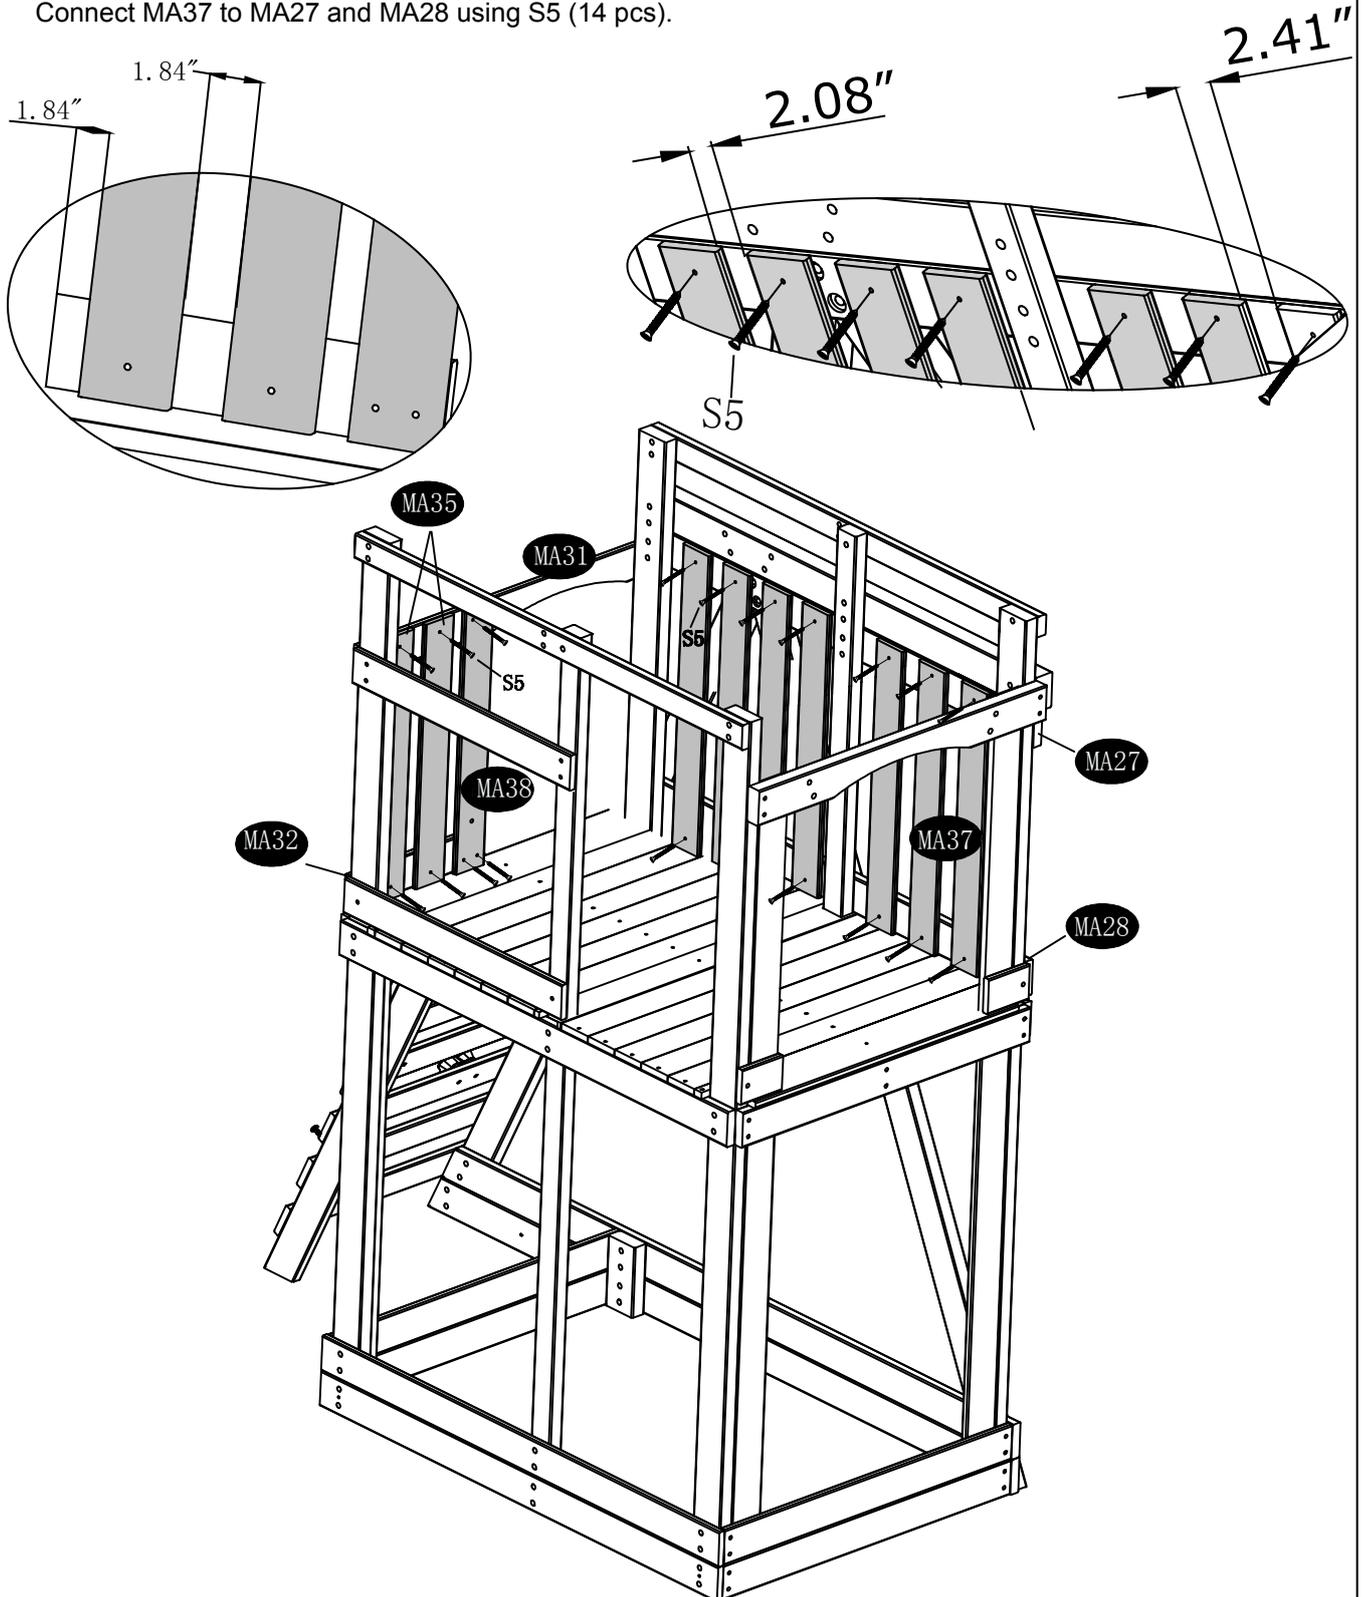


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 14

Part#	Qty	Hardware#	Qty
MA35	4 pcs	S5	9 pcs
U32	1 pc	S14	1 pcs

- Connect MA35 to MA29 and MA30 using S5 (8 pcs).
- Connect U32 to MA23 and MA38 using S5 (1 pc) and S14 (1 pc).


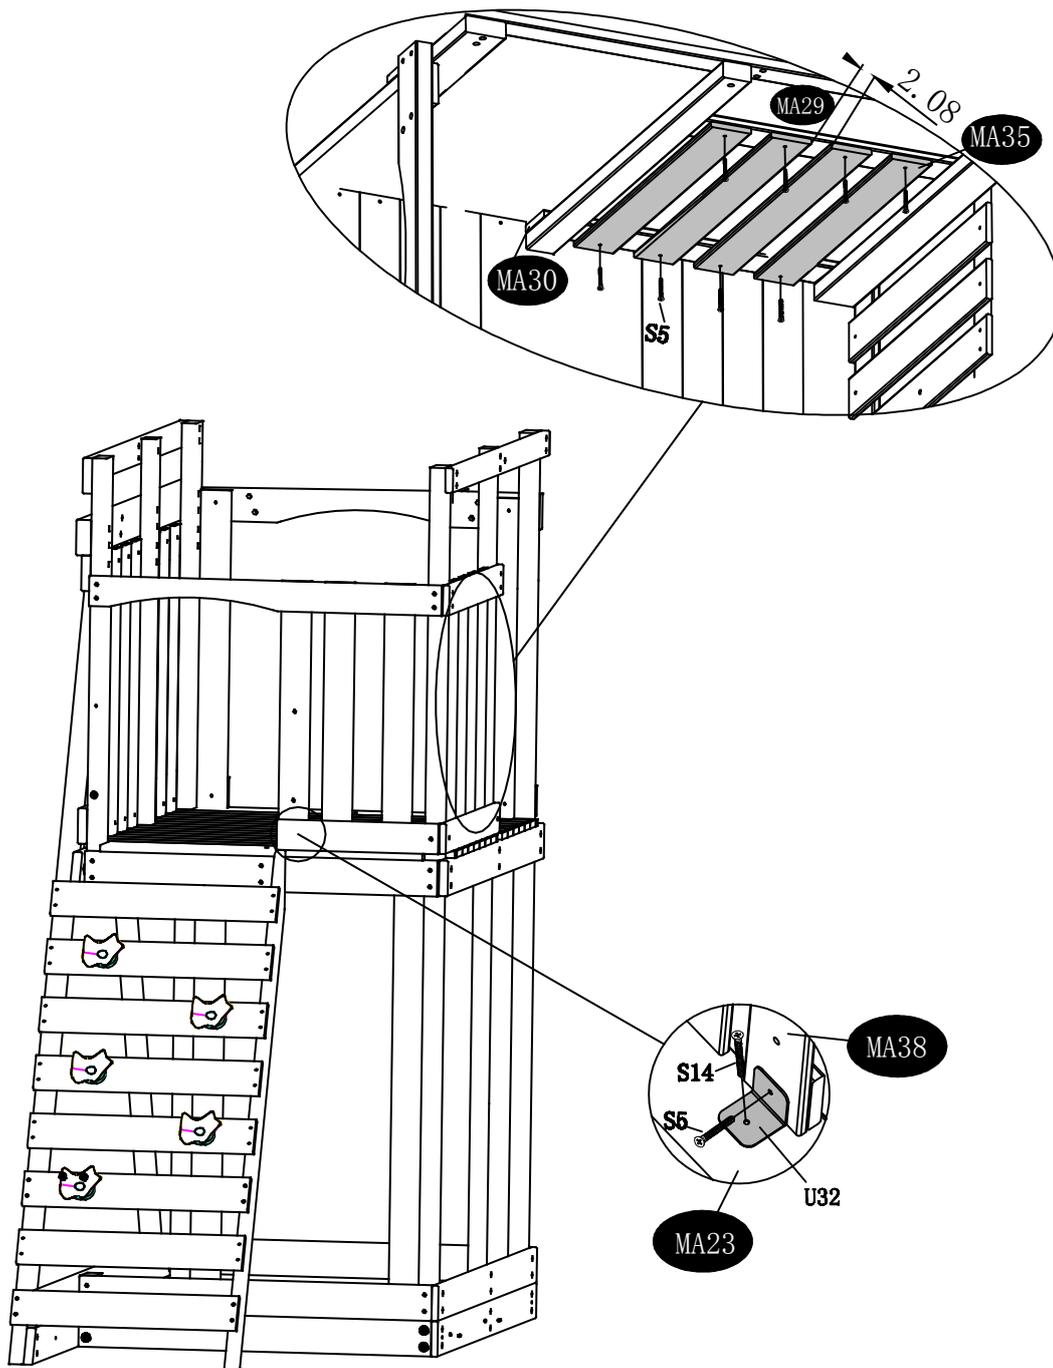


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 15

Part#	Qty	Hardware#	Qty
MA34	2 pcs	S6	10 pcs
MA43	2 pcs	S7	4 pcs
MA44	2 pcs		
MA45	1 pc		

- Connect MA45 to MA44 using S6 (2 pcs).
- Connect MA44 to MA43 using S7 (4 pcs).
- Connect MA34 to MA43 using S6 (8 pcs).

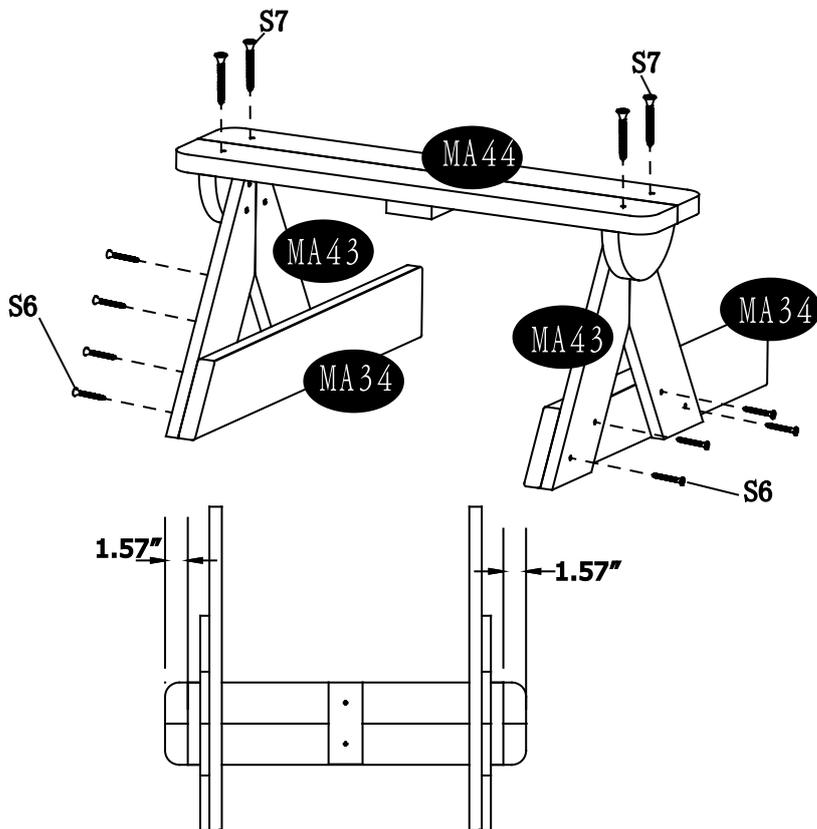
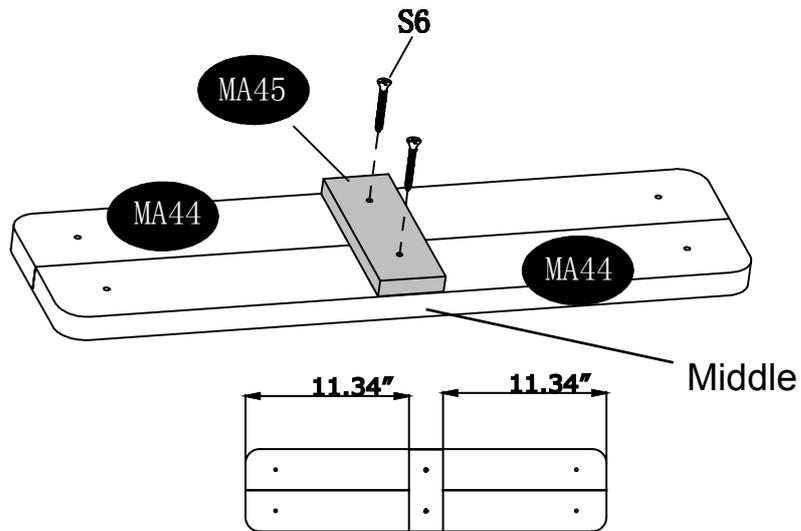


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 16

Part#	Qty	Hardware#	Qty
MA48	3 pcs	S5	3 pcs
MA49	1 pcs		

- Connect MA49 to MA48 using S5 (3 pcs).

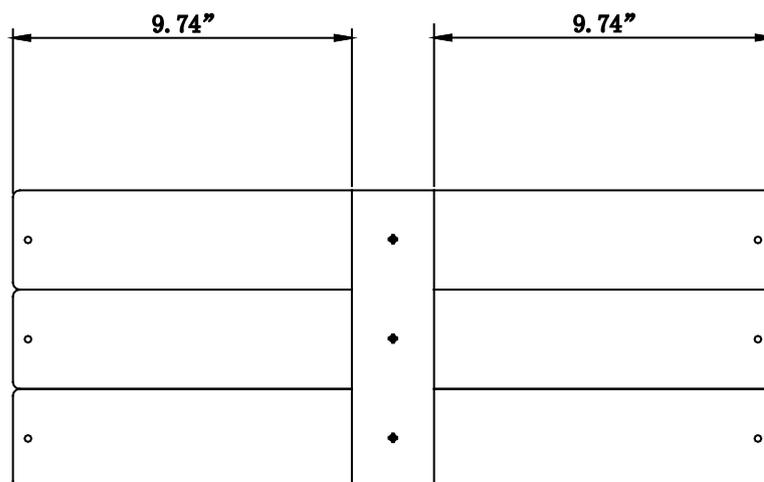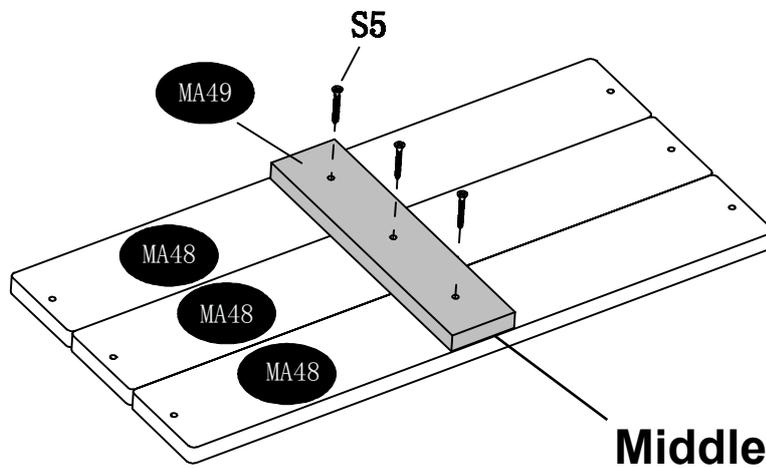


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 17

Part#	Qty	Hardware#	Qty
U32	4 pcs	S3,V20	4 sets
MA46	2 pcs	S7	4 pcs
MA47	2 pcs	S14	8 pcs
		S6	4 pcs

- Connect MA46 to MA12 using S3 and V20 (2 sets), connect MA47 to MA12 using S7 (2 pcs), and to MA46 using S6 (2 pcs).
- Connect MA46 to MA13 using S3 and V20 (2 sets), connect MA47 to MA13 using S7 (2 pcs), and to MA46 using S6 (2 pcs).
- Connect U32 to MA9 and MA34 using S14 (8 pcs).

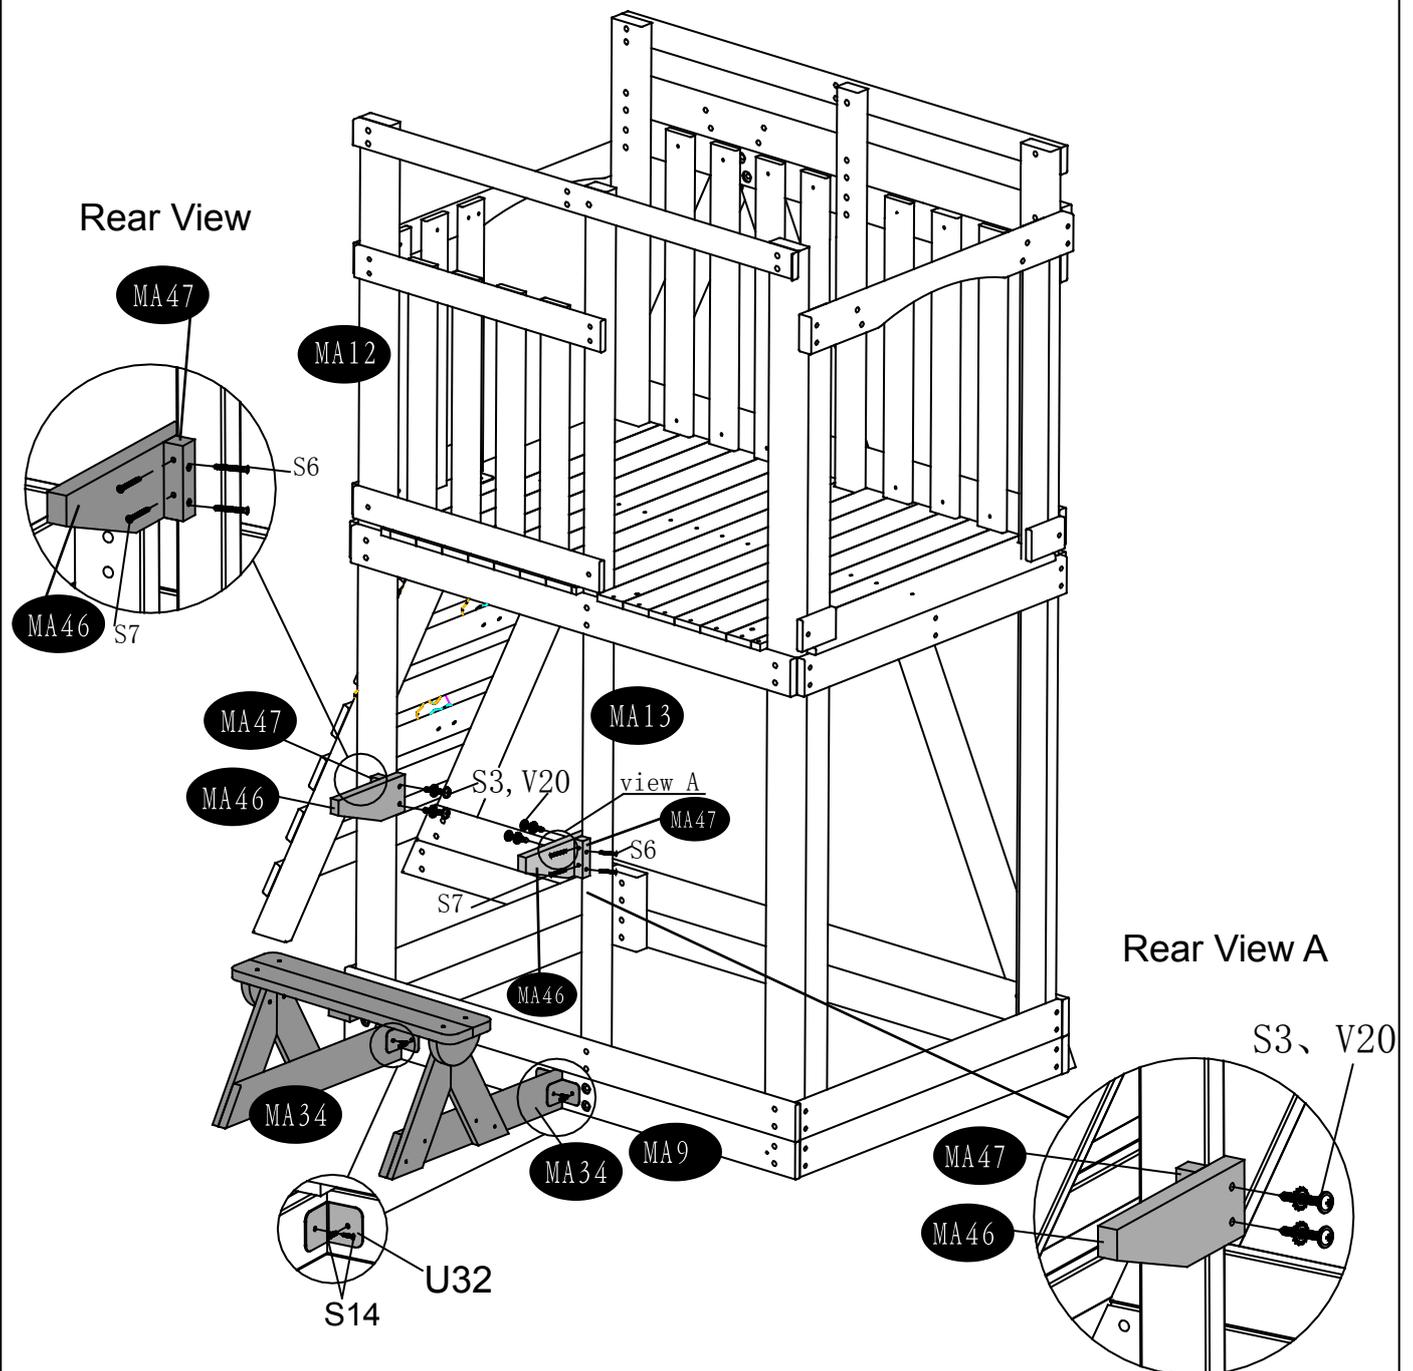


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 18

Part#	Qty	Hardware#	Qty
MA41	2 pcs	S6	8 pcs
MA42	1 pc	B1,V8,V9	4 sets

- Connect MA41 to MA39 using B1, V8 and V9 (4 sets).
- Connect MA42 to MA41 using S6 (2 pcs).
- Connect MA48 to MA46 using S6 (6 pcs).


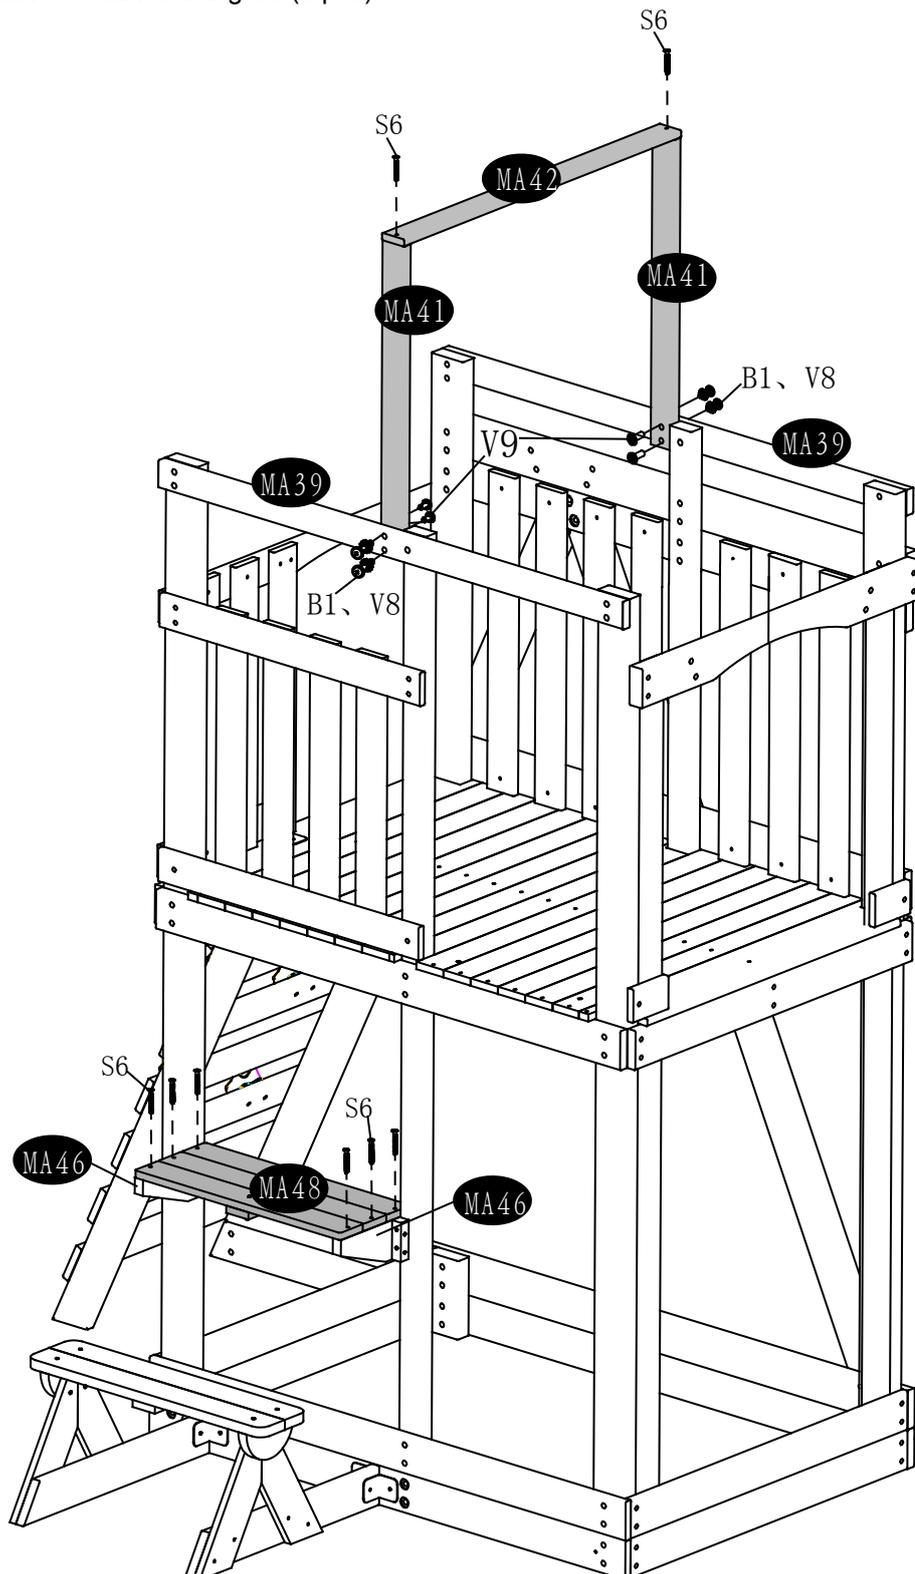


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 19

Part#	Qty	Hardware#	Qty
MA58	1 pc	B12,V20	10 sets
MA59	1 pc	B1,V24,V9	4 sets
U2	2 pcs		
U210	5 pcs		

- Connect U210 to MA58 and MA59 using B12 and V20 (10 sets).
- Connect U2 to MA58 and MA59 using B1, V24 and V9 (4 sets).

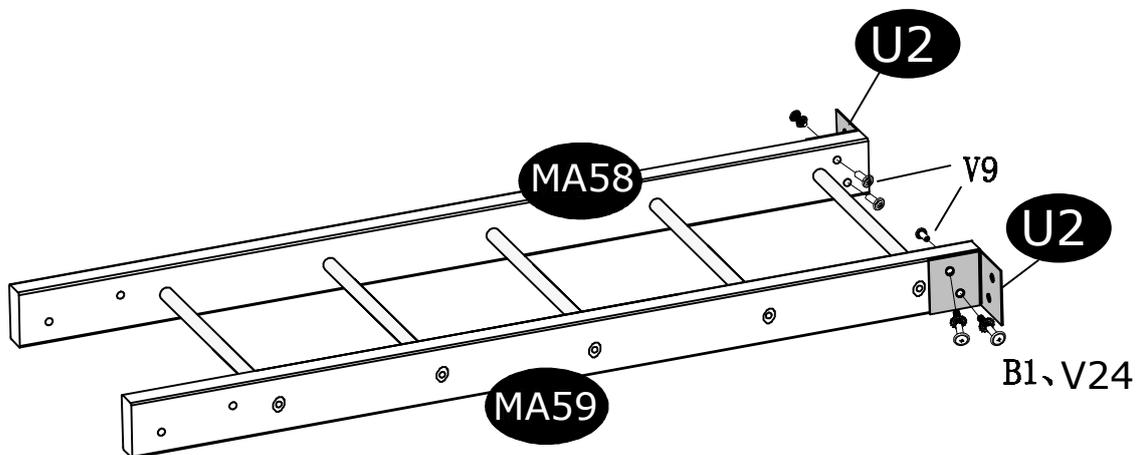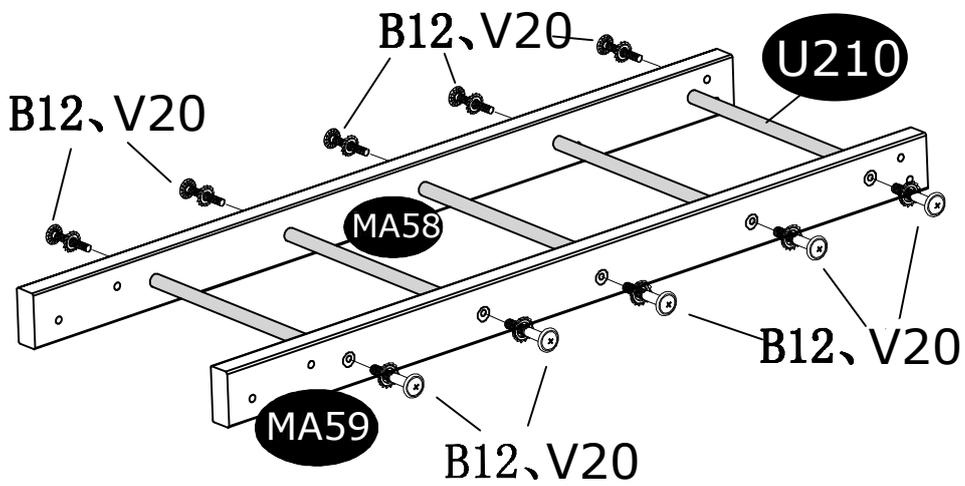


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 20

Part#	Qty	Hardware#	Qty
MA60	1 pc	S1,V2	4 sets
MA61	1 pc	S3,V20	6 sets
MA62	2 pcs	B3,V8,V9	2 sets
MA63	1 pc	B12,V20	4 sets
U42	2 pcs		
U210	2 pcs		

- Connect U42 to MA60 and MA61 using S1 and V2 (4 sets).
- Connect U210 to MA60 and MA61 using B12, V20 (4 sets).
- Connect MA62 to MA60 and MA61 using S3 and V20 (2 sets).
- Connect MA63 to MA62 using B3, V8 and V9 (2 sets), and to MA60 and MA61 using S3 and V20 (4 sets).

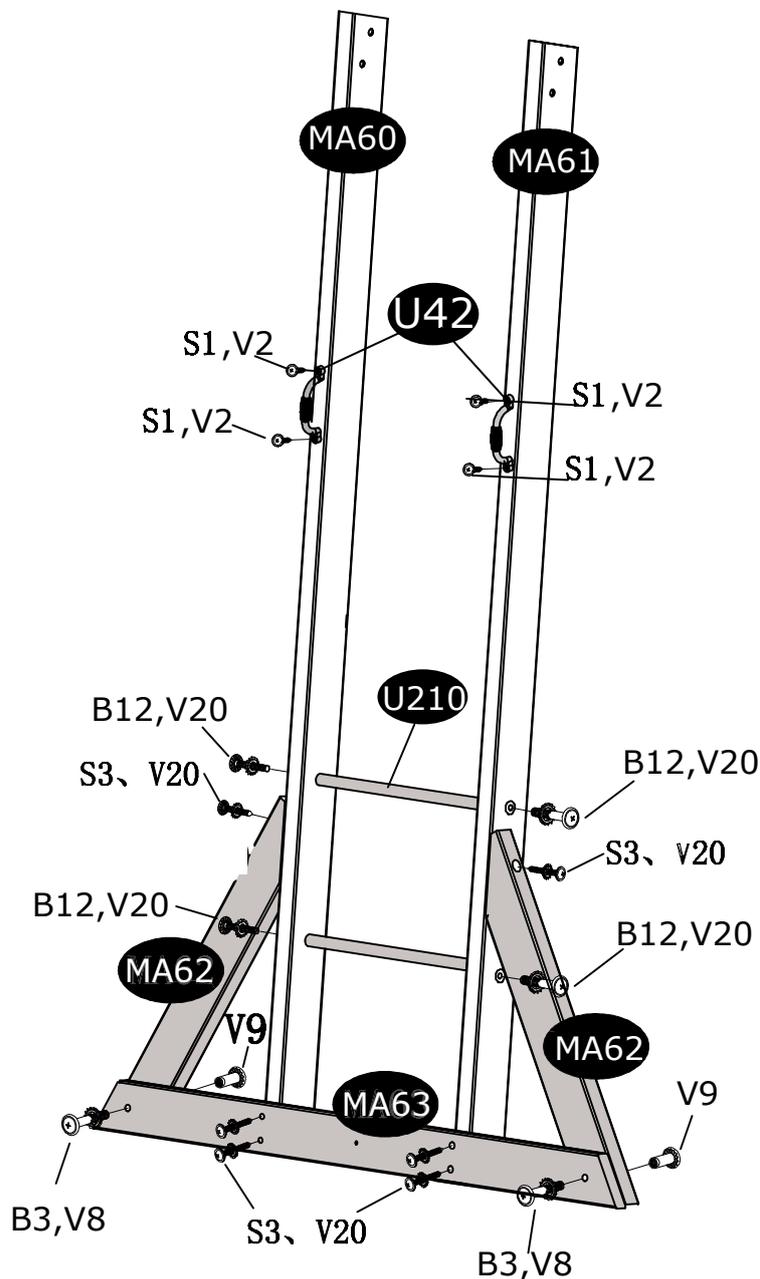


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 21

Part#	Qty	Hardware#	Qty
U3	4 pcs	B1	12 pcs
		V24	20 pcs
		V9	12 pcs

- Connect MA60 and MA61 to MA58 and MA59 with U3 using B1, V24 and V9, V24 (8 sets).
- Connect U2 to MA56 using B1, V24 and V9 (4 sets).

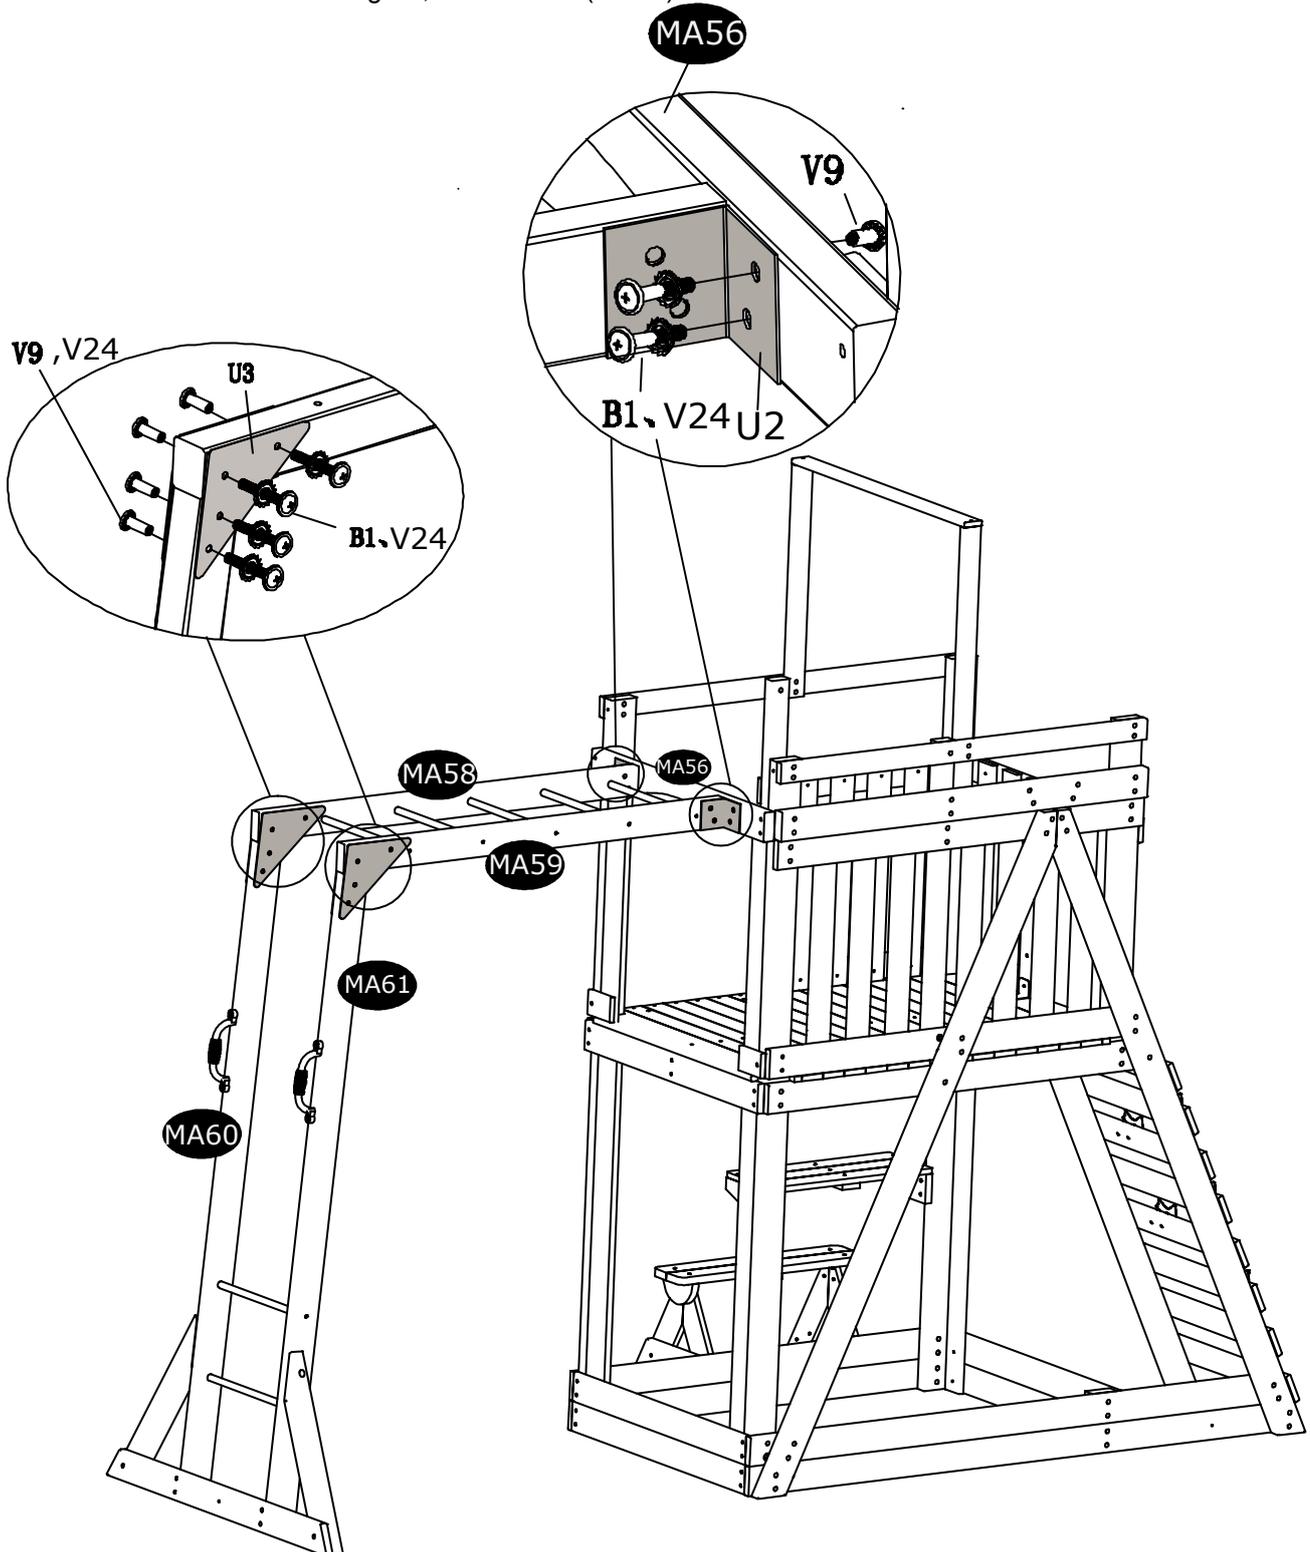


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 22

Part#	Qty	Hardware#	Qty
MA50	1 pc	B9	2 pcs
MA52	1 pc	V8	4 pcs
MA52A	1 pc	V9	2 pcs
MA53A	1 pc	S3	10 pcs
MA57	1 pc	V20	10 pcs

- Insert B9, V8 through MA52A, MA50 and MA52 and fasten with V8, V9 (2 sets) on the other end of screw.
- Connect MA57 to MA50, MA52 and MA52A using S3 and V20 (6 sets).
- Connect MA53A to MA52 and MA52A using S3 and V20 (4 sets).


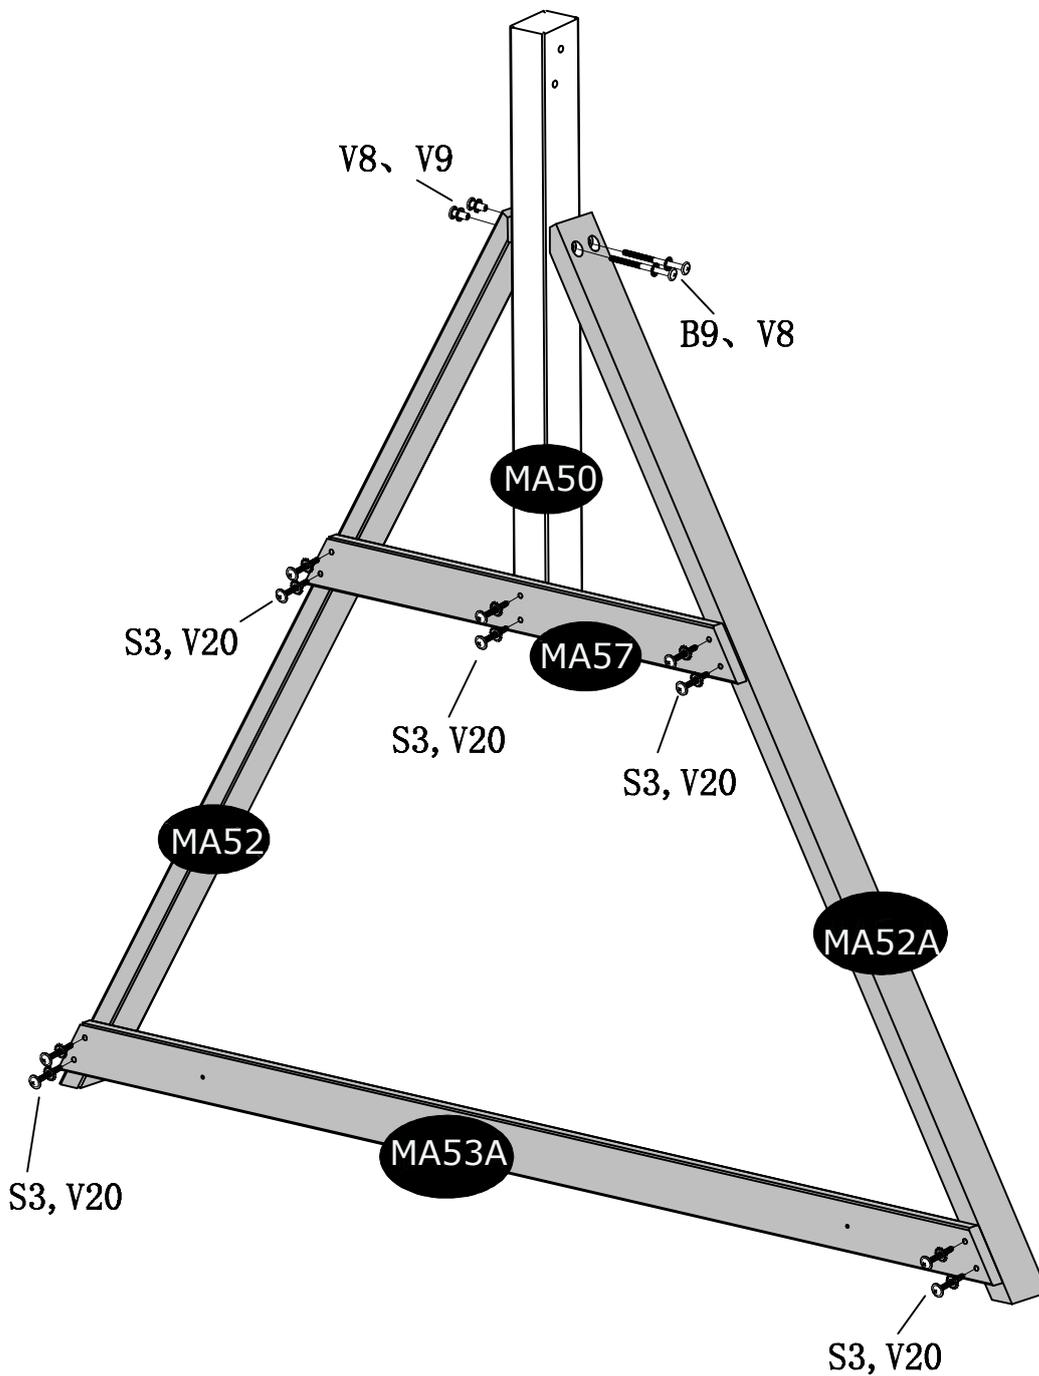


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 24

Part#	Qty	Hardware#	Qty
MA54	1 pc	V7,V1,V6	6 sets
MA55	1 pc	B4	2 pcs
		V9	2 pcs
		V24	4 pcs

- Connect U2 to MA54 using B4, V24 and V9, V24 (2 sets).
- Attach V7, V1 and V6 to MA54 and MA55 (6 sets).

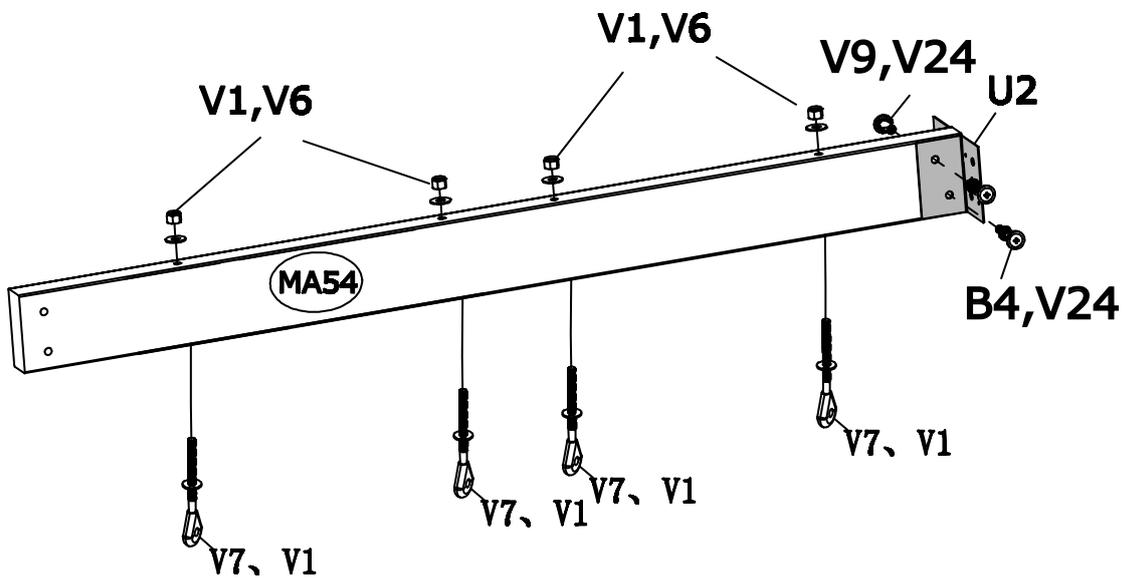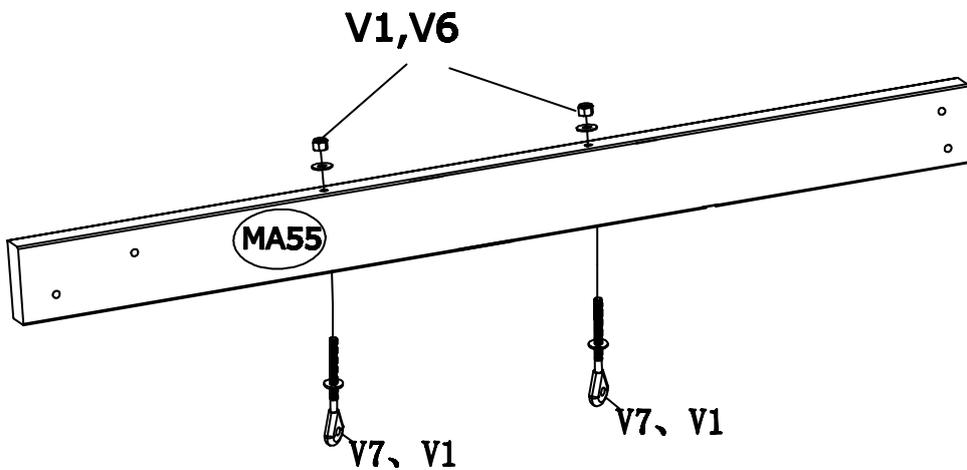


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 25

Part#	Qty	Hardware#	Qty
U74	2 pcs	B1	4 pcs
U3	2 pcs	B4	11 pcs
		V9	15 pcs
		V24	26 pcs

- Attach U2 to MA26 using B1, V24 and V9 (4 sets).
- Attach U3 to MA50 and MA55 using B4, V24 and V9, V24 (4 sets).
- Attach U74 to MA51, MA54 and MA55 using B4, V24 and V9, V24 (7 sets).

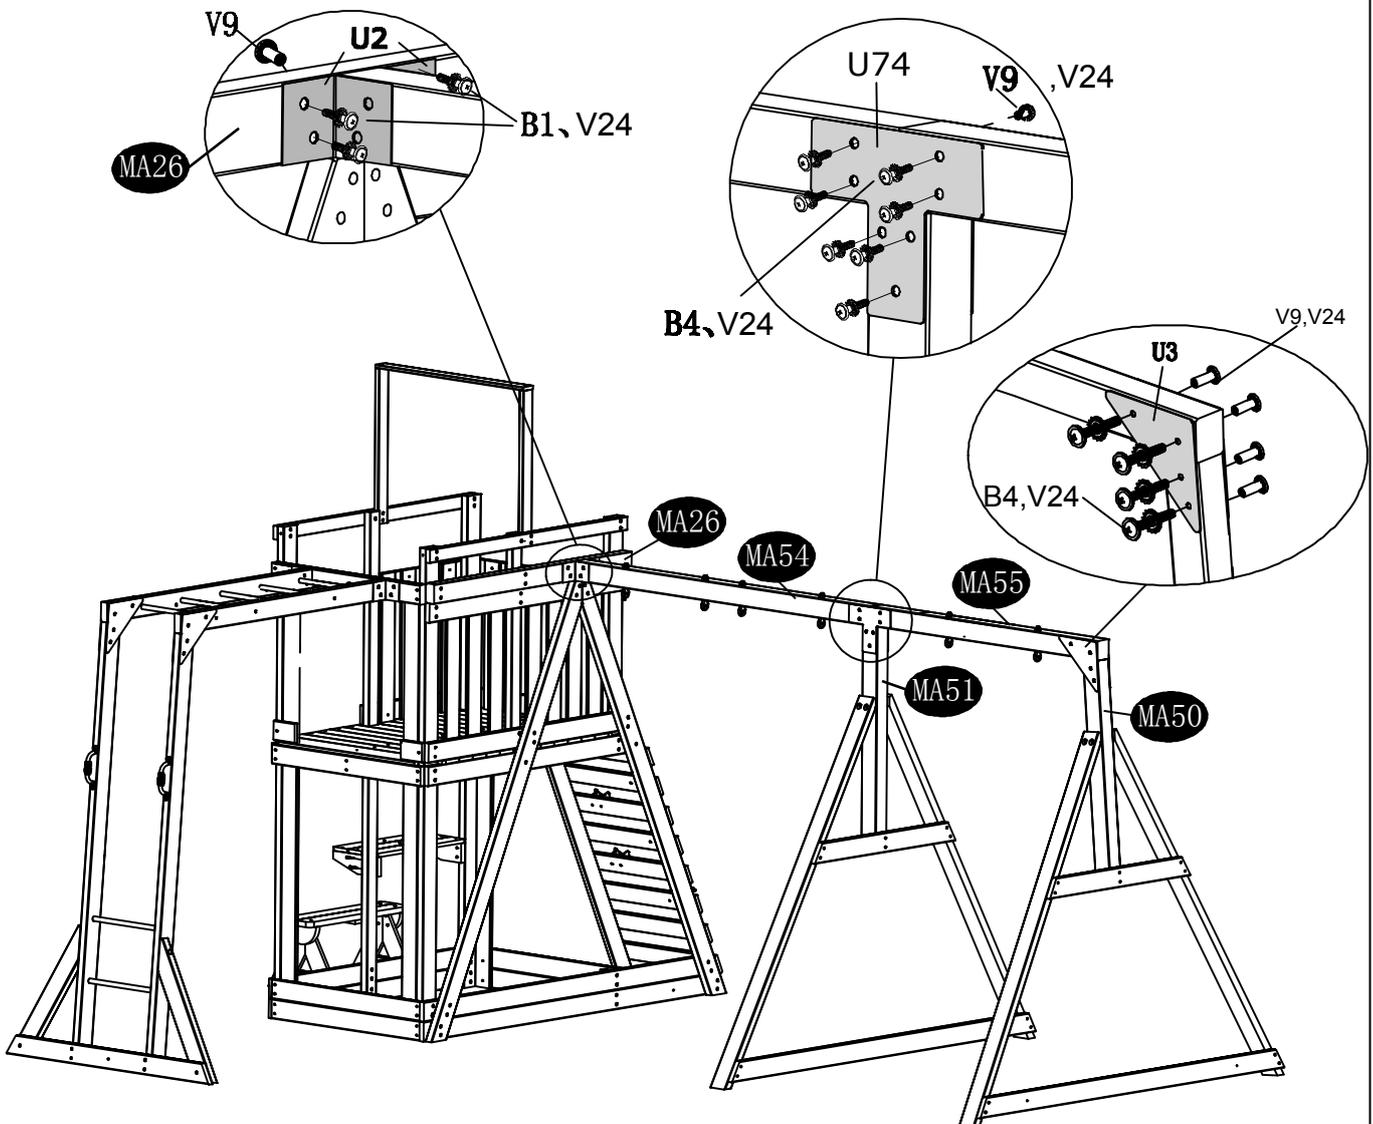



ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 26

Part#	Qty	Hardware#	Qty
U84	4 pcs	V6	4 pcs
U83	1 pc	V18	4 pcs
U77	4 pcs		

ATTACH TWO PERSON FLYING SAUCER IN THE FOLLOWING ORDER:

- Slide the smaller ends of U84 tubes into the pockets of flying saucer (U83). Connect the four tubes together. Align the holes with the round holes face down.
- Connect the chain U77 to the flying saucer (insert the end with shorter screw) and secure with V6 and V18 (4 sets).

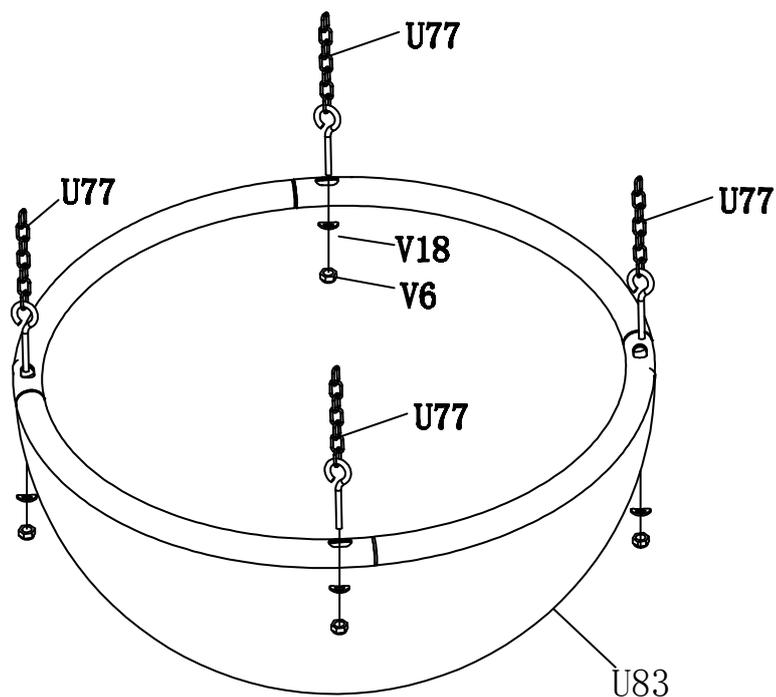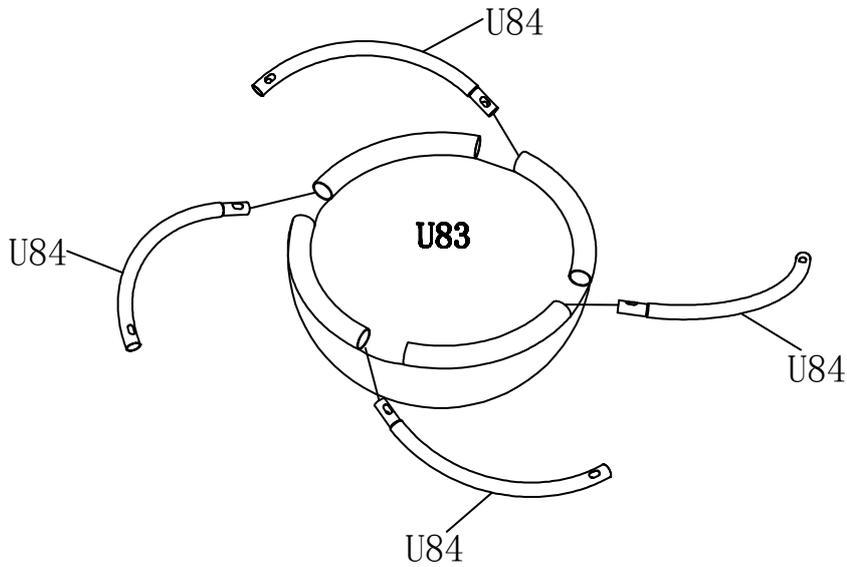


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 27

Part#	Qty	Hardware#	Qty
U5	2 pcs	NA	

- Attach the swing seat and flying saucer to the frame by locking U5 into the hook as shown.

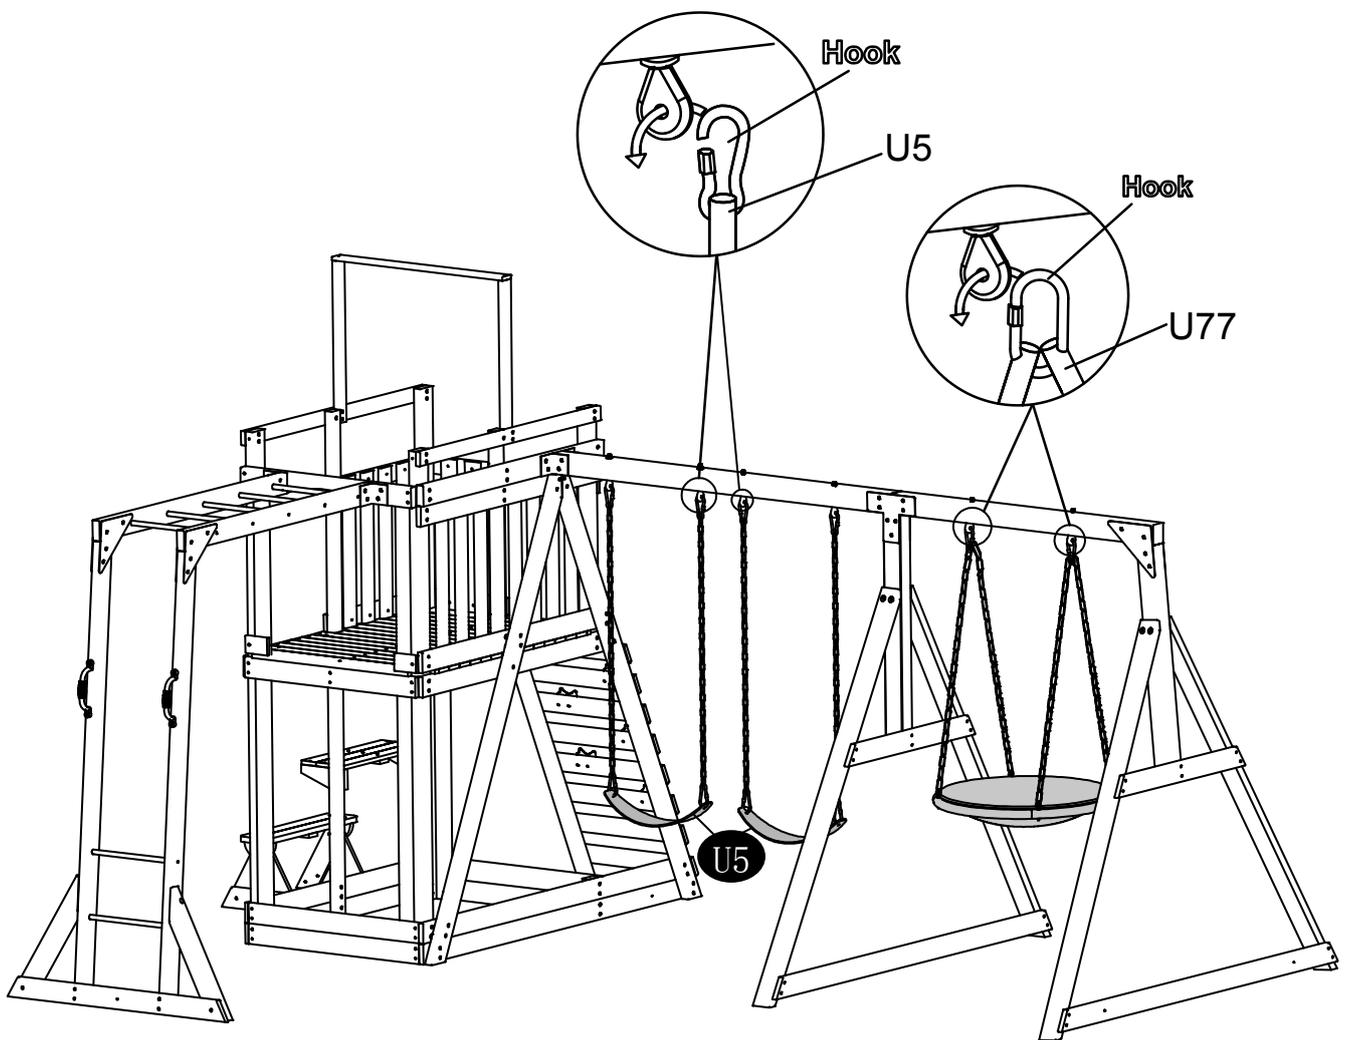


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 28

Part#	Qty	Hardware#	Qty
MA40	2 pcs	S6	6 pcs
MA64	1 pc		
U637	1 pc		

- Insert MA40 through U637, then connect them to MA39 using S6 (4 pcs).
- Connect MA64 to MA5 and MA7 using S6 (2 pcs).

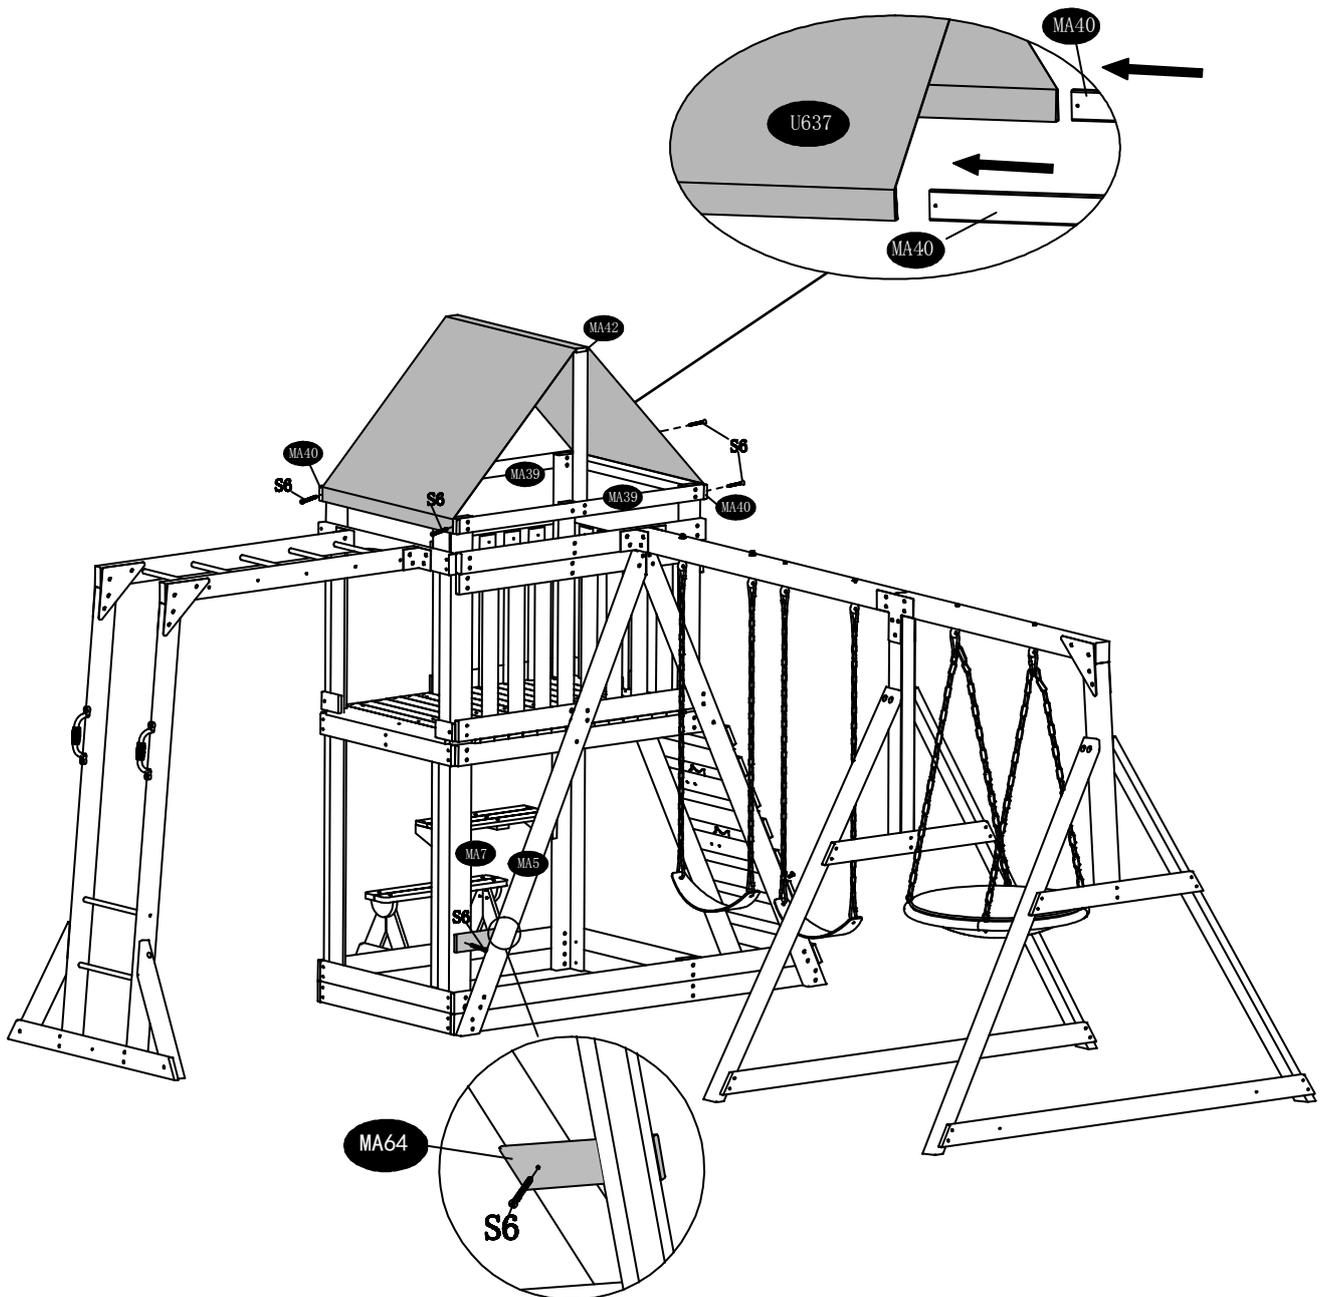

ASSEMBLY AND INSTALLATION INSTRUCTIONS


STEP 29

Part#	Qty	Hardware#	Qty
U42	2 pcs	S1,V2	2 sets
U7	1 pcs	B28,V2,V31	4 sets
U10D	1 pcs	S18, V2, V3	4 sets

- Attach U42 to MA1 using S1 and V2 (2 sets).
- Attach U42 to MA38 using B28, V2 and V31 (2 sets).

ATTACH SLIDE TO THE PLAYHOUSE IN THE FOLLOWING ORDER:

- Attach U10D to U7 using S18, V2 and V3 (4 sets).
- Connect U7 to MA25A and MA25B using B28, V2 and V31 (2 sets).

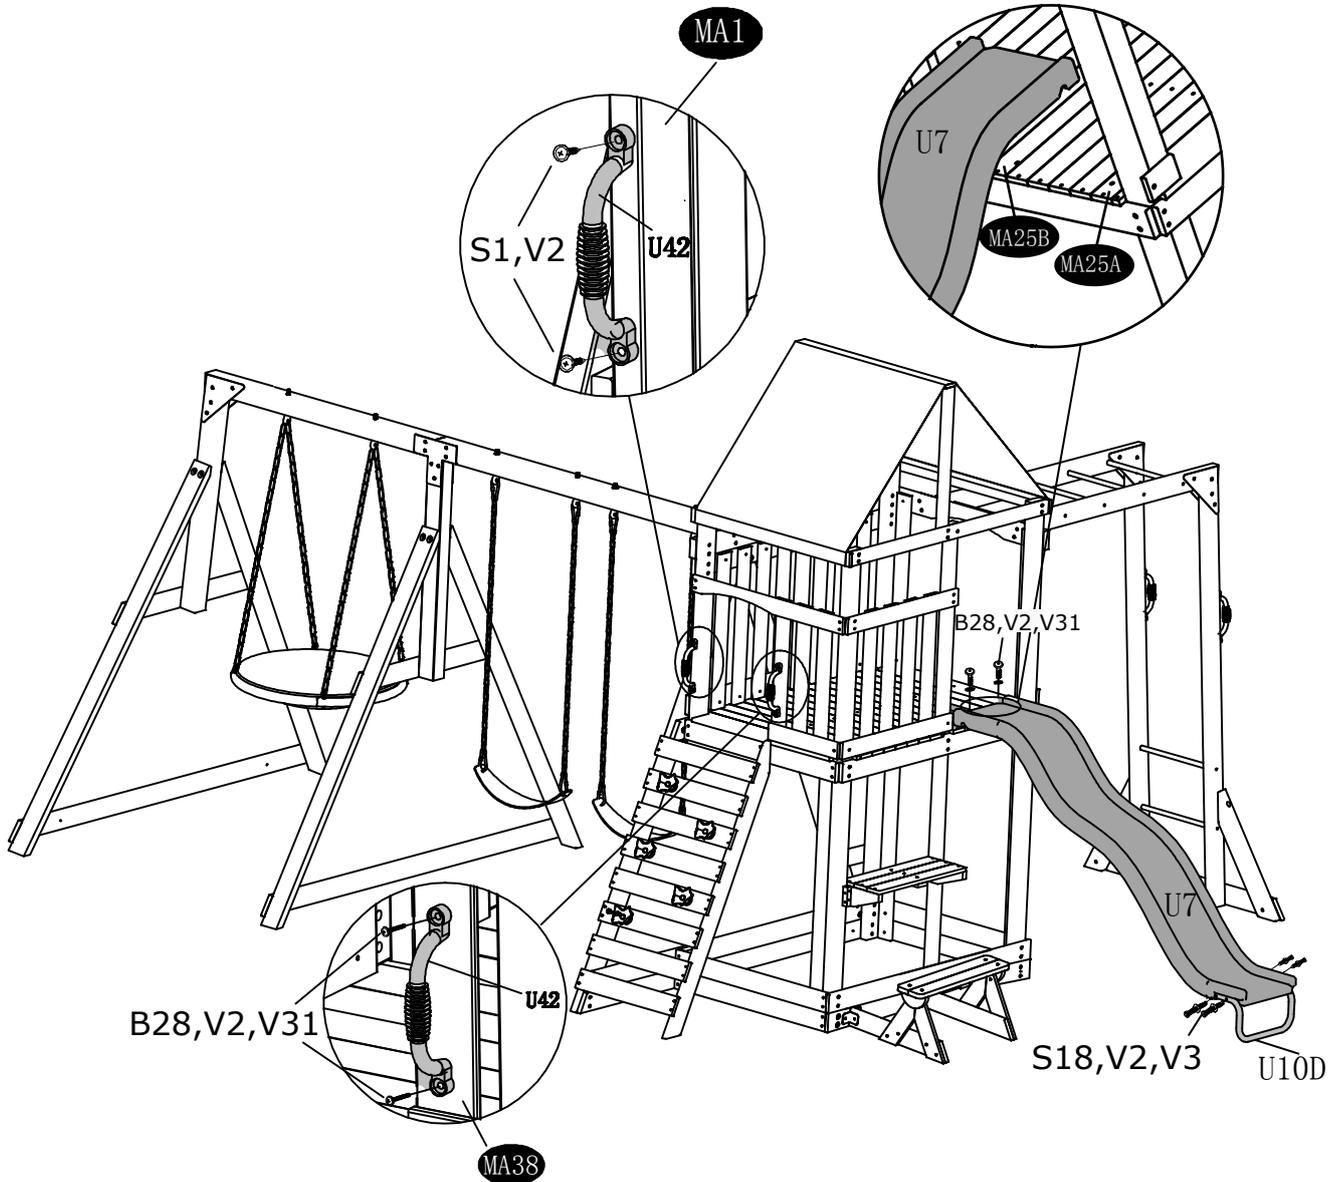


ASSEMBLY AND INSTALLATION INSTRUCTIONS

STEP 30

Part#	Qty	Hardware#	Qty
U50	5 pcs	S1	5 pcs

- Use U50 as the anchoring stakes for this set.
- Hammer U50 fully into the ground and secure to playhouse using S1 (5 pcs) as shown below.

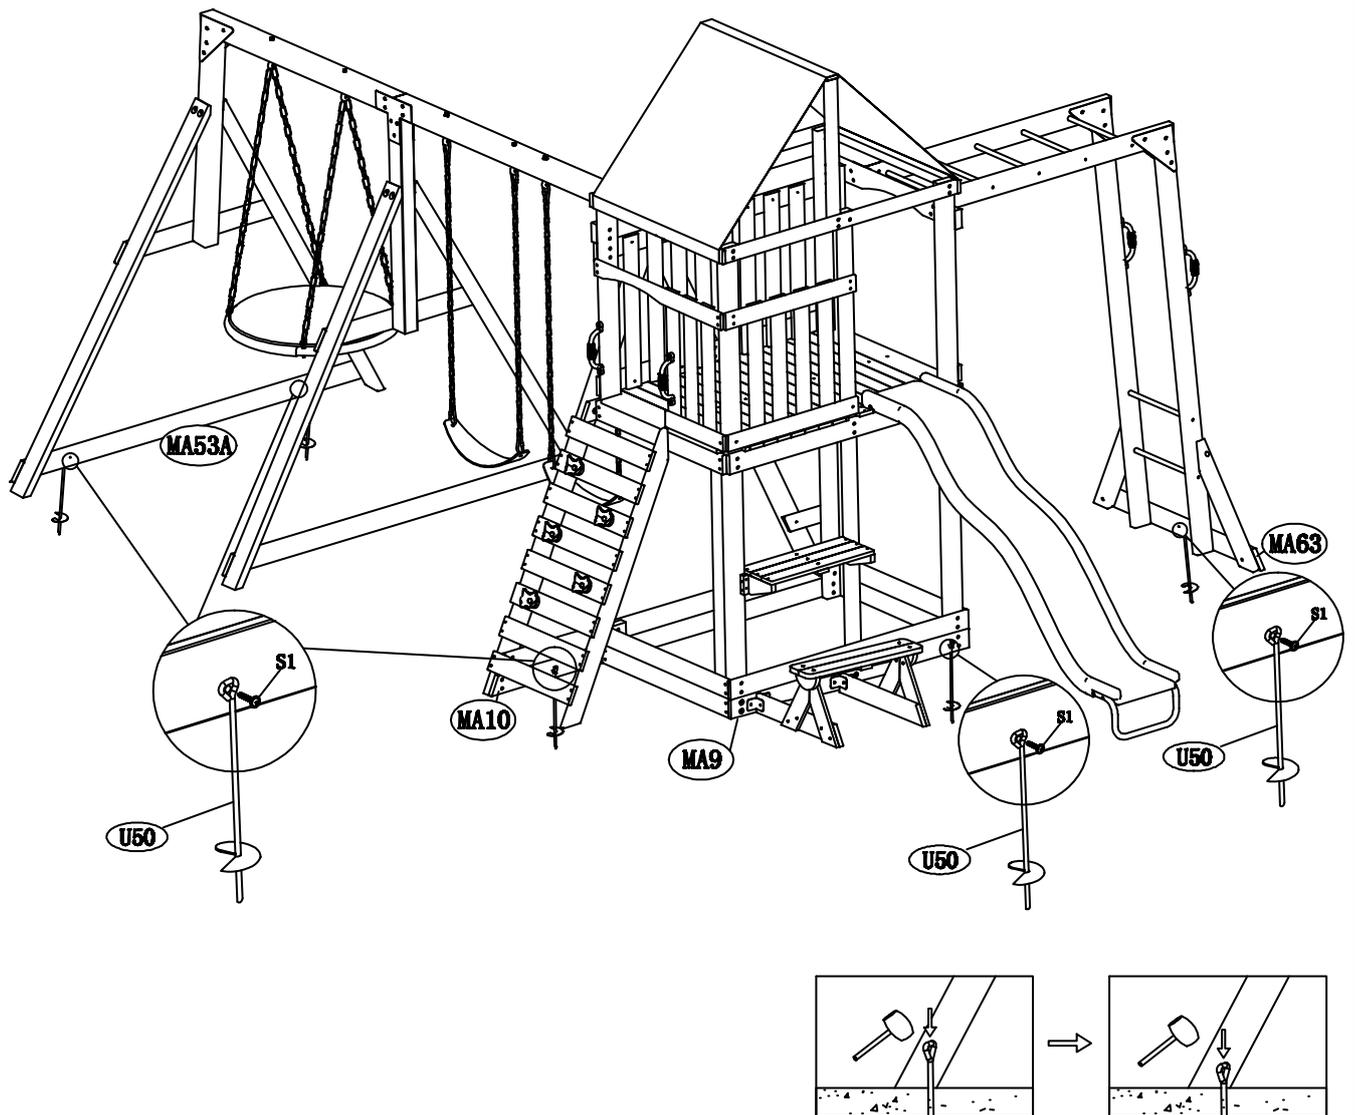

IMPORTANT:

BEFORE ALLOWING CHILDREN TO PLAY ON THE EQUIPMENT, THE 5 ANCHORS PROVIDED MUST BE INSTALLED. ALSO, PLEASE GO OVER THE ENTIRE UNIT AND MAKE SURE ALL SCREWS ARE TIGHTENED ALL THE WAY AND INSPECT THE ENTIRE UNIT TO ENSURE THE EQUIPMENT IS STABLE AND PROPERLY INSTALLED BEFORE ALLOWING CHILDREN TO PLAY.

PRODUCT WARRANTY

Sportspower Ltd warrants its products to be free from defects in material and workmanship under normal use and service conditions for 180 days after the date of purchase. Extended warranty for an extra 90 days will be offered to those customers registering their products at www.sportspowerltd.net within 14 days from the date of purchase.

All warranty coverage extends only to the original purchaser of the product and is not assignable or transferable. The original store or online purchase receipt must be kept as proof of purchase in order for the warranty to be valid. These documents must be presented in the event of making a claim under warranty.

During the warranty period, Sportspower will provide repair or replacement of defective equipment or parts thereof covered by the warranty. Any handling, transportation, delivery and other incidental charges in respect of the servicing of the equipment shall be borne by the Purchaser. If the product includes a number of accessories, only the defective part or accessory will be replaced.

The warranty will become void if any defects or damages are associated with the use of unauthorized replacement parts. All replacement parts must be obtained from Sportspower authorized agents.

All decisions made by Sportspower in respect of the servicing of the equipment (including repairs, replacements or issues relating to defects of workmanship or materials) shall be conclusive and the Purchaser agrees to be bound by such decisions. Any defective equipment or part thereof replaced shall become the property of Sportspower.

In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e. 180 days from the original purchase date.

This warranty excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse or being tampered with by unauthorized persons.

The Sportspower Limited Warranty does not cover:

- (a) Products used for commercial or rental purposes.
- (b) Loss or damage to product due to: (i) abuse, repairs and/or tampering by any person other than the authorized personnel of Sportspower; (ii) negligence and/or misuse (including foreign object, accident, improper storage, exposure to sun/moisture, excessive temperature, sand, dust, dirt, other pollution or other environmental conditions and failure to follow precautions or proper operating instructions stated in the User's Manual such as improper installations); (iii) fire, flood, lightning strike, wind storm or other acts of God; (vi) freight or improper transport damages, and (v) improper usage (including use by under-age, over-weight or excessive number of users permitted as stated in the User's Manual).
- (c) Defects, damages or accidents due to the malfunction, connection to or use of non-Sportspower or unauthorized parts. In such event, Sportspower reserves the right to cancel the Limited Warranty coverage immediately.

To the extent allowed by the applicable local law, the remedies in the Limited Warranty are the Purchaser's sole and exclusive remedies.

PRODUCT WARRANTY

SPORTSPOWER IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUE OR PROFITS, LOSS OF ENJOYMENT OR USE, COST OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES.

PLEASE NOTE: ANY REPAIRS OR REPLACEMENTS MUST BE MADE USING AUTHORIZED SPORTSPOWER PARTS IN ORDER FOR THIS WARRANTY TO BE VALID.

For Customer Service, please call 1-866-370-2131

Monday – Friday 9:00 AM – 5:00 PM Eastern Time

or visit www.sportspowerltd.net

Sportspower Limited

Level 20, Parkview Centre, 7 Lau Li Street, Causeway Bay, Hong Kong

NA-20-WP-637-18001