 


INSTALLATION

 
 
Product Manual

Version: 750014US-01-26A-ZY

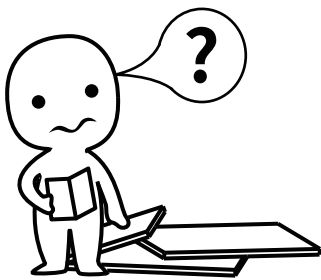


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

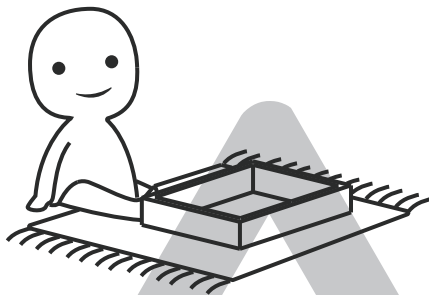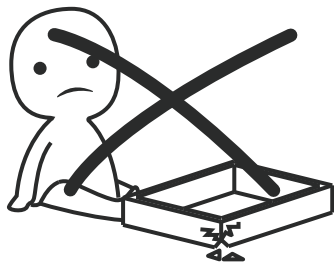



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

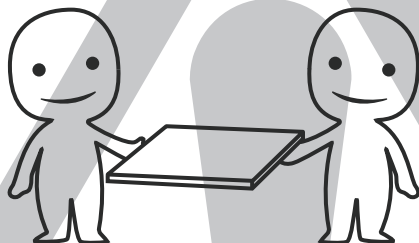

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

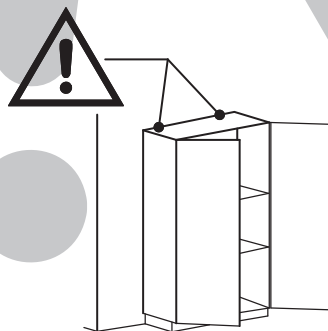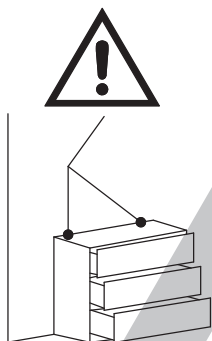

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

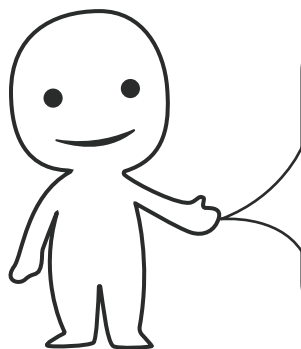


Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 A x 102

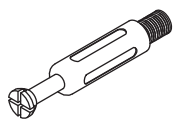


Ø 6 x 40 mm

B x 102




Ø 6 x 40 mm

 C x 7



D x 2

 

E x 7



 
M4 x 18 mm

F x 4



M4 x 10 mm

G x 14

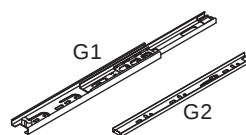

290 mm

H x 124



Ø 3.5 x 14 mm

 
J x 2



K x 52



L x 8




M x 6




N x 2



 
P x 6



Q x 2

 

Ø 8 x 30 mm

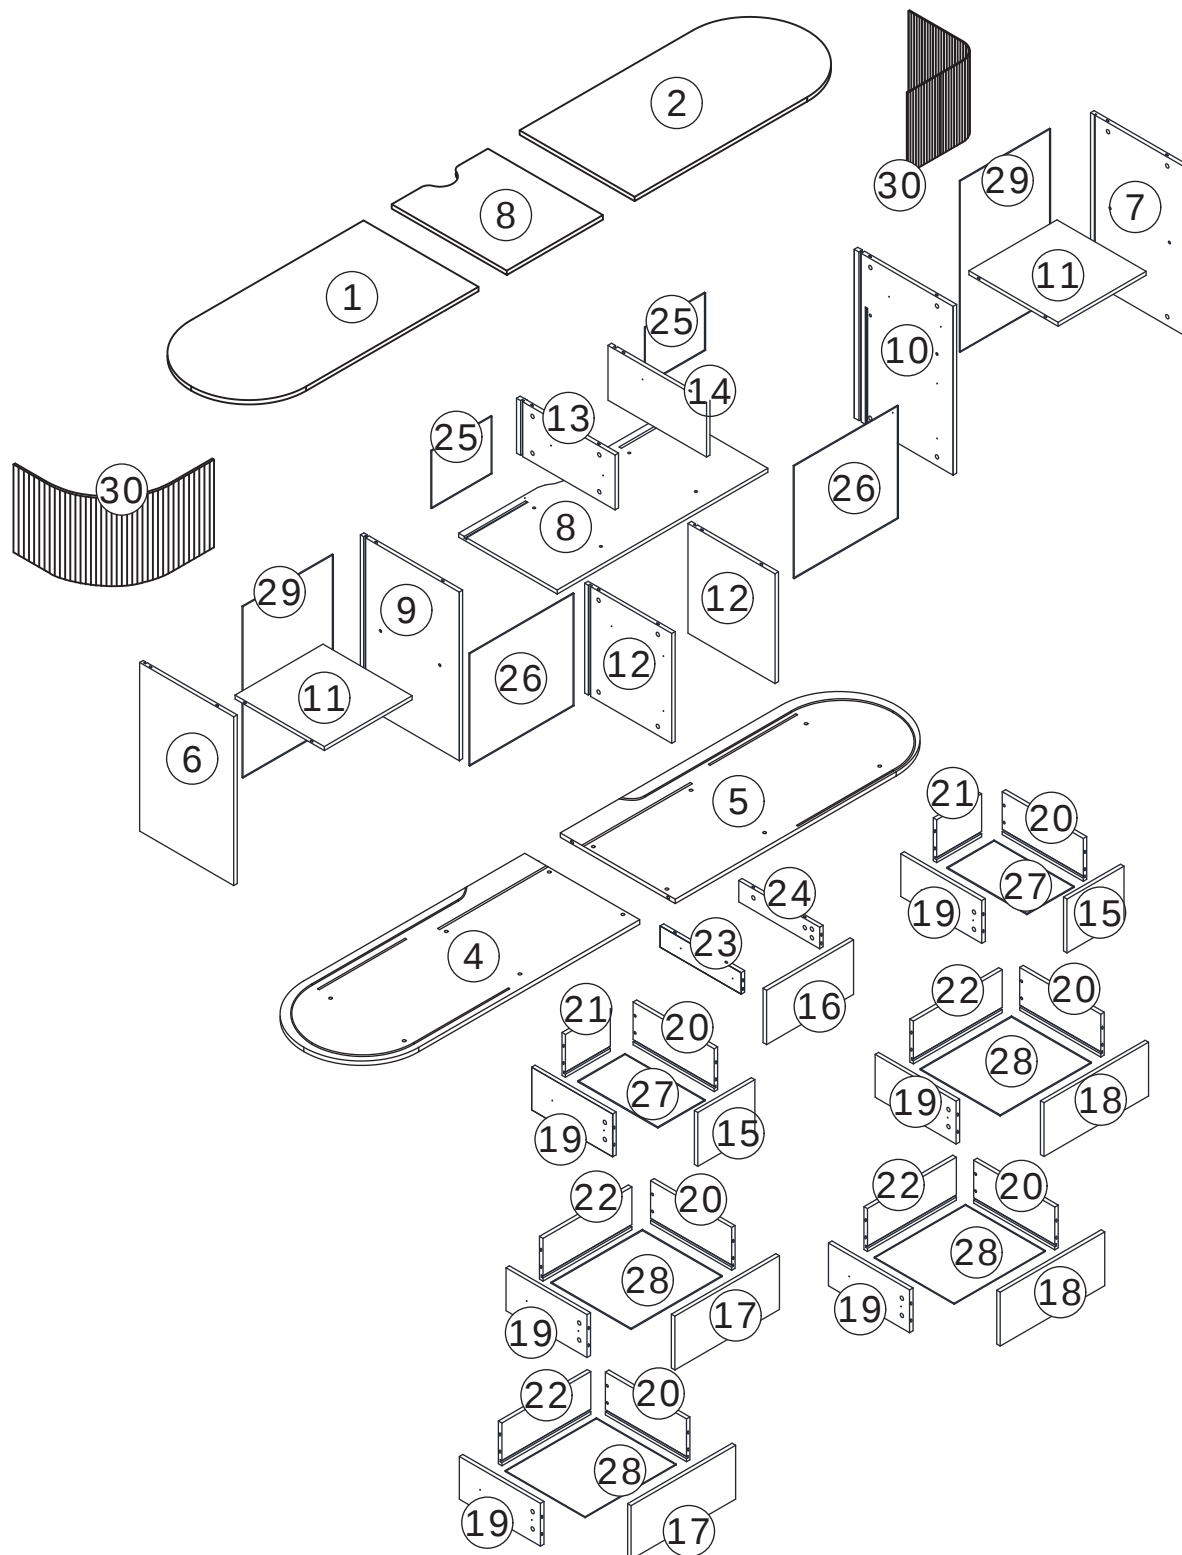 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

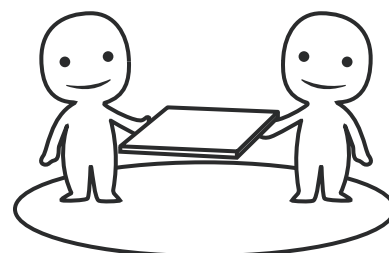


ASSEMBLED BY 2 ADULTS


Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

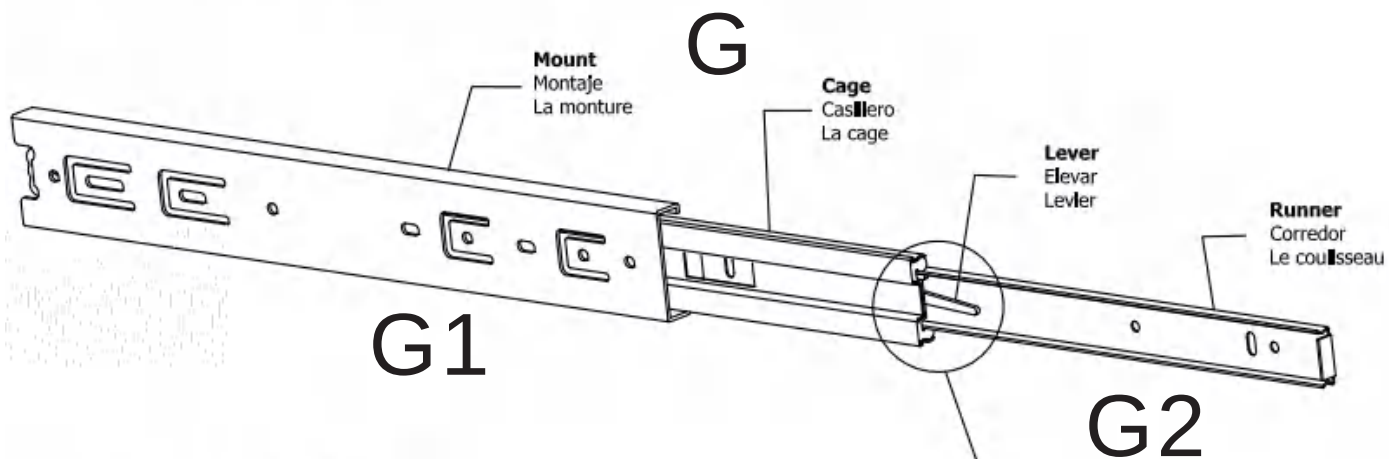

 
STEP 1: Extend Slide
Extender la diapositiva
Extendre la diapositive

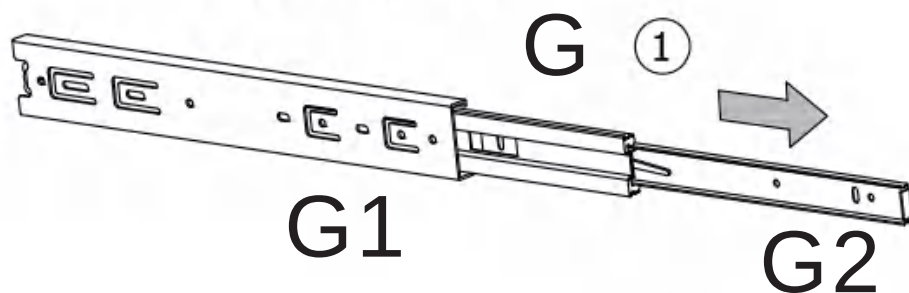




 
STEP 2: Push Lever UP
Empujar hacia arriba
Lever le levier

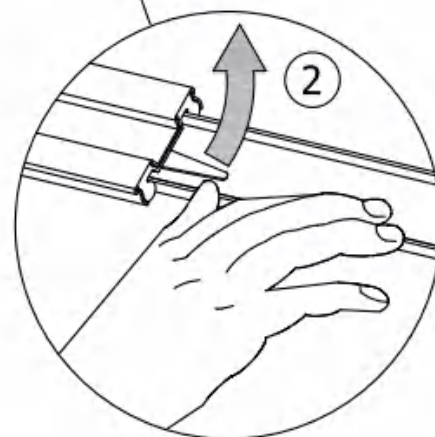

 STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur


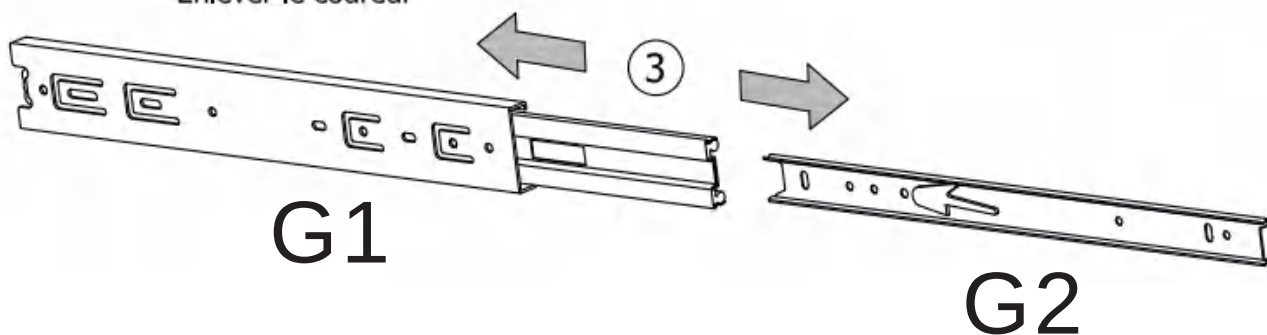


1


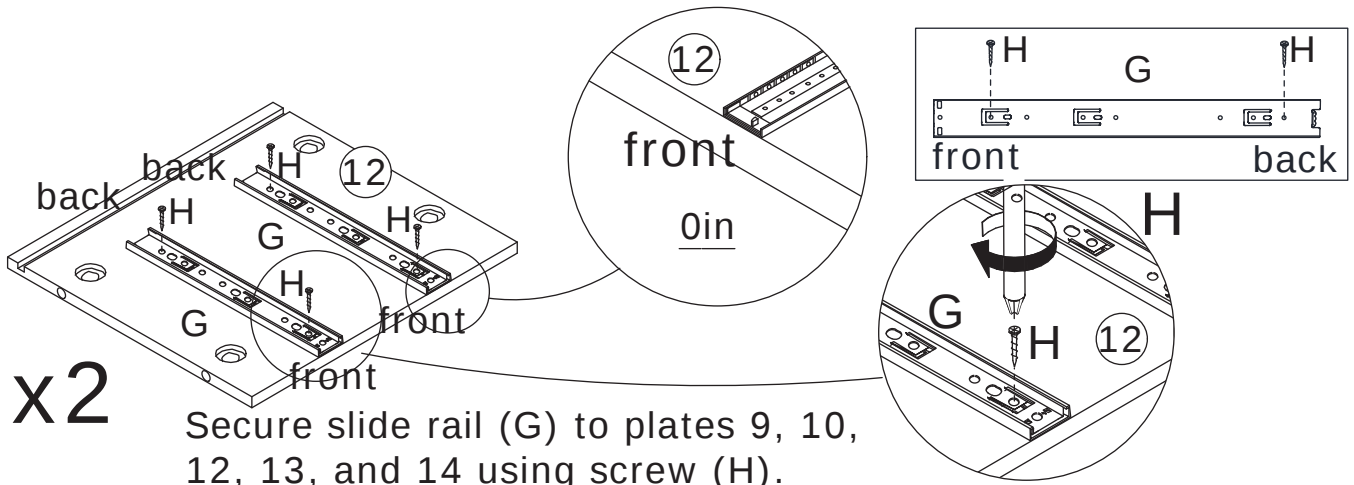 
 
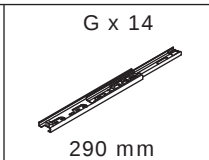 
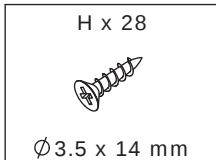 


x2

 
 
Secure slide rail (G) to plates 9, 10, 12, 13, and 14 using screw (H).

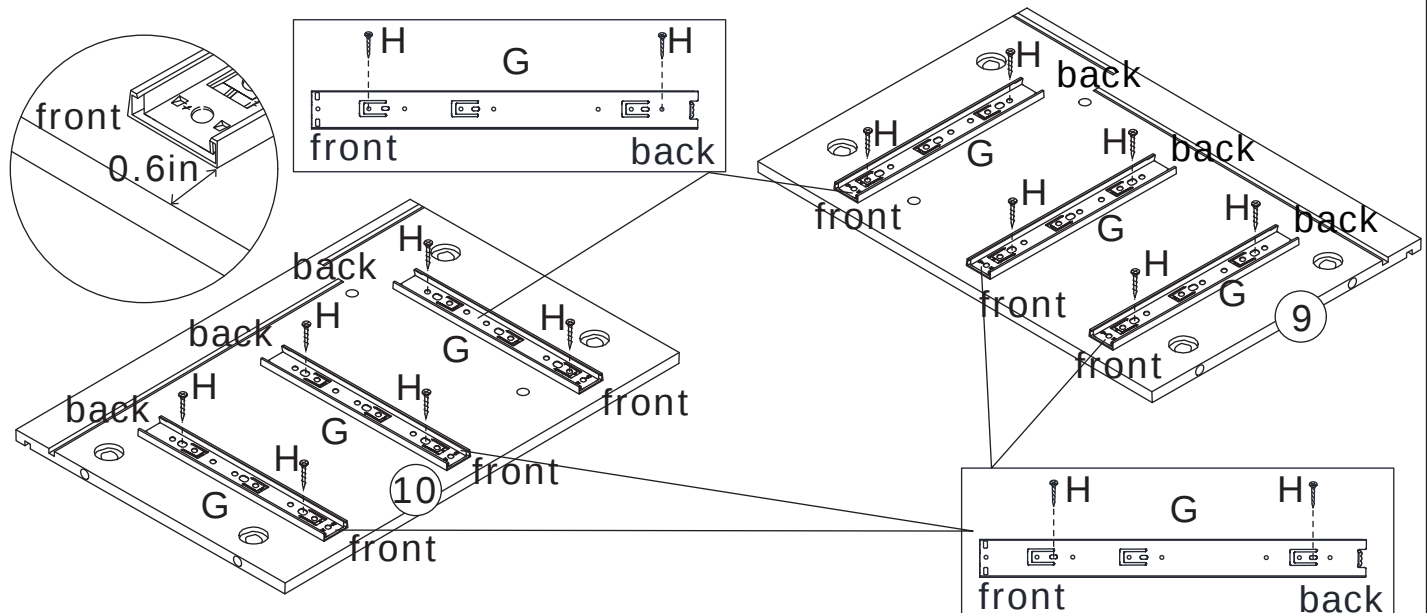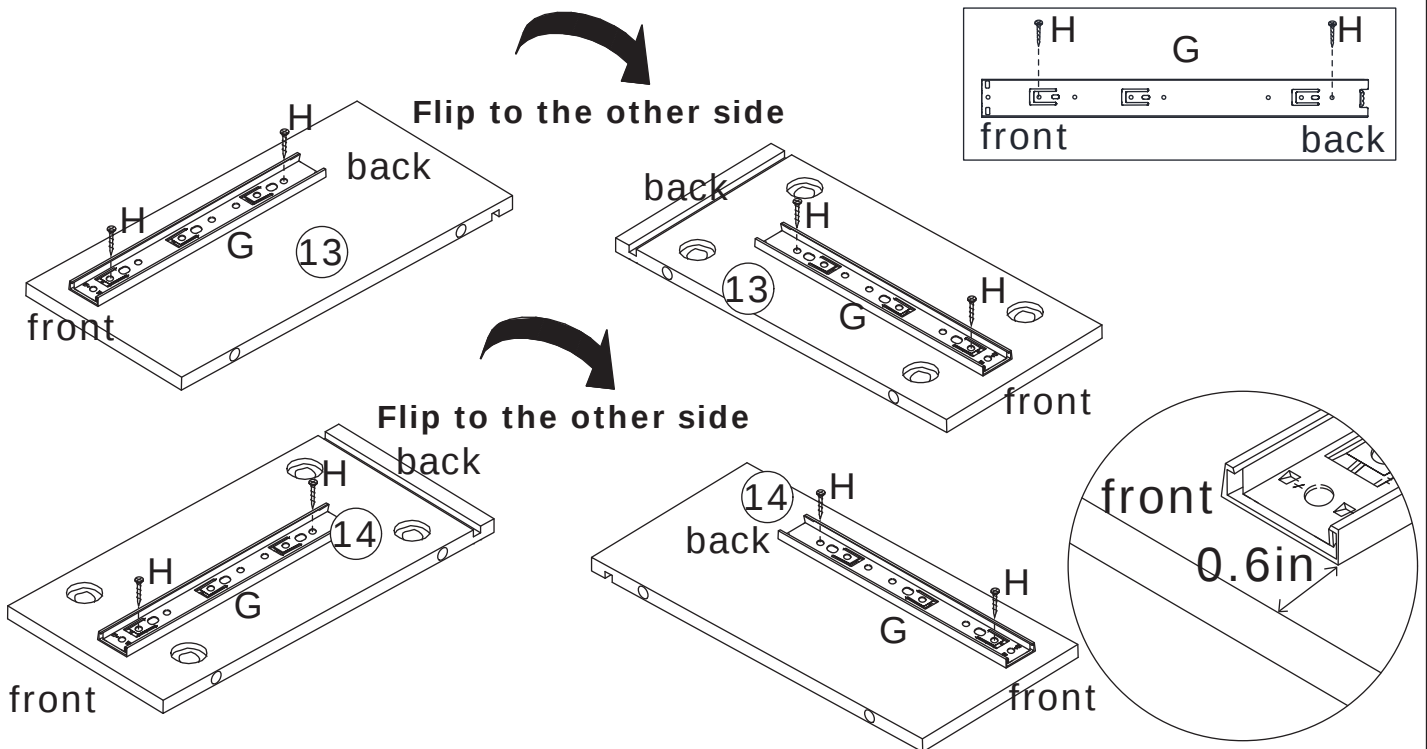

2

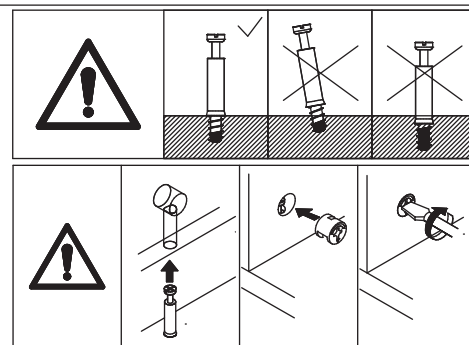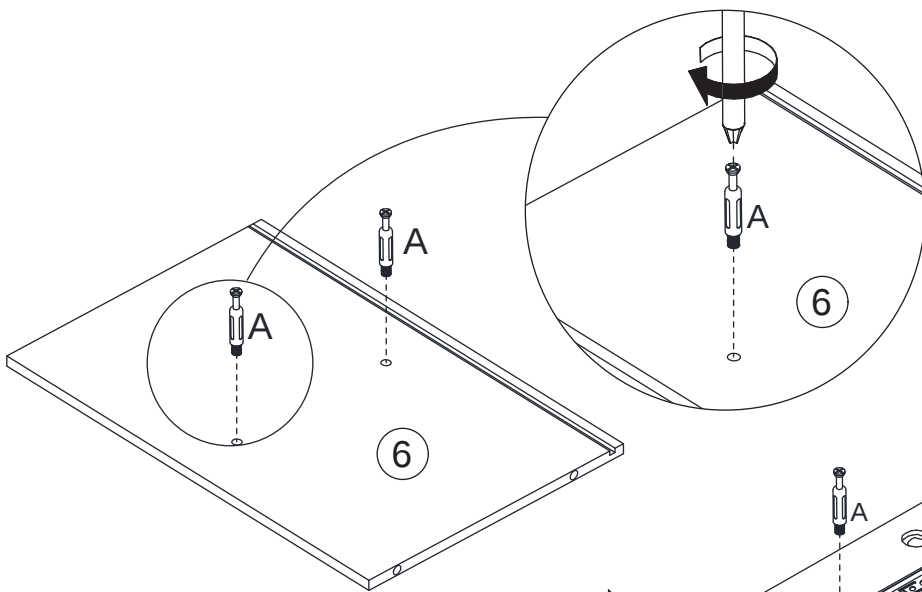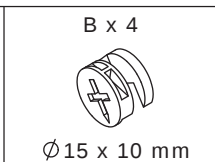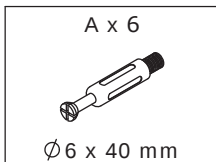     


Flip to the other side



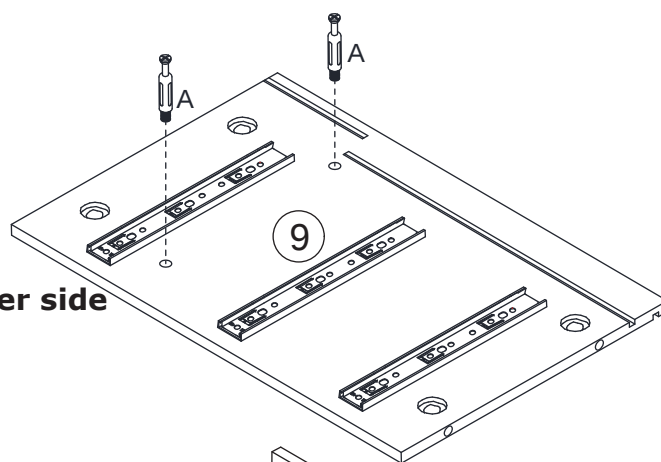 
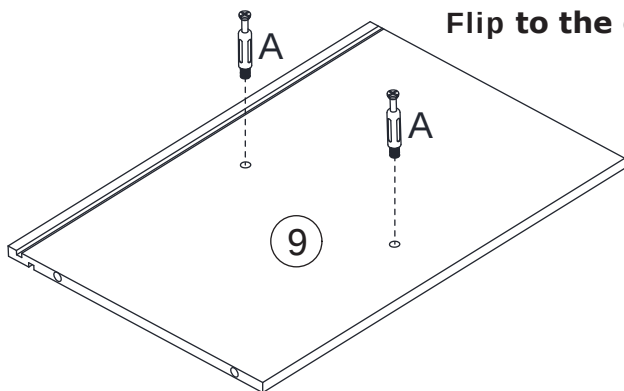 


Screw eccentric rod (A) onto plates 6 and 9.

 Connect plate 11 to plates 6 and 9, then tighten by turning eccentric wheel (B) clockwise.

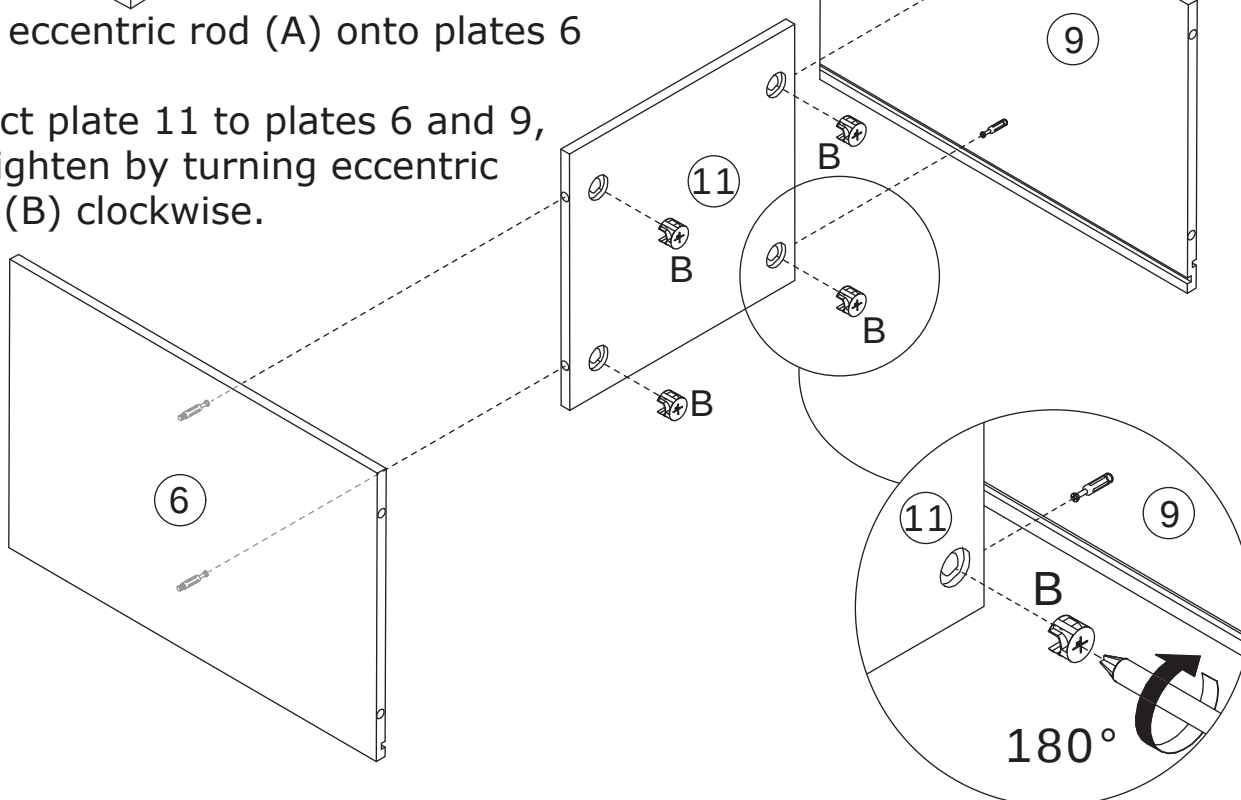

3

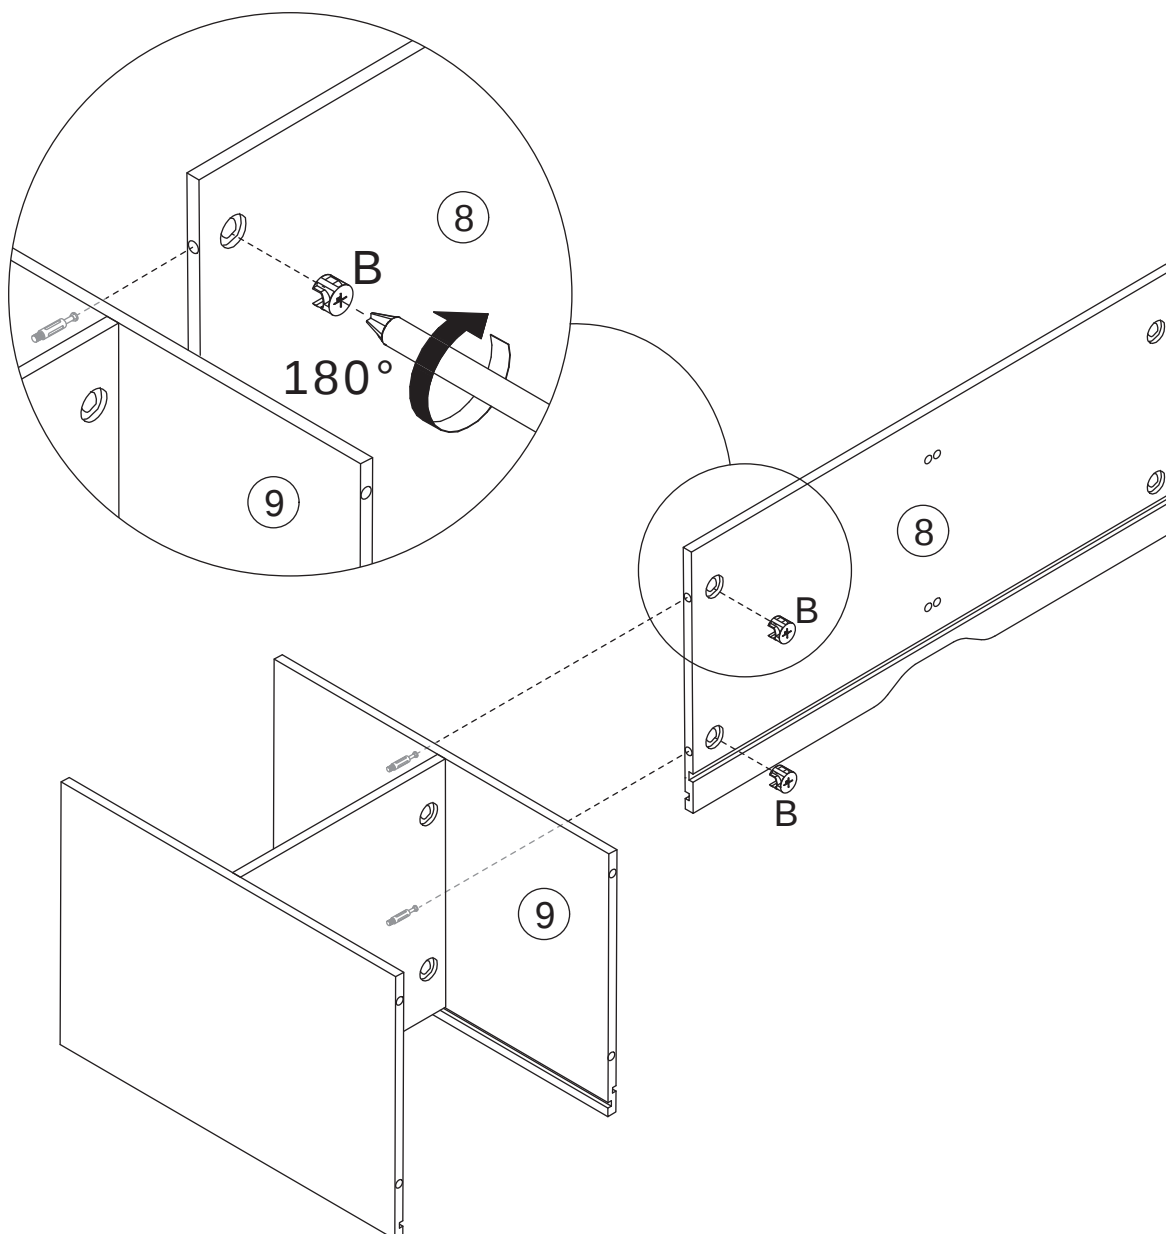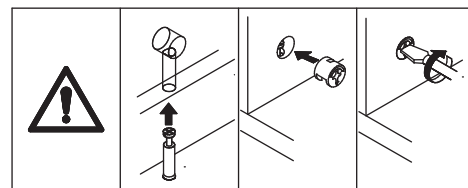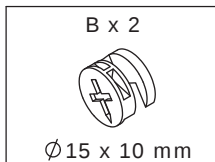    




Connect plate 8 to plate 9, then tighten by turning eccentric wheel (B) clockwise.

4

A x 4









   B x 2

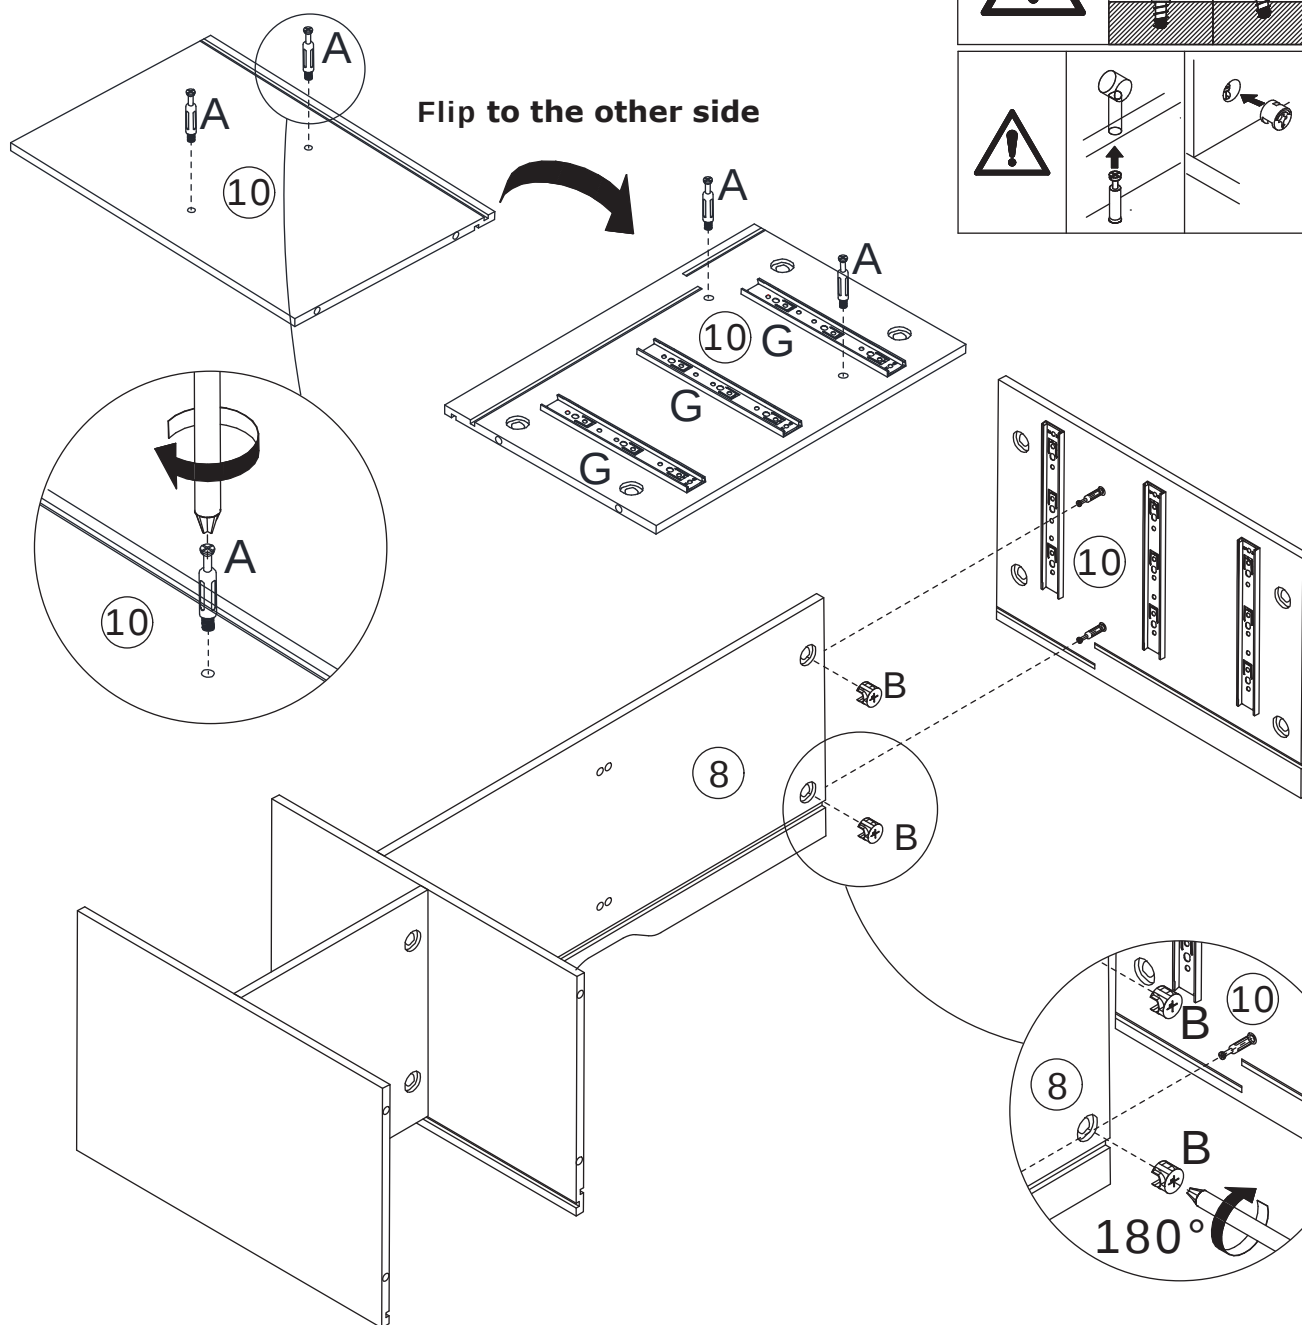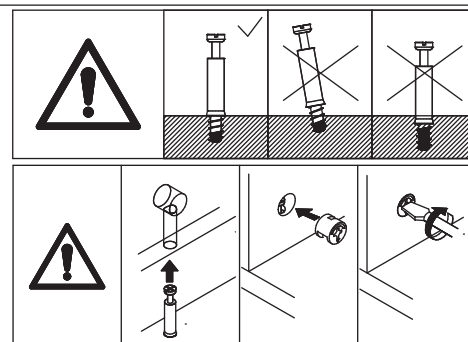




Screw eccentric rod (A) onto **both sides of** plate 10.
Connect plate 10 to plate 8, then tighten by turning eccentric wheel (B) clockwise.

      5

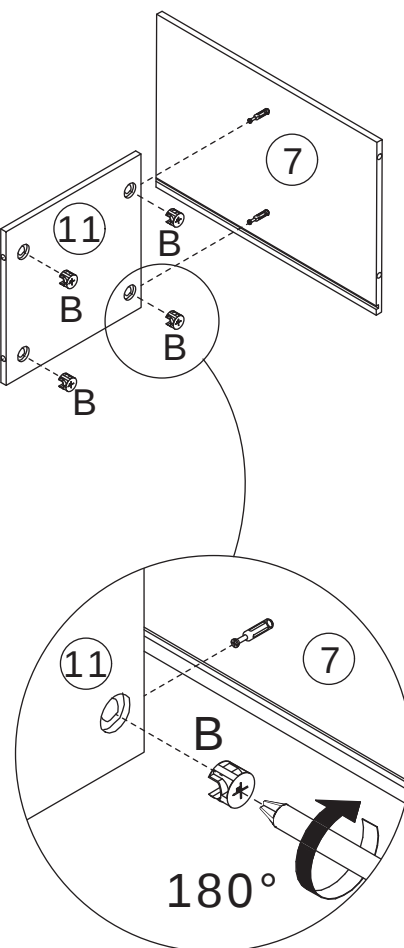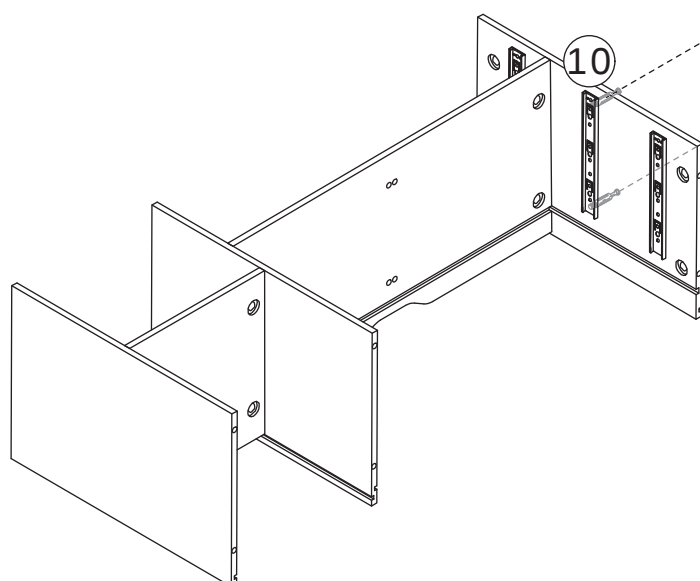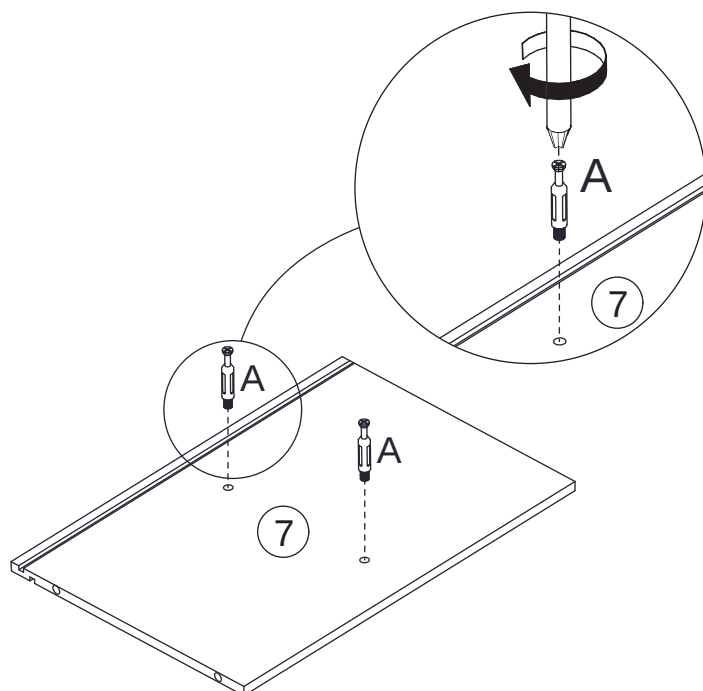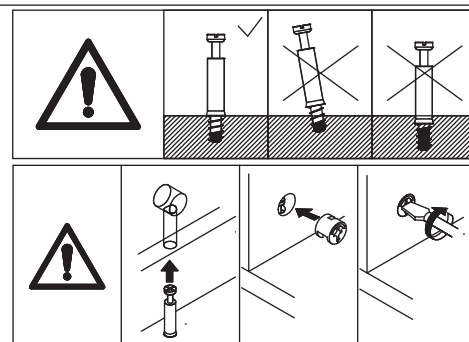
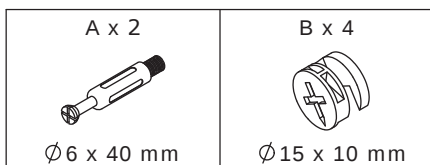


Screw eccentric rod (A) onto plates 7.
Connect plate 11 to plates 7 and 10, then tighten by turning eccentric wheel (B) clockwise.

   
6

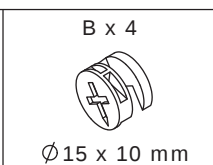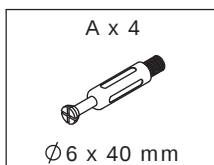

  Screw eccentric rod (A) onto plate 8.
Attach plate 12 to plate 8, then tighten by
turning eccentric wheel (B) clockwise.

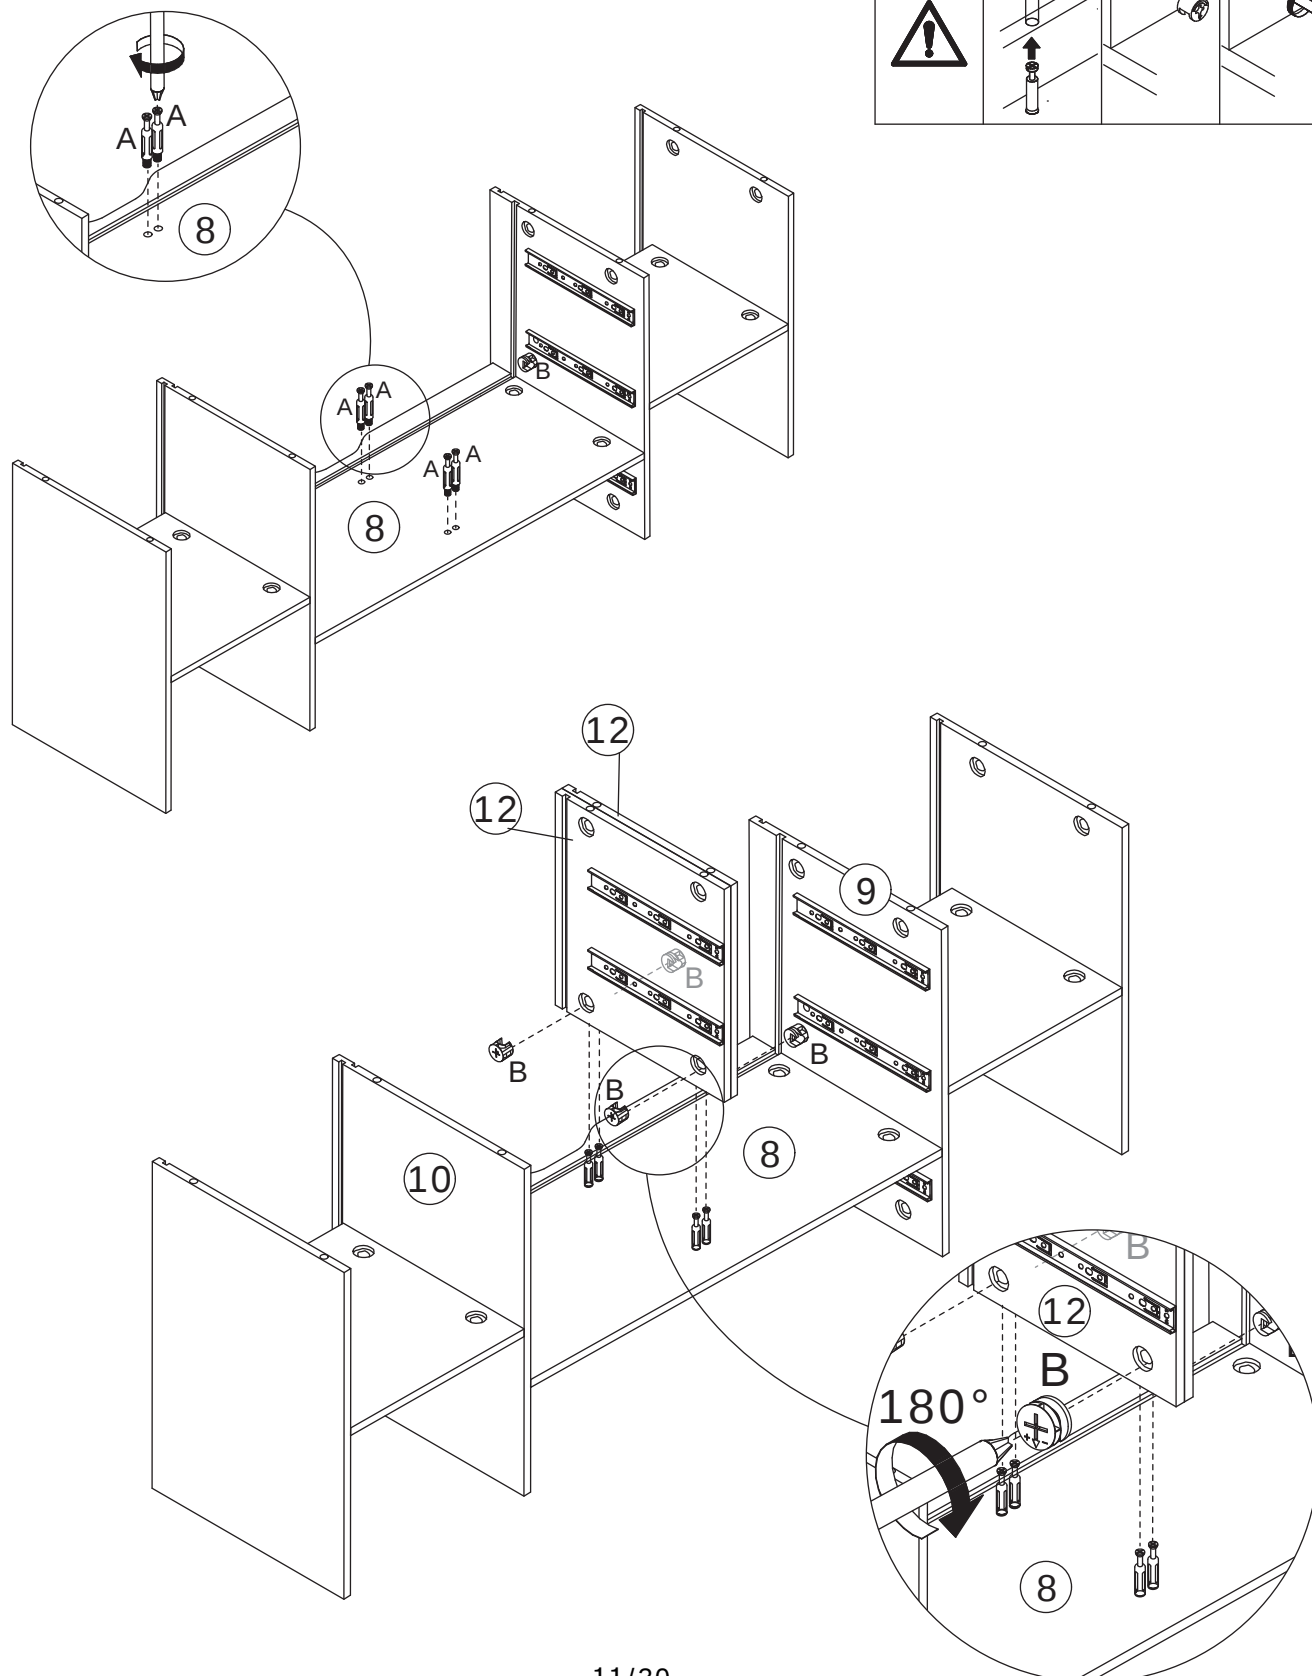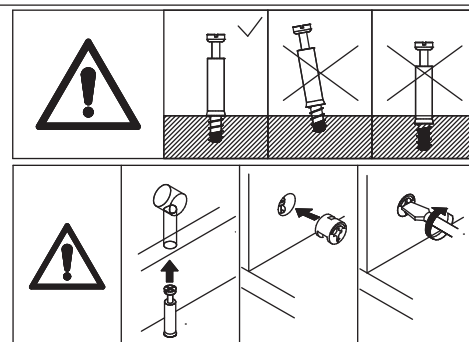


7

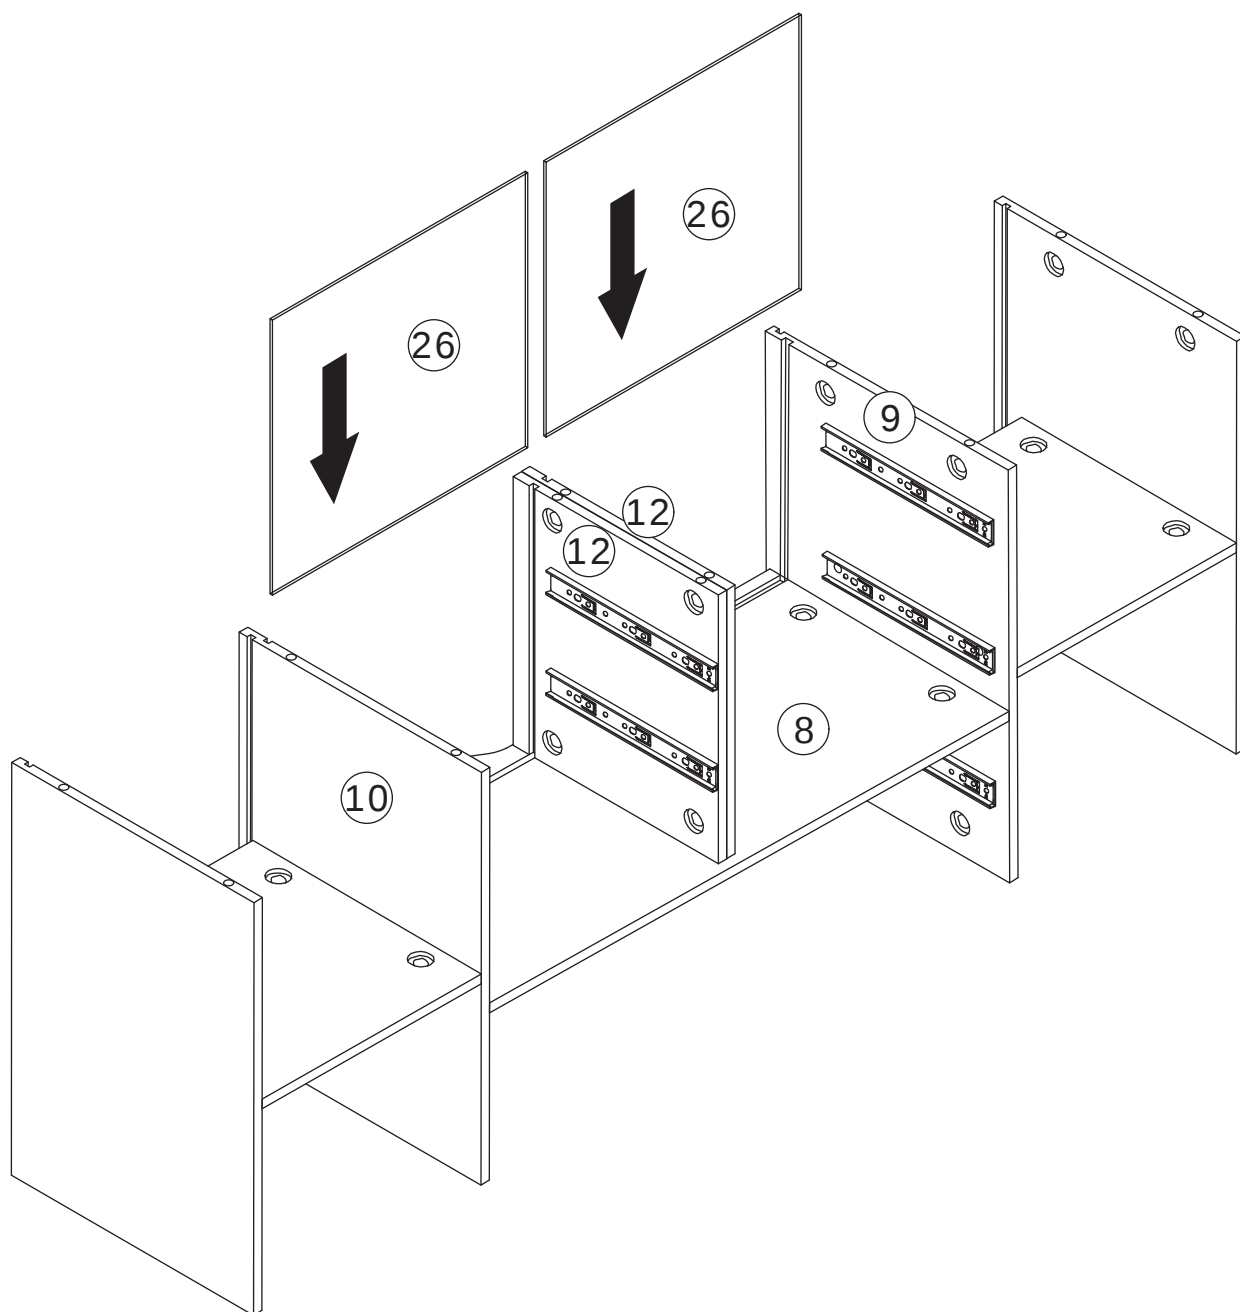 


Insert plate 26 into the available slots.

 
8

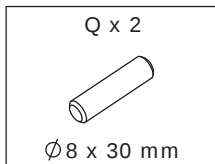

 
Connect plates 4 and 5 using wooden dowel (Q).

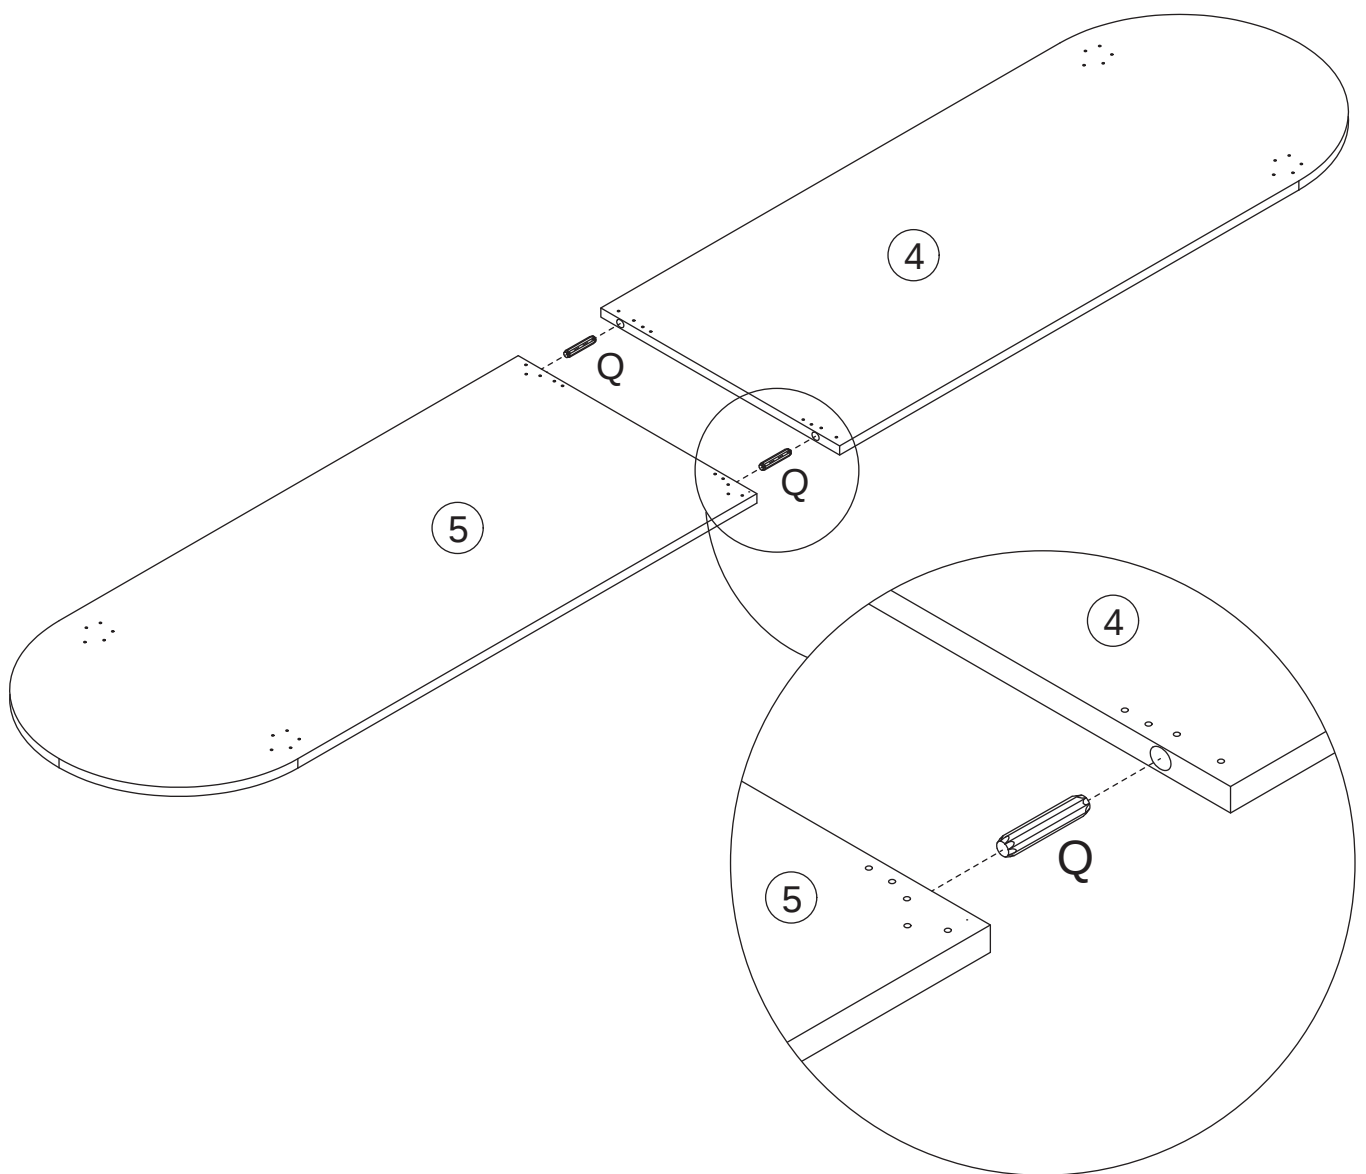

9

 H x 8  Ø 3.5 x 14 mm	N x 2  46 x 32 mm	
---	--	---

 Secure part (N) to plates 4 and 5 using screw (H).

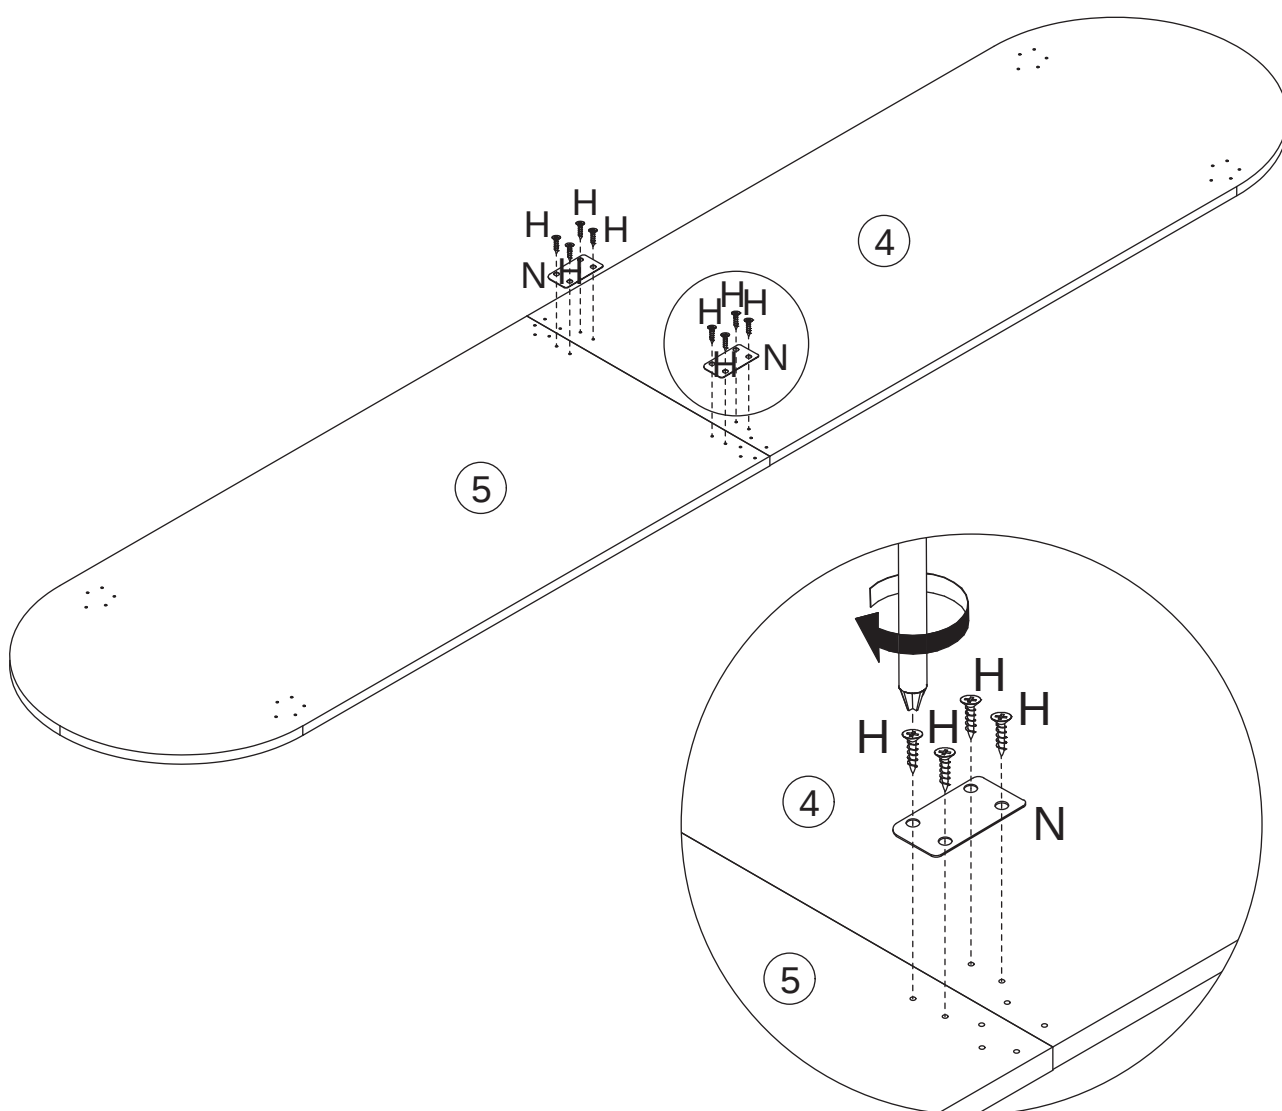



10

H x 30



Ø 3.5 x 14 mm

  M x 6

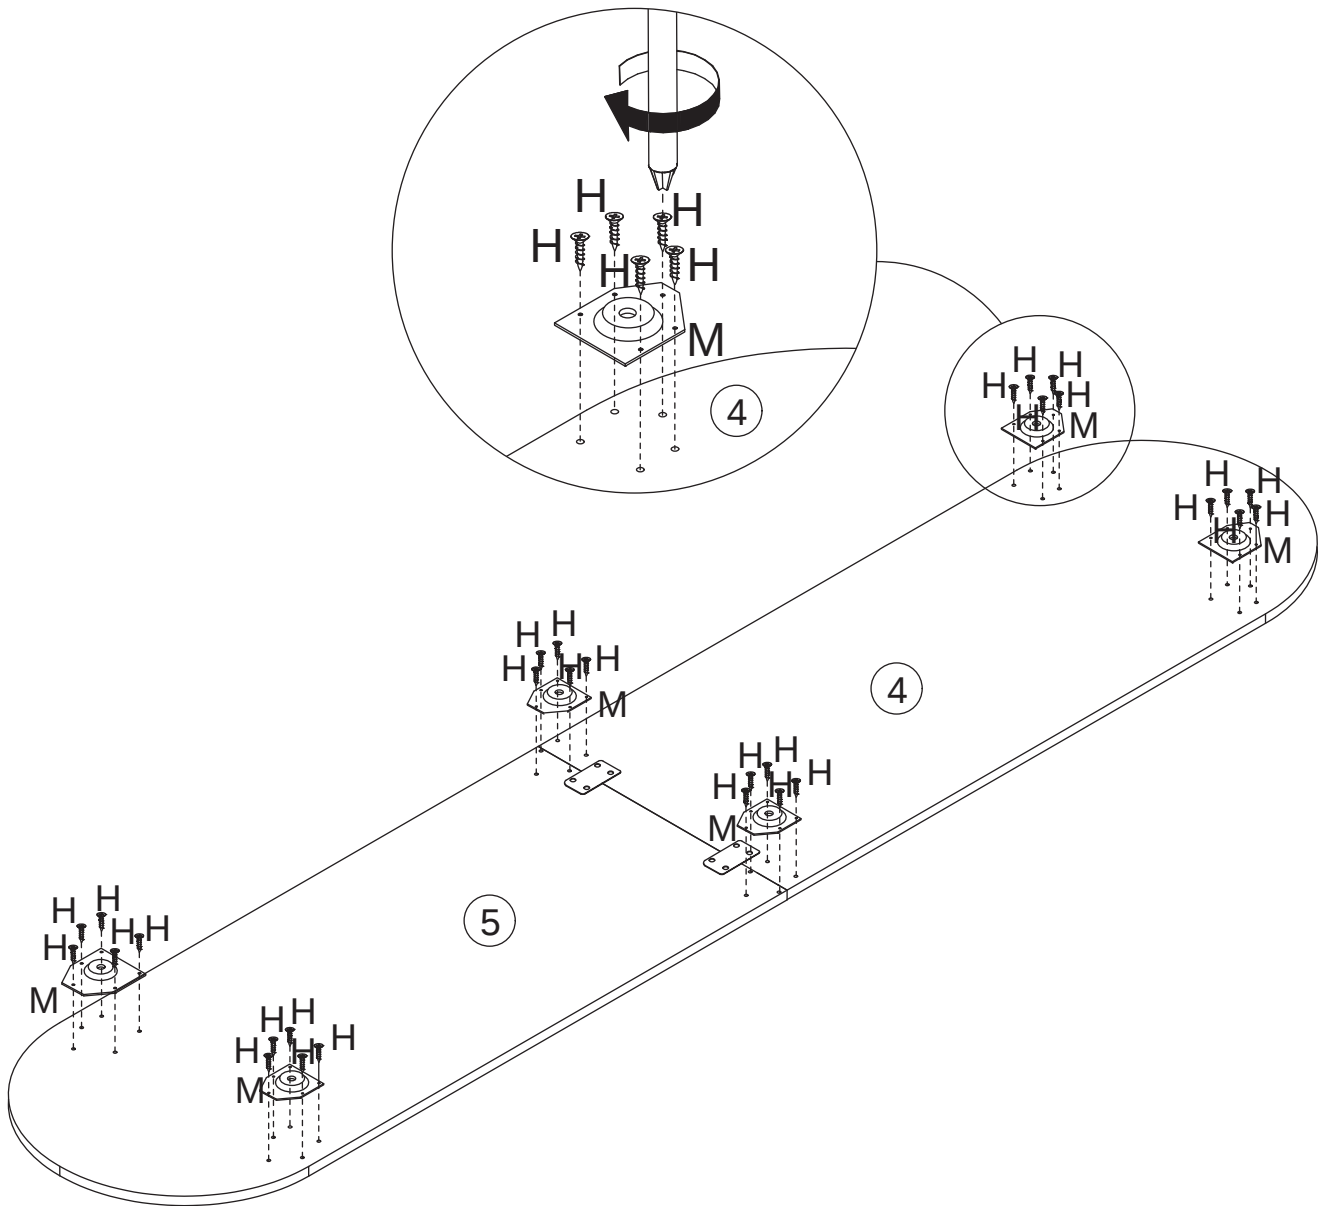









Secure part (M) to plates 4 and 5 using screw (H).

11

A x 12






        P x 6

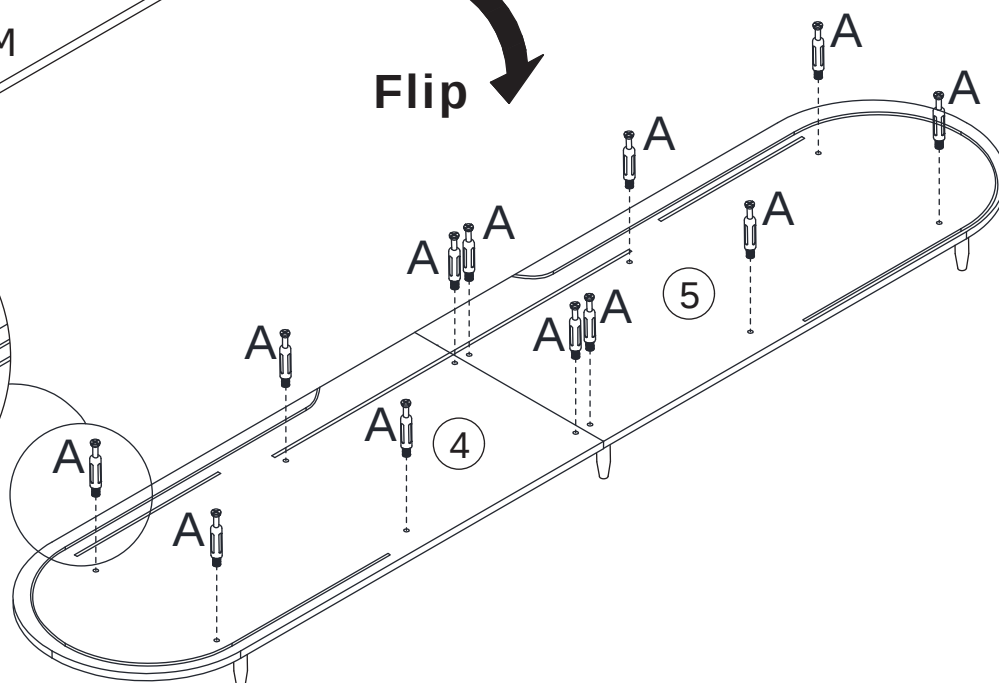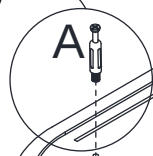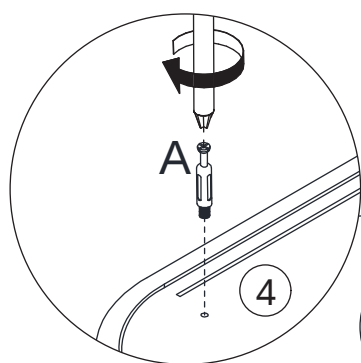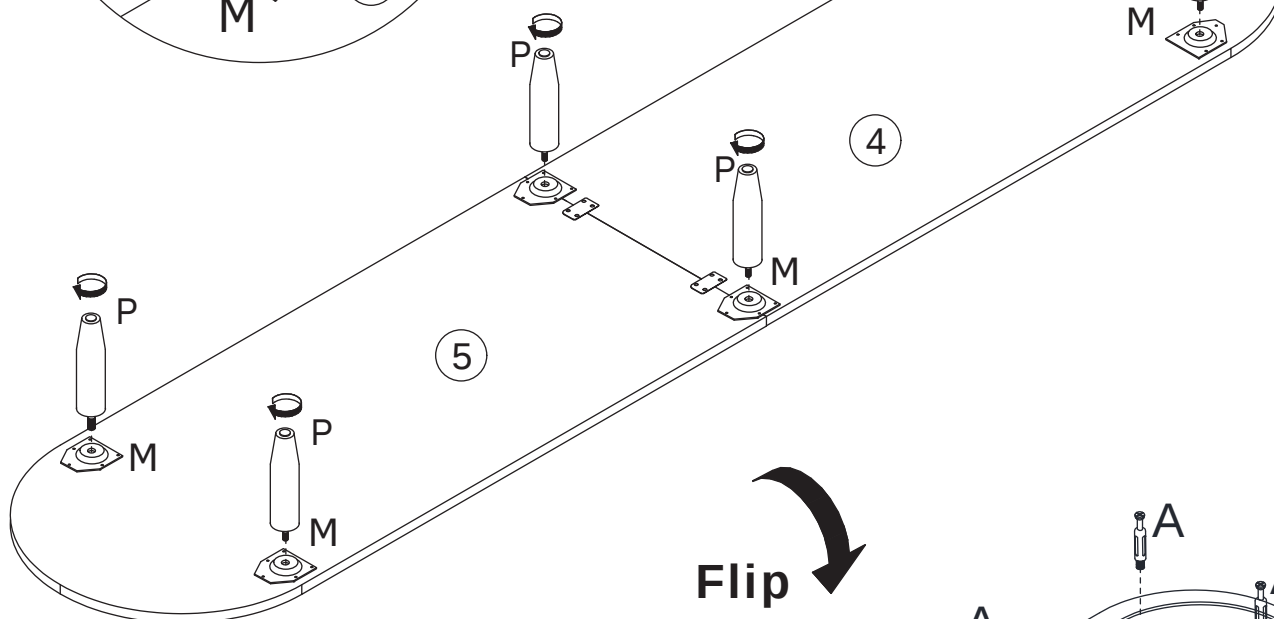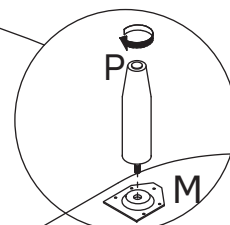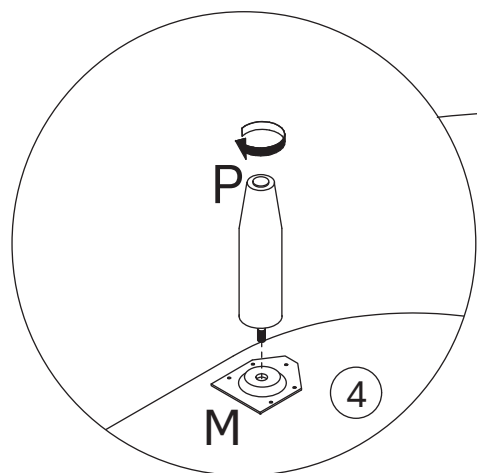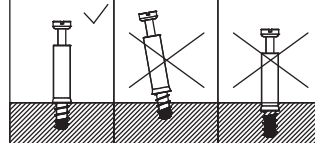


Install leg (P) into part (M).
Screw eccentric rod (A) onto plates 4 and 5.

   12

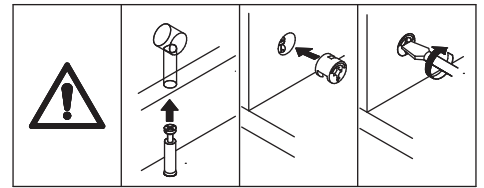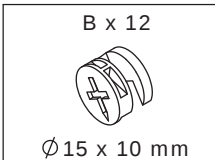

 Connect plates 4 and 5 to plates 6, 7, 9, 10, and 12, then tighten by turning eccentric wheel (B) clockwise.





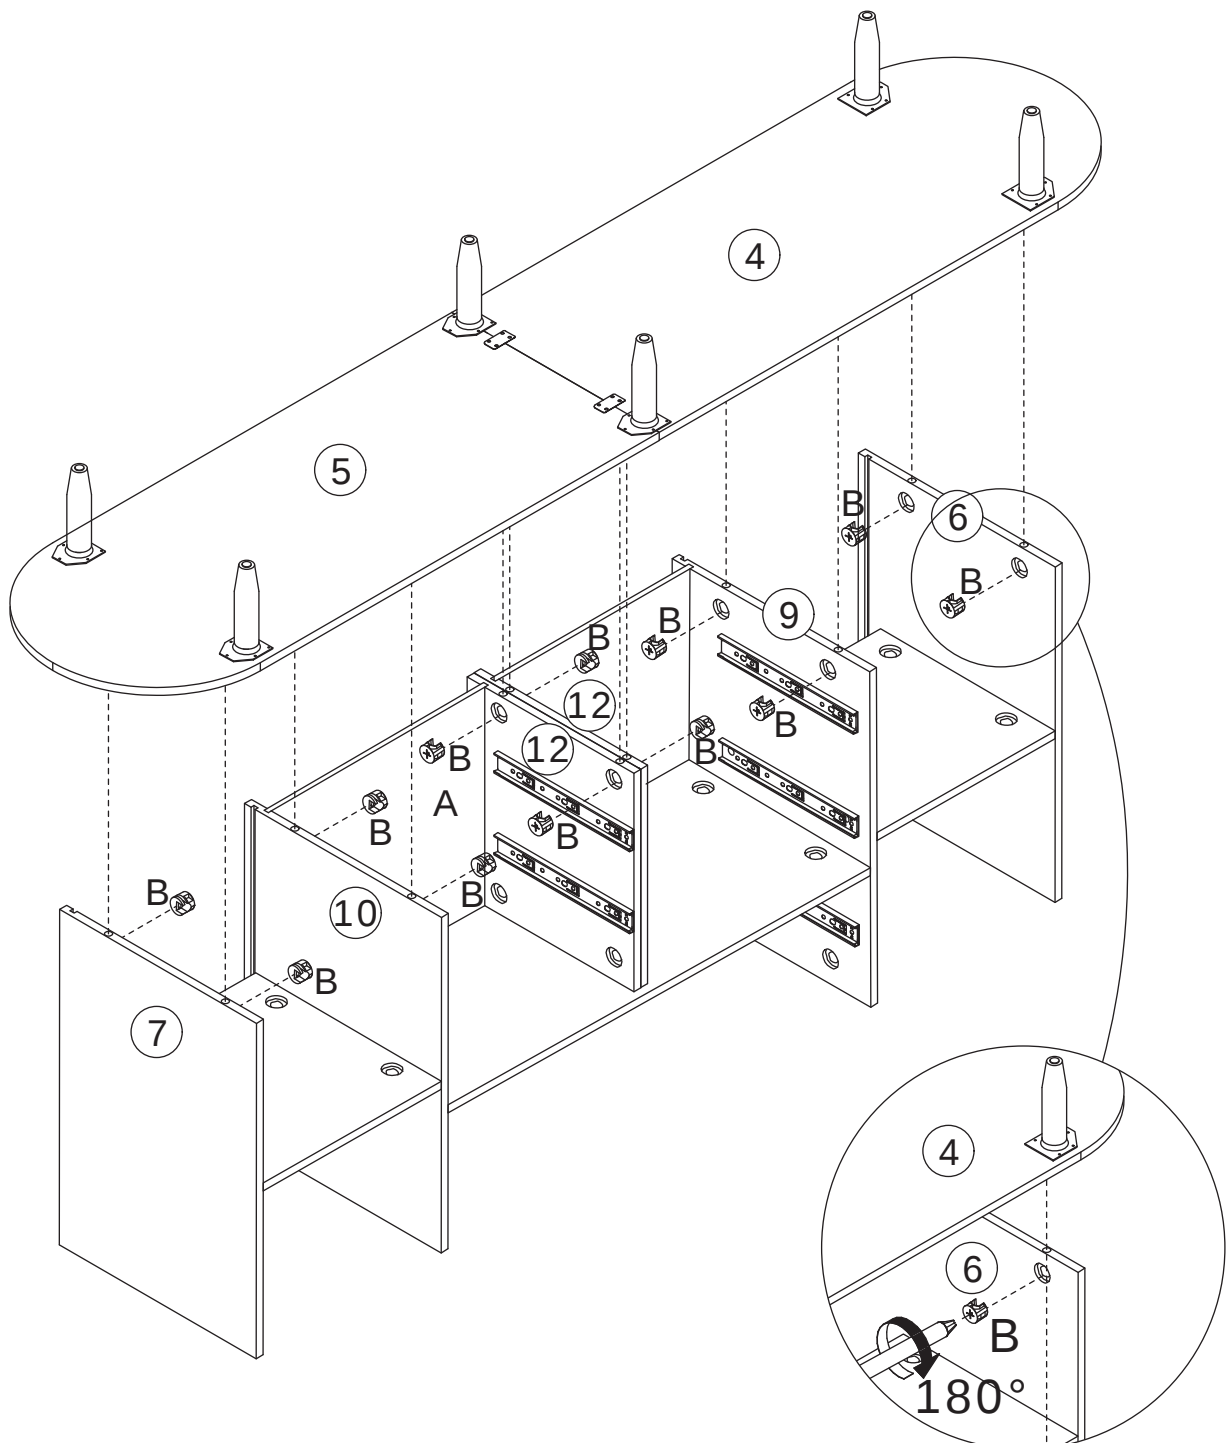


13



A x 4



     B x 4

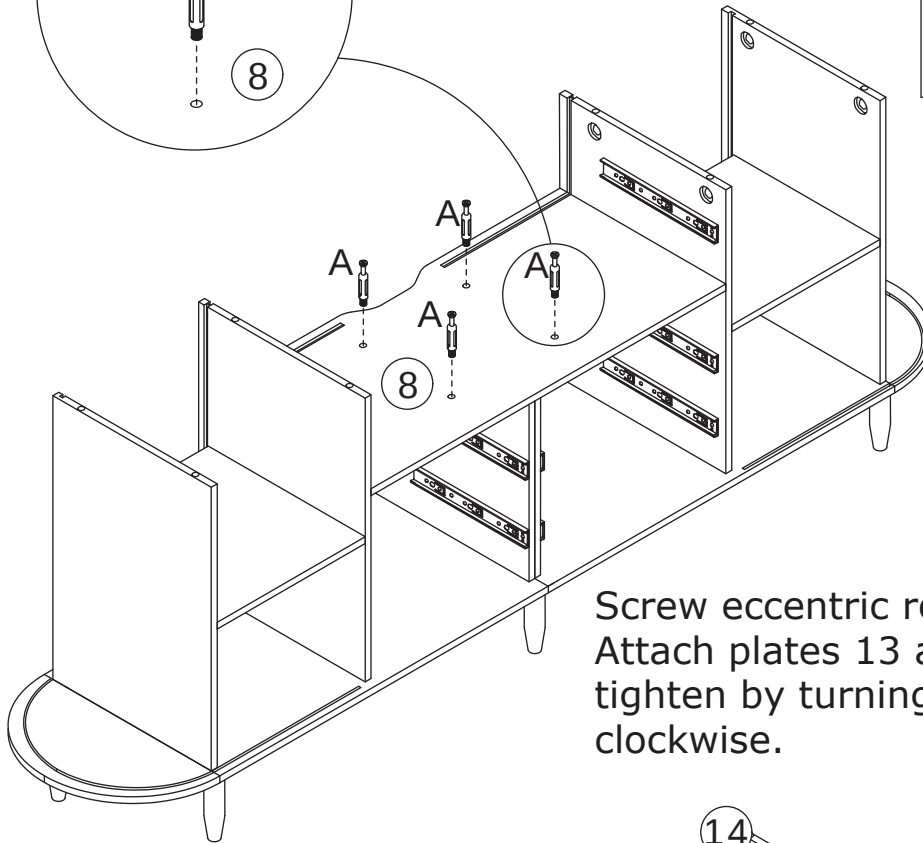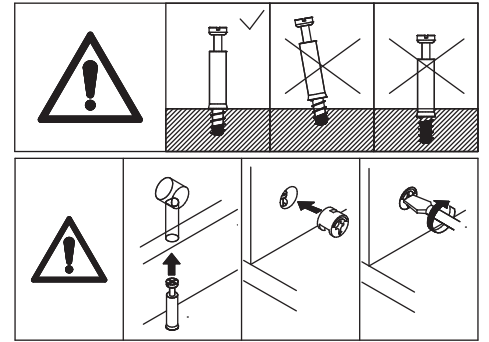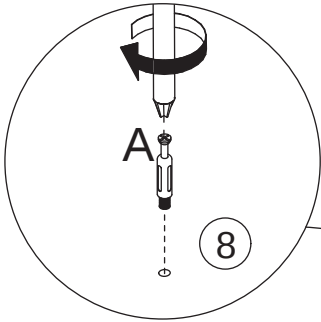


  Screw eccentric rod (A) onto plate 8.
Attach plates 13 and 14 to plate 8, then
tighten by turning eccentric wheel (B)
clockwise.

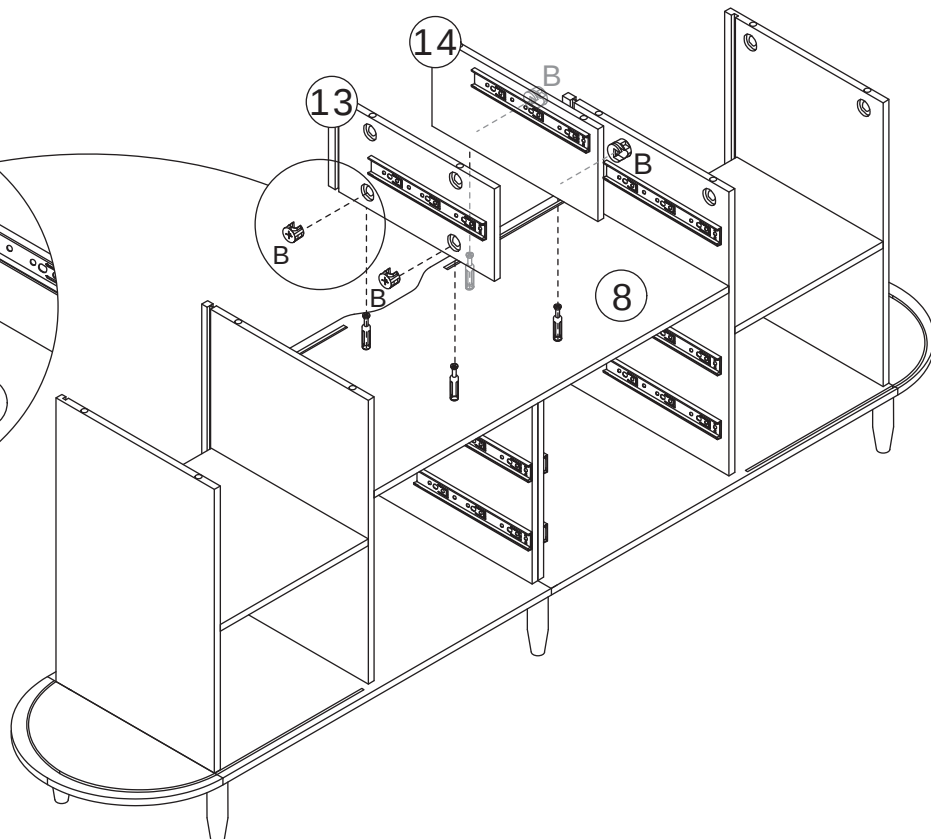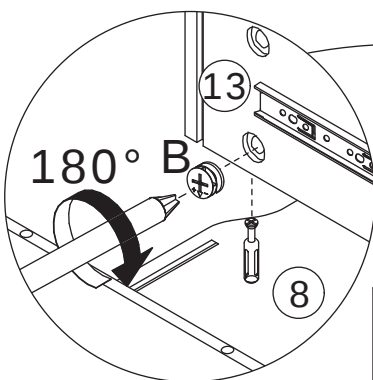

14

 Insert plates 25 and 29 into the available slots.


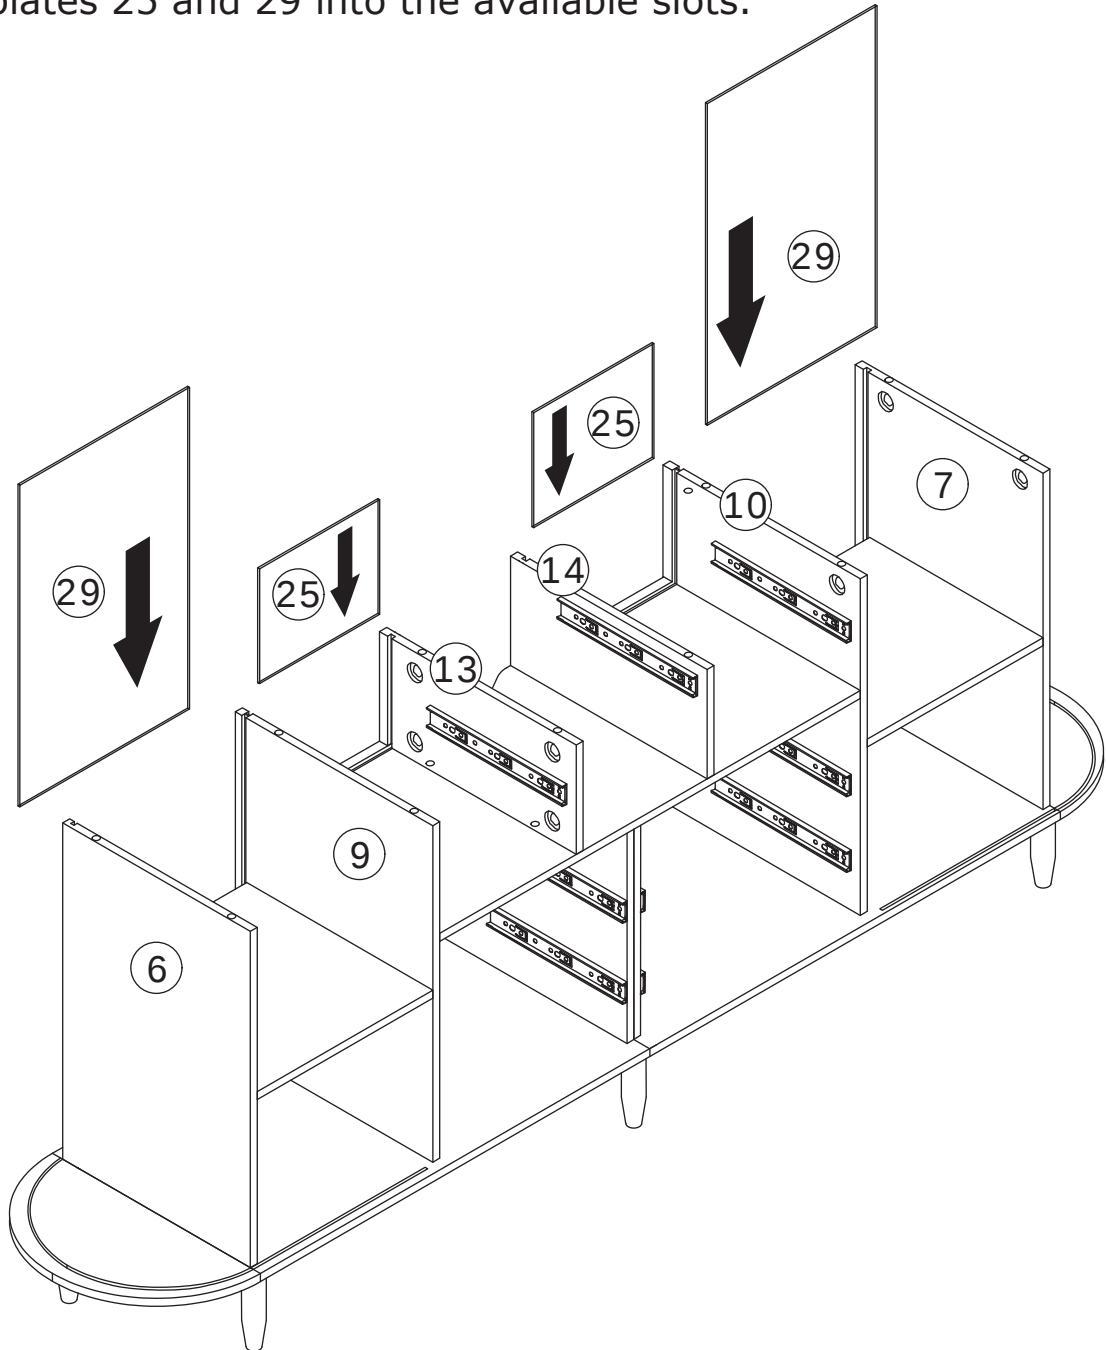


15



A x 12



  B x 12




  Screw eccentric rod (A) onto plates 1 and 2. Connect plates 1 and 2 to the assembly unit, then tighten by turning eccentric wheel (B) clockwise.

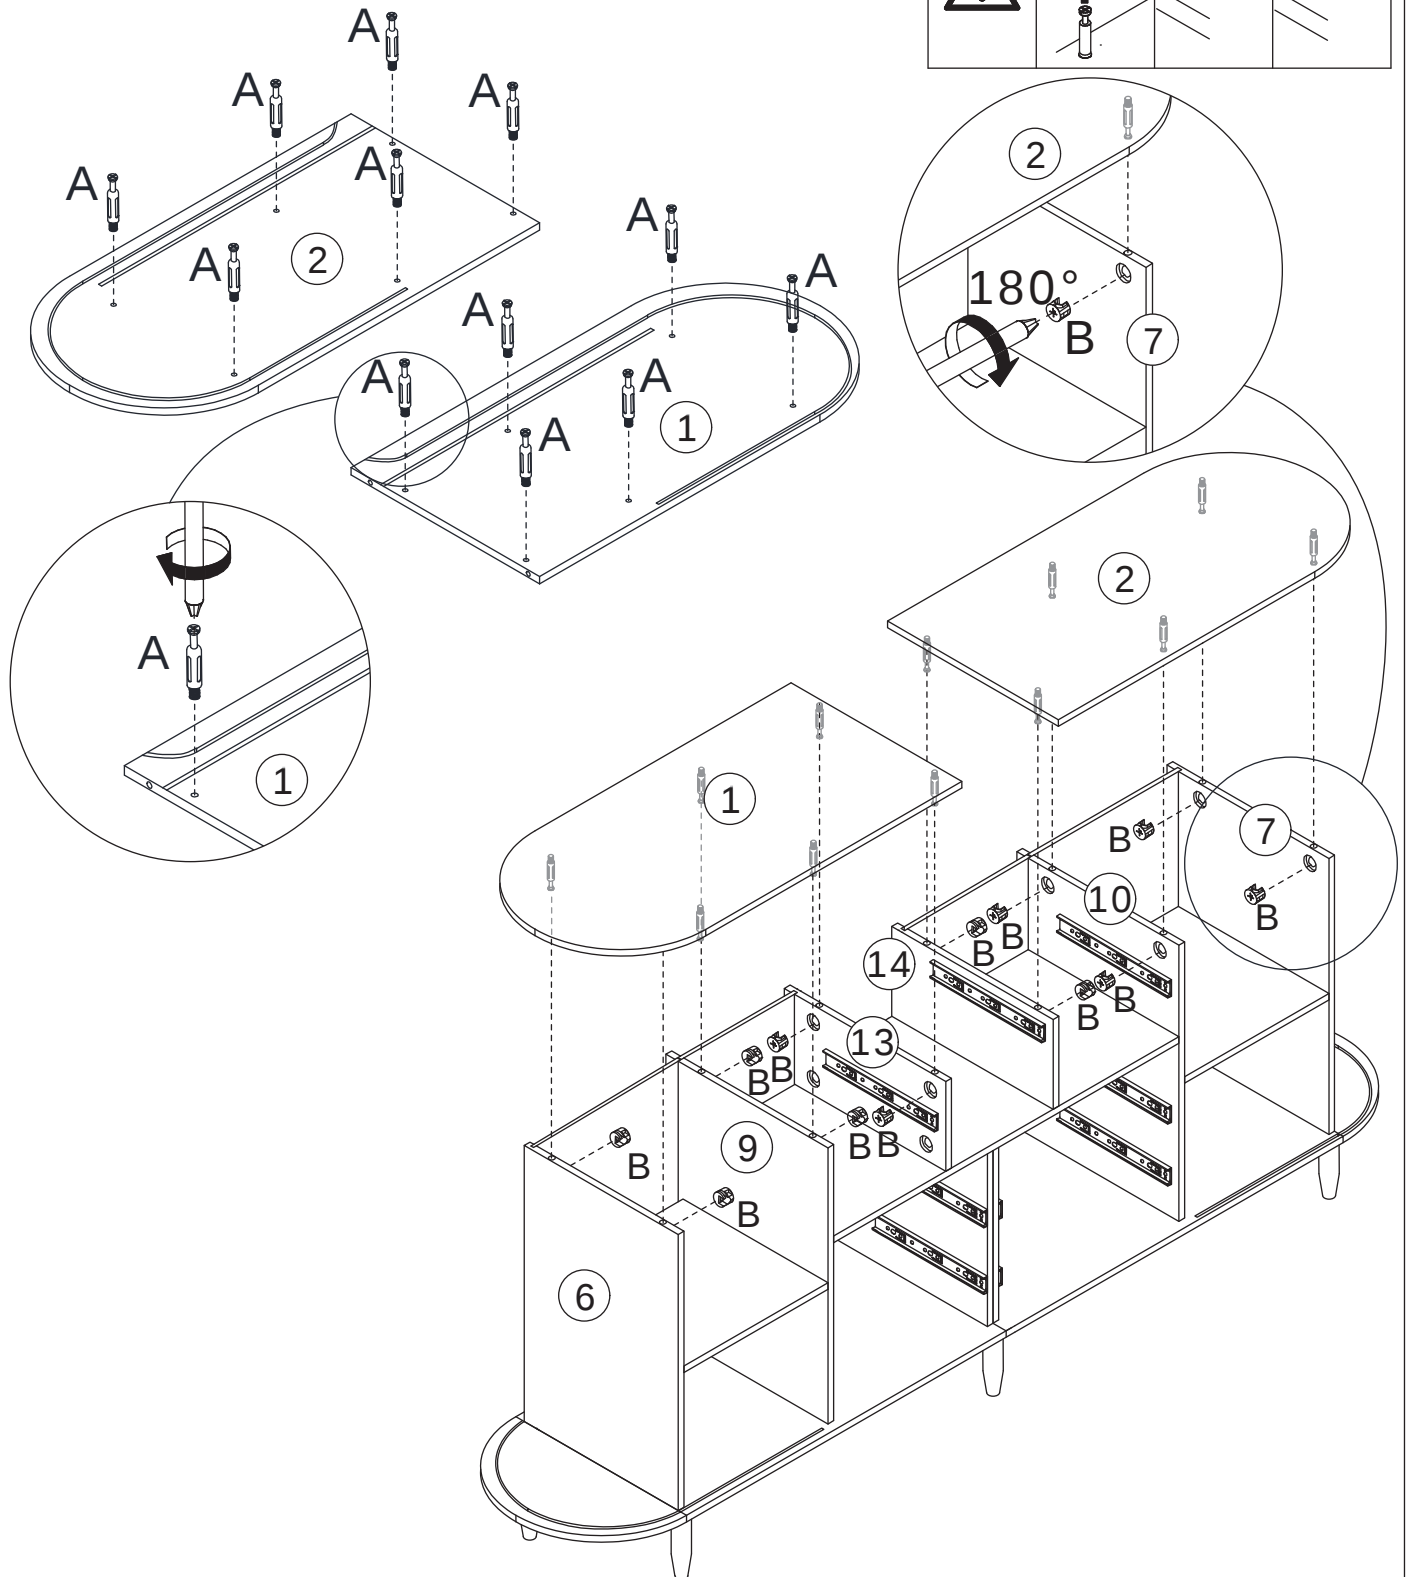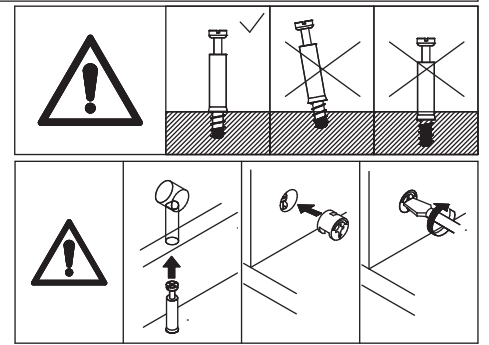


16

 J x 2



Secure bracket (J) to plate 8.

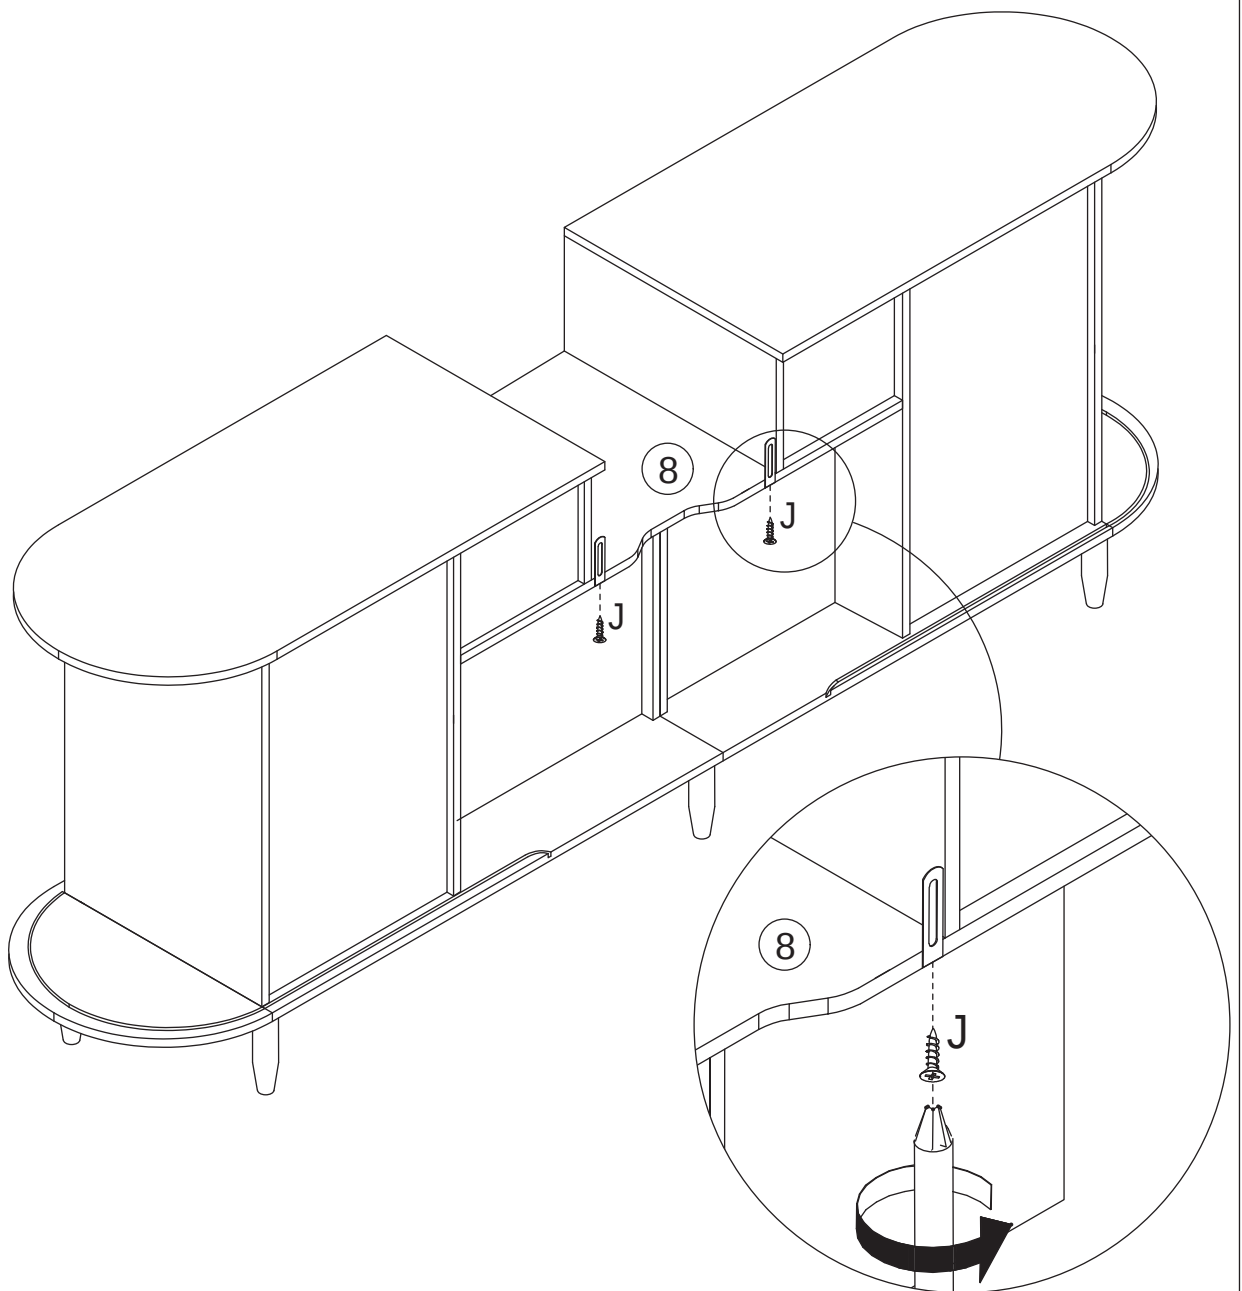 


17

H x 24




Ø3.5 x 14 mm

 K x 28




 Insert clip (K) into the slots on the back plates and secure them with screw (K).

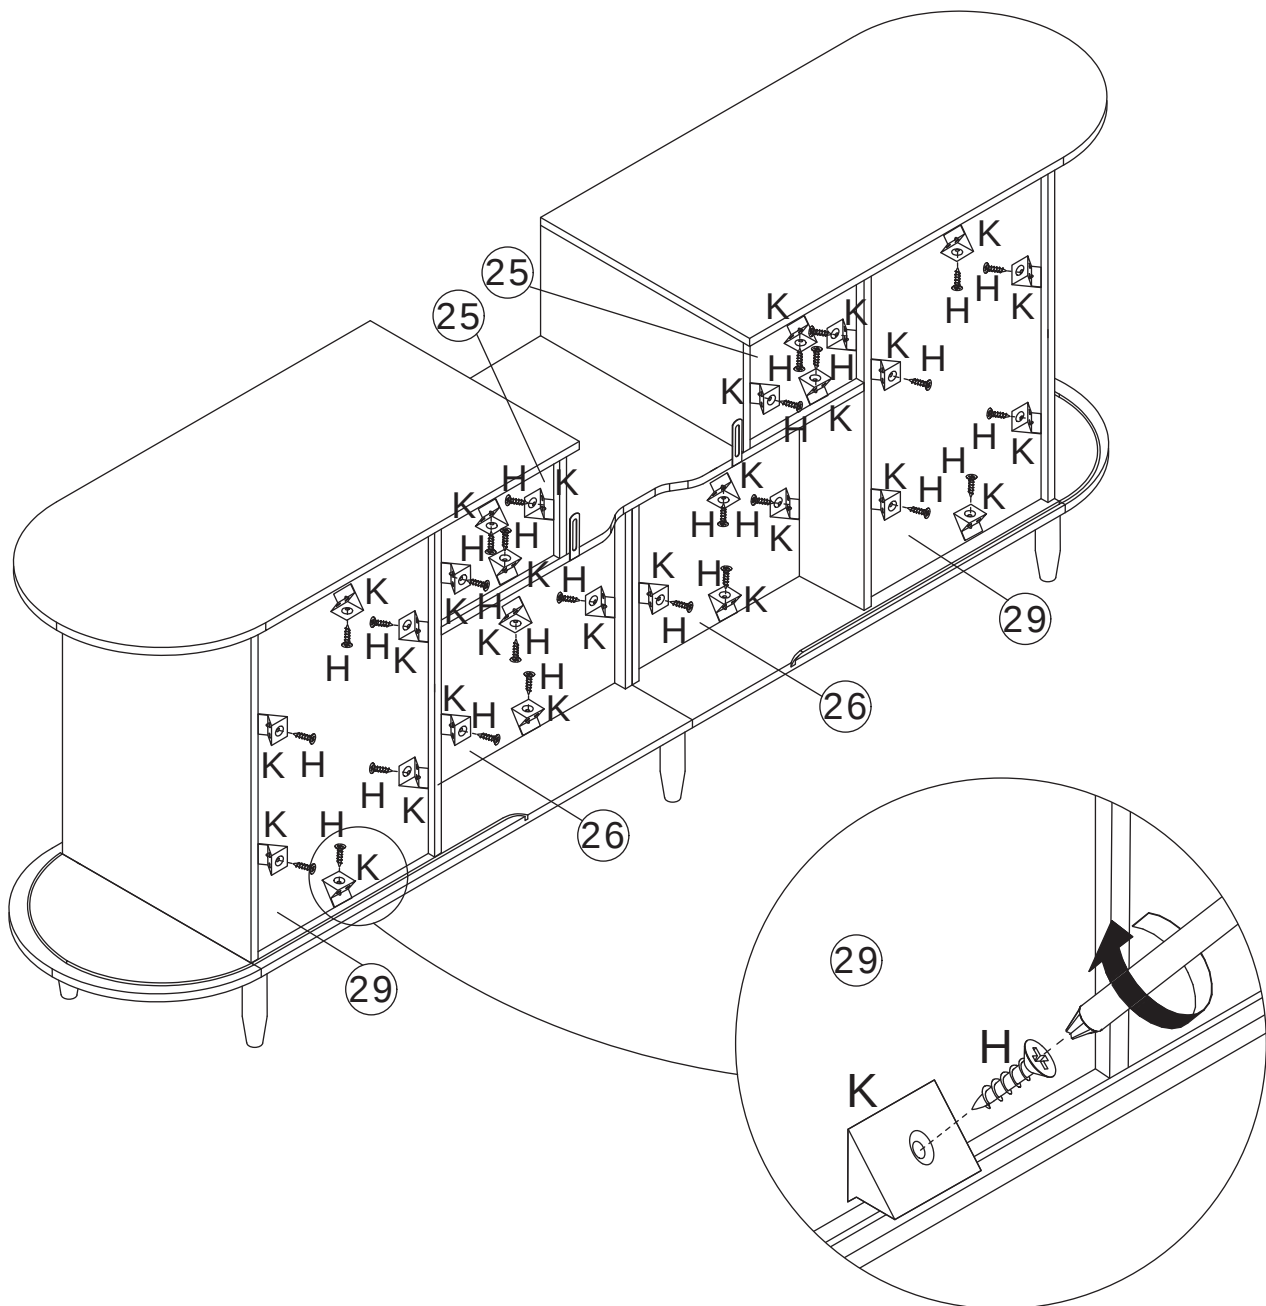

18


 
D x 2



F x 4



  M4 x 10 mm


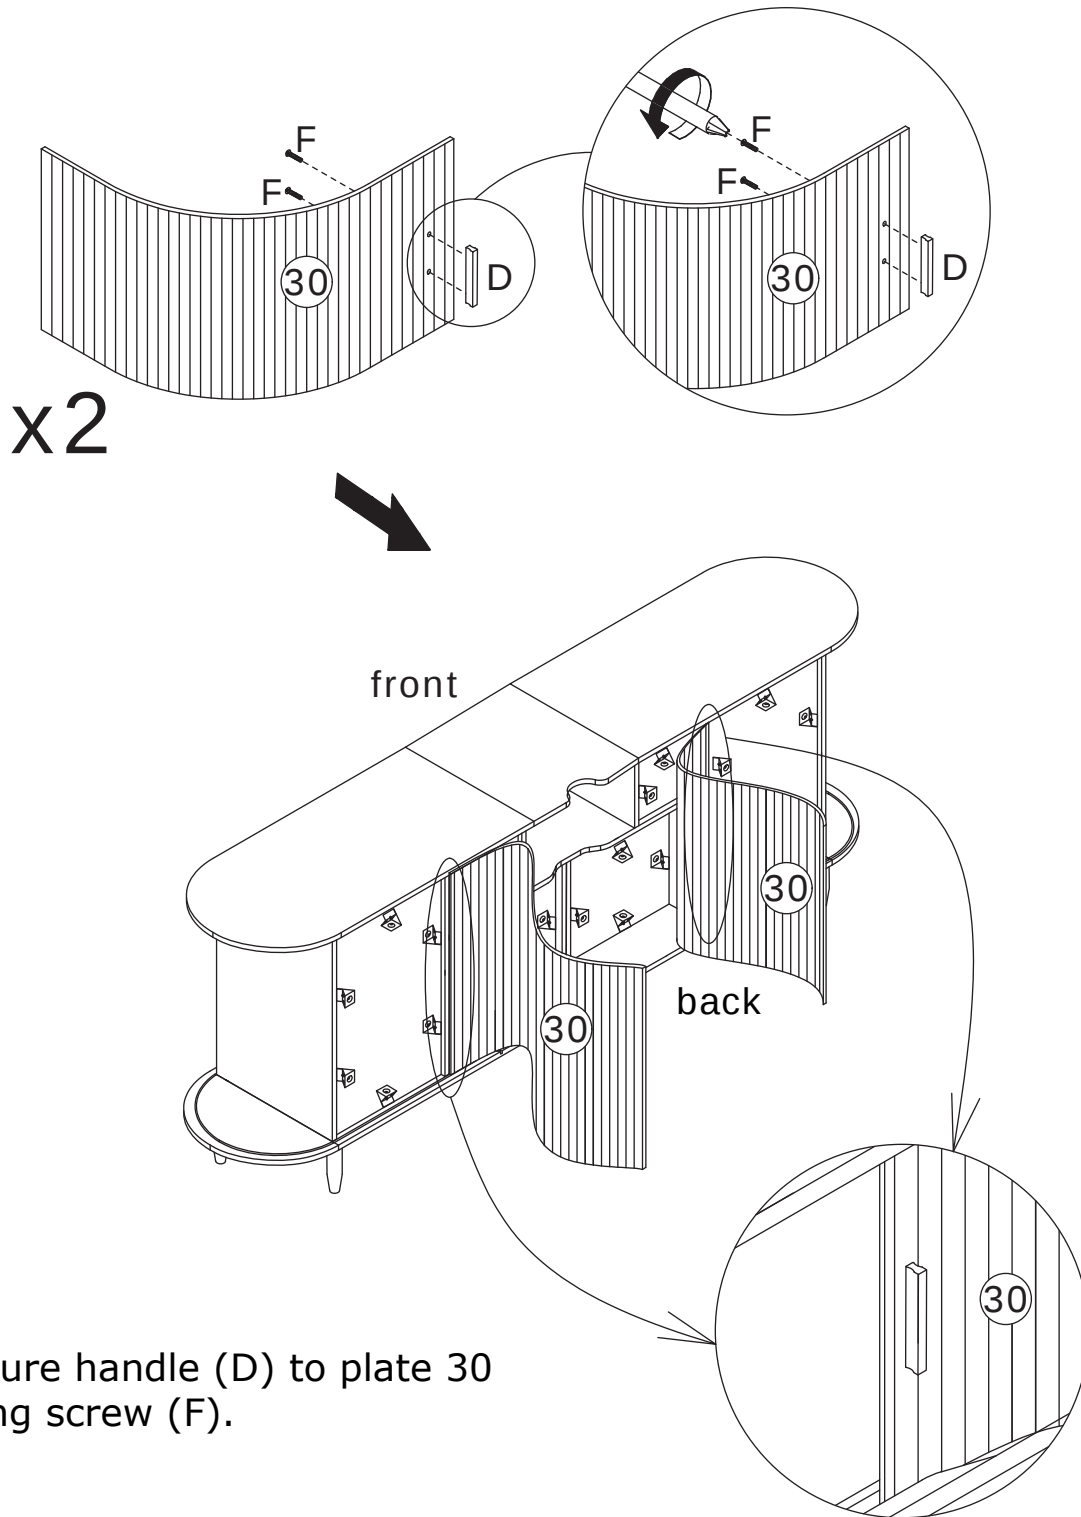



Secure handle (D) to plate 30 using screw (F).


**The side with handles shall face outward.
Insert the soft plate into the groove and push it forward.**

19

   
J x 2



 
1.

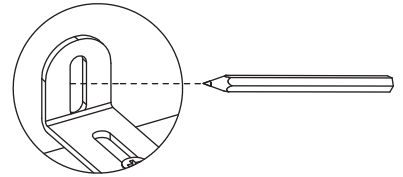

 
2.

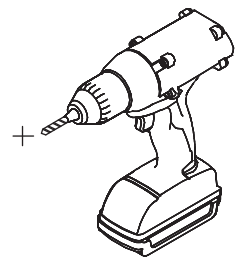

 3.

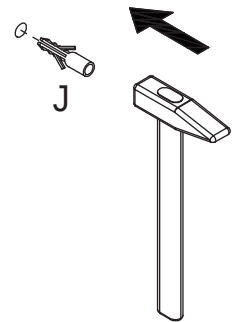

 4.

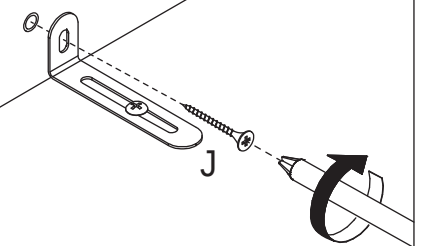

WALL

WALL

J

 
 
 
J

J


J

Install the anti-tip device.






20

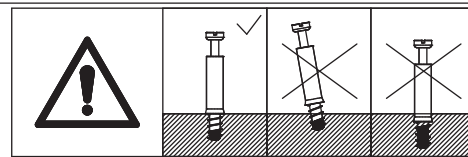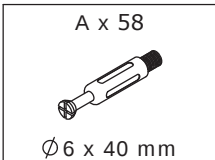

 
Screw eccentric rod (A) onto plates 3, 15, 16, 17, 18, 19, and 20.

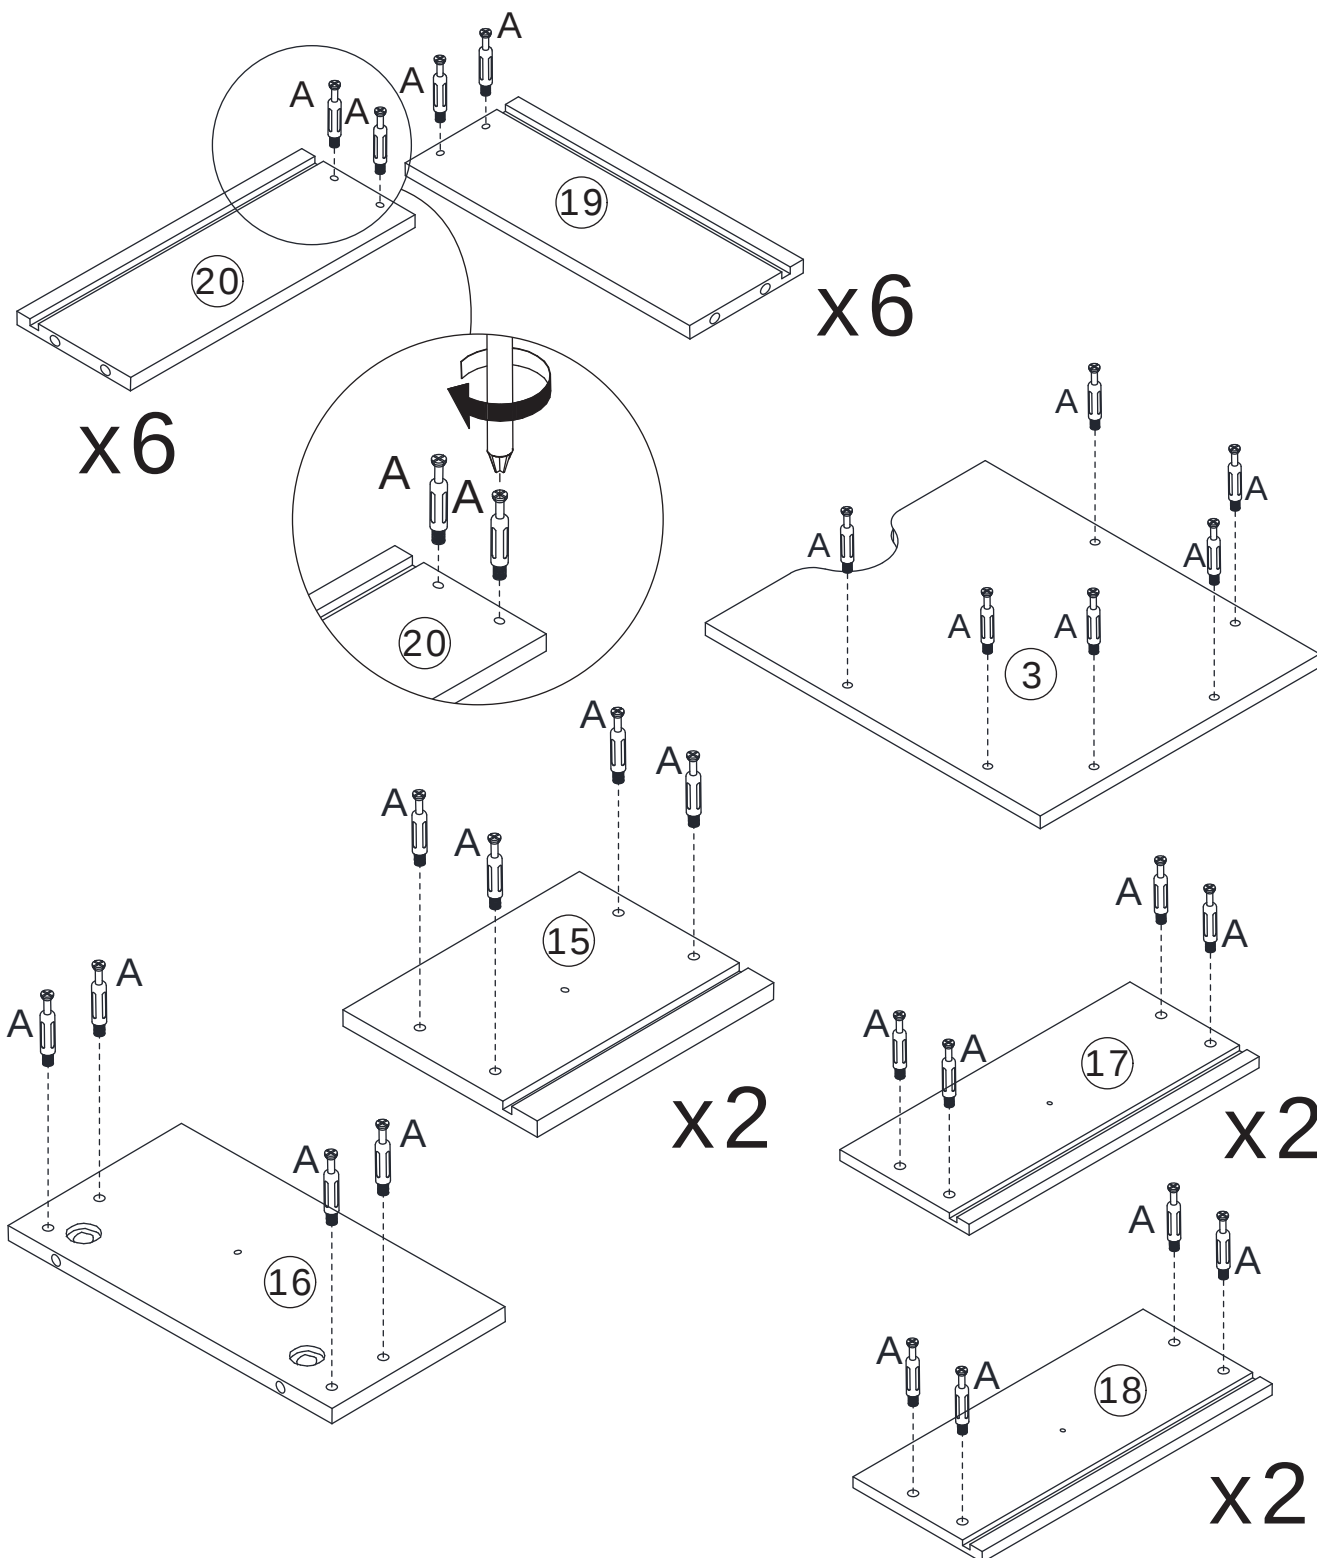


21

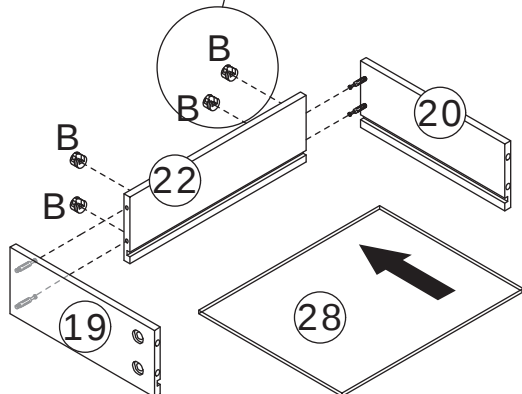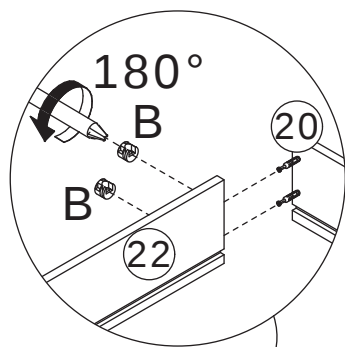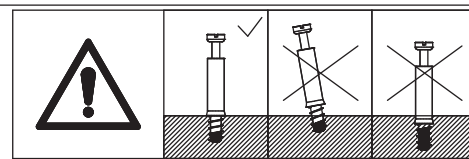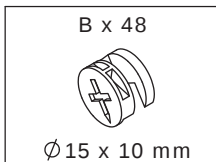     

x4

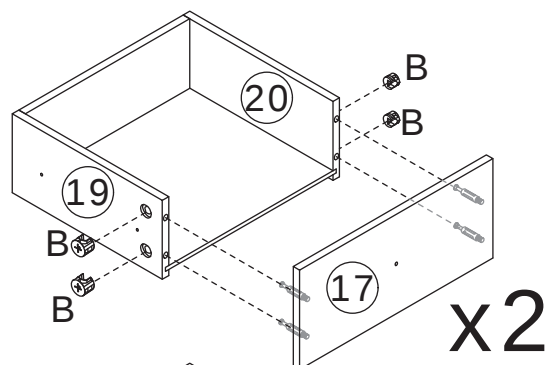 


x2

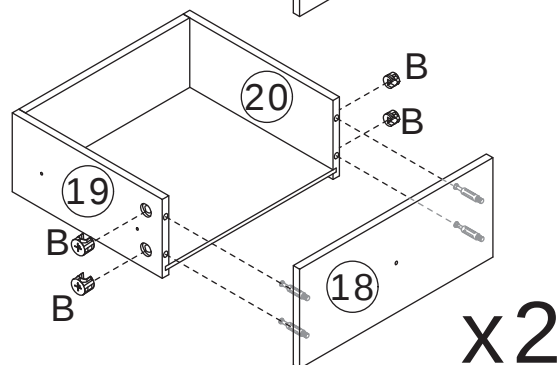 


x2

 First, connect plates 19 and 20 to plate 22, then tighten by turning eccentric wheel (B) clockwise. Next, insert plate 28 into the slots. Connect plates 17 and 18 to plates 19 and 20 respectively, then tighten by turning eccentric wheel (B) clockwise.

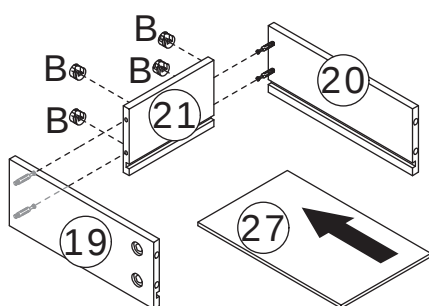

x2

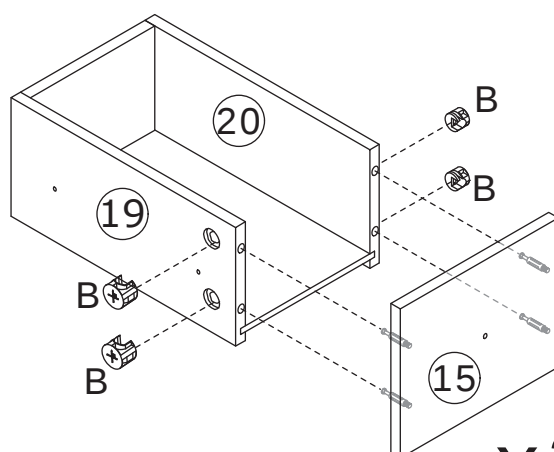 

x2

First, connect plates 19 and 20 to plate 21, then tighten by turning eccentric wheel (B) clockwise. Next, insert plate 27 into the slots. Connect plate 15 to plates 19 and 20, then tighten by turning eccentric wheel (B) clockwise.

22

C x 6



E x 6



M4 x 18 mm

G x 12

 
 
 
 


290 mm



H x 24





Ø 3.5 x 14 mm

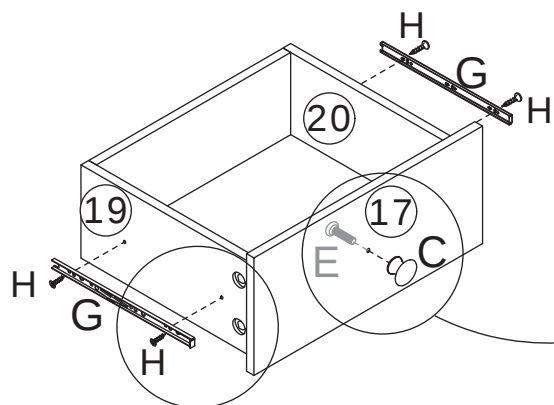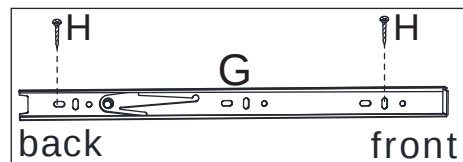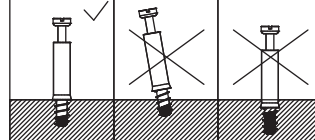

x2

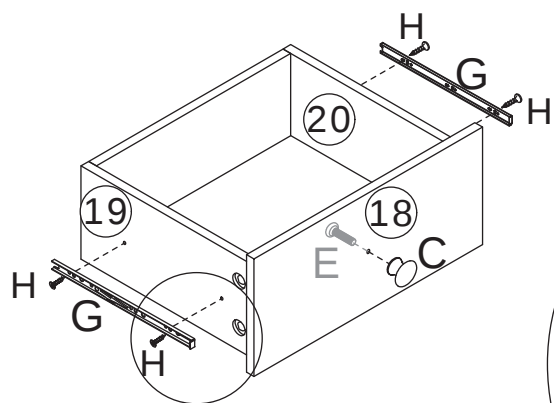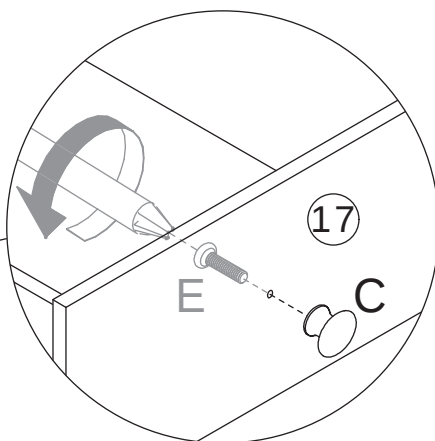  

x2

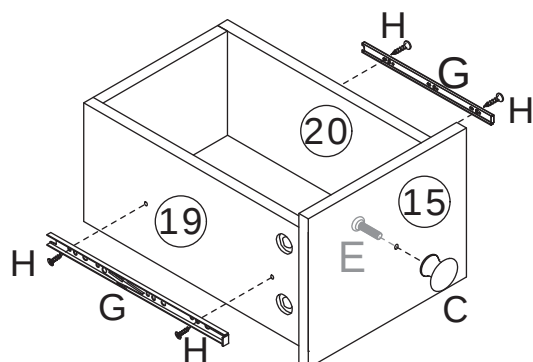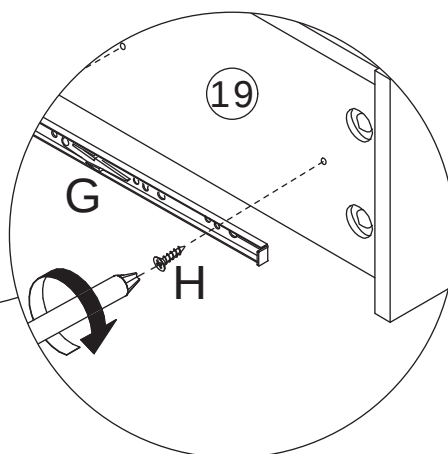  

x2

Secure slide rail (G) to plates 19 and 20 using screw (H).
Secure knob (C) to plates 15, 17, and 18 using screw (E).

 
 
 
 
23

H x 24




Ø 3.5 x 14 mm


K x 28

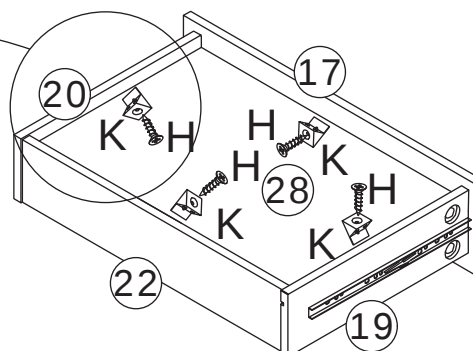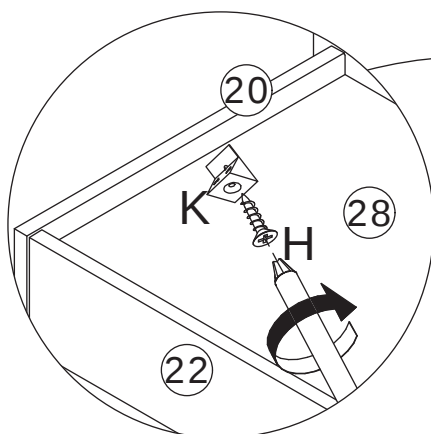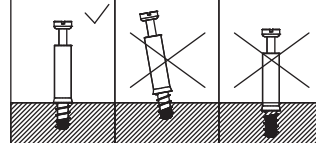

x2

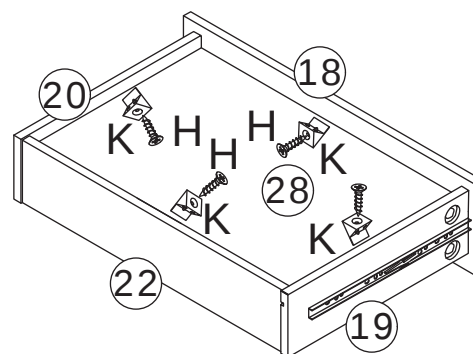 


x2

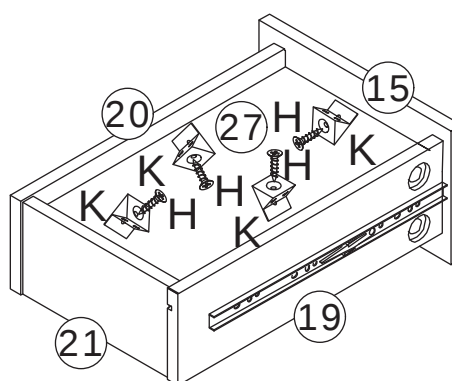 





x2

Insert clip (K) into the slots on the bottom plates and secure them using screw (K).



 
24

B x 10  Ø15 x 10 mm	C x 1 	E x 1  M4 x 18 mm	G x 2  290 mm	H x 8  Ø3.5 x 14 mm	
--	--	--	---	--	---

    First, connect plate 16 to plates 23 and 24, then tighten by turning eccentric wheel (B) clockwise. Secure knob (C) to plate 16.

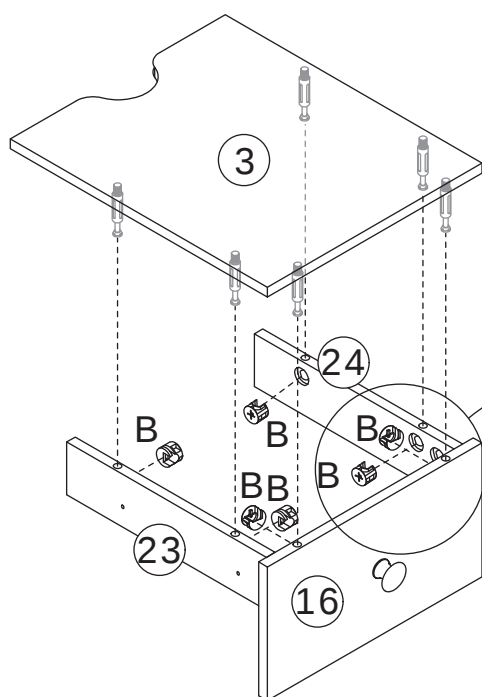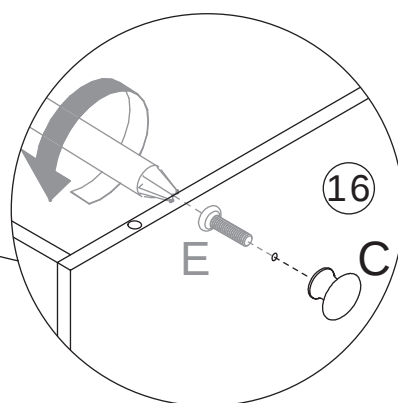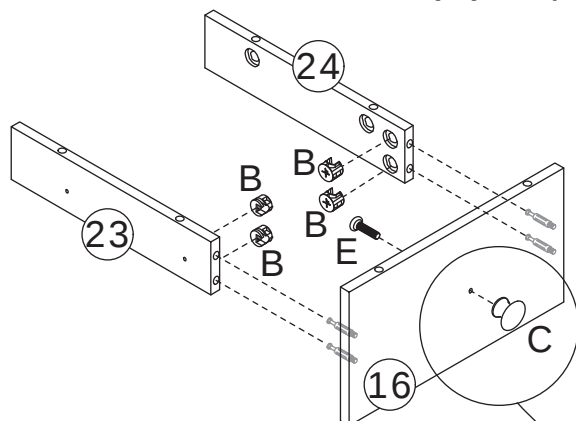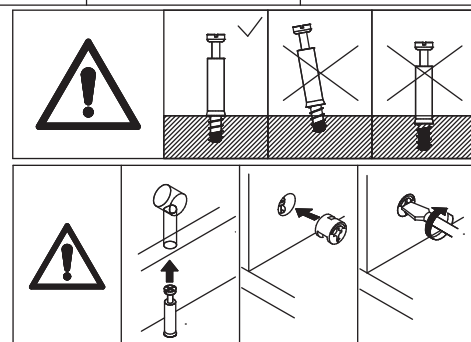

   
Next, connect plate 3 to plates 16, 23, and 24, then tighten by turning eccentric wheel (B) clockwise.

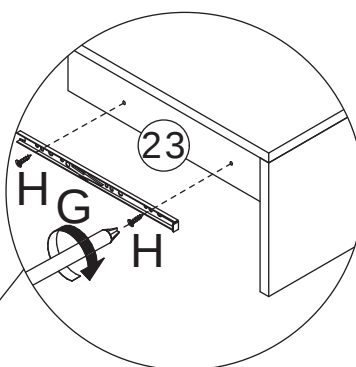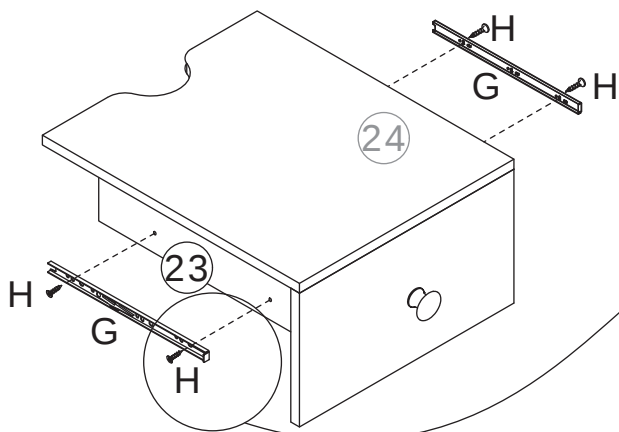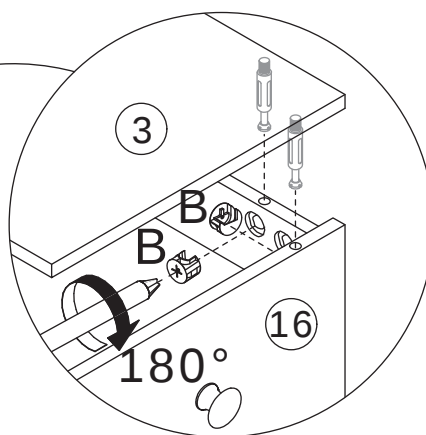


Secure slide rail (G) to plates 23 and 24 using Screw (H).

25

 L x 8



Install the drawers into the cabinet.

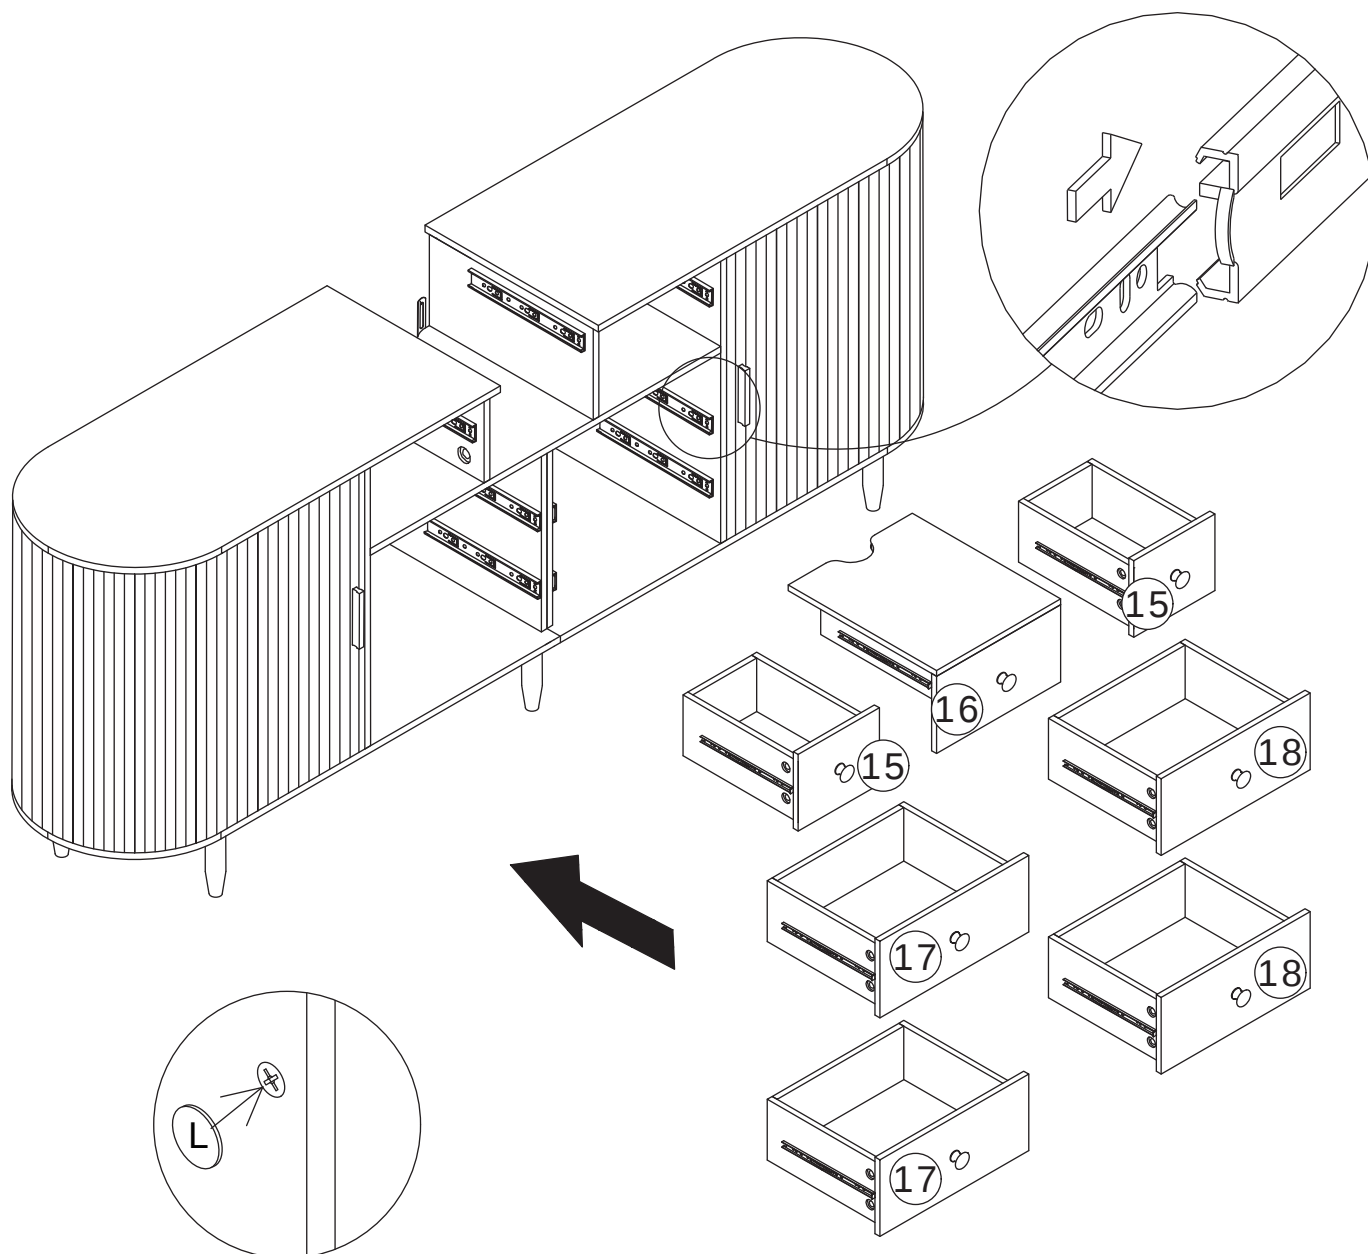 

Please stick the hardware "L" on the exposed cam lock hole that makes your product more beautiful.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068