 
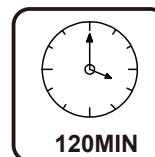 
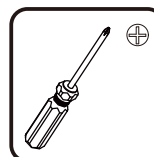 
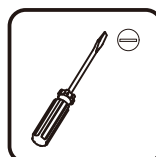 


Installation & Assembly

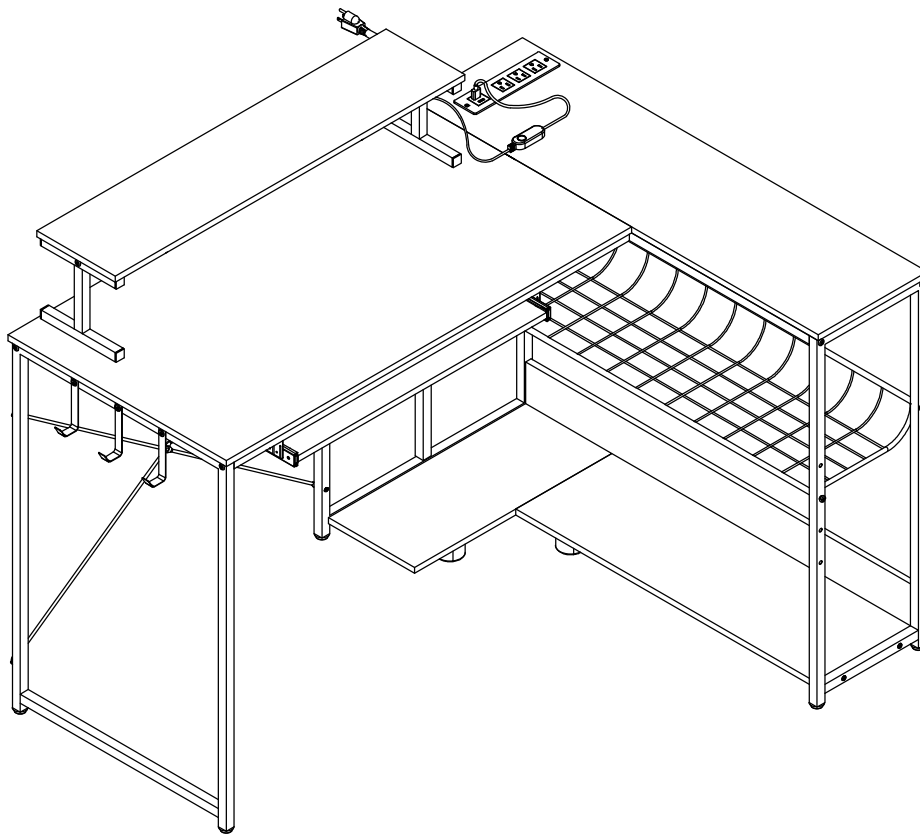

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

 
If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.

For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

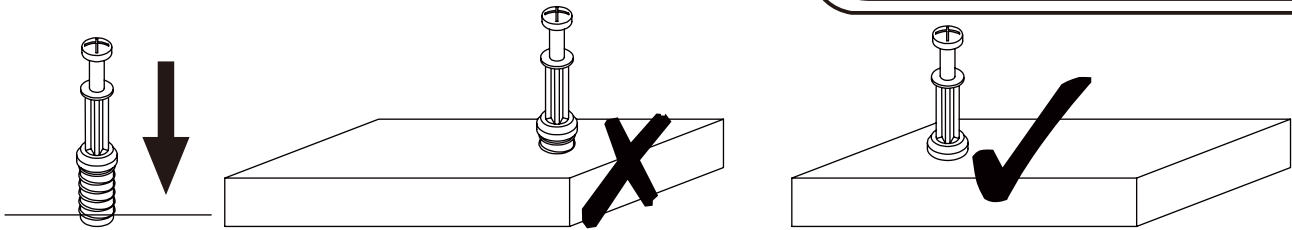

 
EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

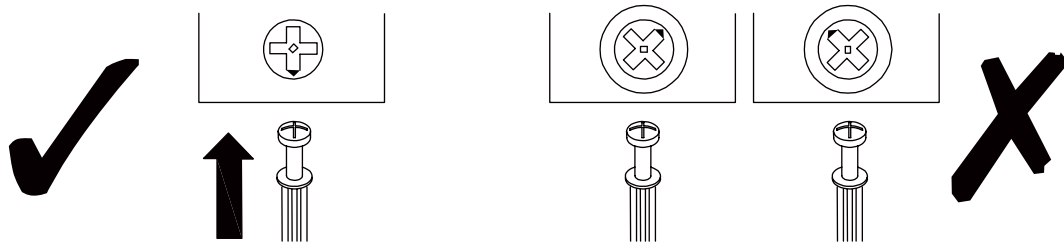










 
EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.








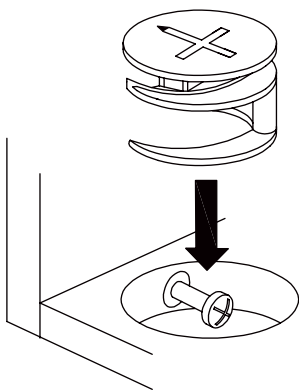


 
EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

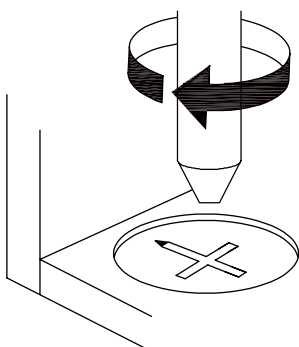

EN_Turn cam lock clockwise to tighten.

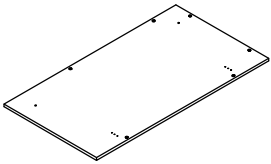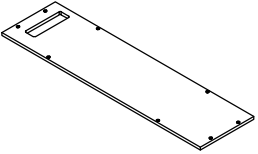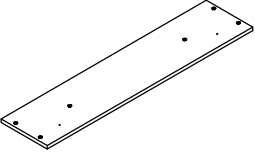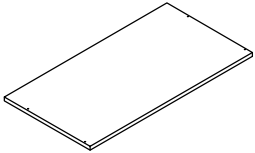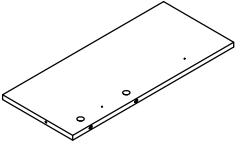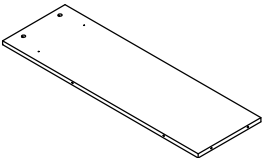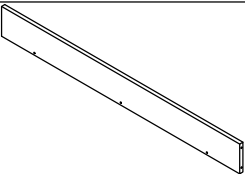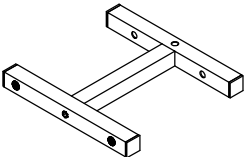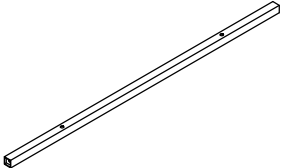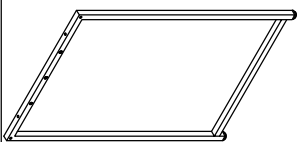          NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x2	
9		x1	
10		x1	

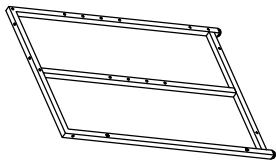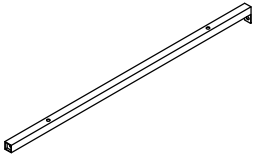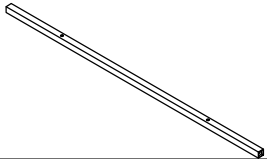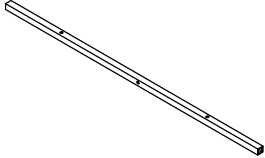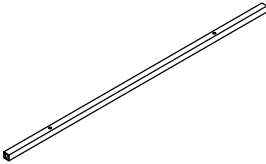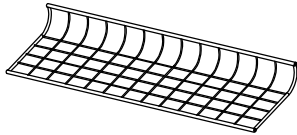        
NO.	PARTS	QTY	SPARE
11		x1	
12		x1	
13		x1	
14		x1	
15		x1	
16		x1	
17		x1	
18		x1	
19		x3	
	 Hardware Kit		

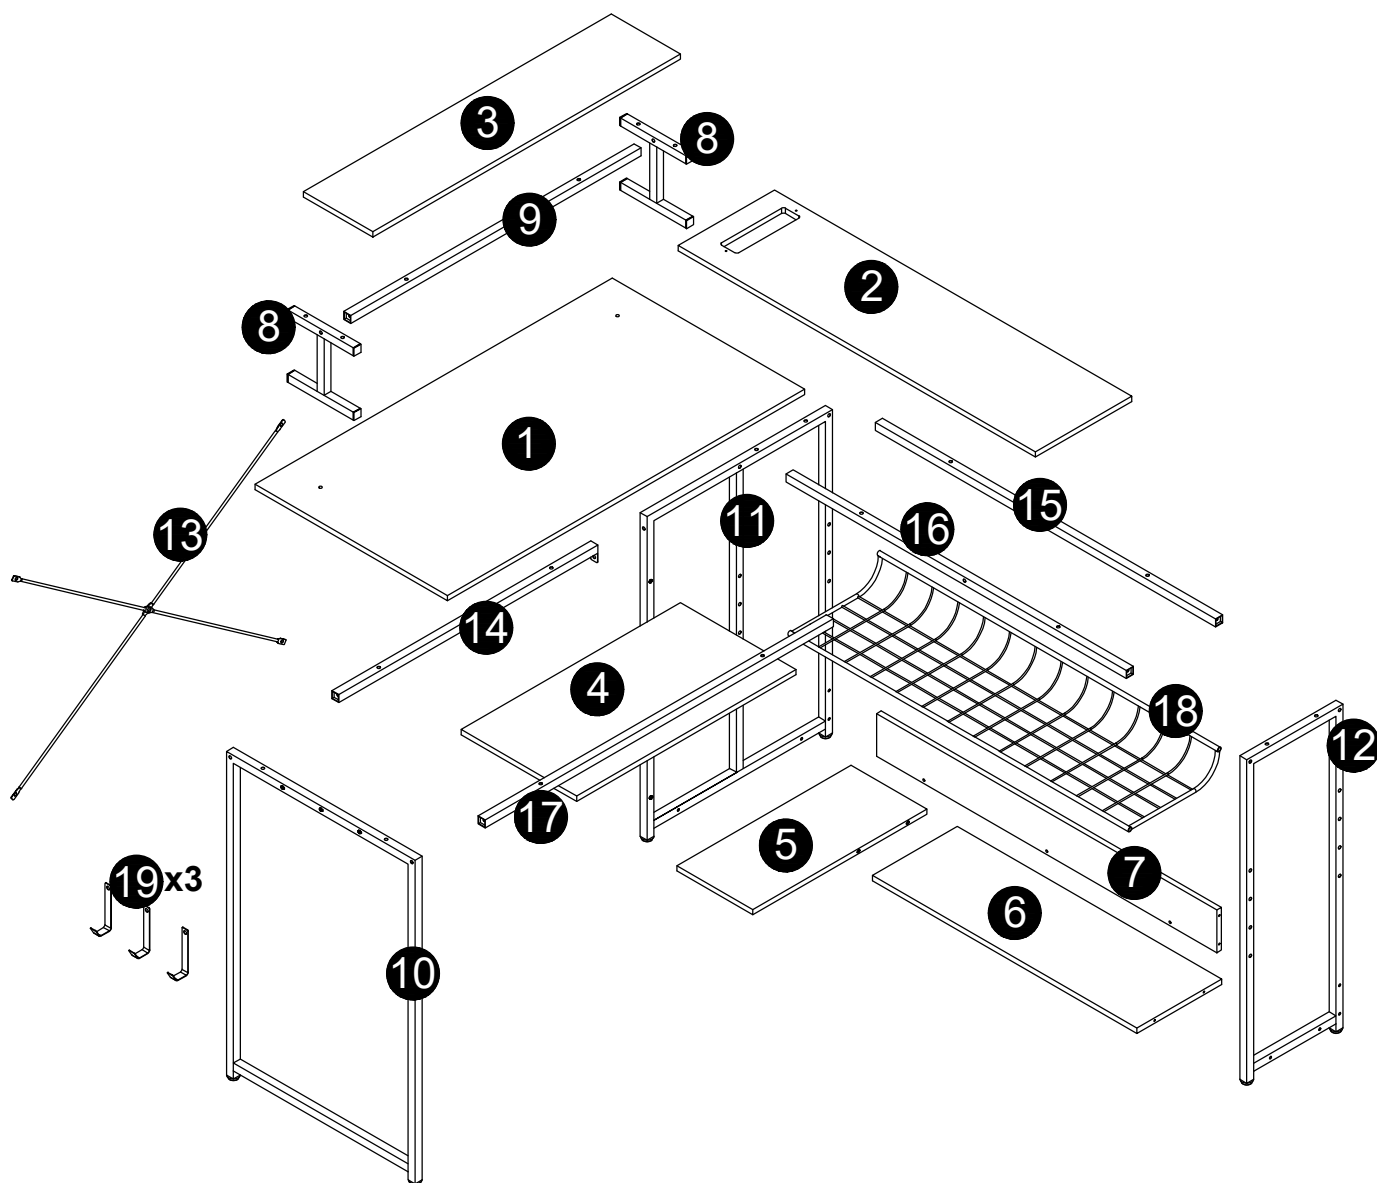 

A x2 Ø6x55mm	B x2 Ø15x10mm	C x2 Ø10x9.5mm	D x4 50x30mm	E x4	F x14 Ø6x30mm +1(spare)
G x22 Ø6x25mm +1(spare)	H x7 Ø6x12mm	I x1 10-Ø6mm	J x1 10mm	K x1 4mm	L x11 Ø5x40mm +1(spare)
M x1	N x2 Ø3x12mm +1(spare)	O x16 Ø4x12mm +1(spare)	P x1 300mm	Q x1	
R x2 Ø3.5x12mm					



 
Caution: When locking the iron frame, please be careful not to fully tighten any screws. After each component is installed, finally tighten all screws.

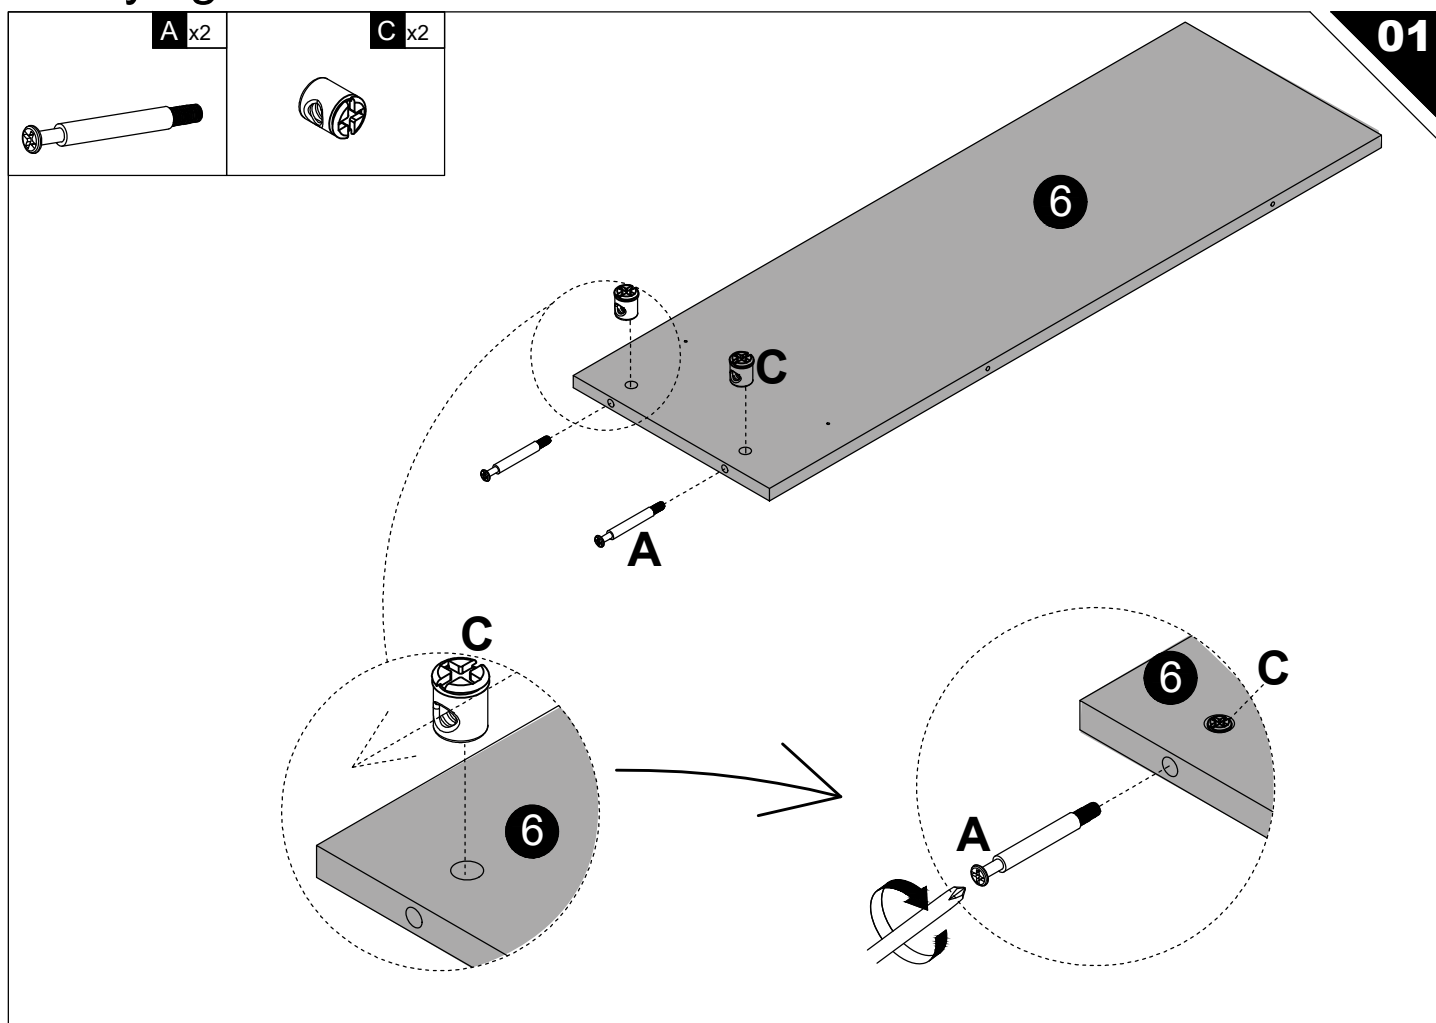

B x2



 
02

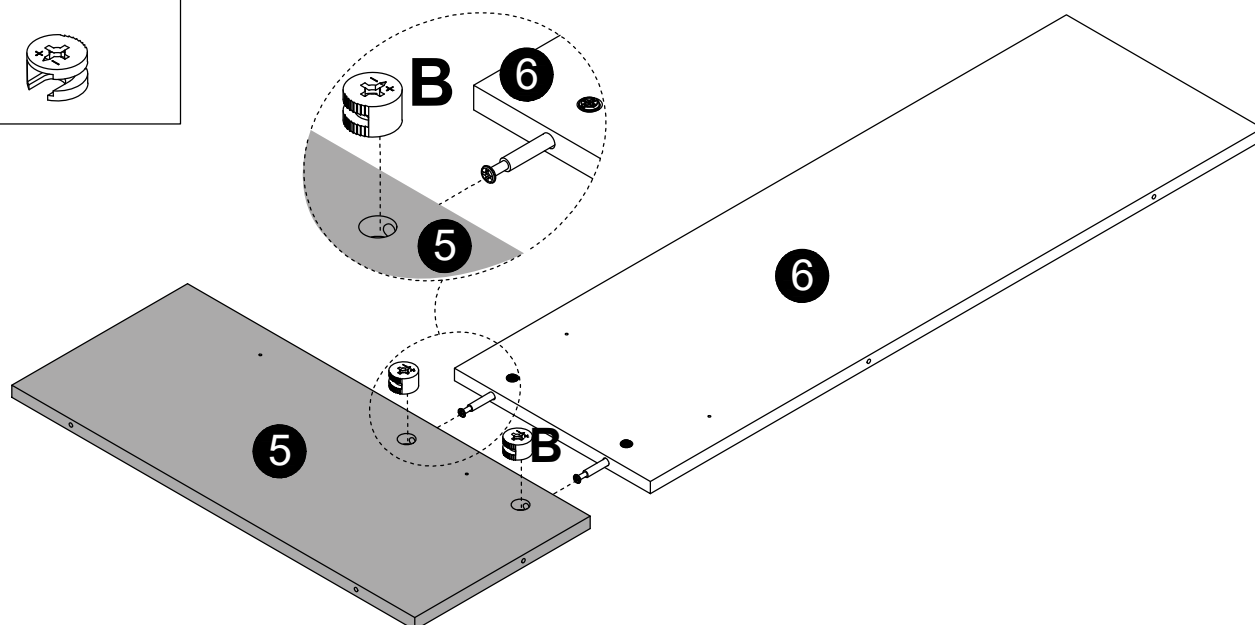

L x3




 03

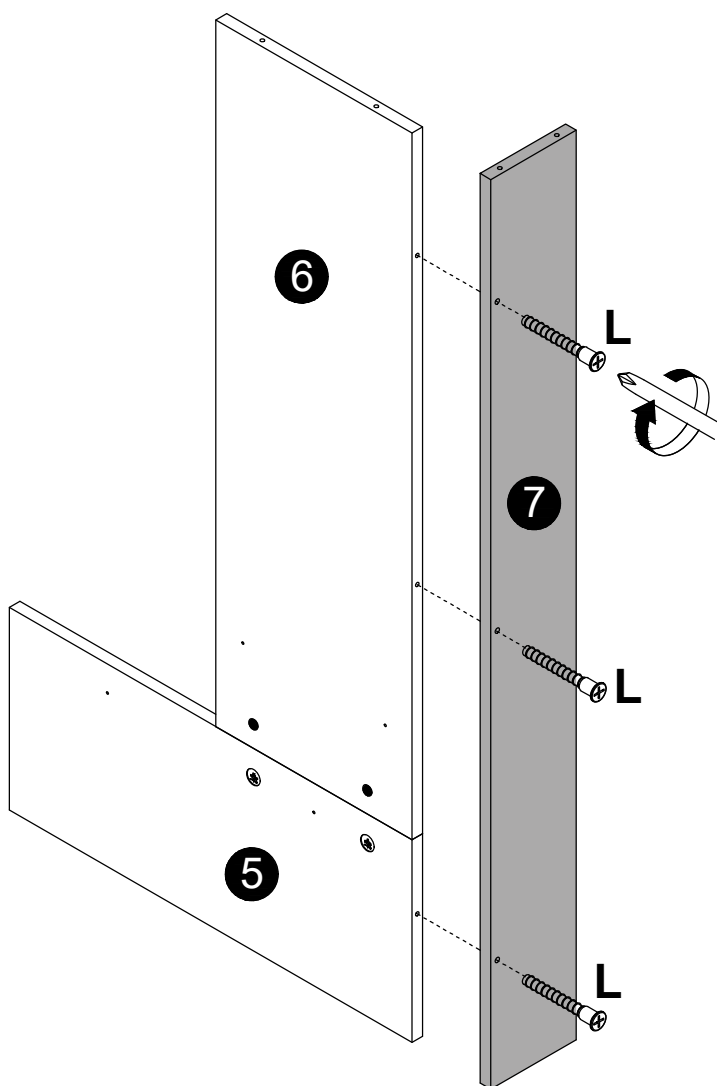


L x4

 04

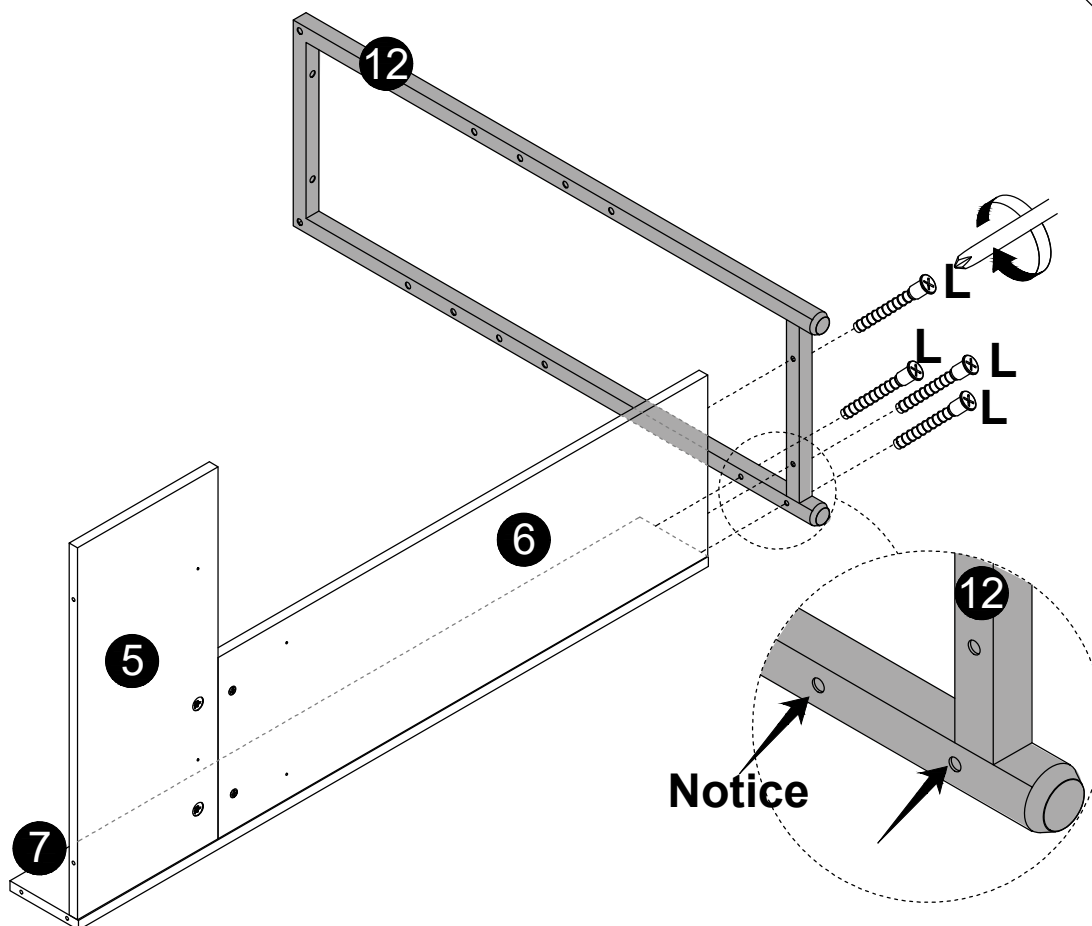


There are 4 gears available for users to choose from, with a distance of 64mm between each two gears. Users can choose which gear to install according to their actual needs.

 
05

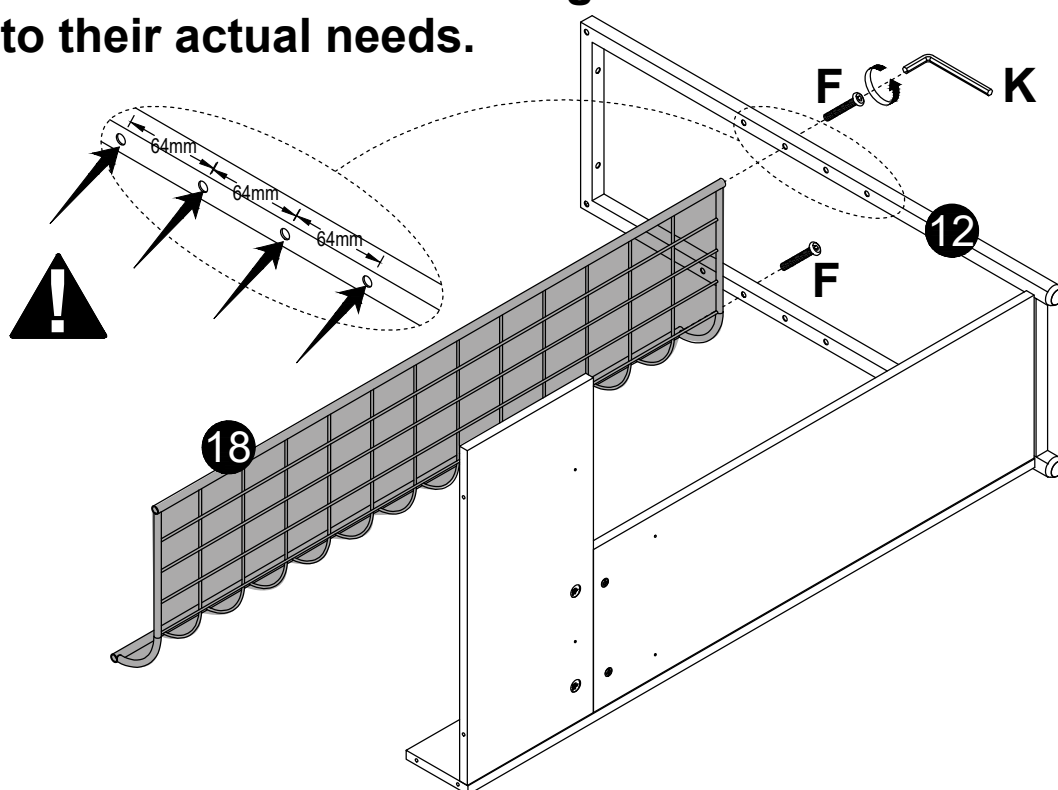

F x2

 

K x1

 

 Distance: $c > d$



K	
---	--

07

Notice

Notice

L x4

F x4


K

L	x4
---	----

F	x4
---	----

K	
---	--

 
08

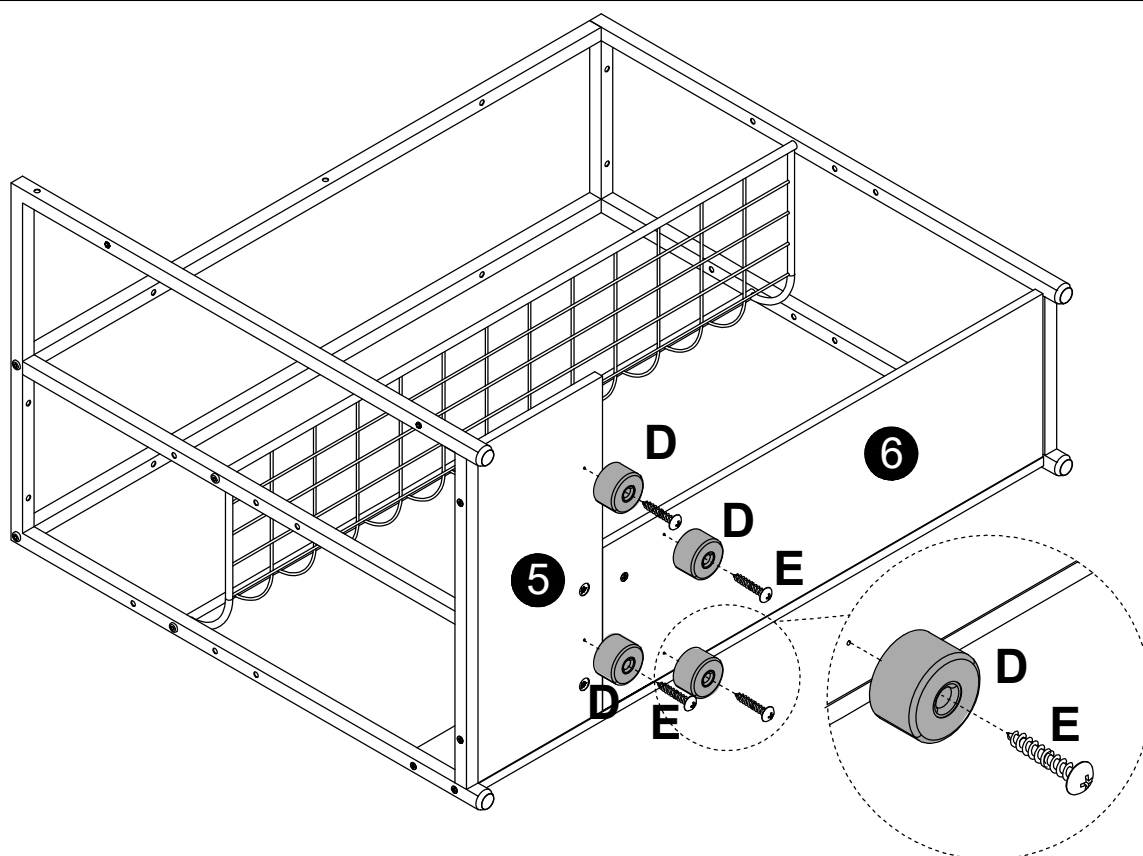

D x4




 E x4







09

 F x2




K

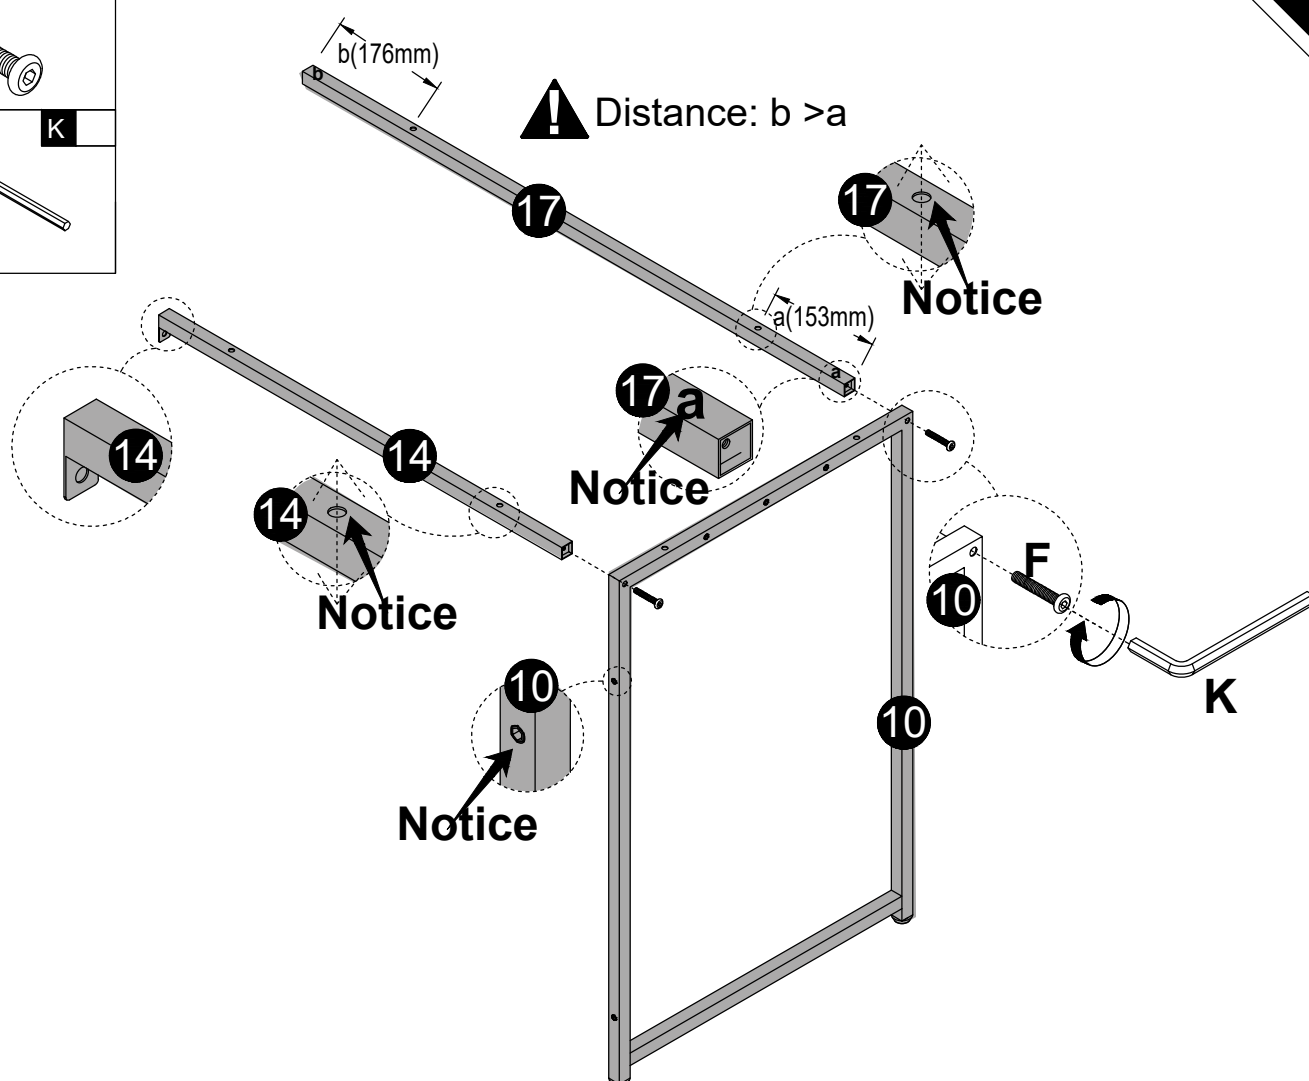  


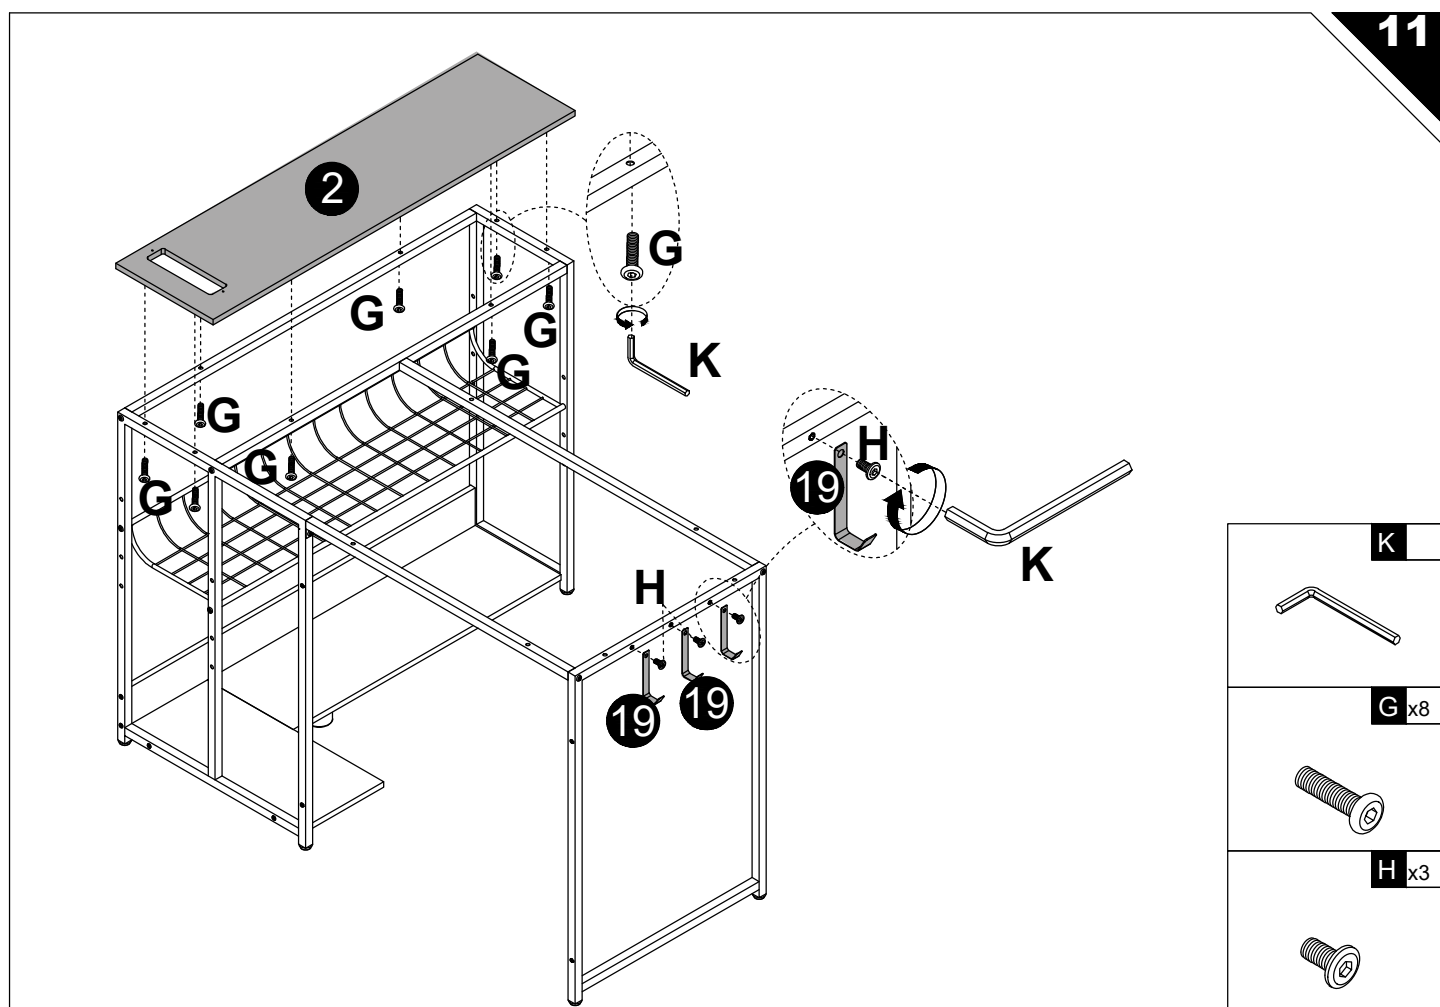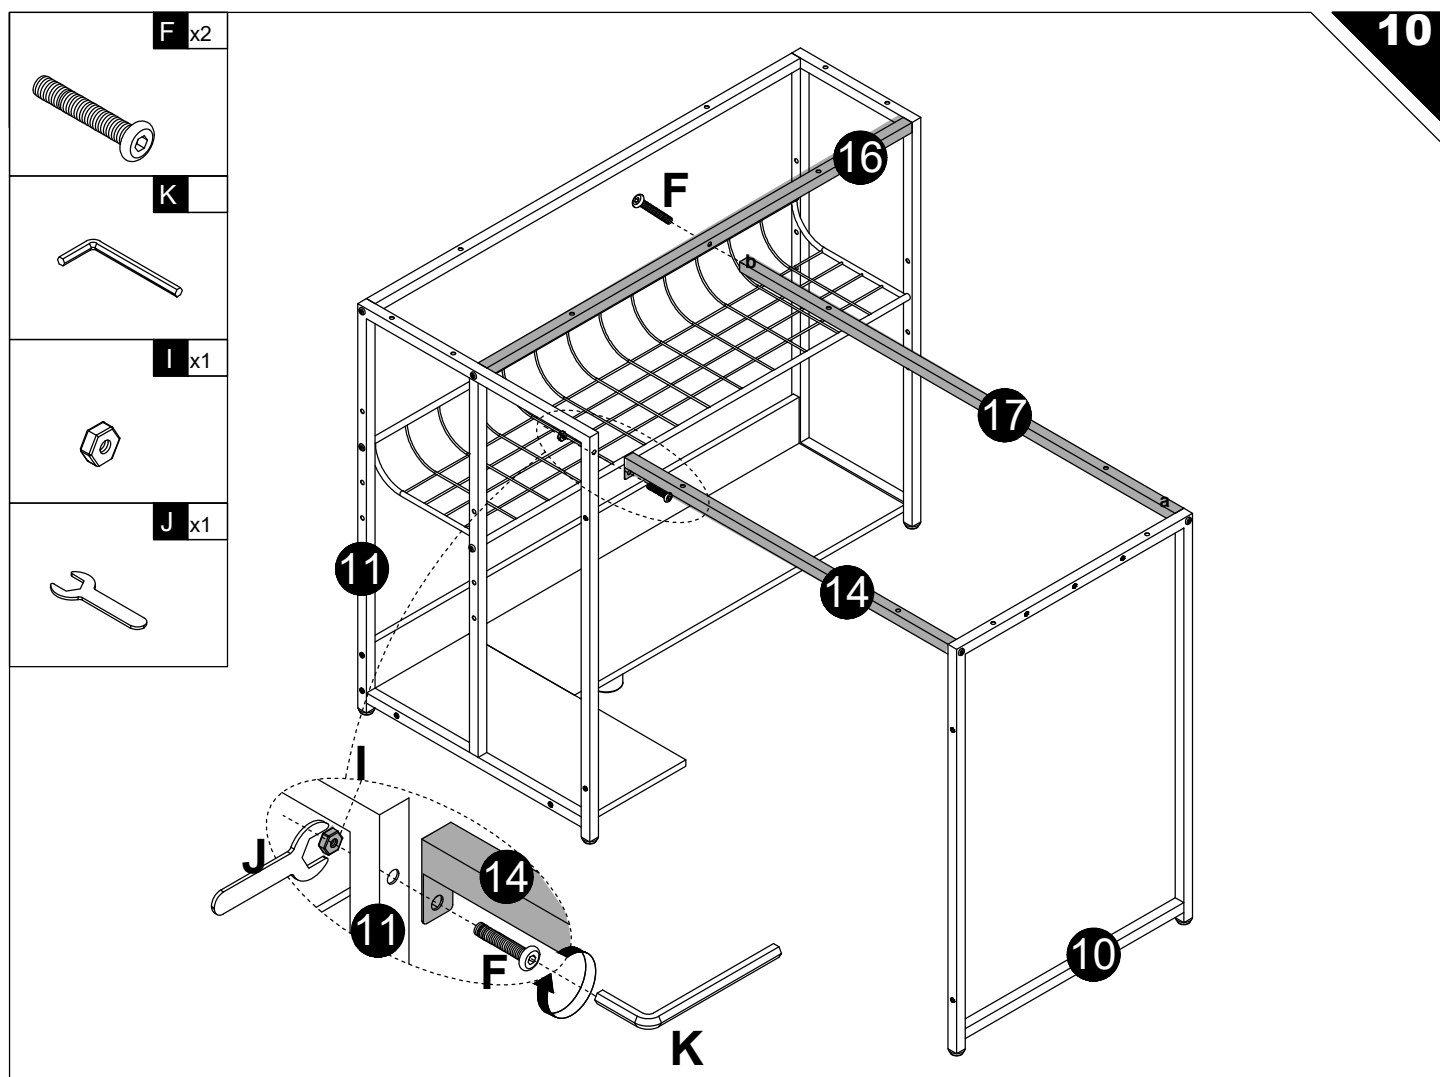  

14

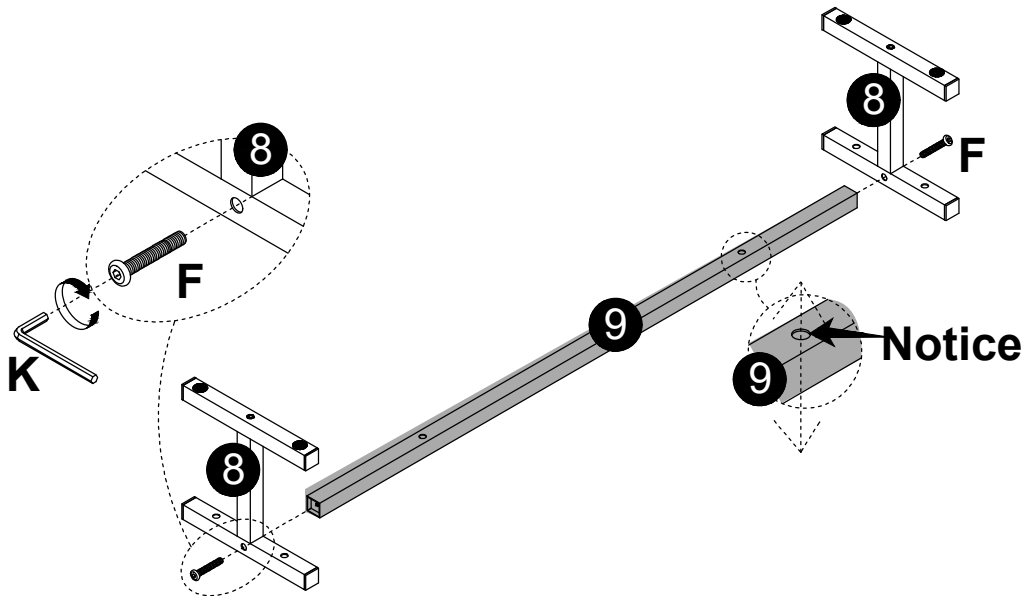 


F x2

 

K



 
15

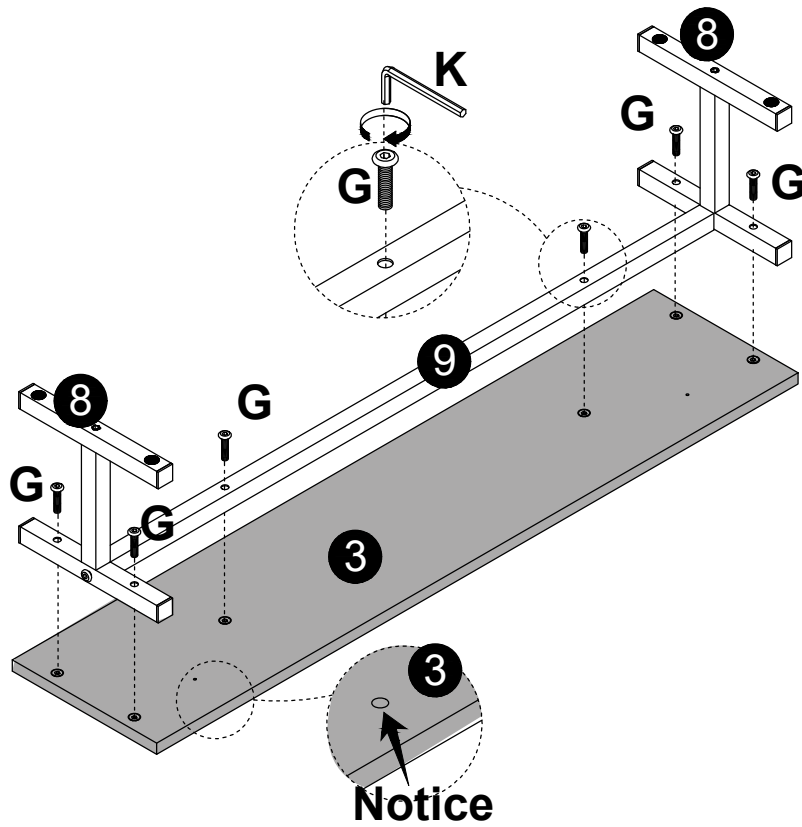


K




  G x6




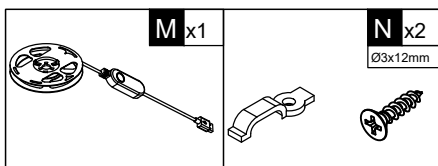

 - (1) Please unfold the light strip (M) and peel off a small piece of protective film on the back of the light strip M at the right end, as shown in the picture

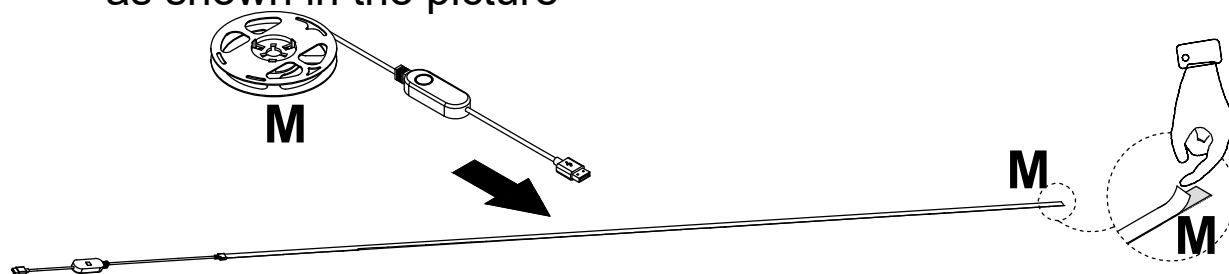

 
(2)

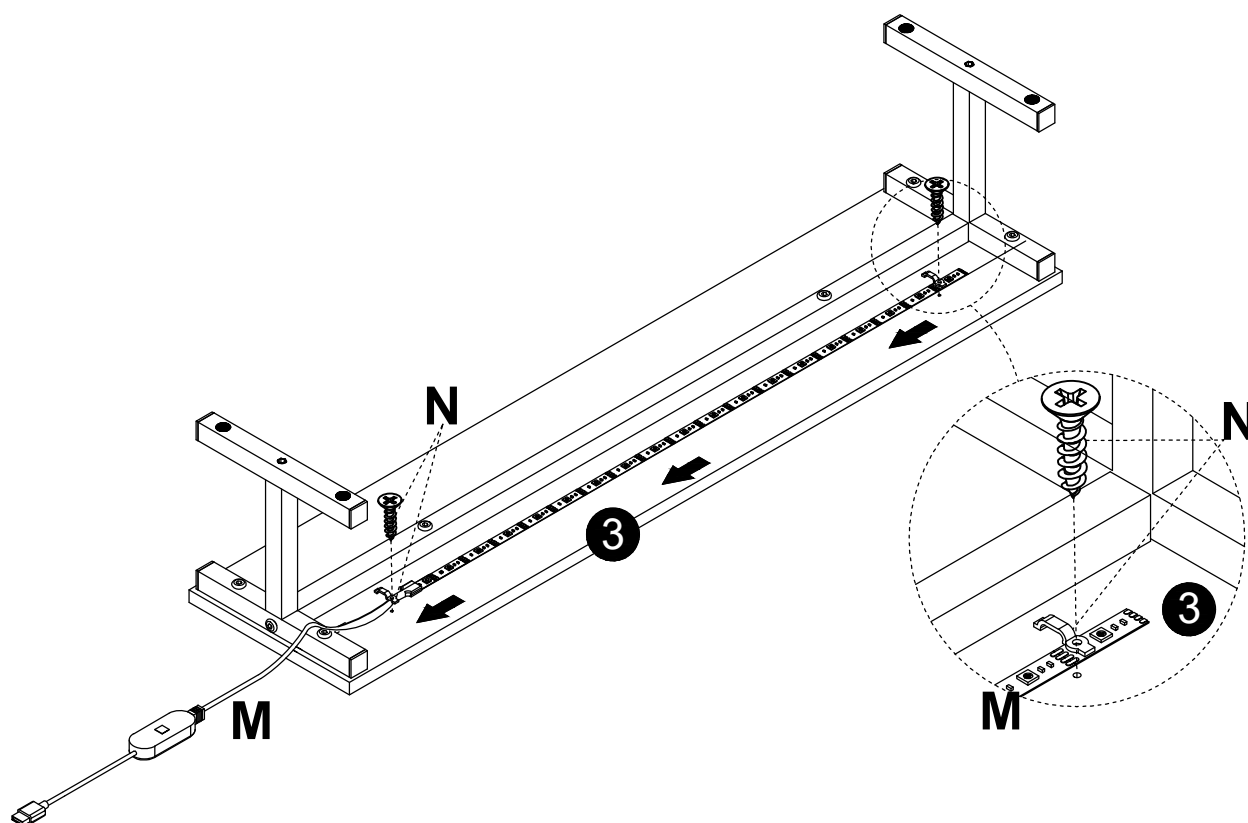

K



 G x2


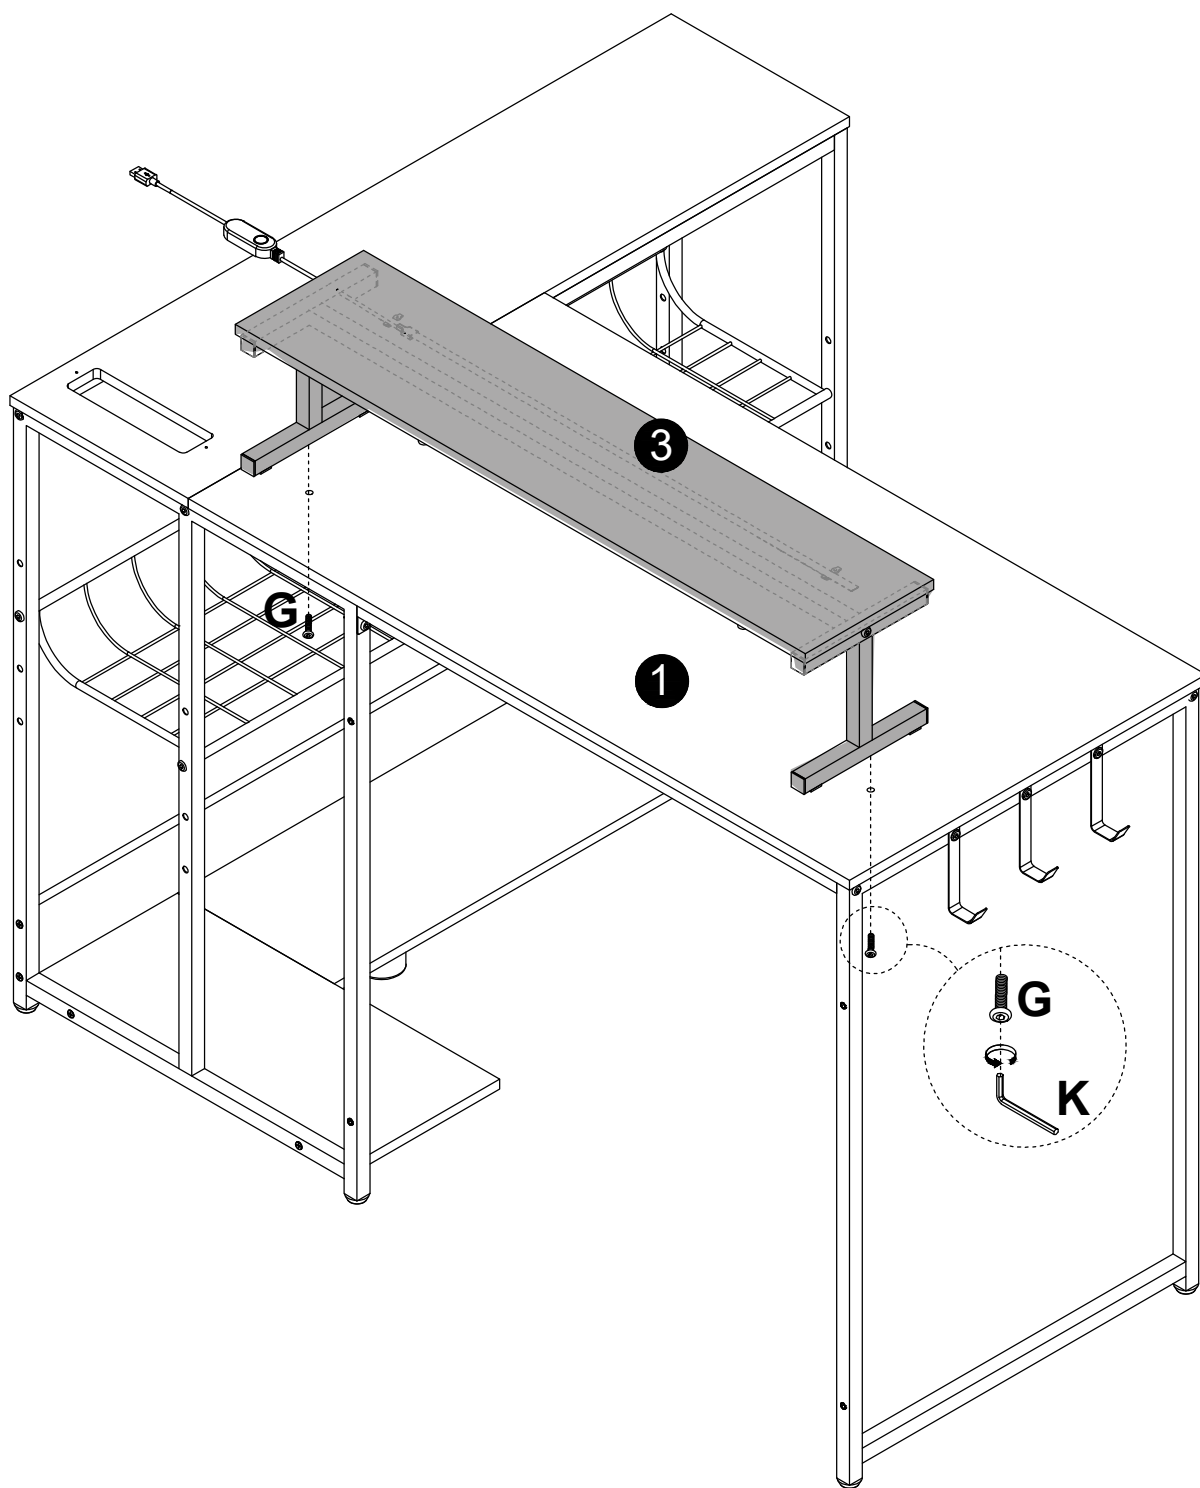



H x4

Q x1

R x2

   
K

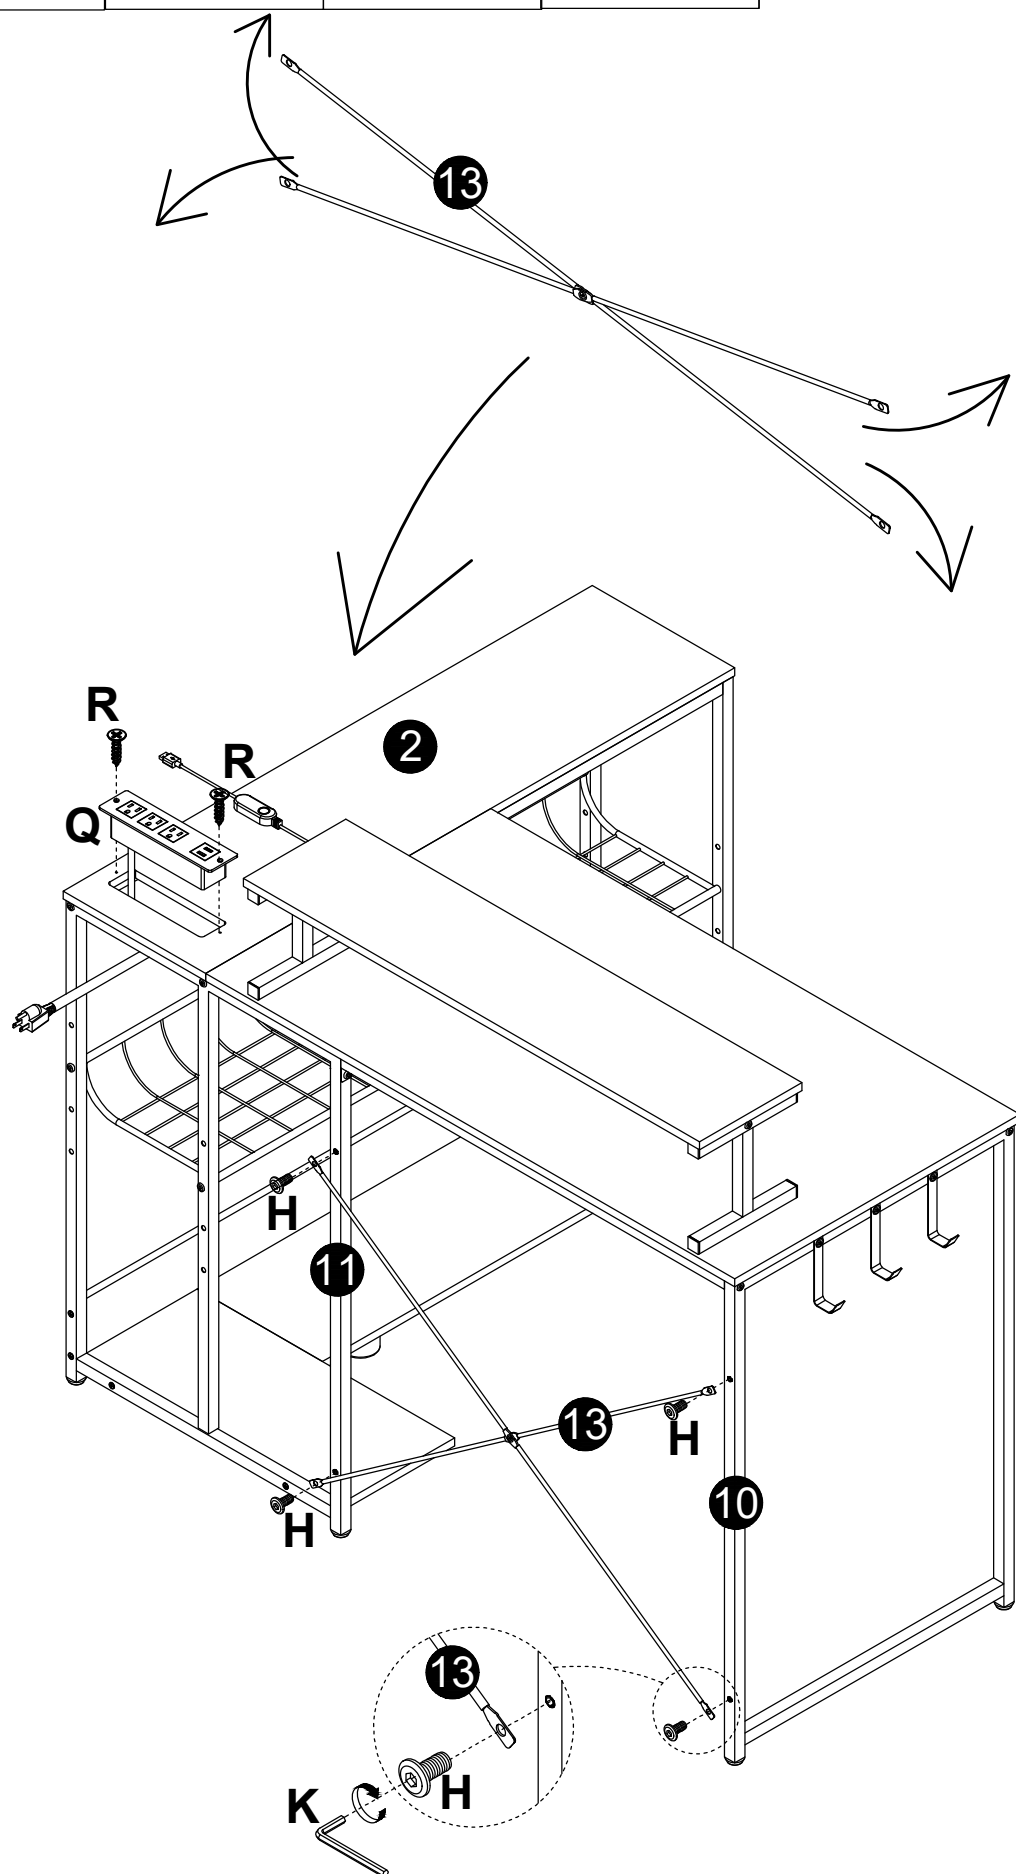


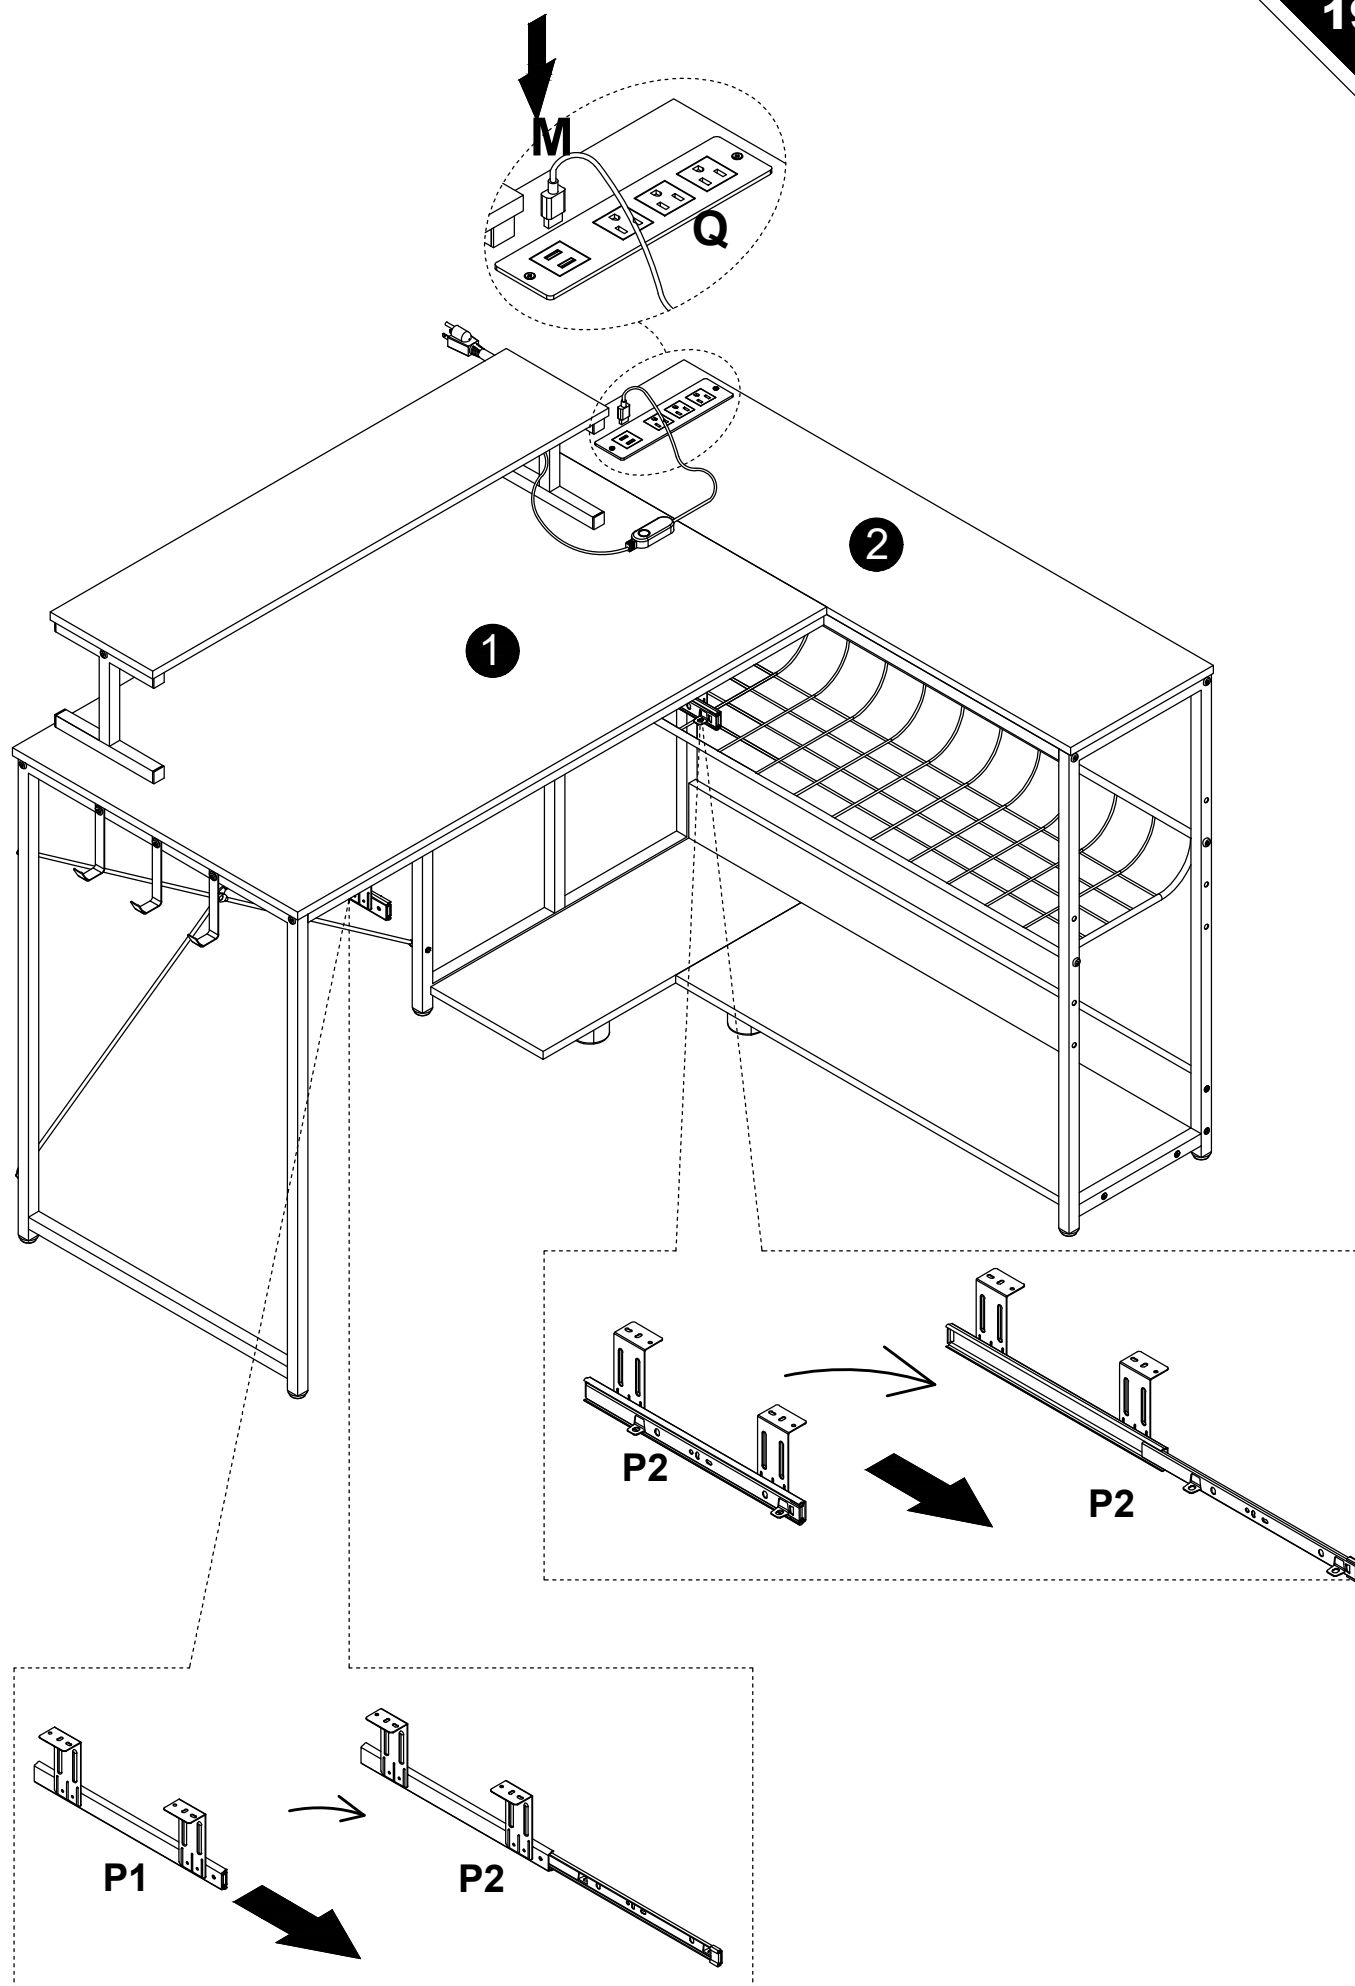




! Distance: $h > g$

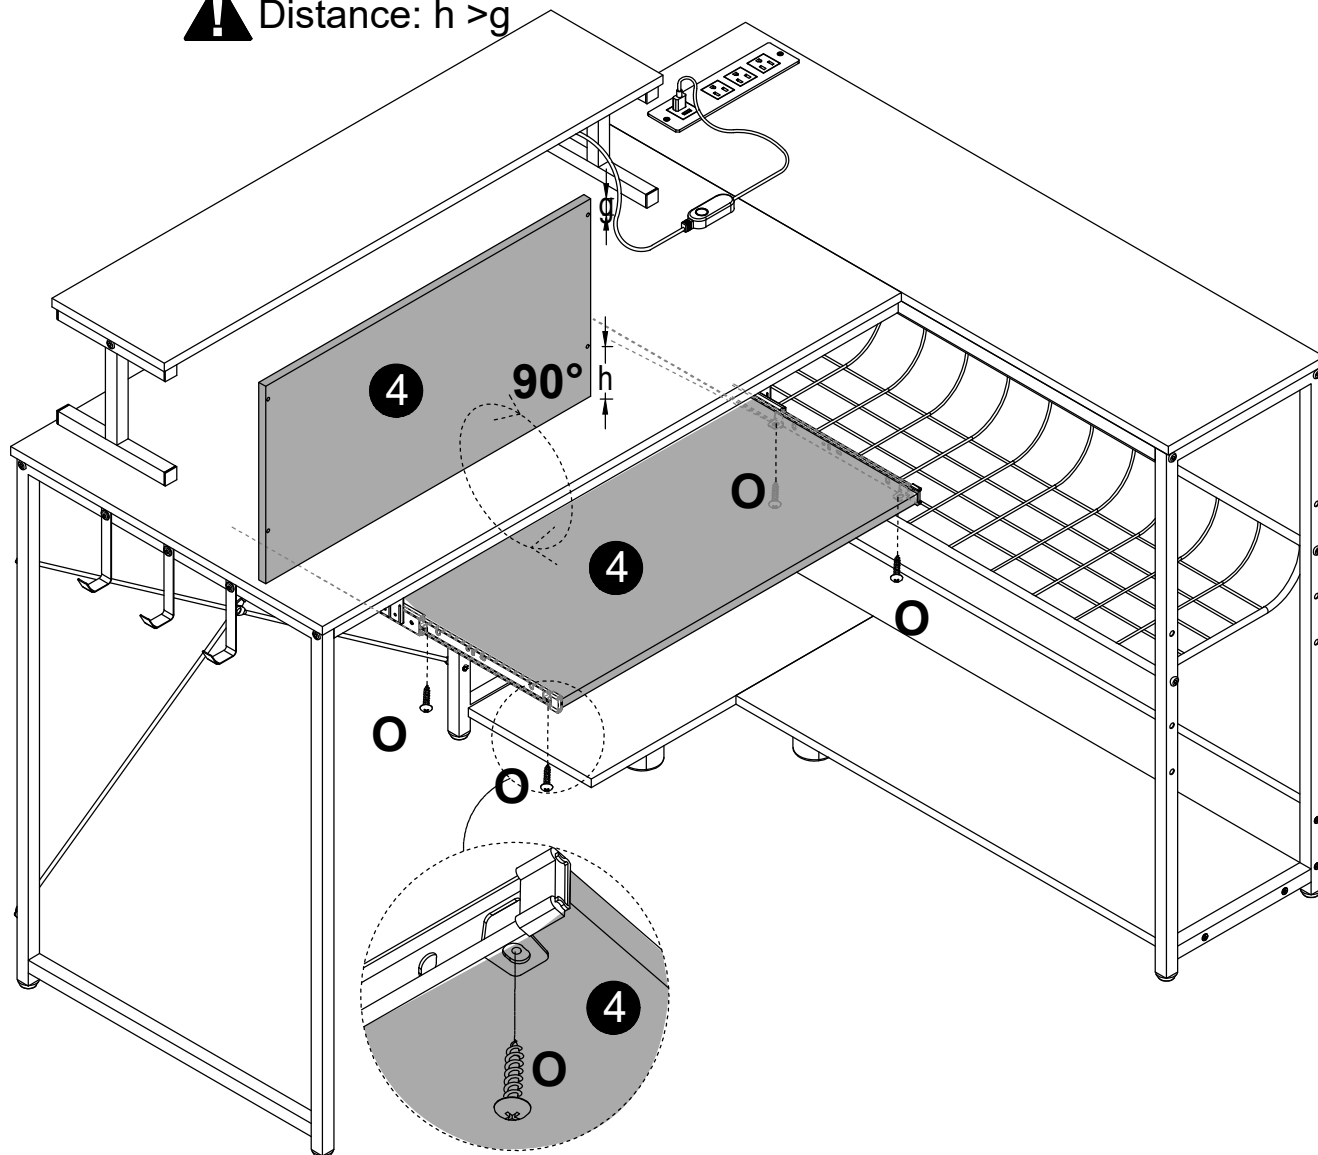 


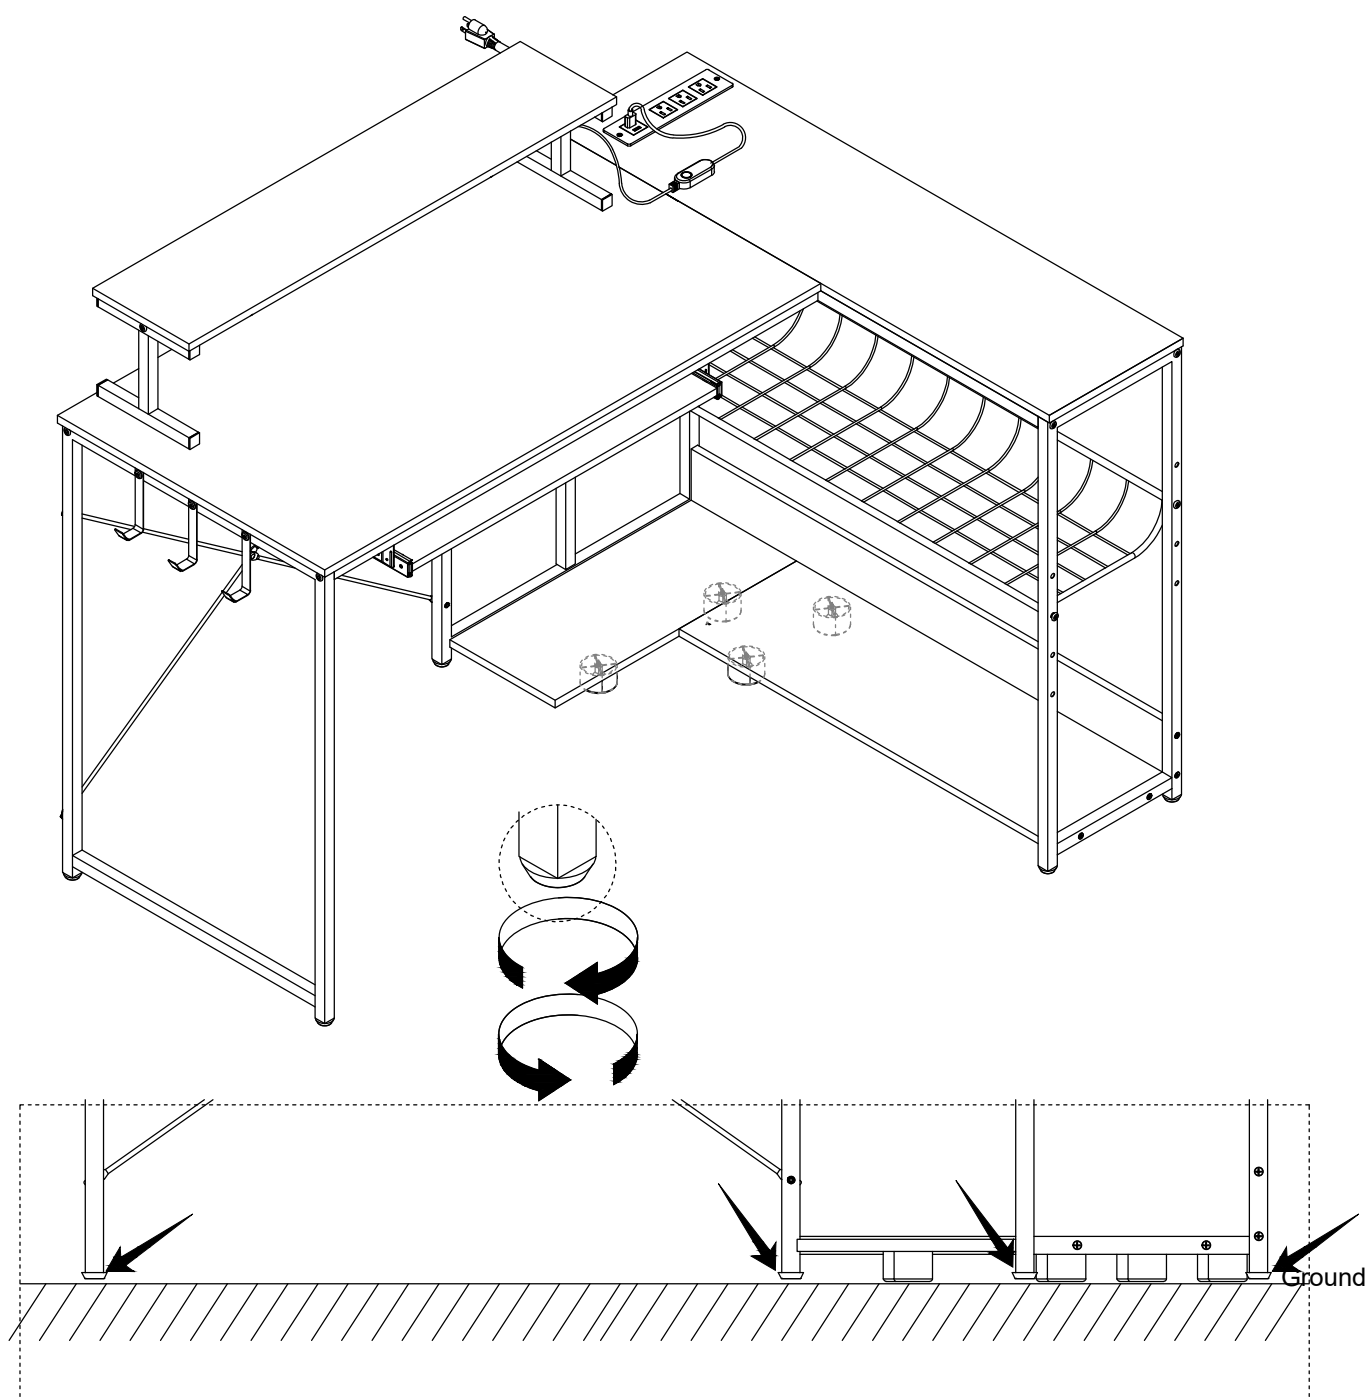 

 If the table is unstable with the ground, please rotate the adjustable foot pad under the iron piece.

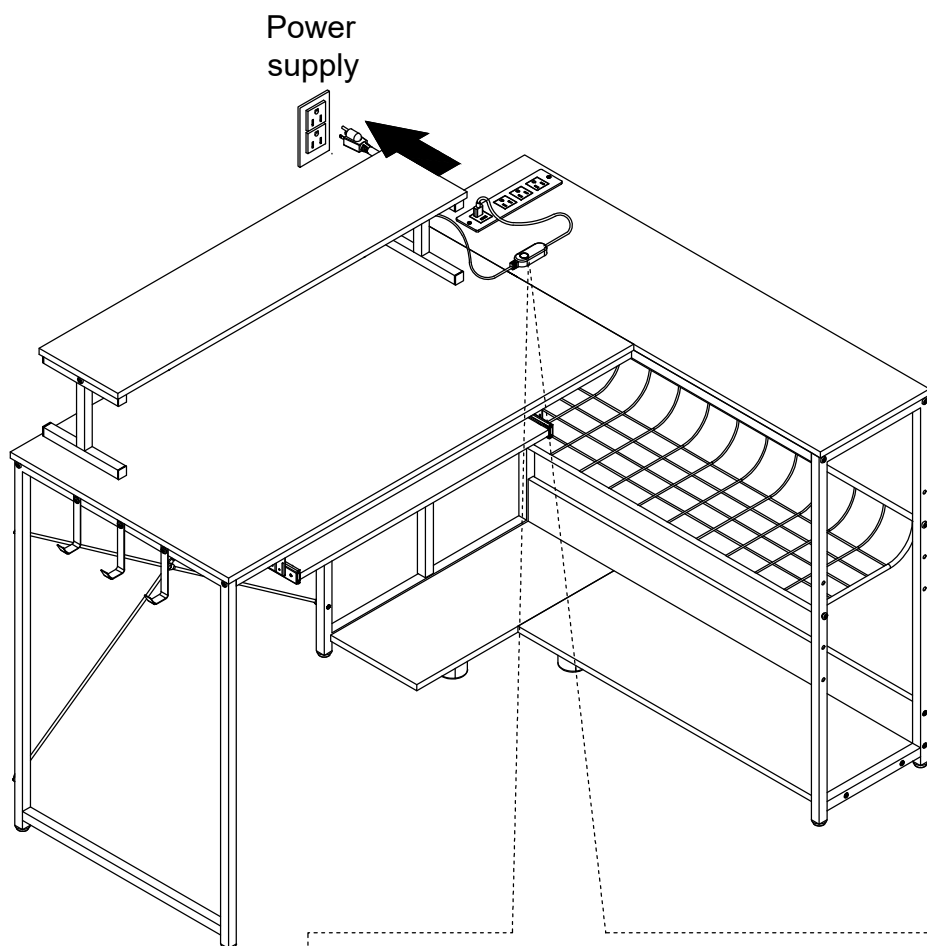

Scan QR code to download
APP controller

 

OR

Flip to the other side to
find the control button

