 


TV stand

Product ID. 7AXMF

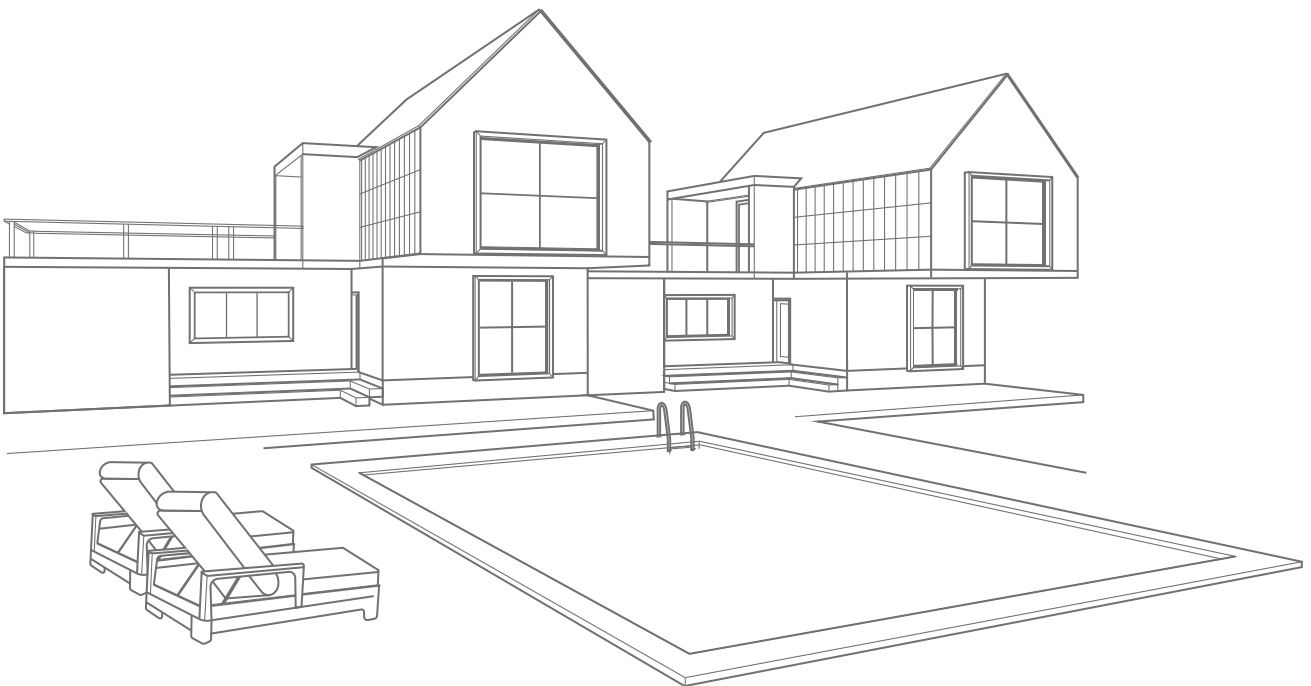 


Scan for Support
support@garvee.com



Distributed by
GARVEE.com


V2603316VMF

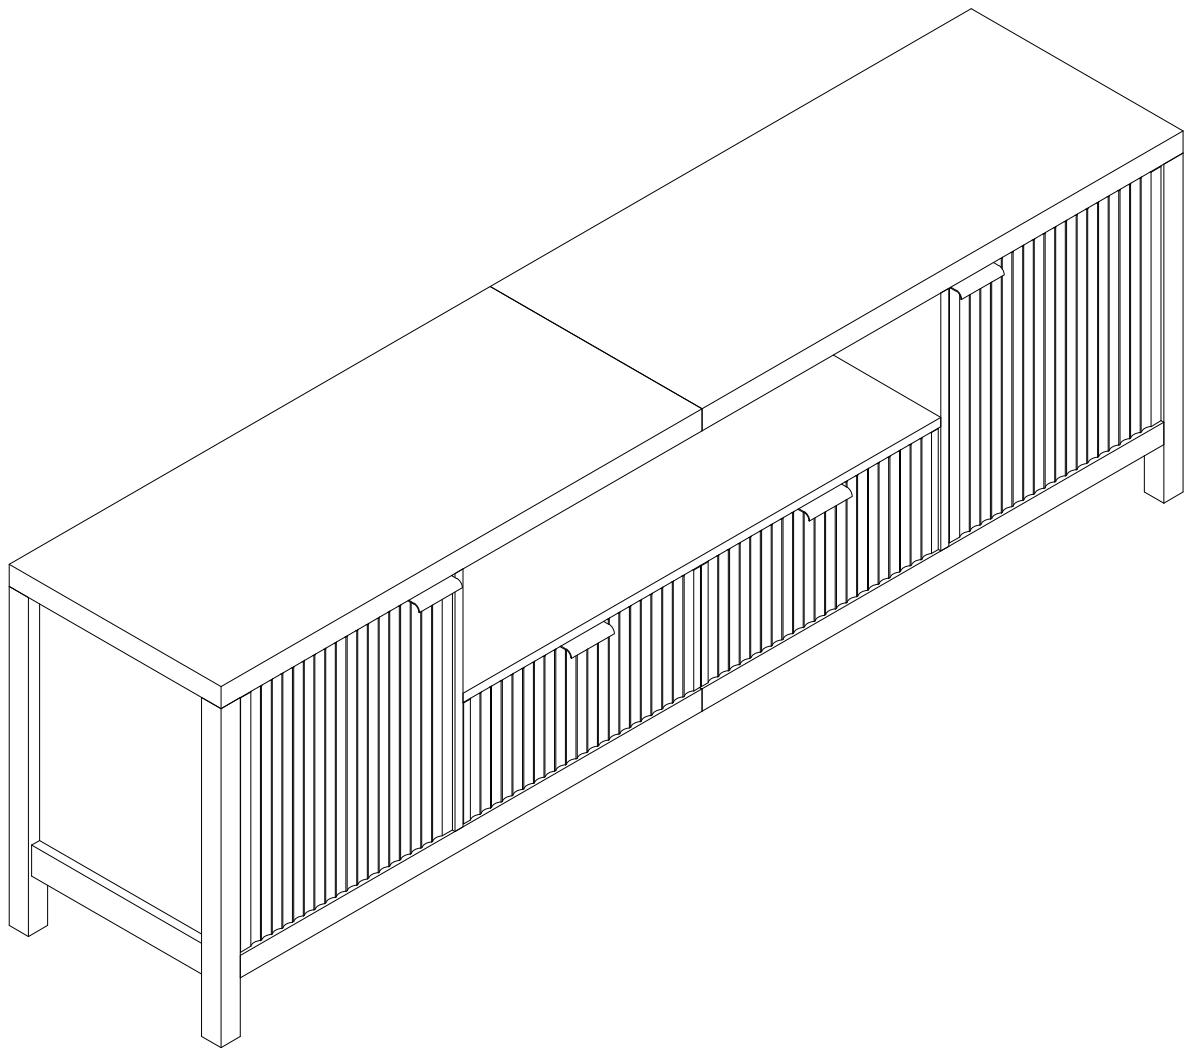













Distributed by
GARVEE.com

support@garvee.com











 
Parts List

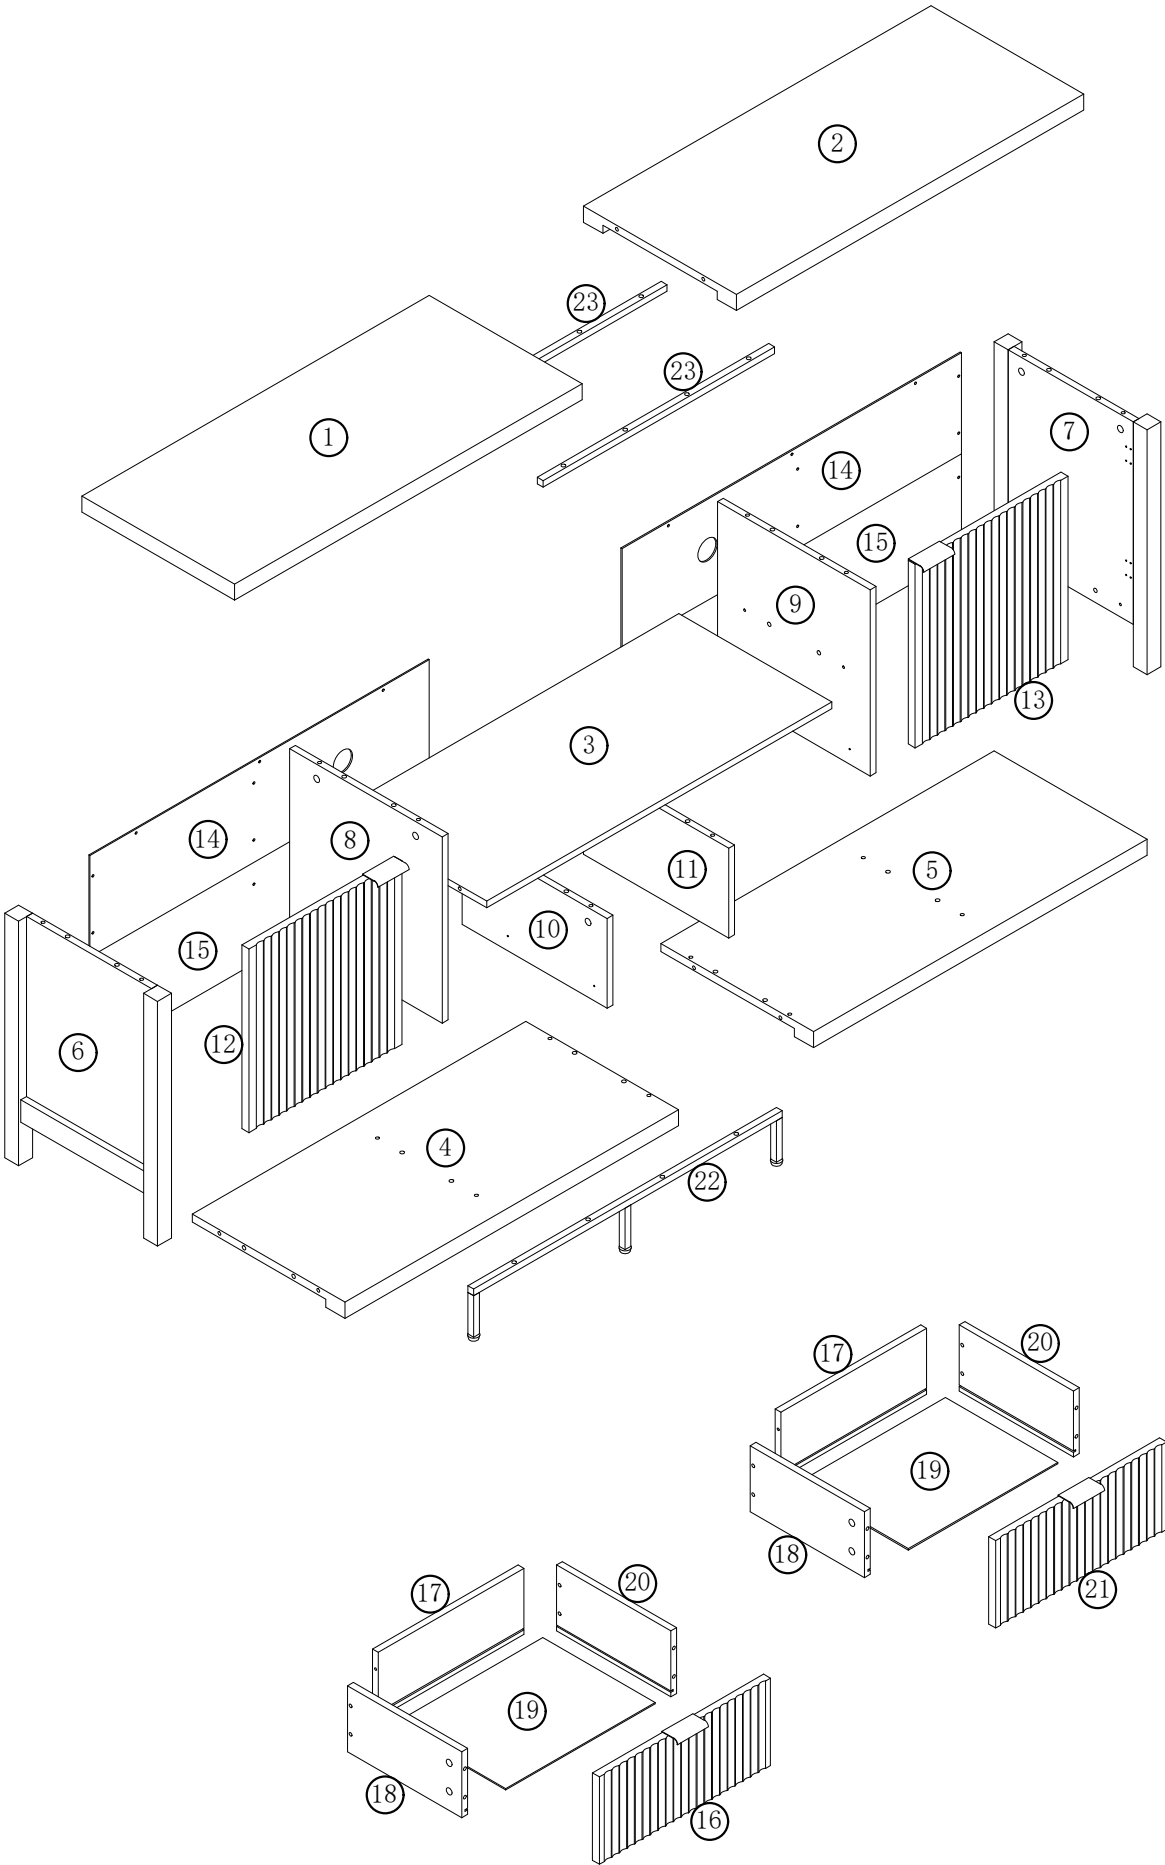













Parts List

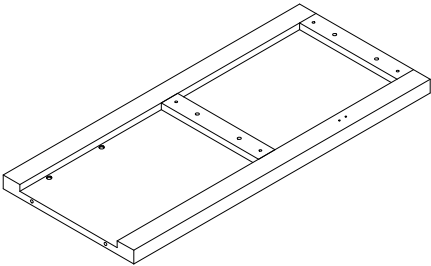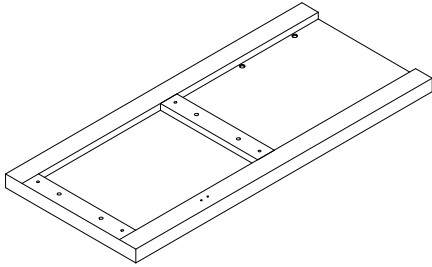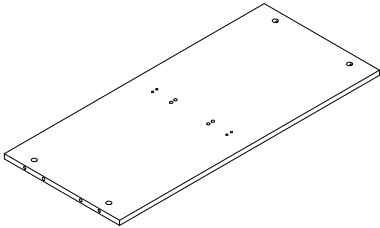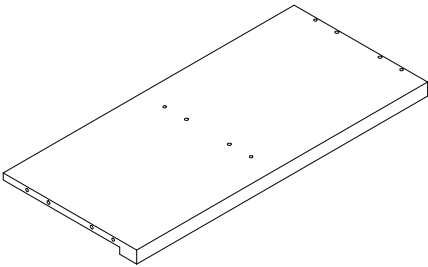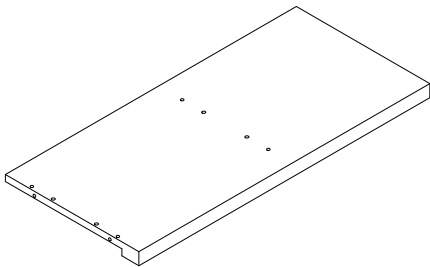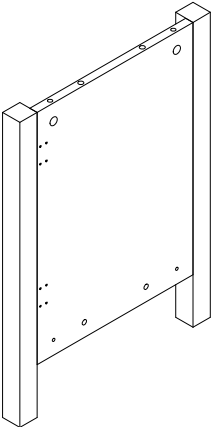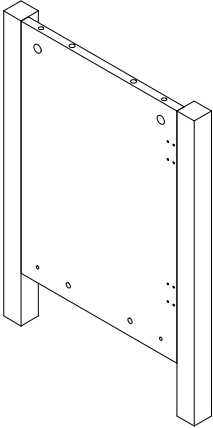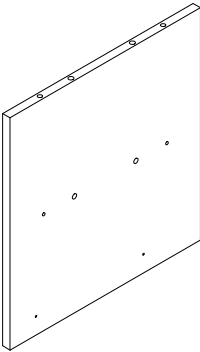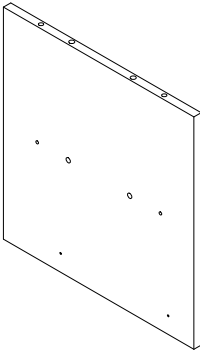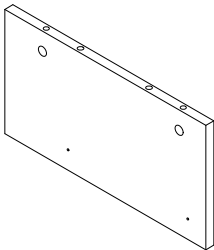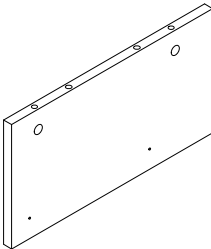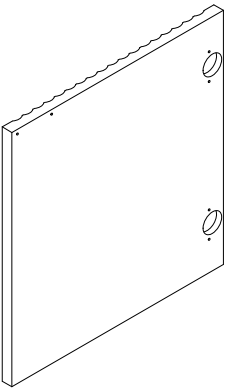            ①  X1	②  X1	③  X1
④  X1	⑤  X1	⑥  X1
⑦  X1	⑧  X1	⑨  X1
⑩  X1	⑪  X1	⑫  X1

           Parts List

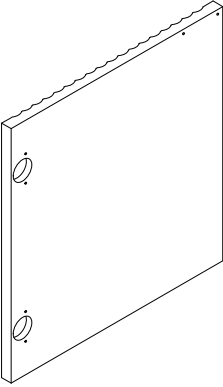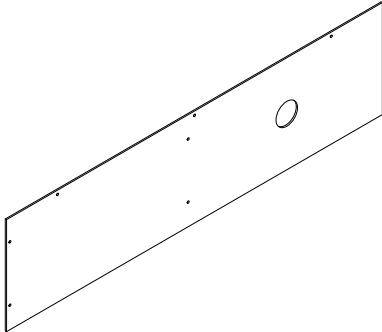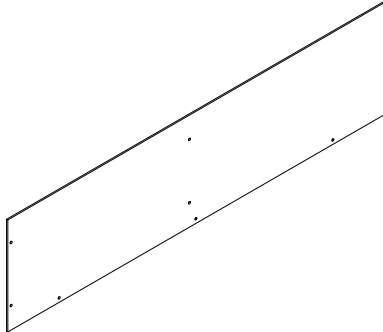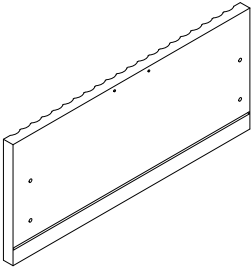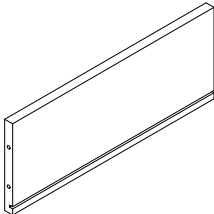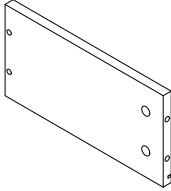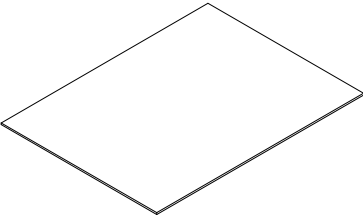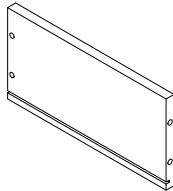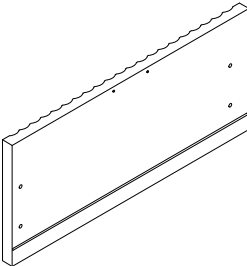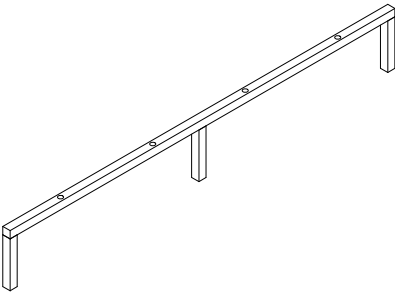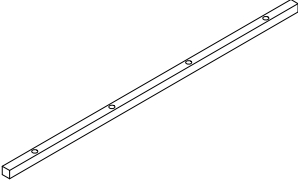
13 	14 	15 
X1	X2	X2
16 	17 	18 
X1	X2	X2
19 	20 	21 
X2	X2	X1
22 	23 	
X1	X2	

            Hardware List

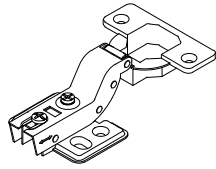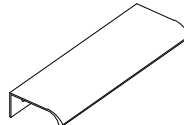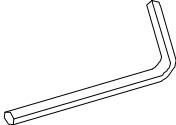
A M6x28mm  X12	B M7x50mm  X16	C KM6x40mm  X28	D M4x14mm  X28
E M15x11mm  X12	F M3.5x14mm  X52	G M8  X3	H 6x50mm  X32
I  X4	J L 300mm  CL  DL X2	 CR  DR X2	K  X4
L  X2	M M15x9mm  X16	N  M4  X1	

Tools required

 Phillips Screwdriver


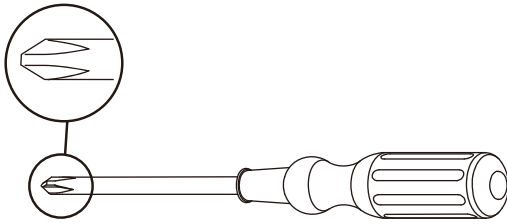


Straight Screwdriver

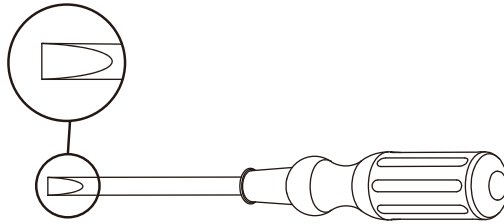 


Power Tool NOT Recommended

  To ensure proper assembly we have included the following guides:

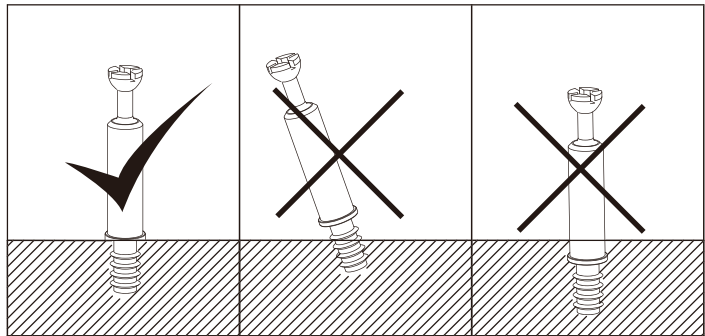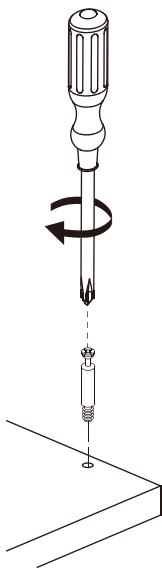


Insert threads of Locking Bolts completely, and stop once threads are no longer visible.

 Do NOT overturn.

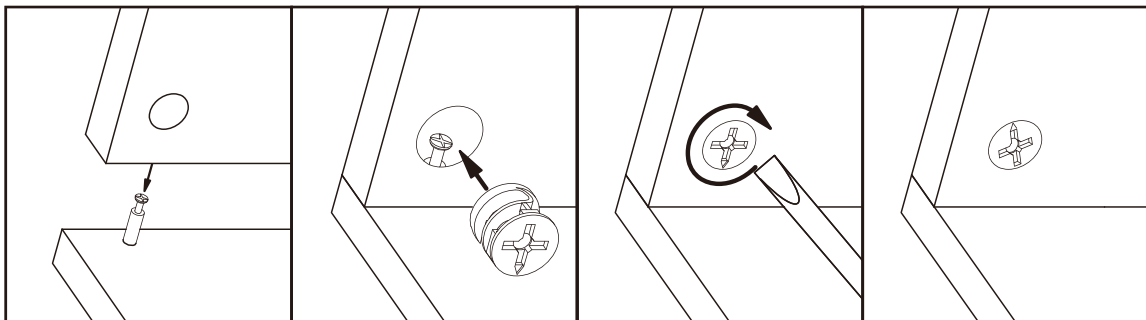


Reference this guide when assembling all Cam Locks.

 Do NOT overturn.

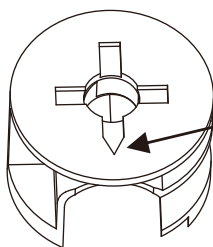


Notice: "pointer arrow" on cam face the Bolt when inserted the cam.

 
STEP 1

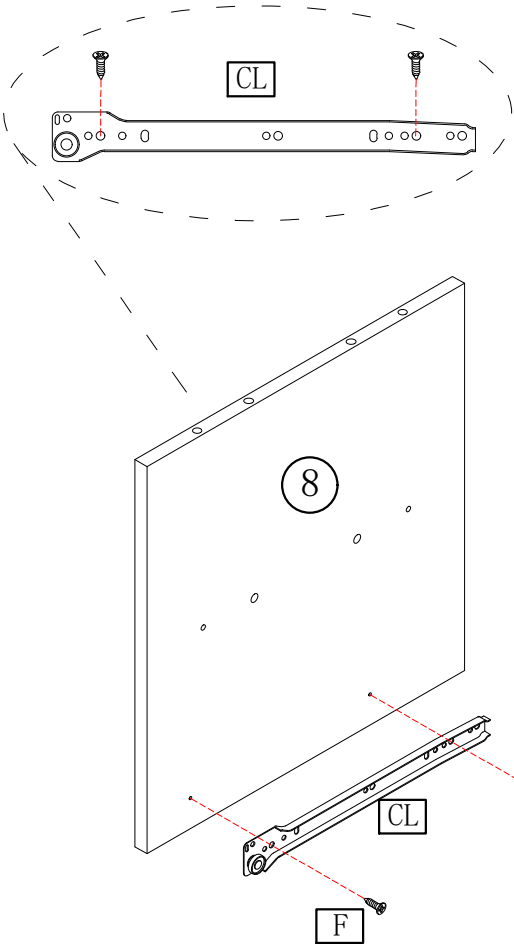



Noted distance of slide to edge is 20mm

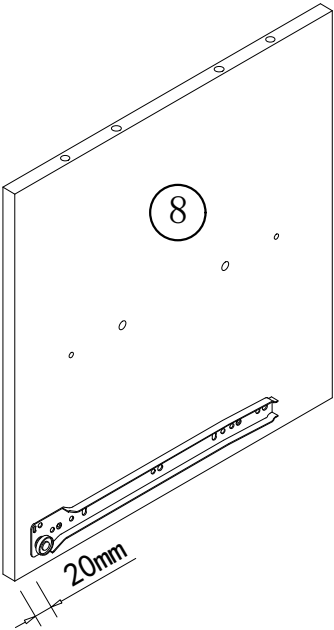 

F	M3. 5*14
	
*2	

 J	
CL	
*1	

  
STEP 2

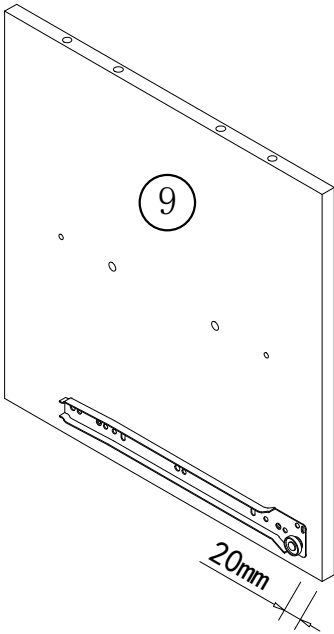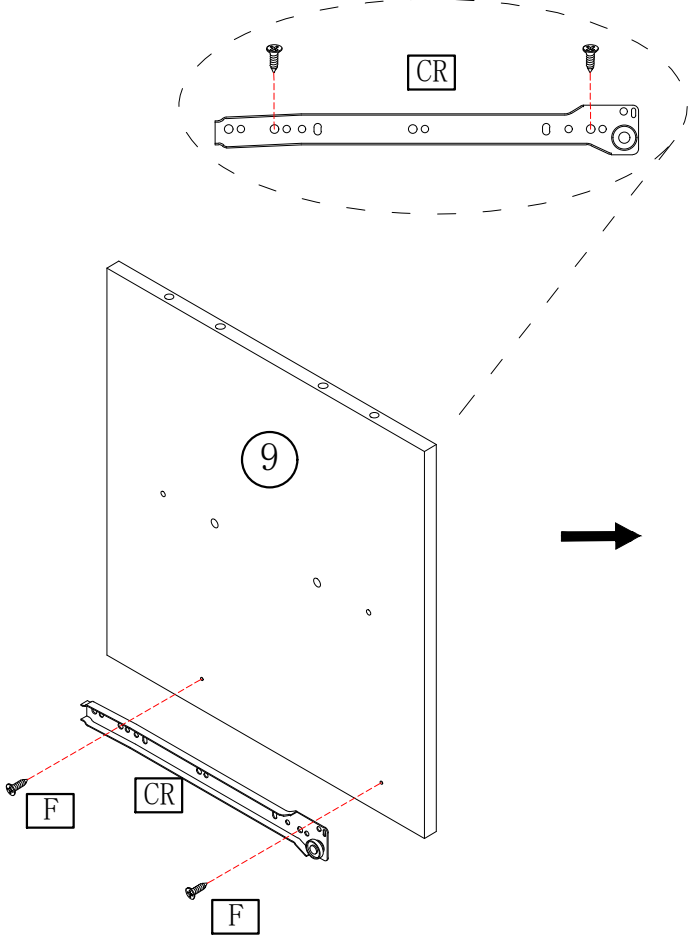


F	M3. 5*14
	
*2	

J	
CR	
*1	

 
STEP 3

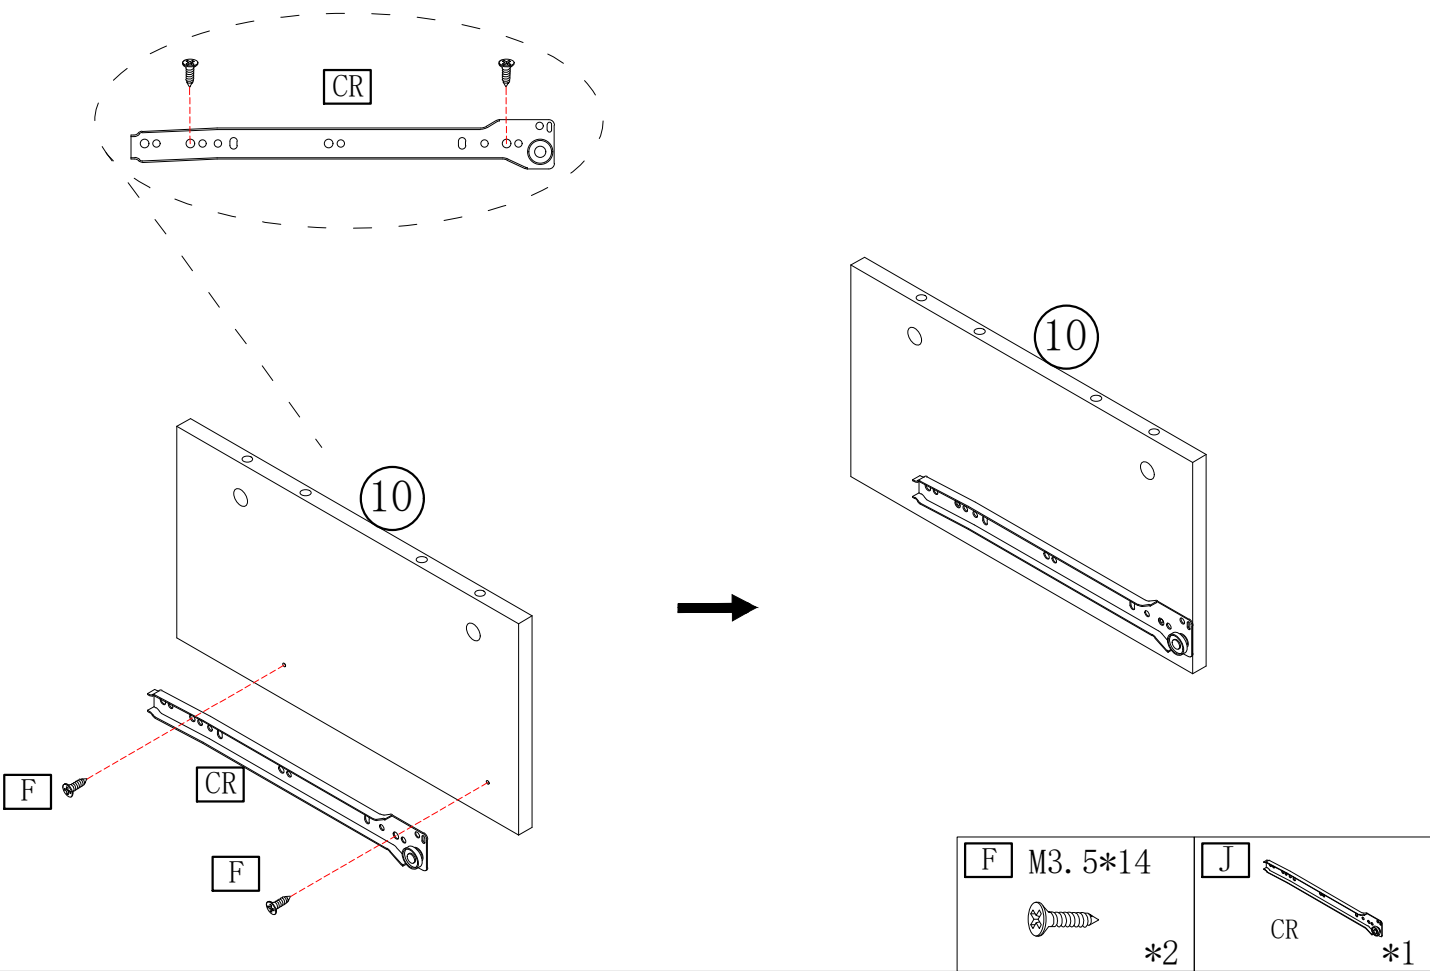

 STEP 4

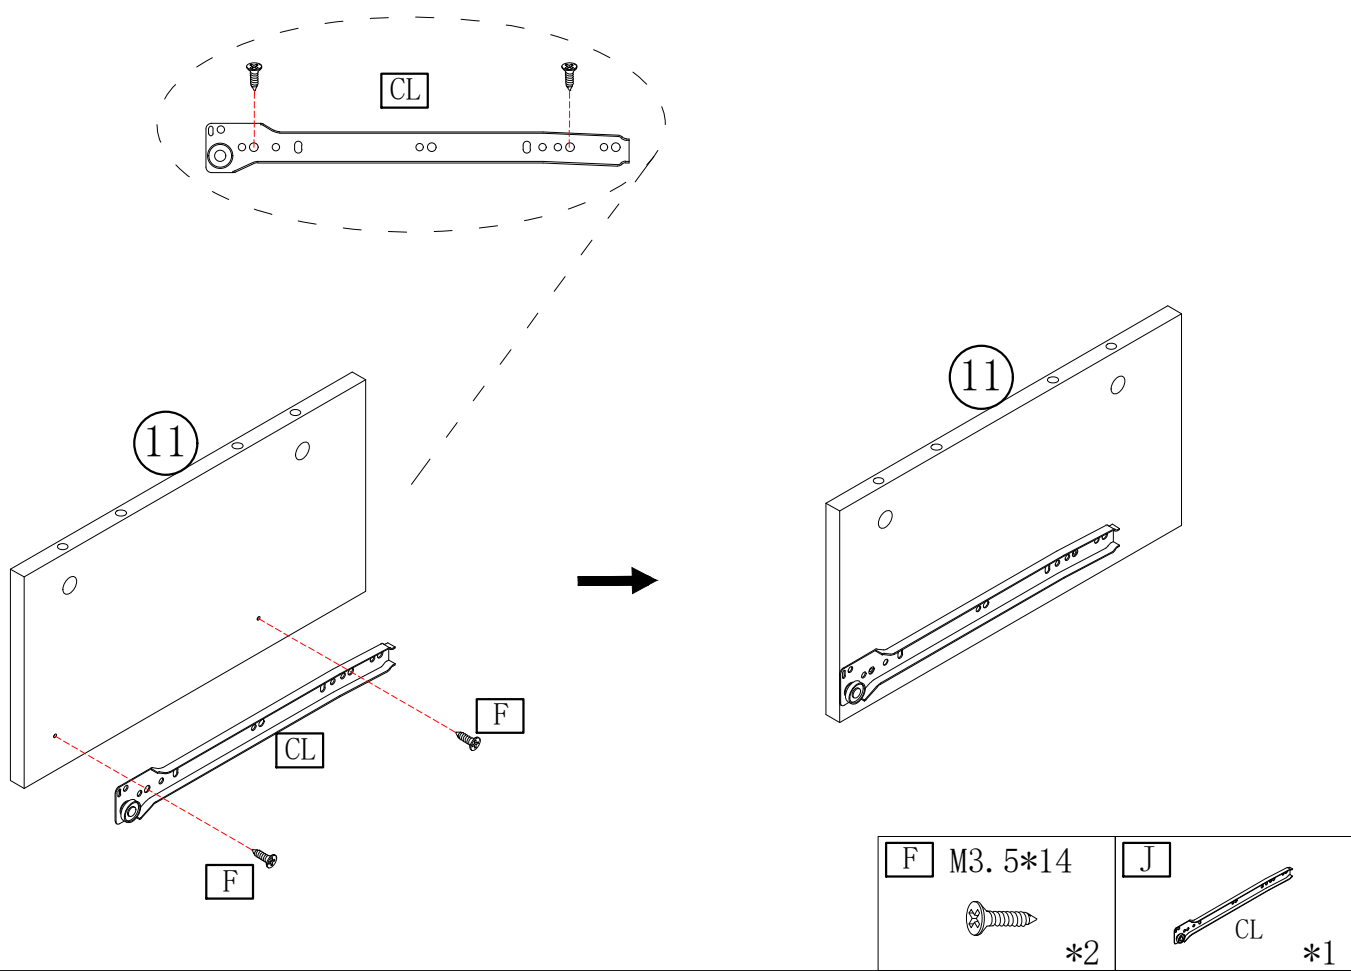


 STEP 5

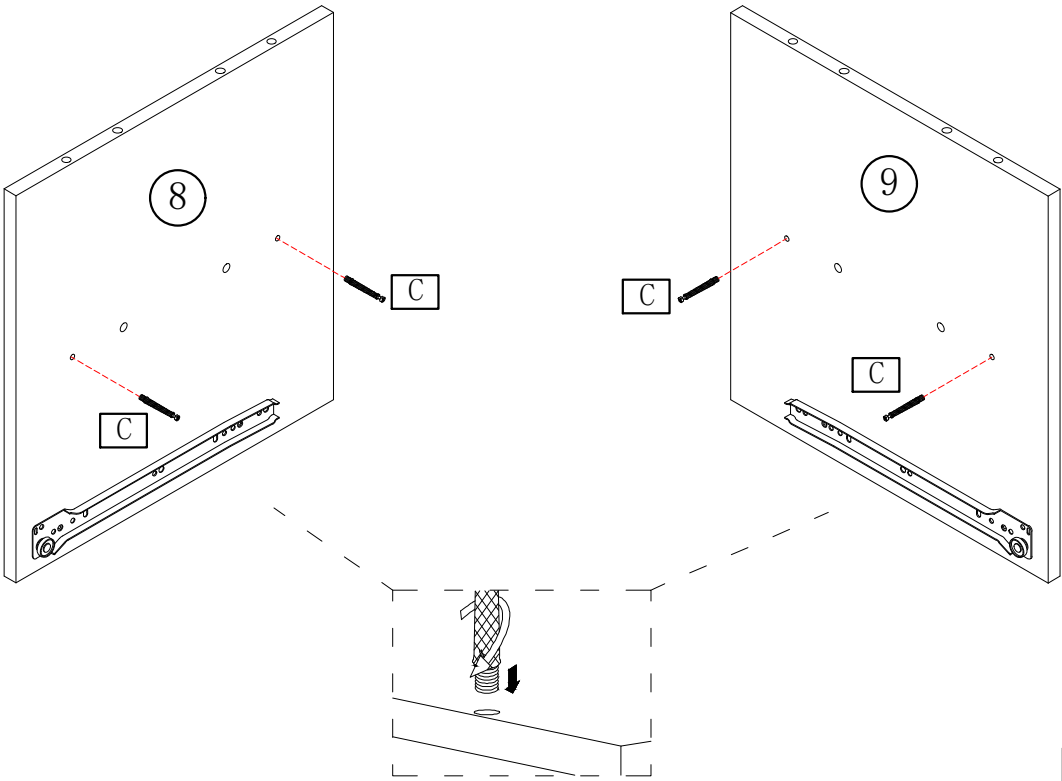


C	KM6*40
	*4

 STEP 6

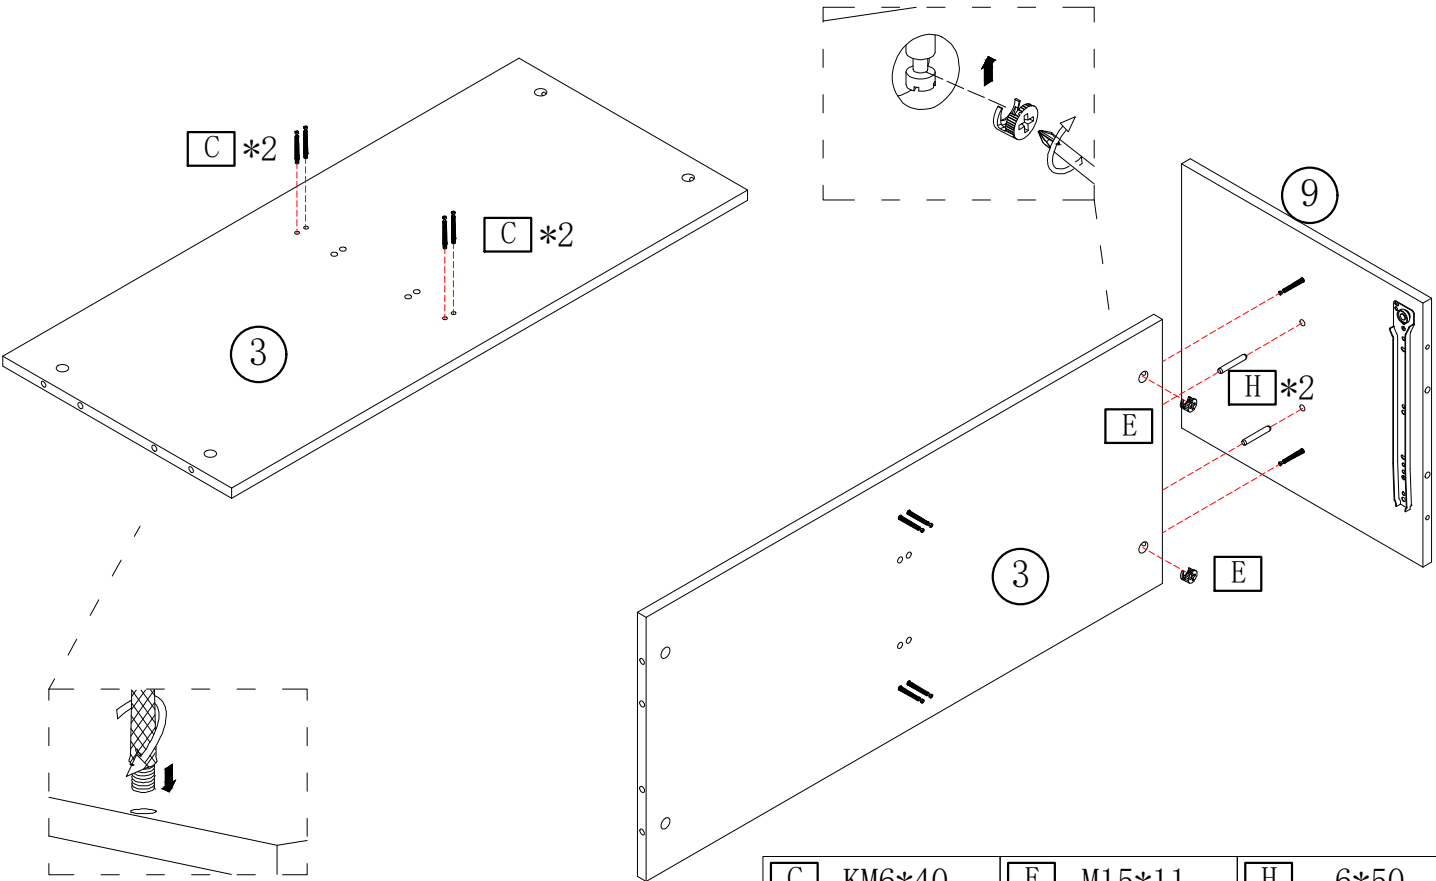


C	KM6*40	E	M15*11	H	6*50
	*4		*2		*2

 STEP 7

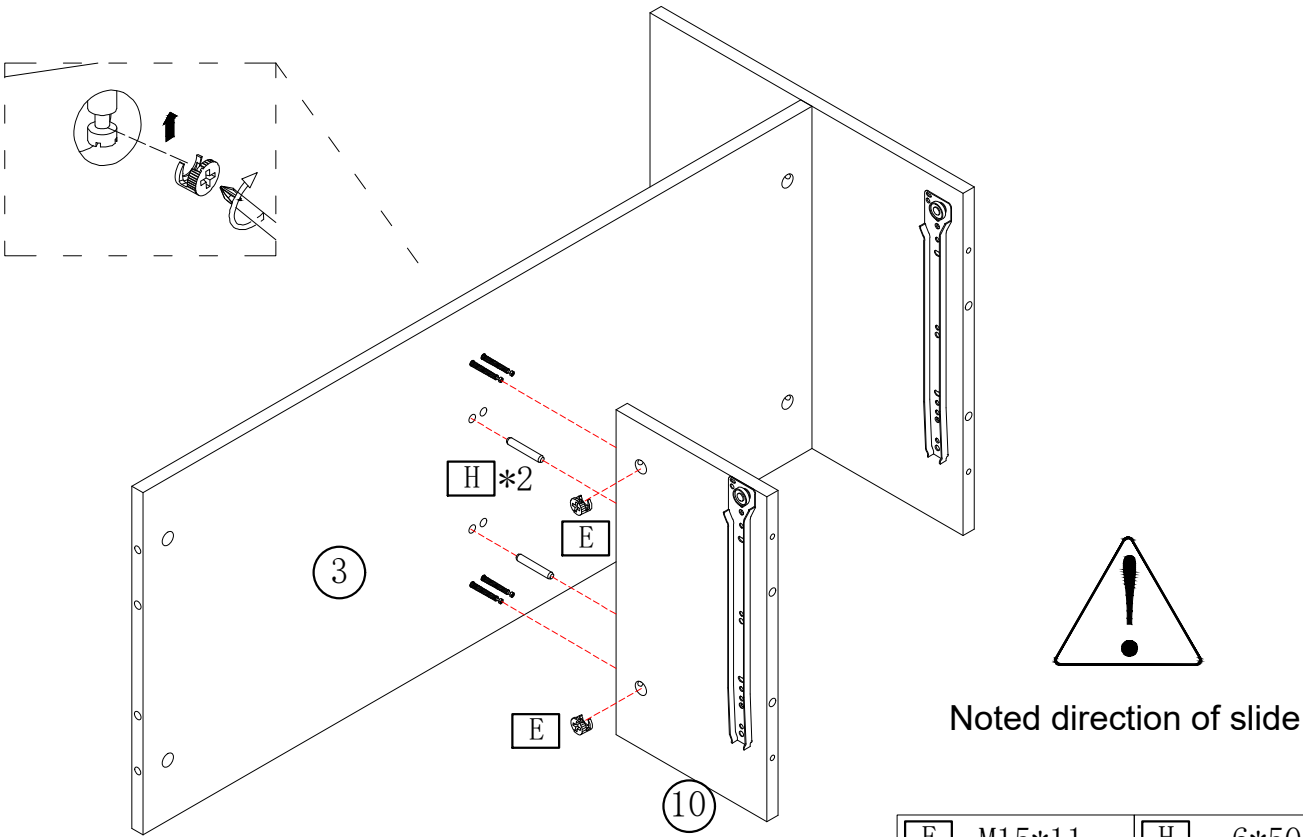


E	M15*11	H	6*50
			
	*2		*2

 STEP 8

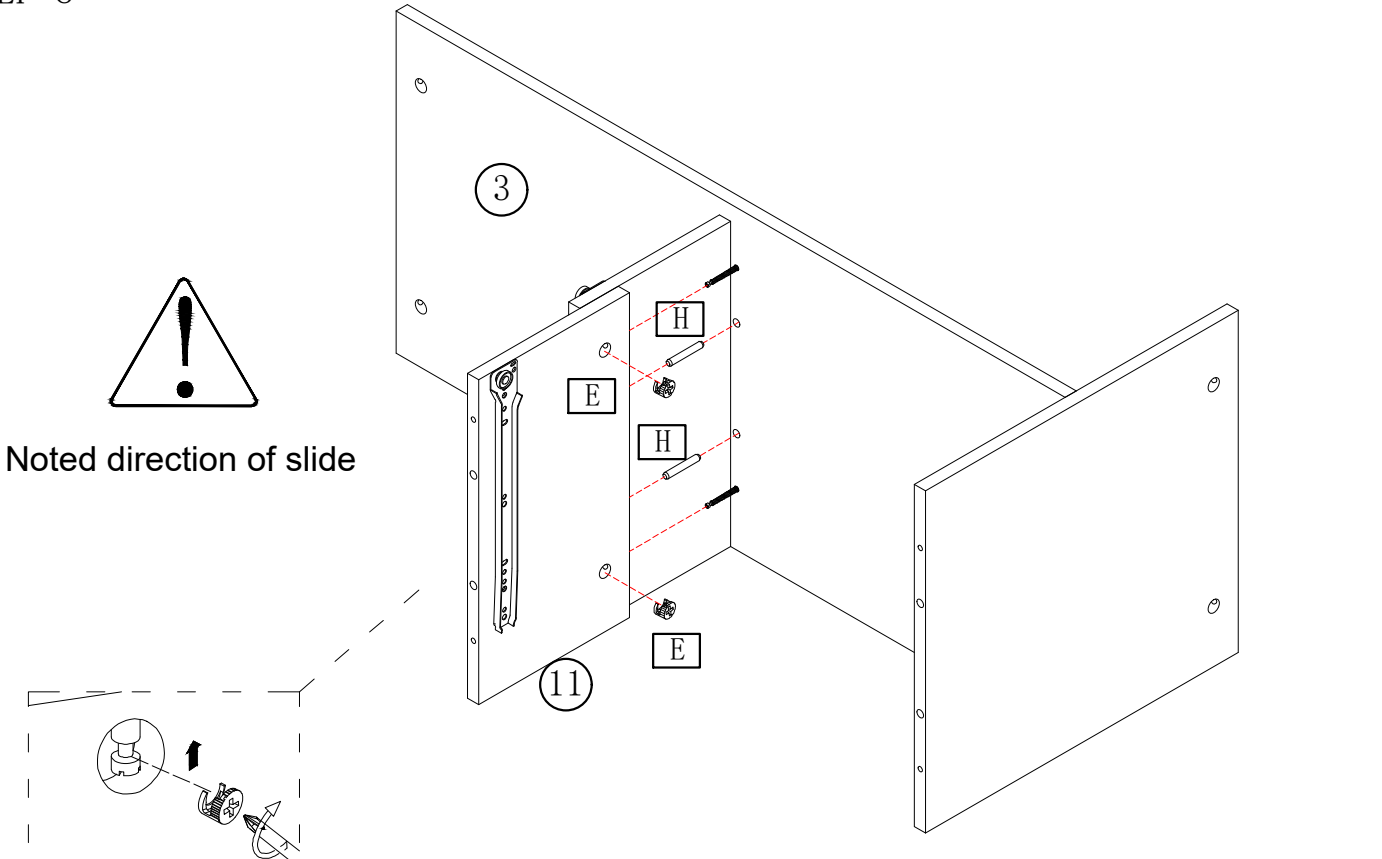


E	M15*11	H	6*50
			
	*2		*2

 
STEP 9

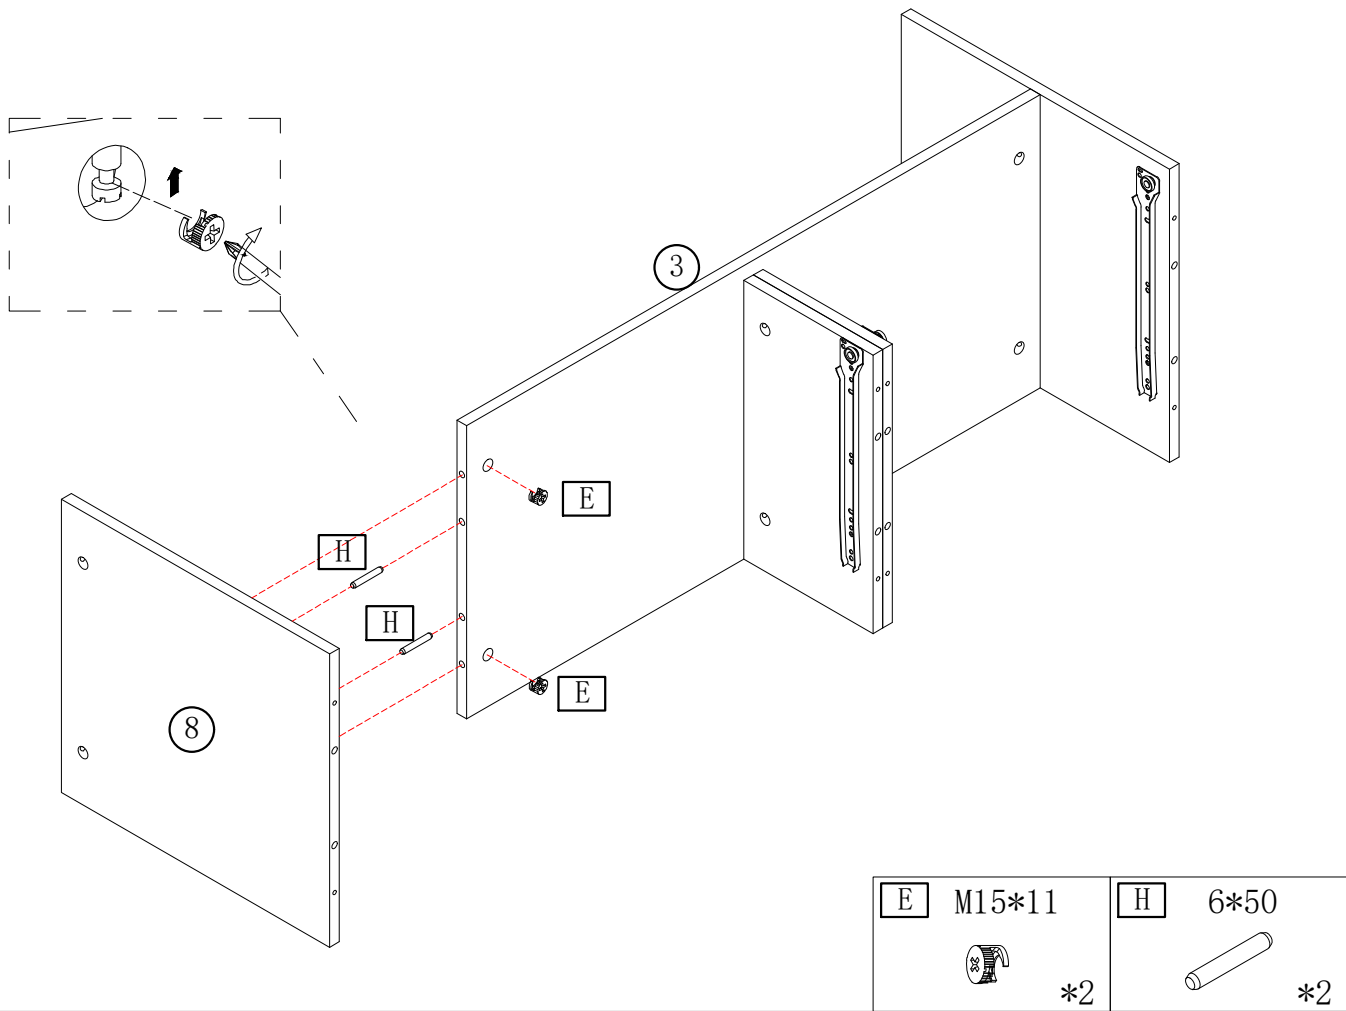

 
STEP 10

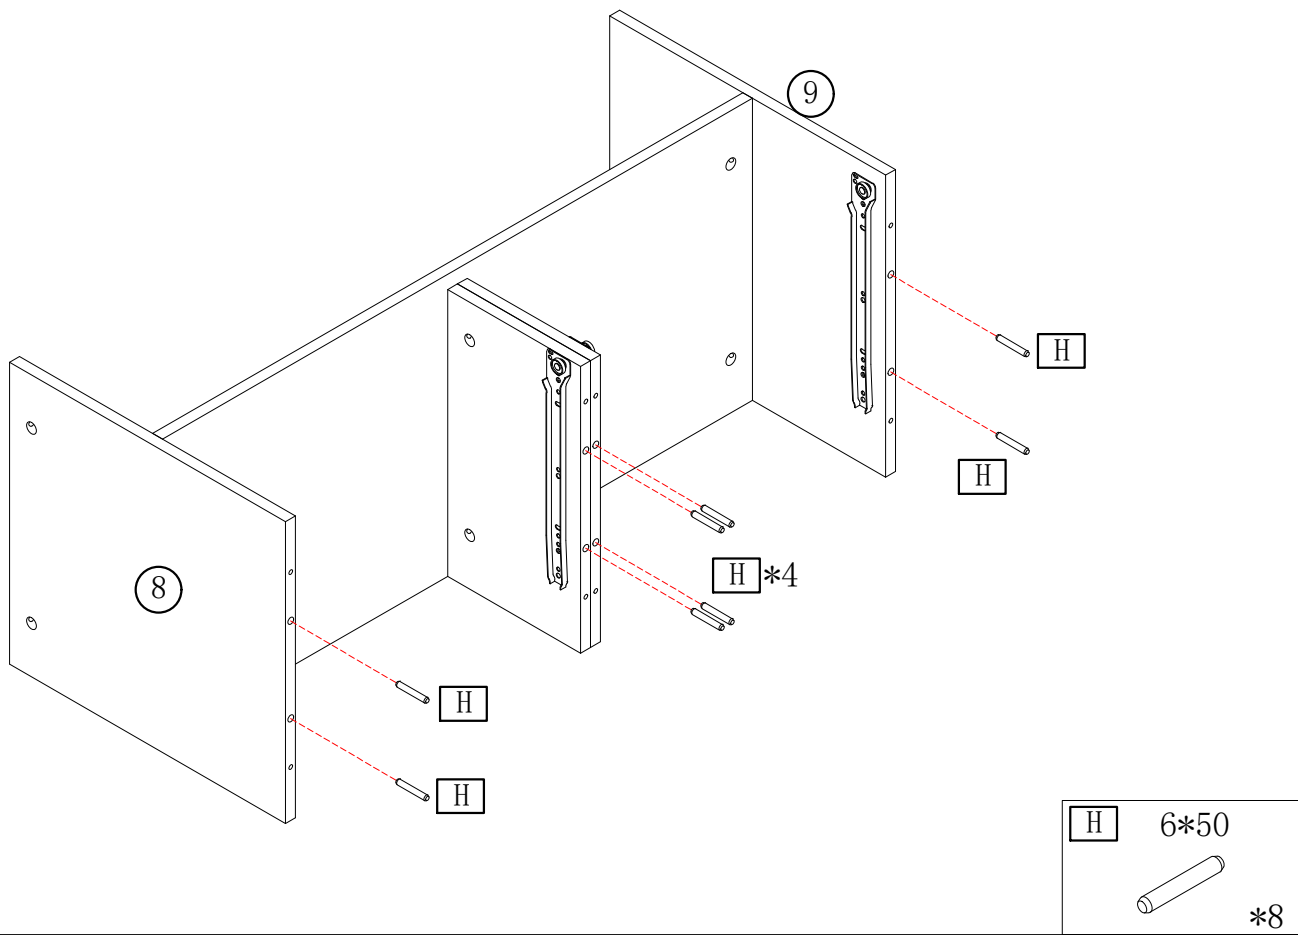

 
STEP 11

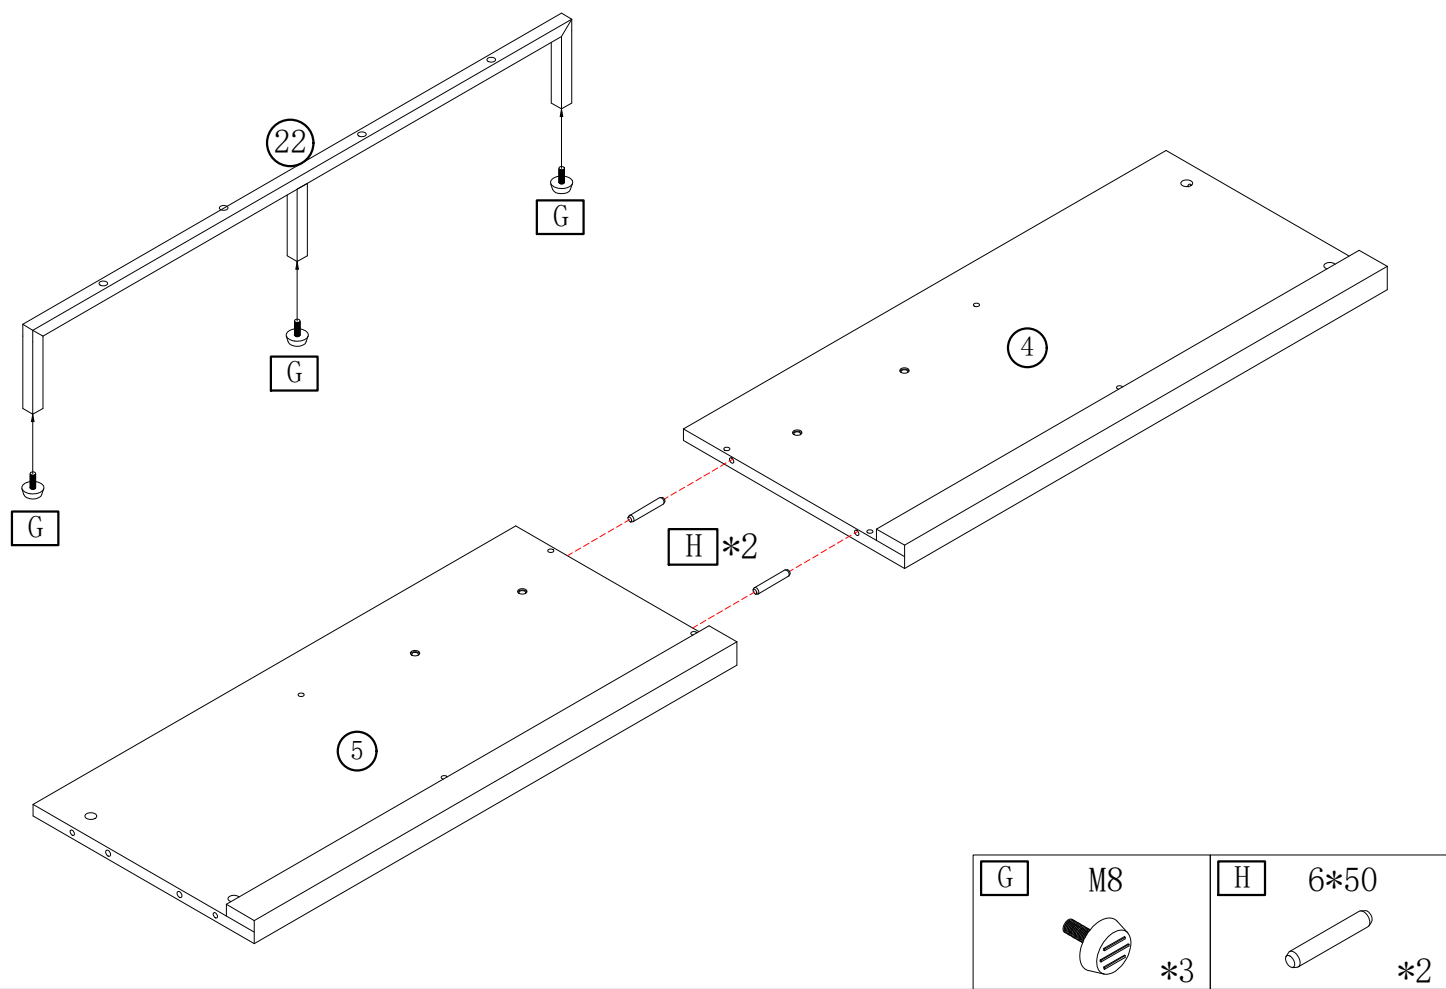

 
STEP 12

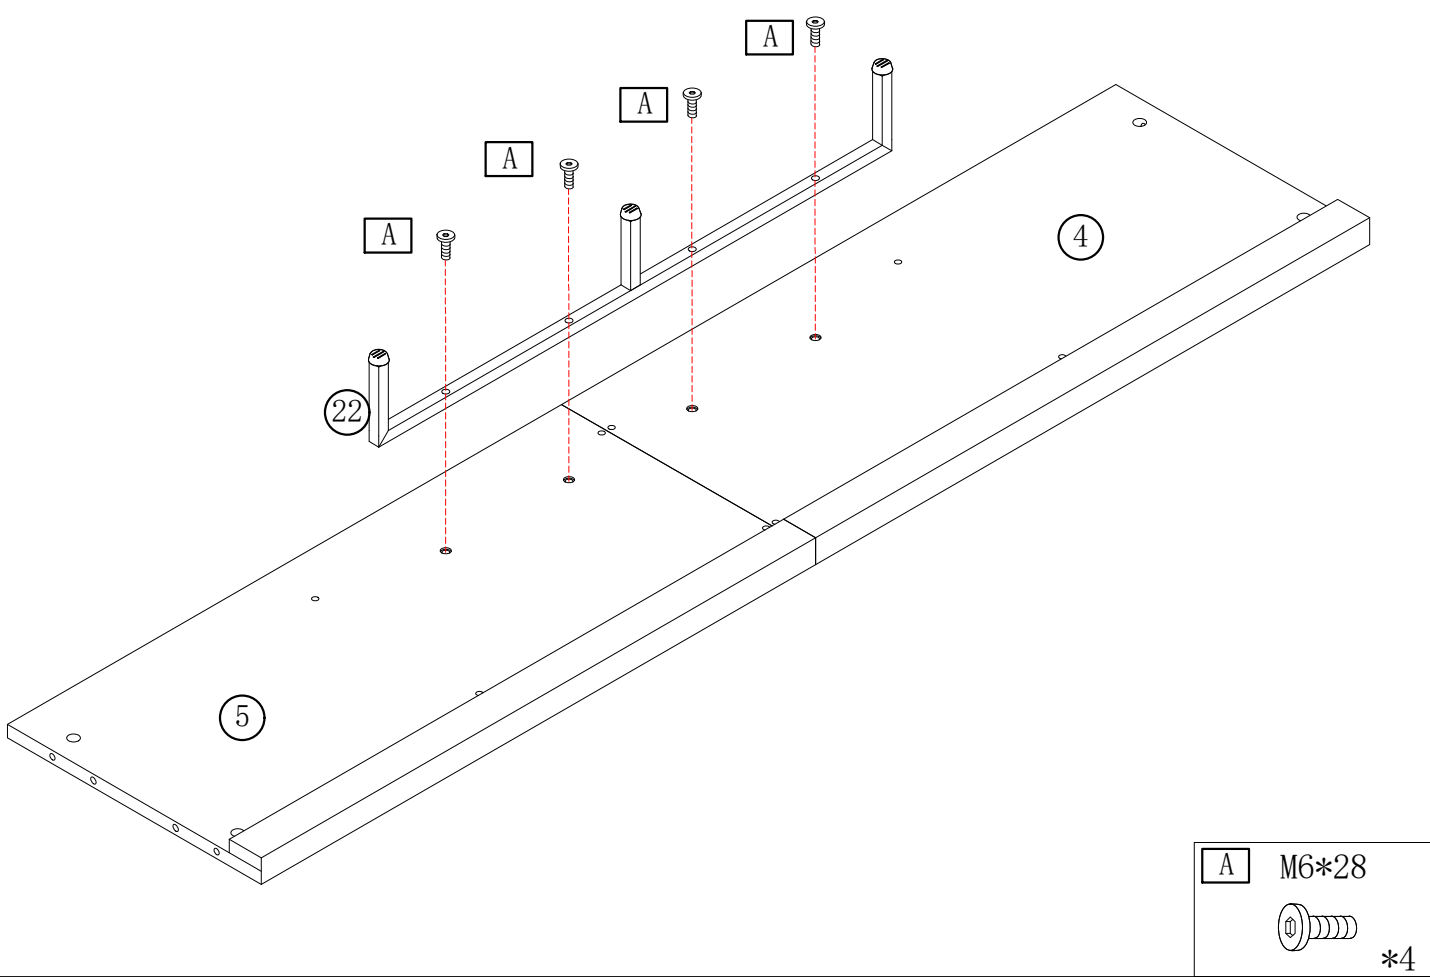

 STEP 13

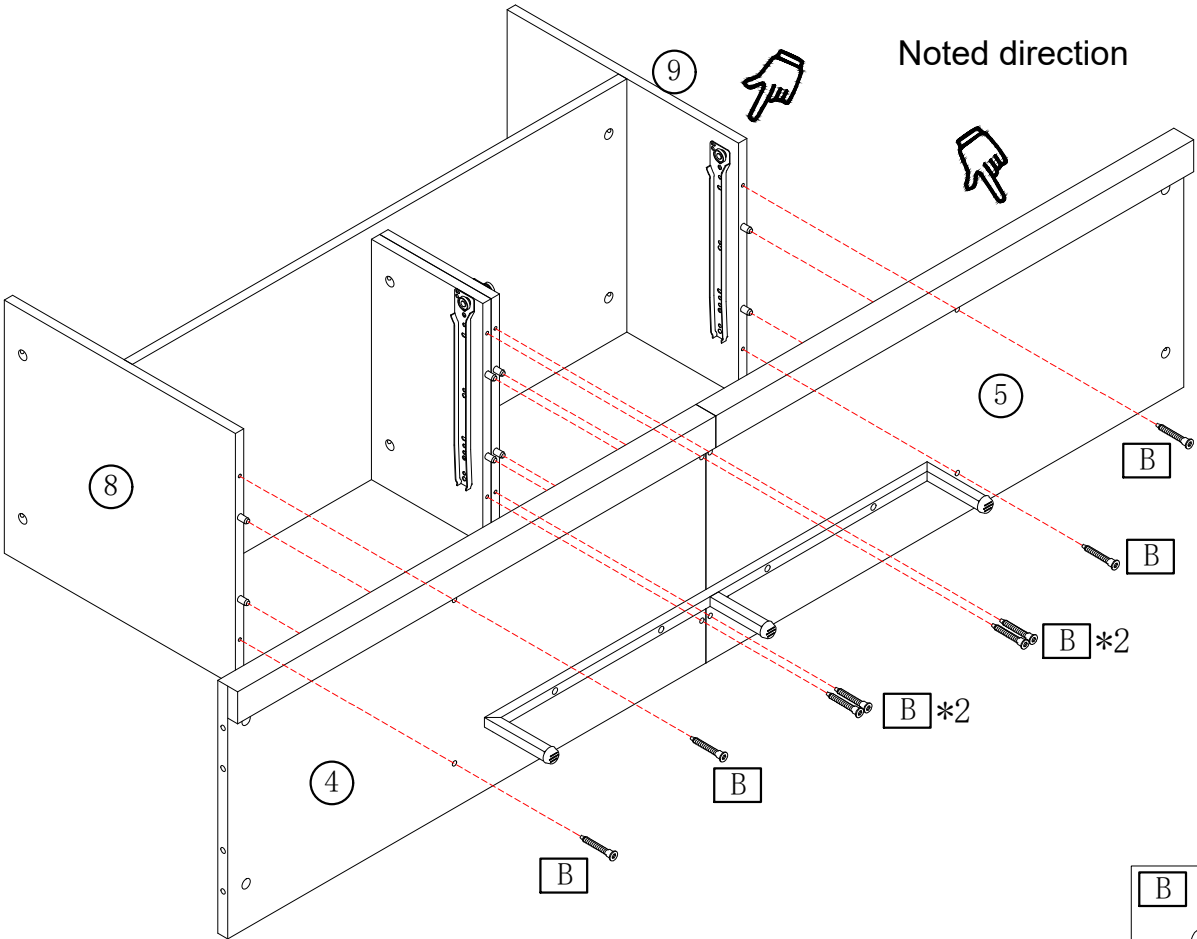

 
STEP 14

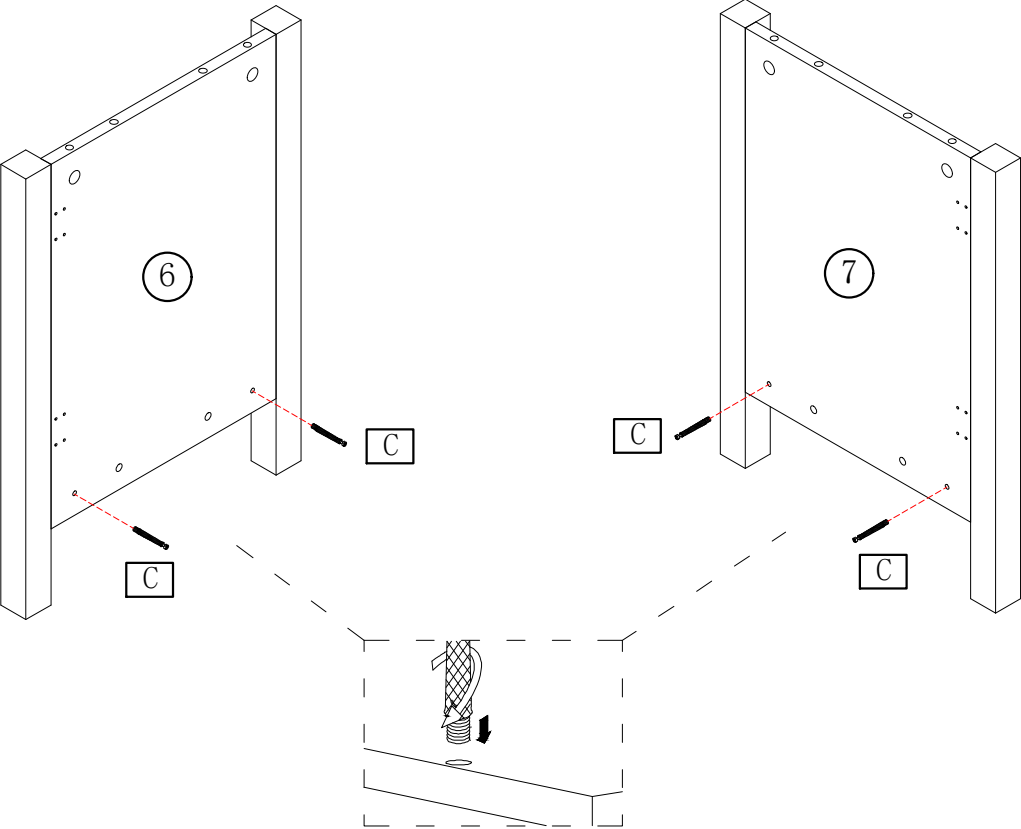

STEP 15



 Noted direction of hingeholes

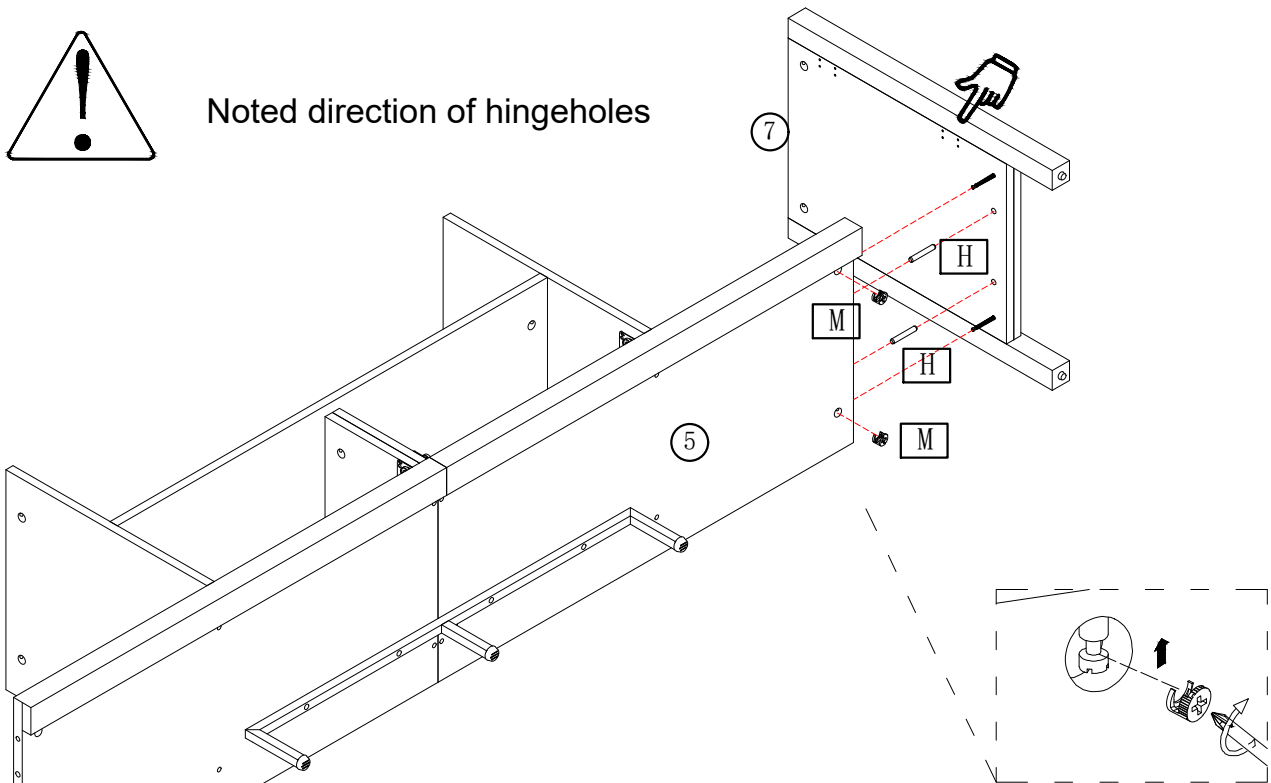


M	M15*9	H	6*50
	*2		*2

STEP 16




 Noted direction of hingeholes

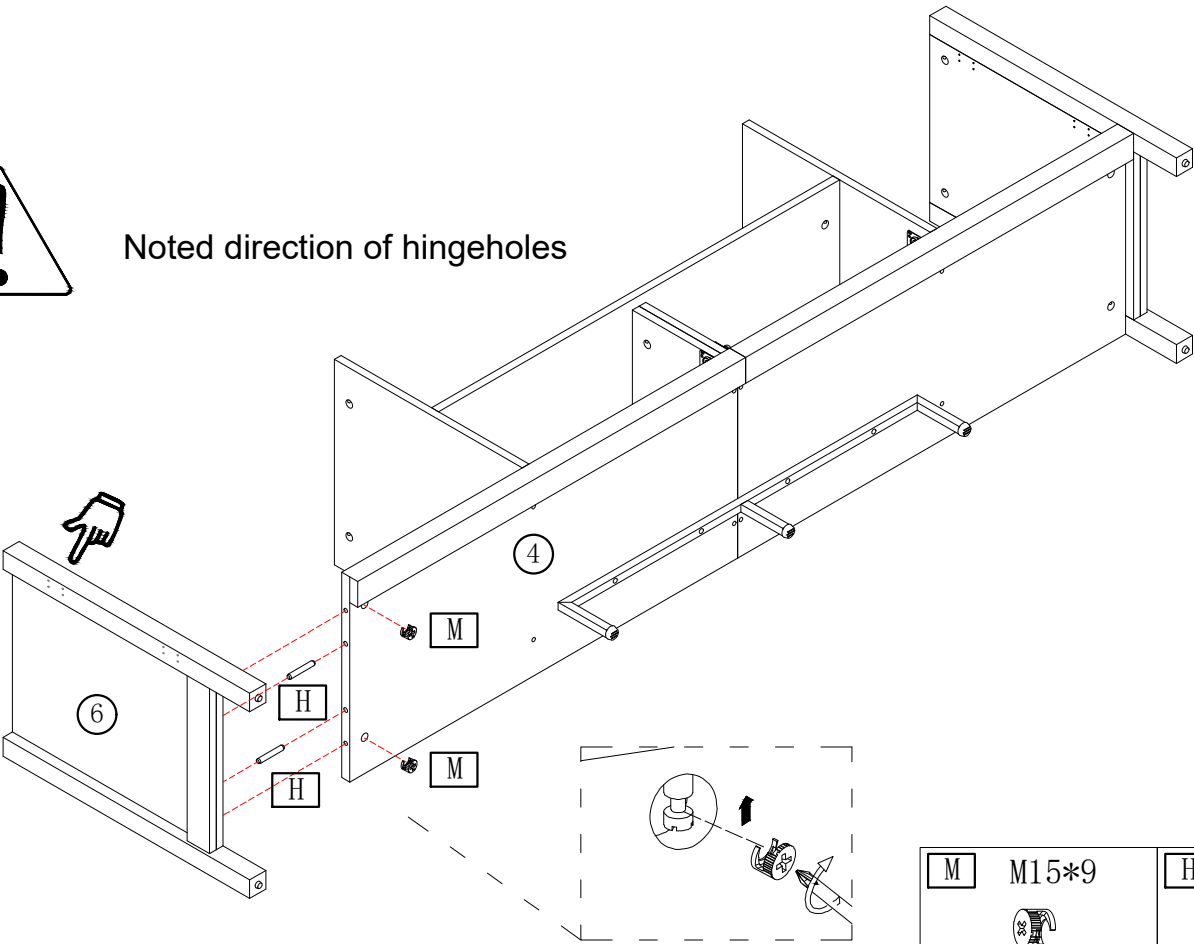


M	M15*9	H	6*50
	*2		*2

 STEP 17

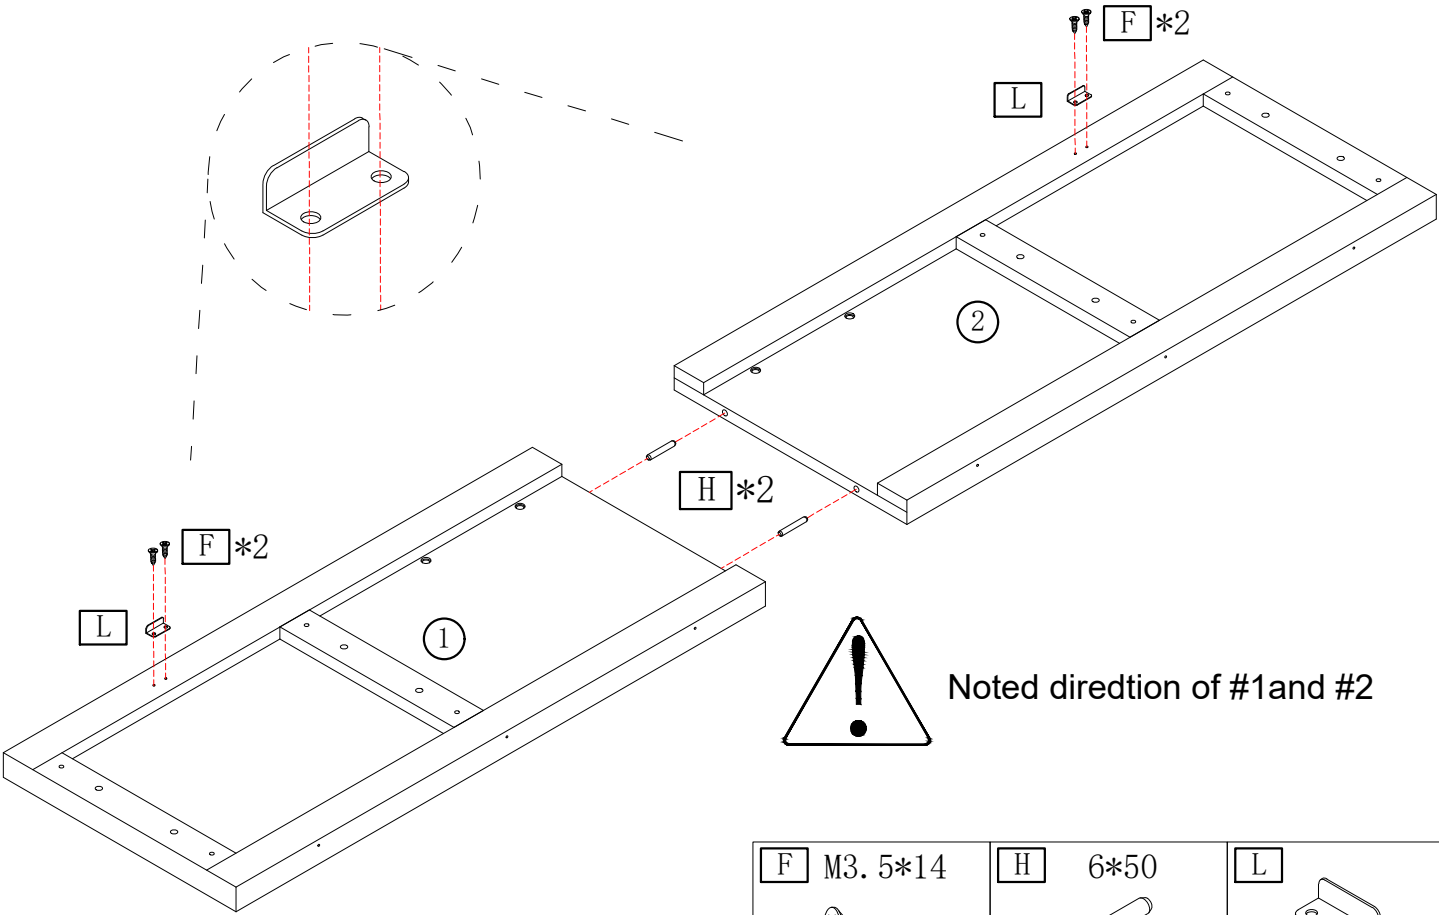


 STEP 18

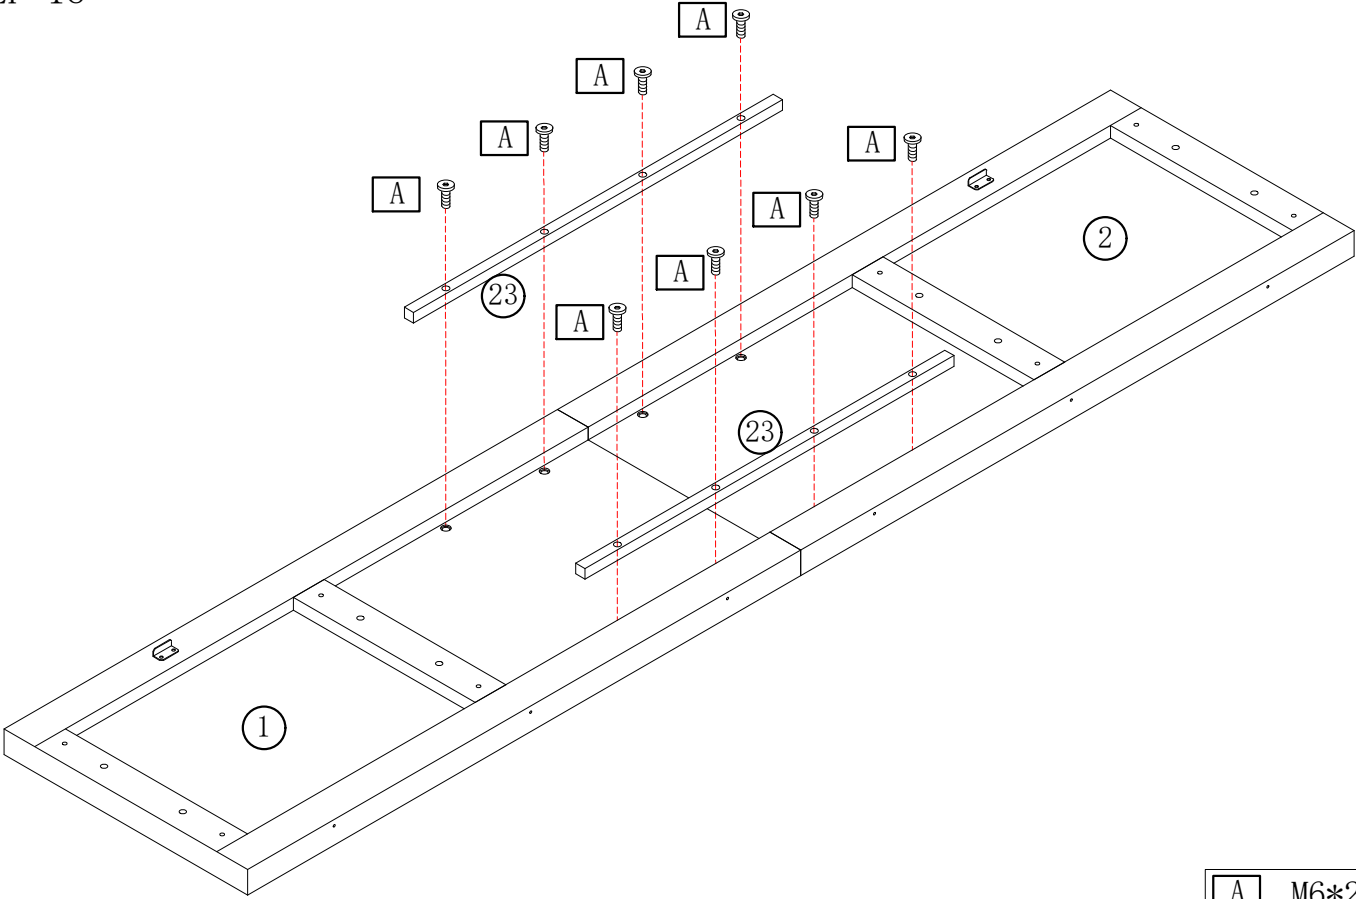

A	M6*28
	*8

 STEP 19

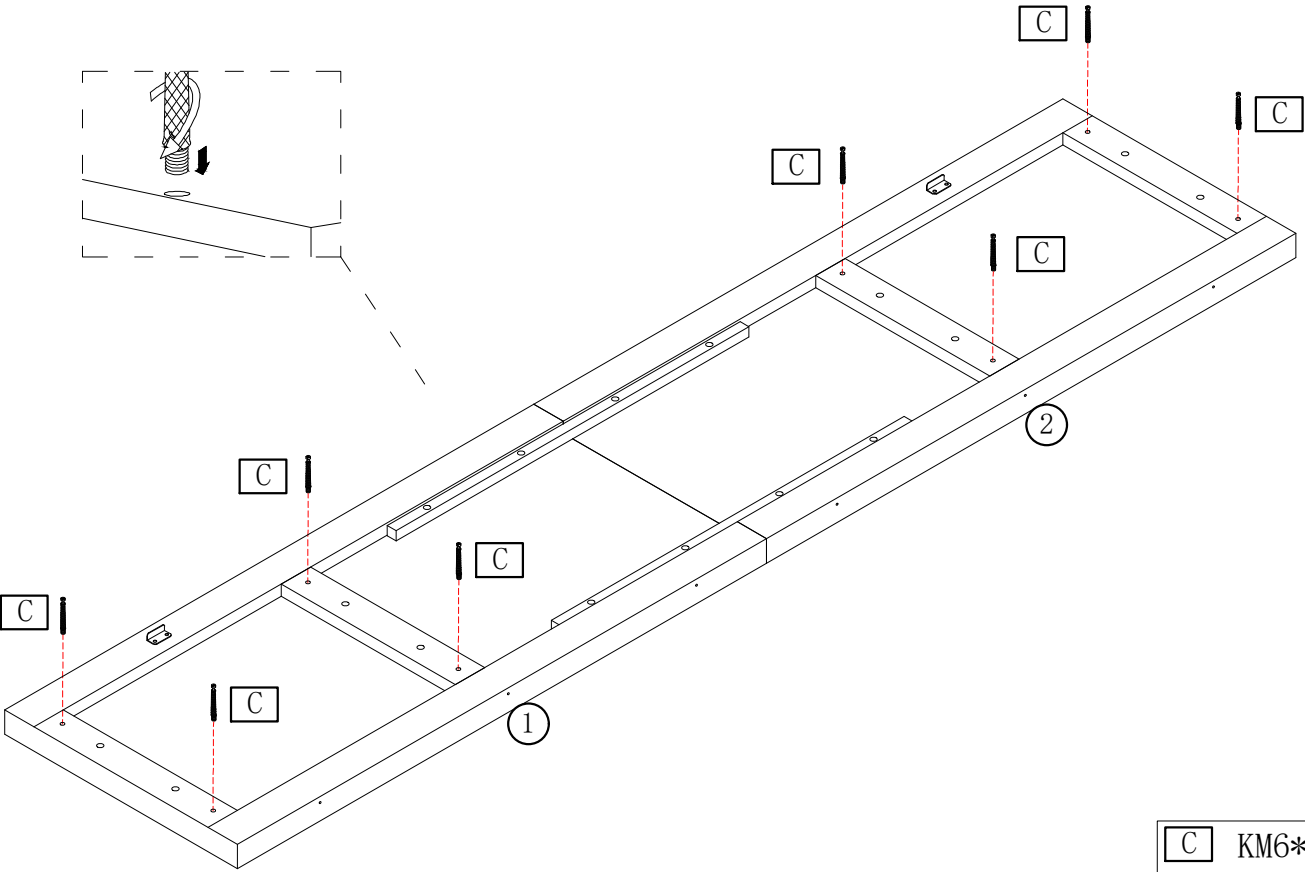


C KM6*40



*8

 STEP 20

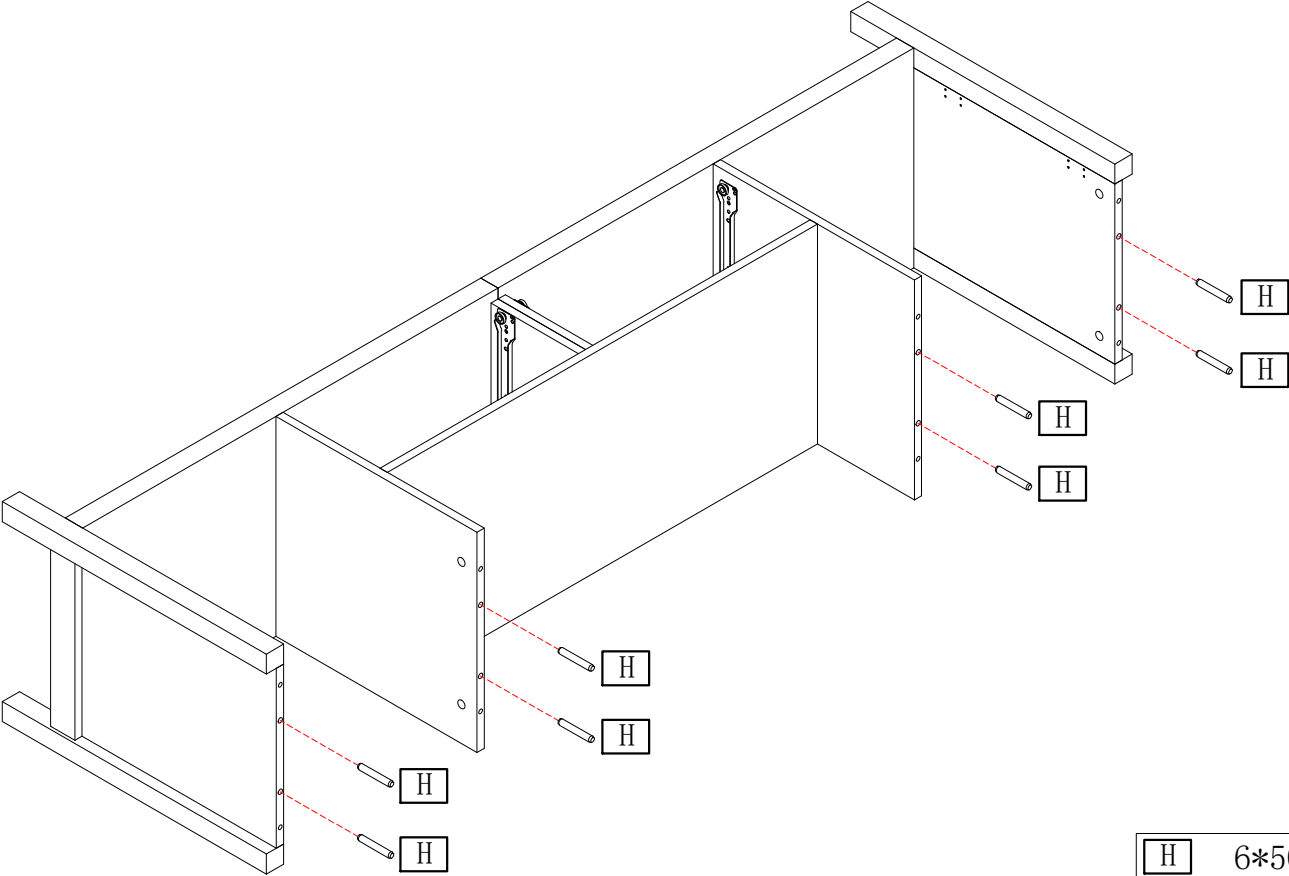


H 6*50




*8

 STEP 21

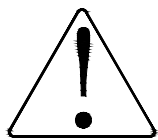


Noted direciton of backpanel holes

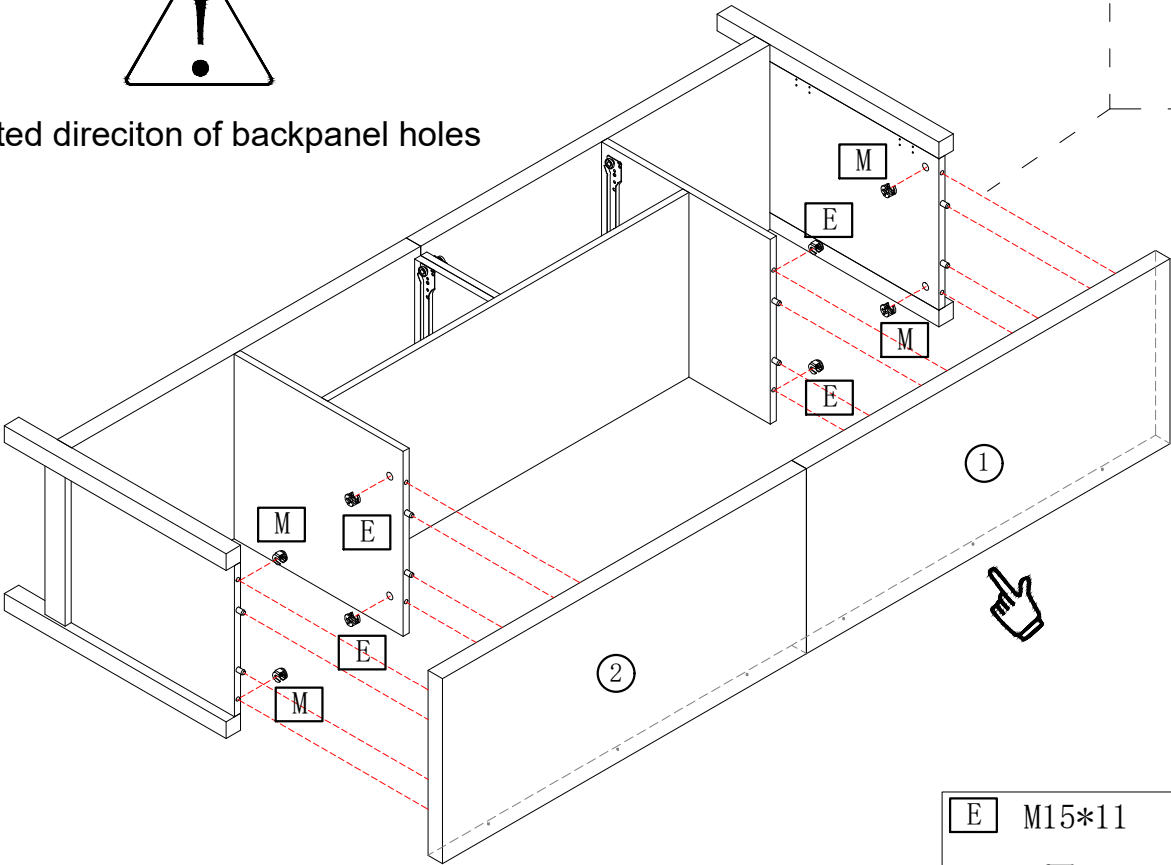 

E	M15*11
	*4


M	M15*9
	*4

 STEP 22

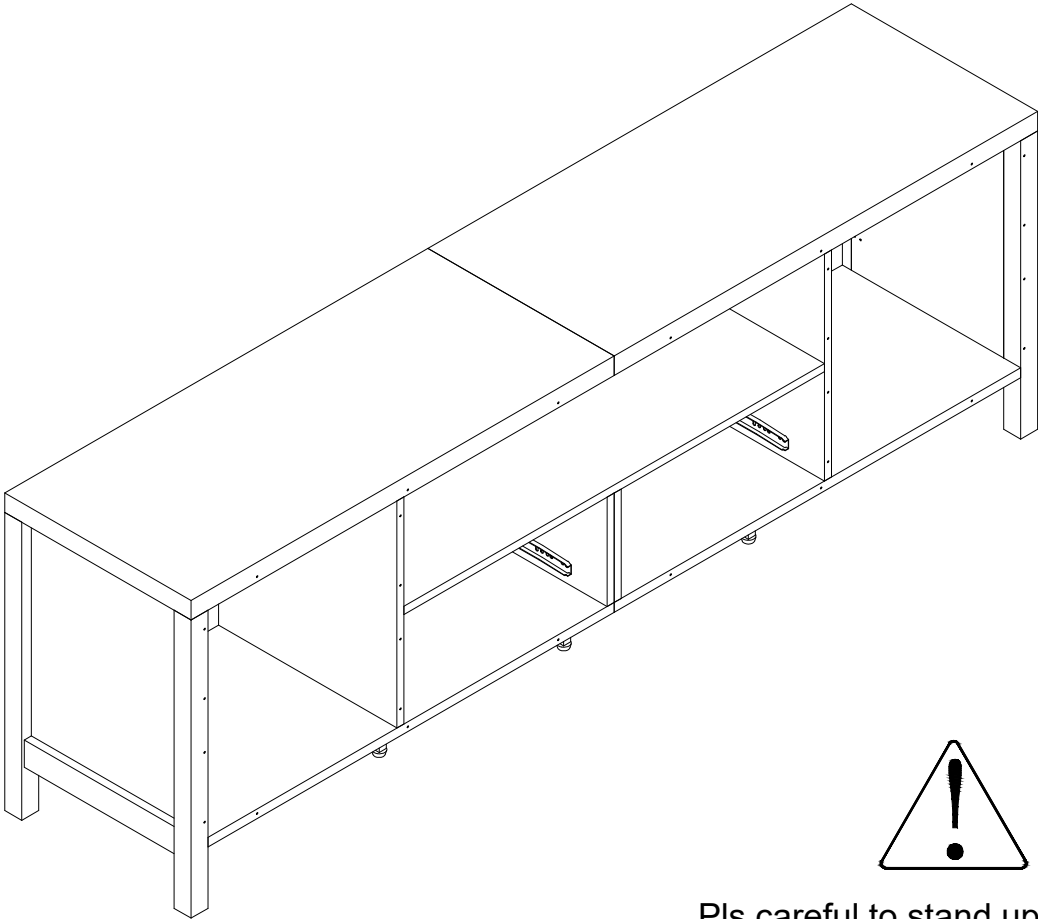


Pls careful to stand up the product

 STEP 23

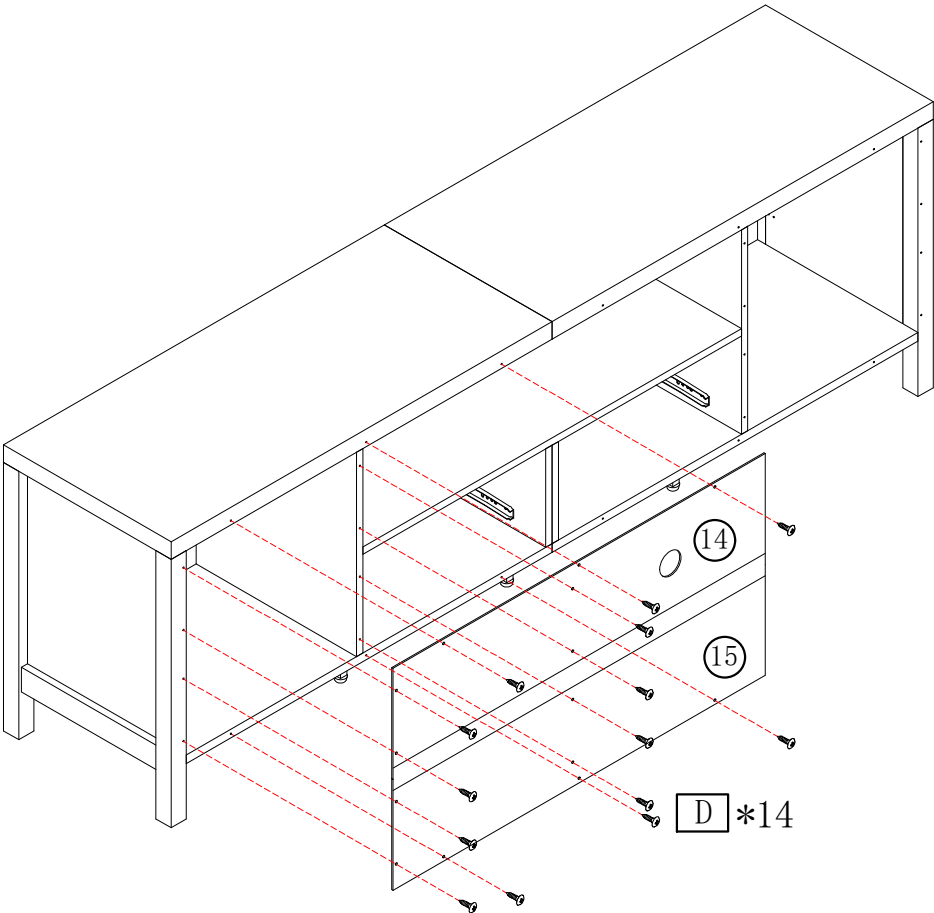



D M4*14
*14

 
STEP 24

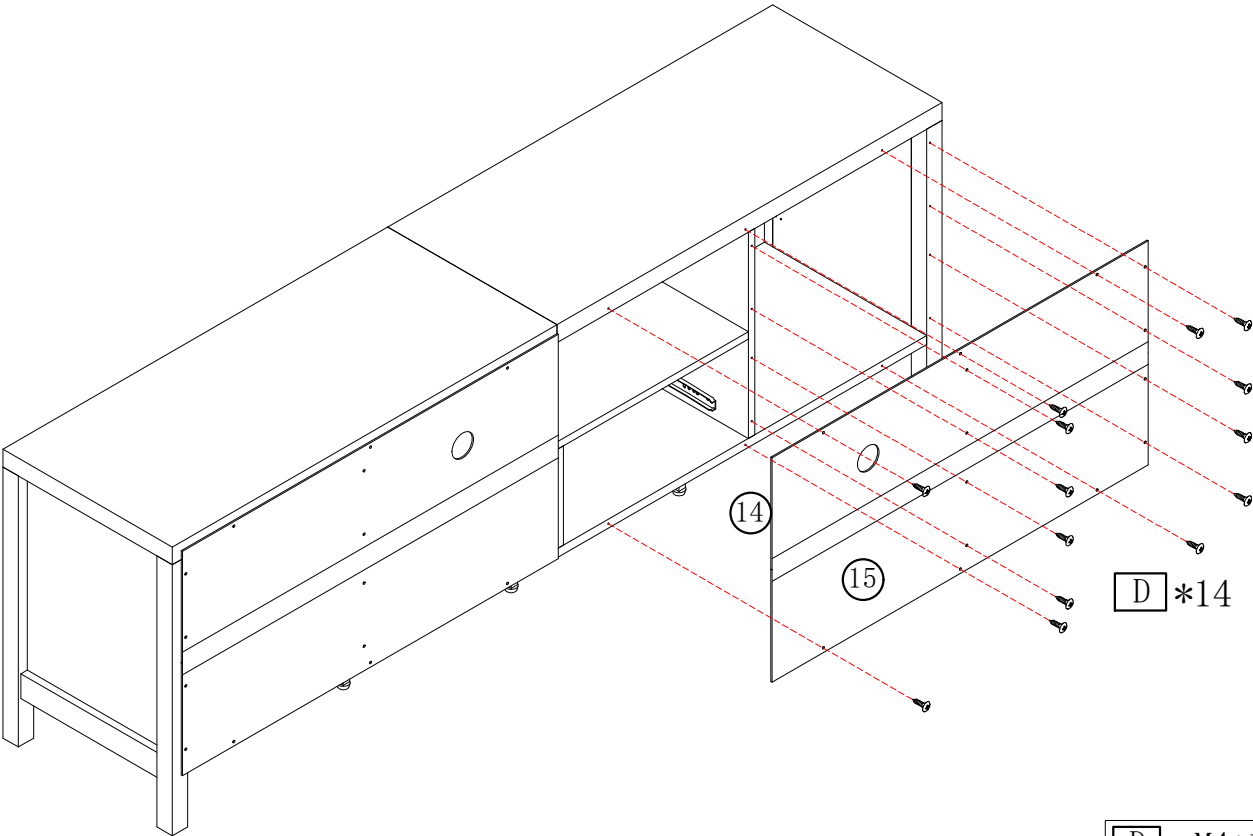



D M4*14
*14

   
STEP 25

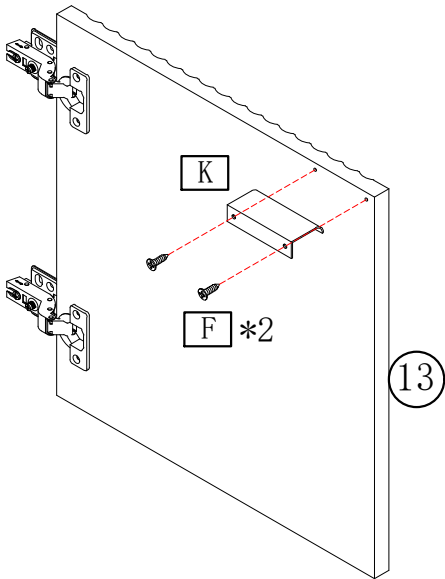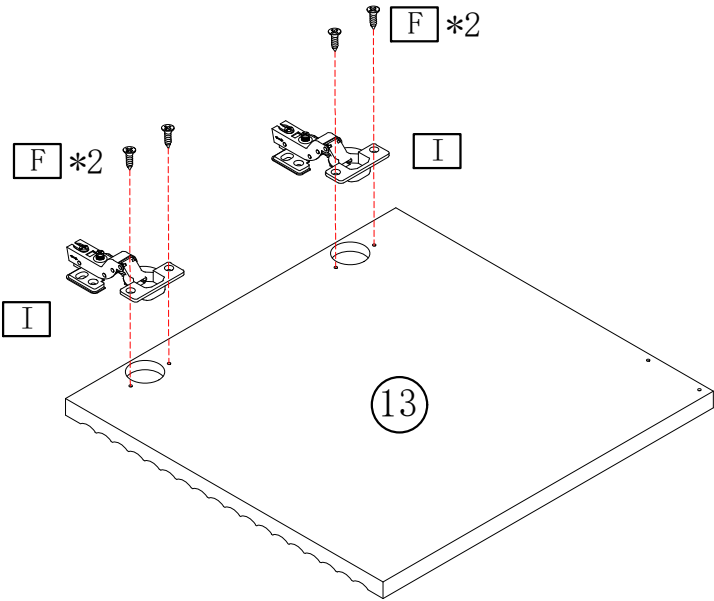


F M3. 5*14  *6	I  *2	K  *1
---	---	---

   STEP 26

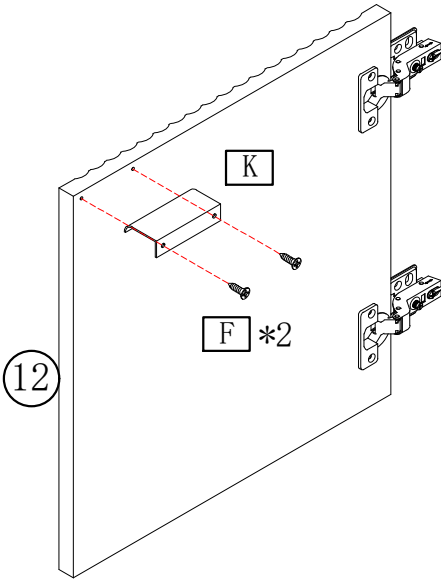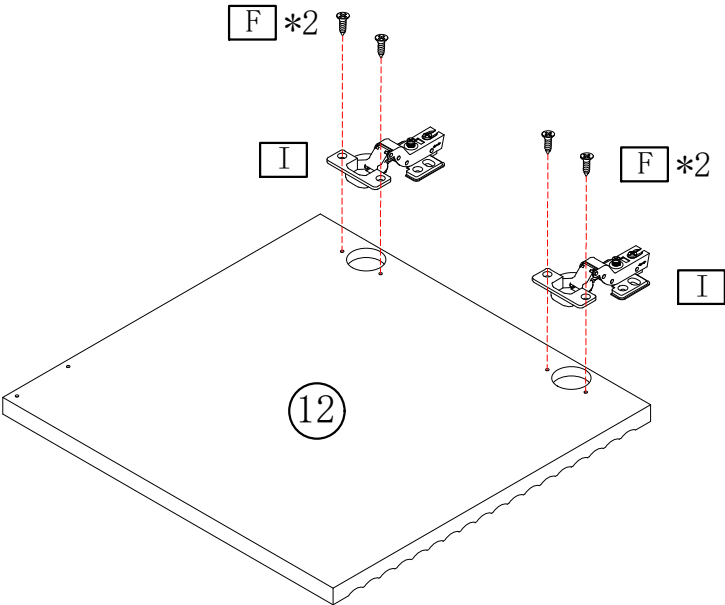

F M3. 5*14  *6	I  *2	K  *1
---	---	---

 
STEP 27

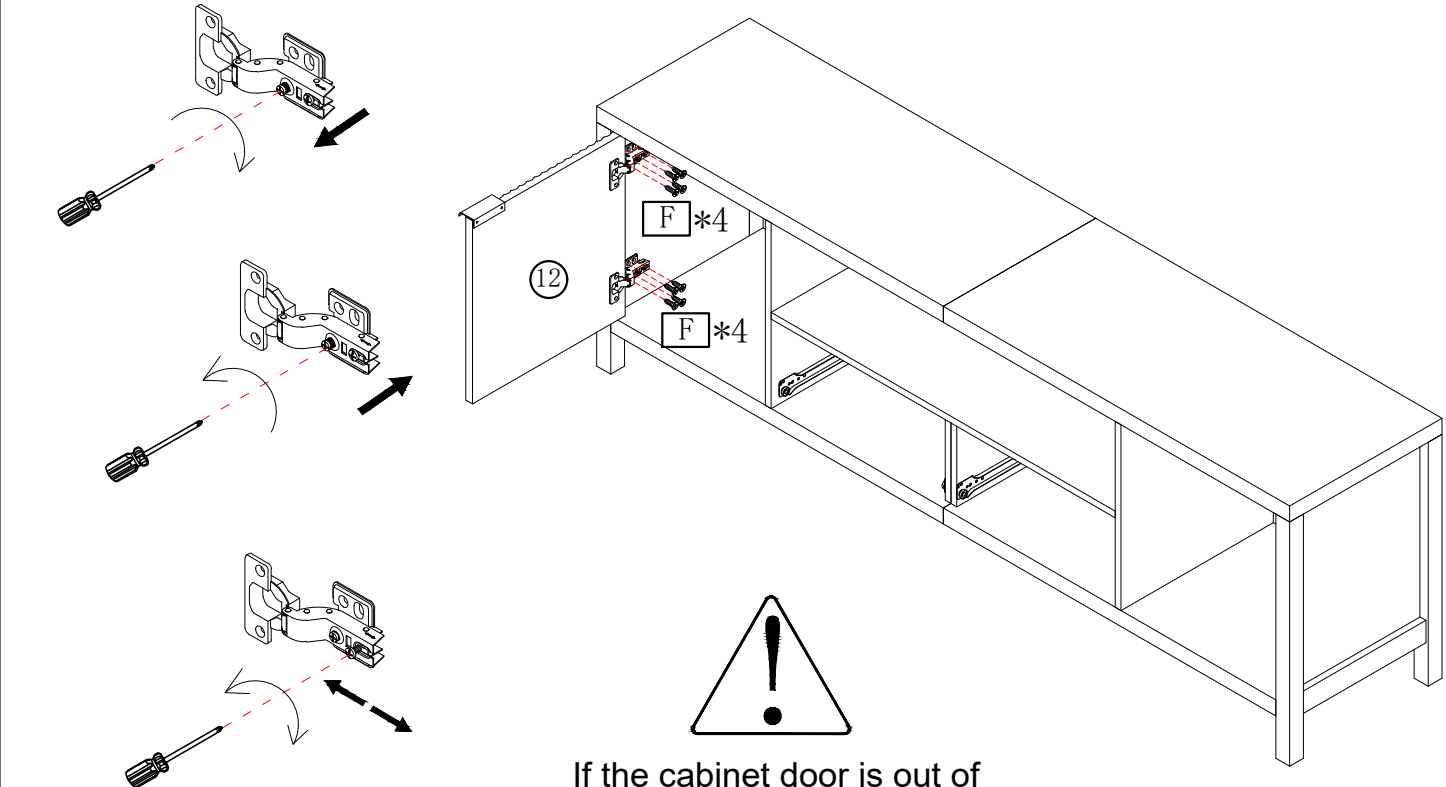

F M3. 5*14
*8

If the cabinet door is out of balance, you can adjust the hinge

 
STEP 28

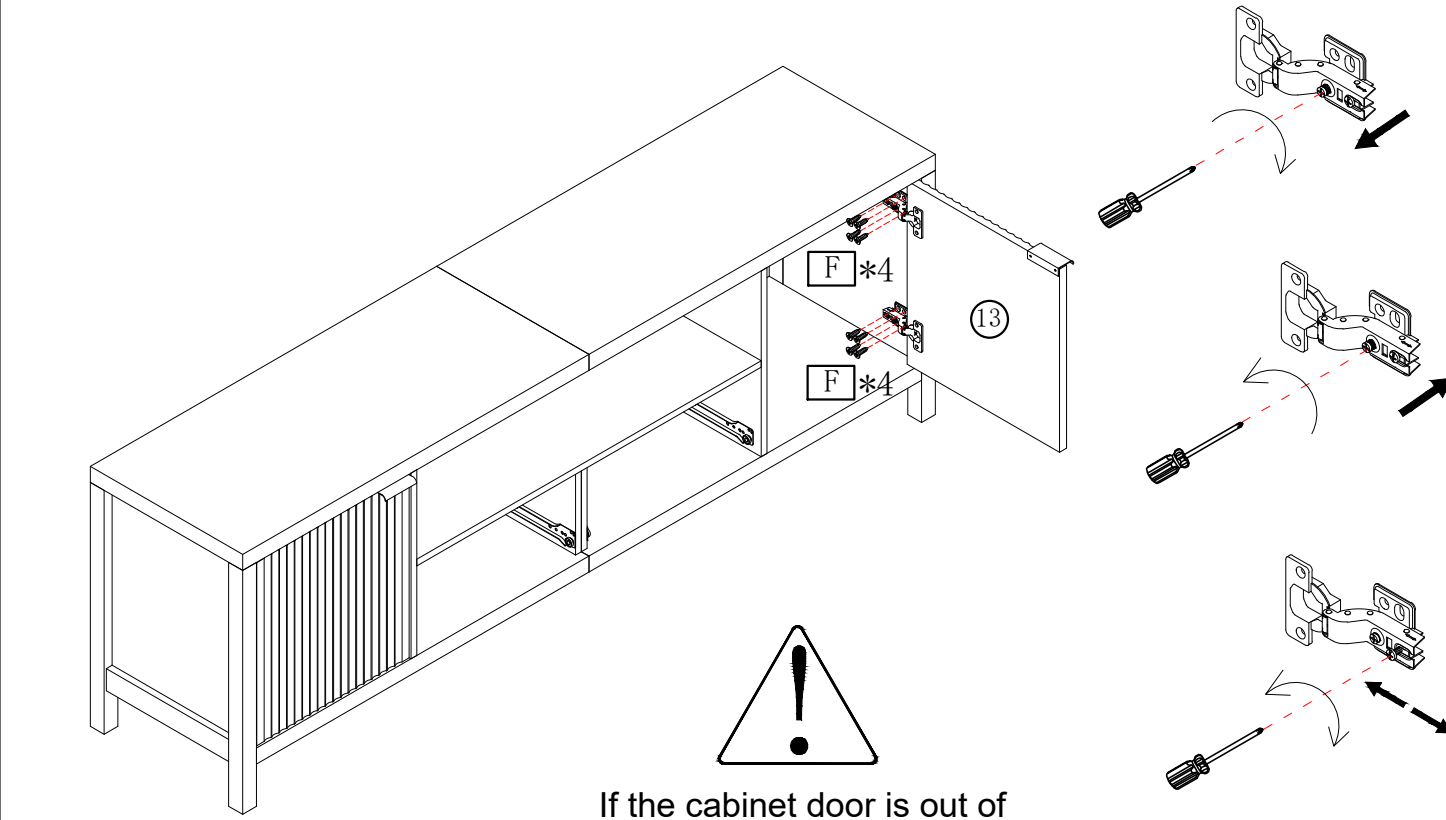


F M3. 5*14
*8

If the cabinet door is out of balance, you can adjust the hinge

 
STEP 29

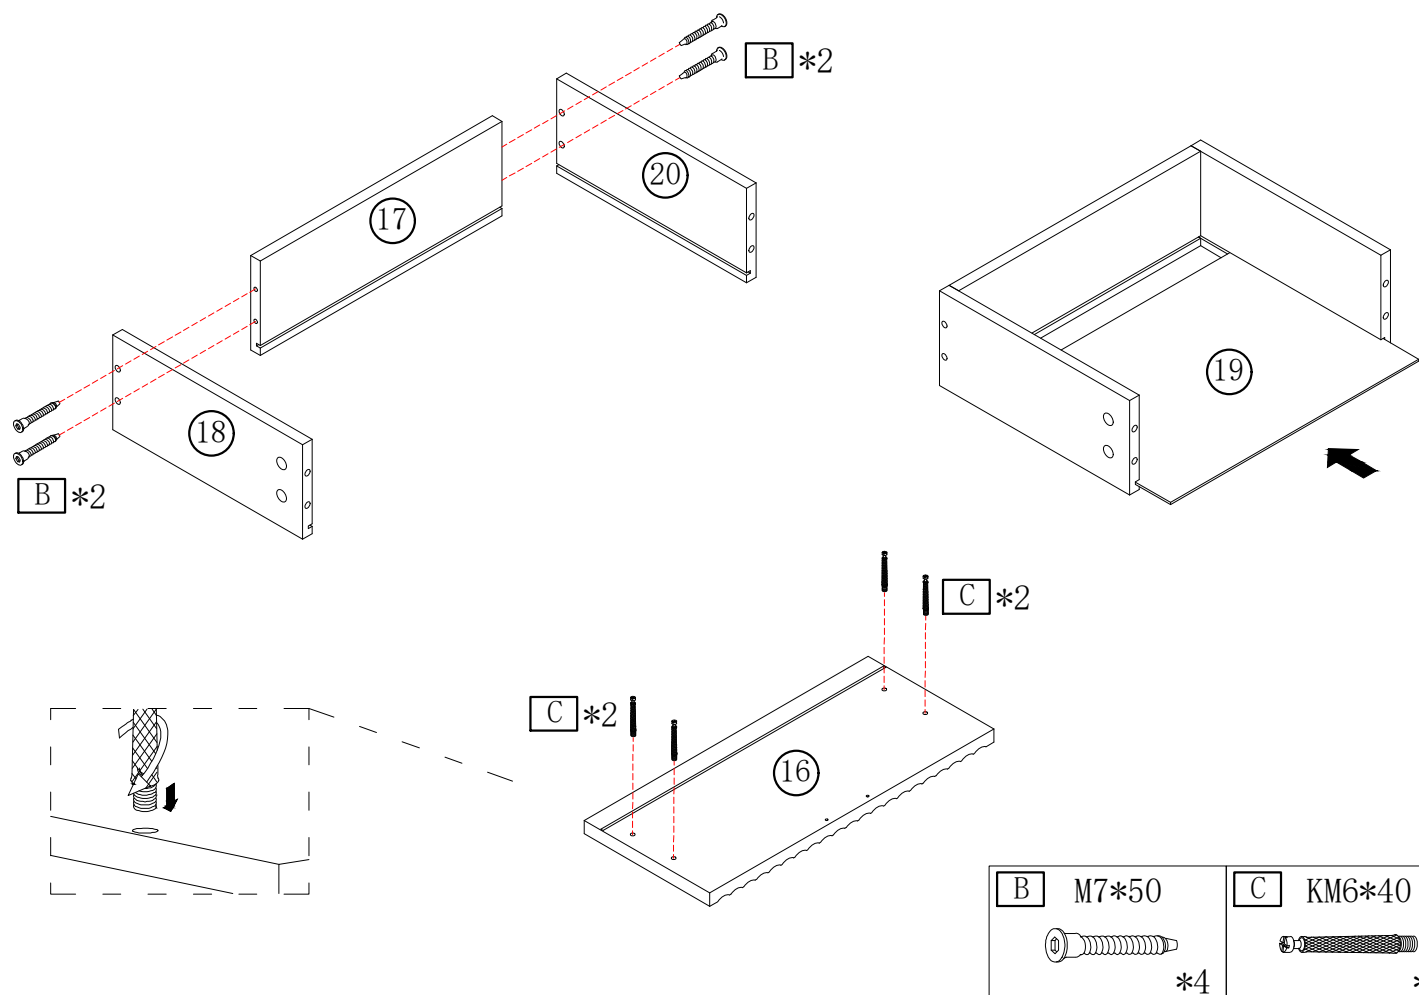


 STEP 30

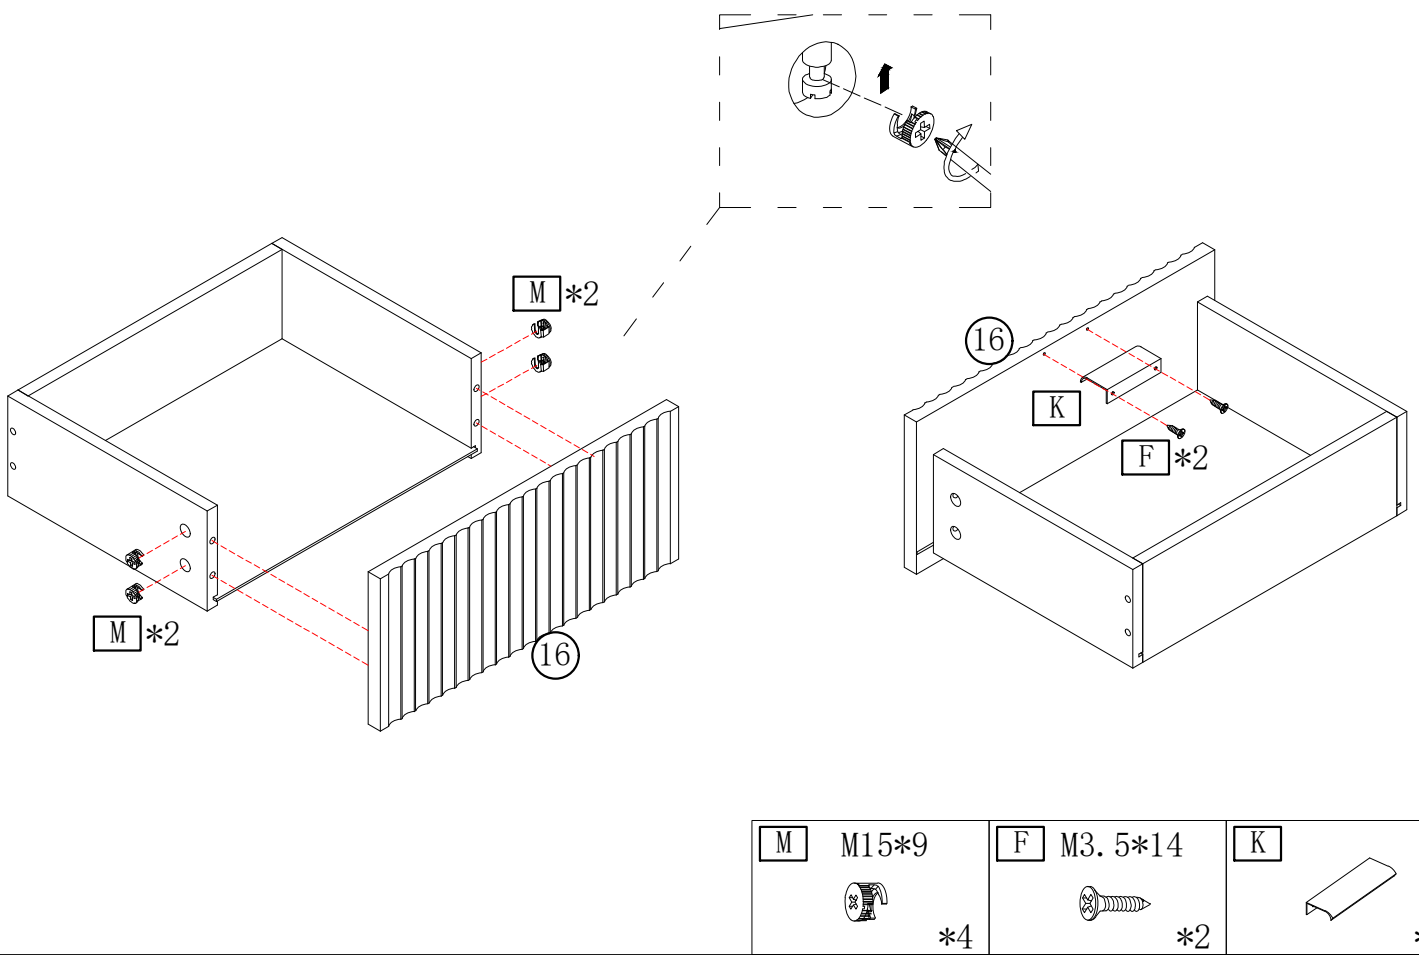


  
STEP 31

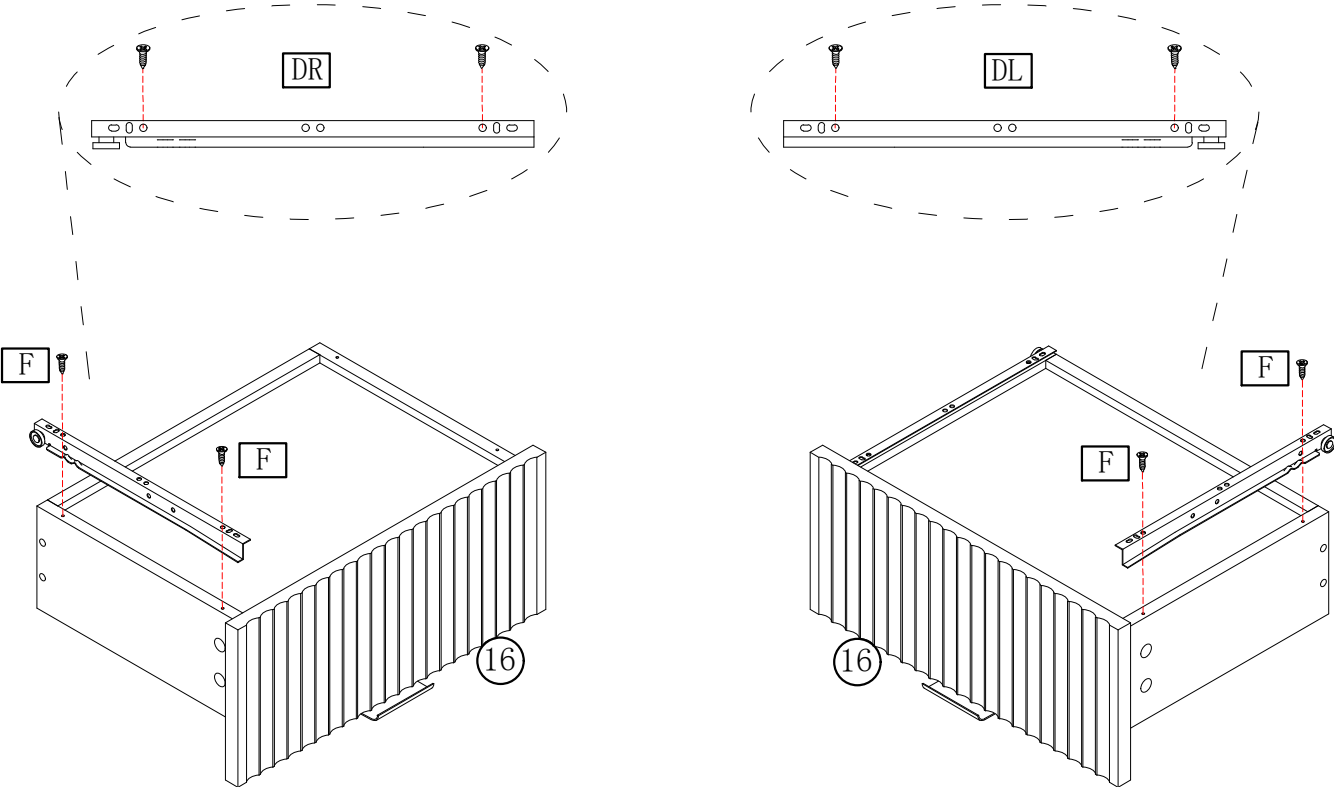


F M3. 5*14	J DL
	
*4	DR *1

  STEP 32

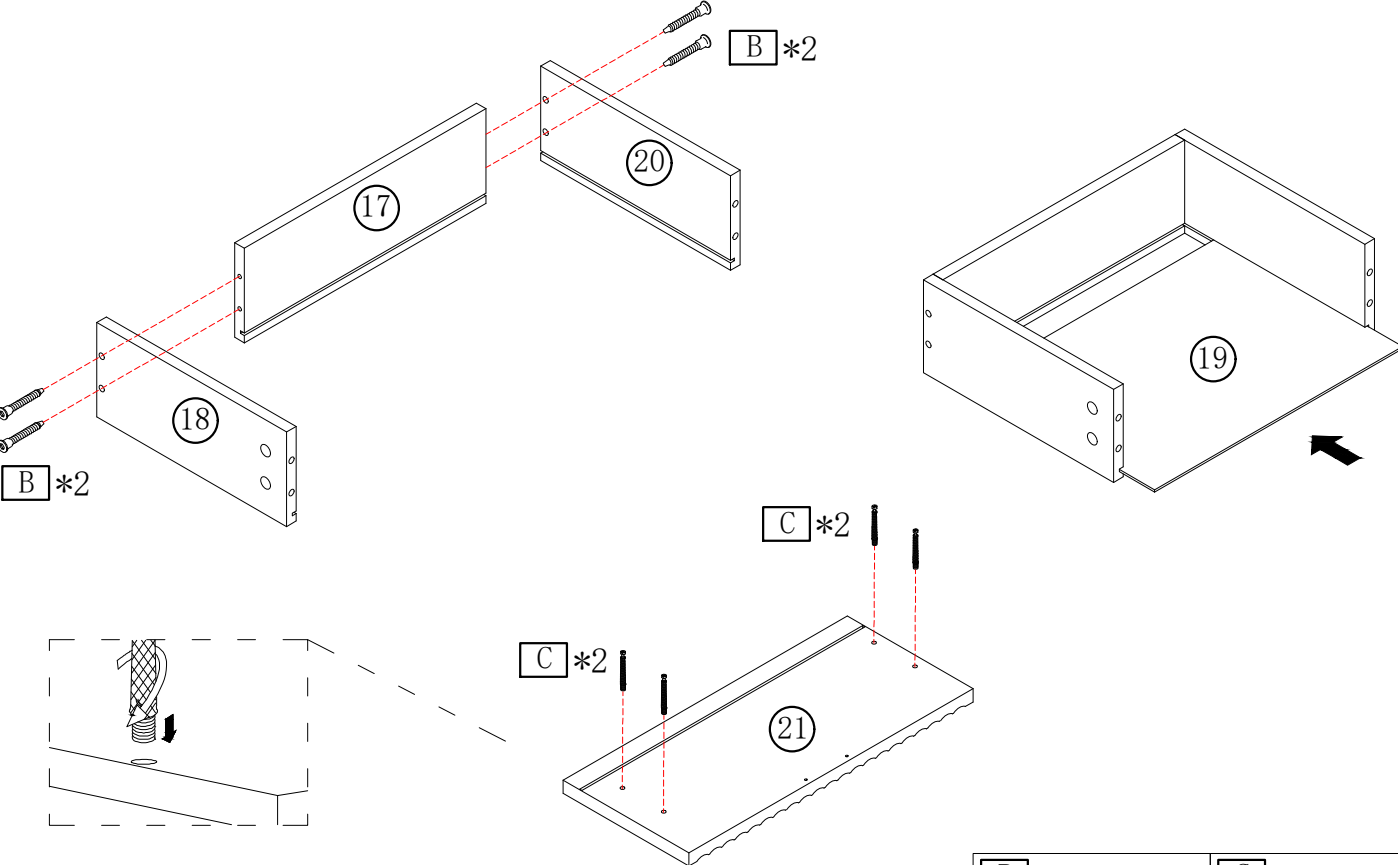


B M7*50	C KM6*40
	
*4	*4

 
STEP 33

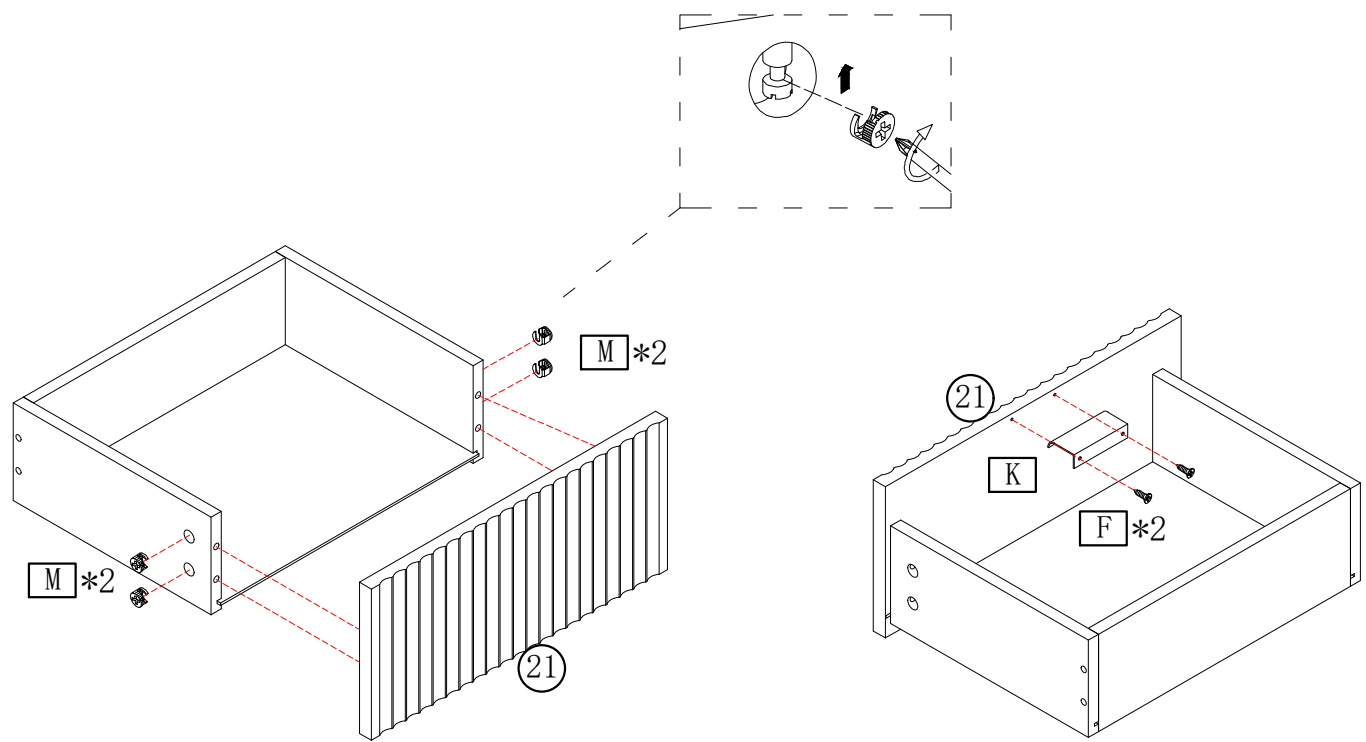


M	M15*9	F	M3. 5*14	K	
					
	*4		*2		*1

  STEP 34

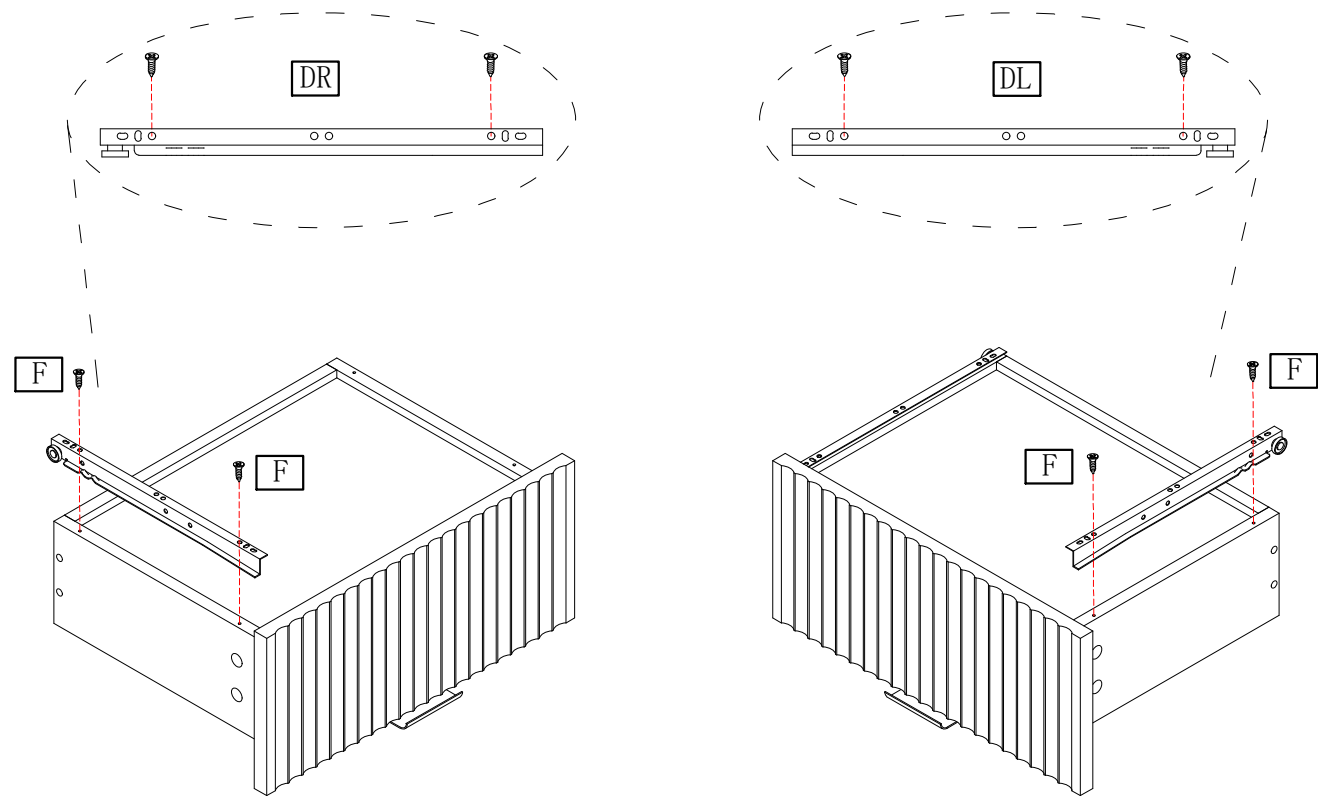



F	M3. 5*14	J	DL
			
	*4		DR *1

 STEP 35

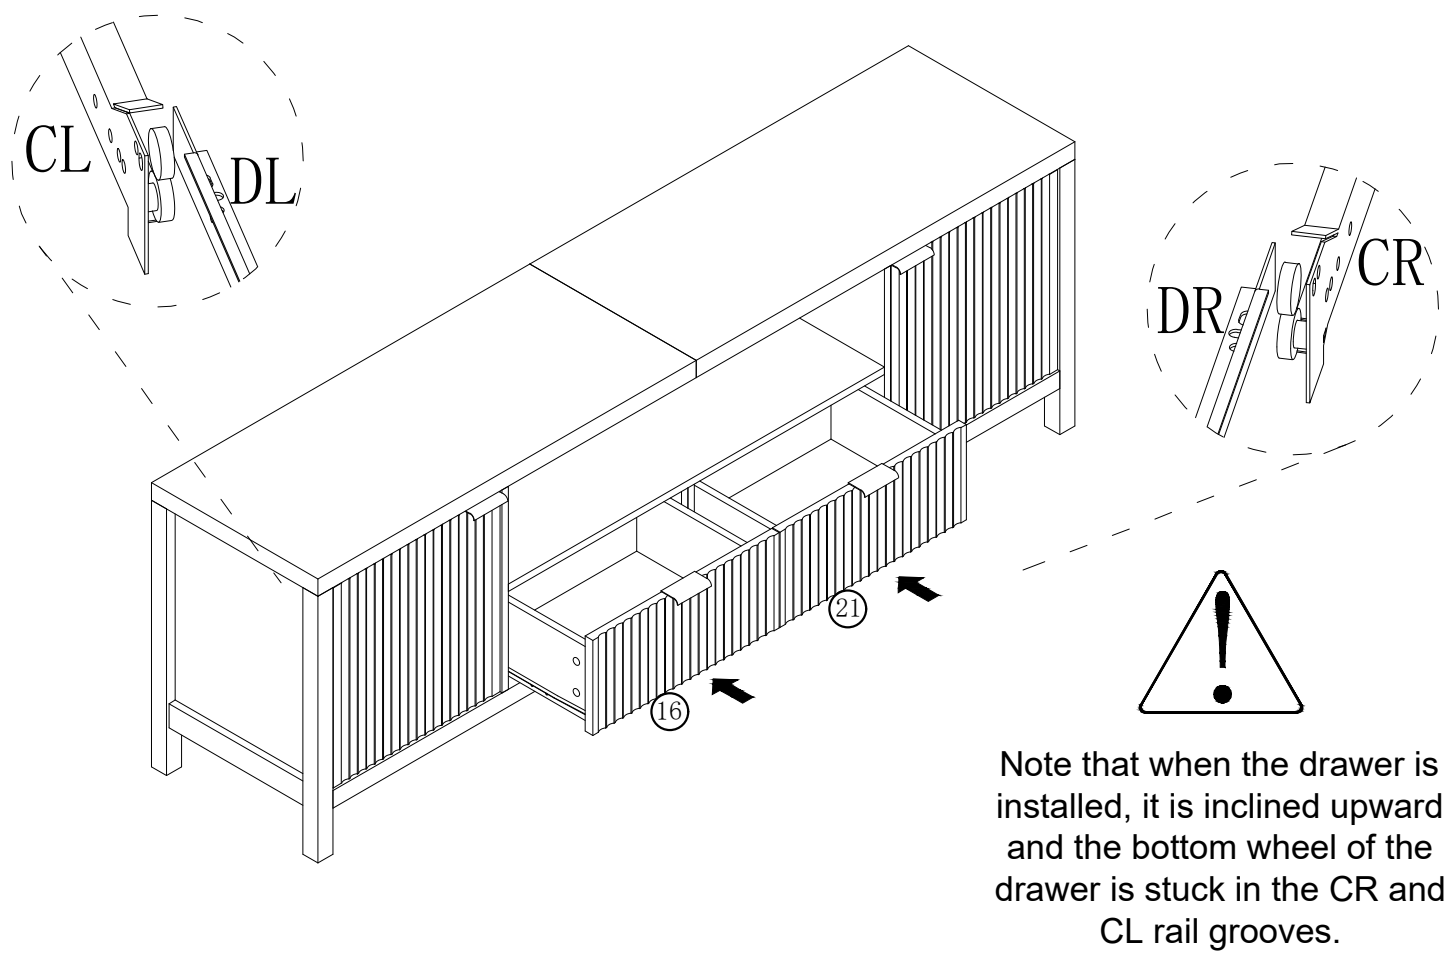


  STEP 36

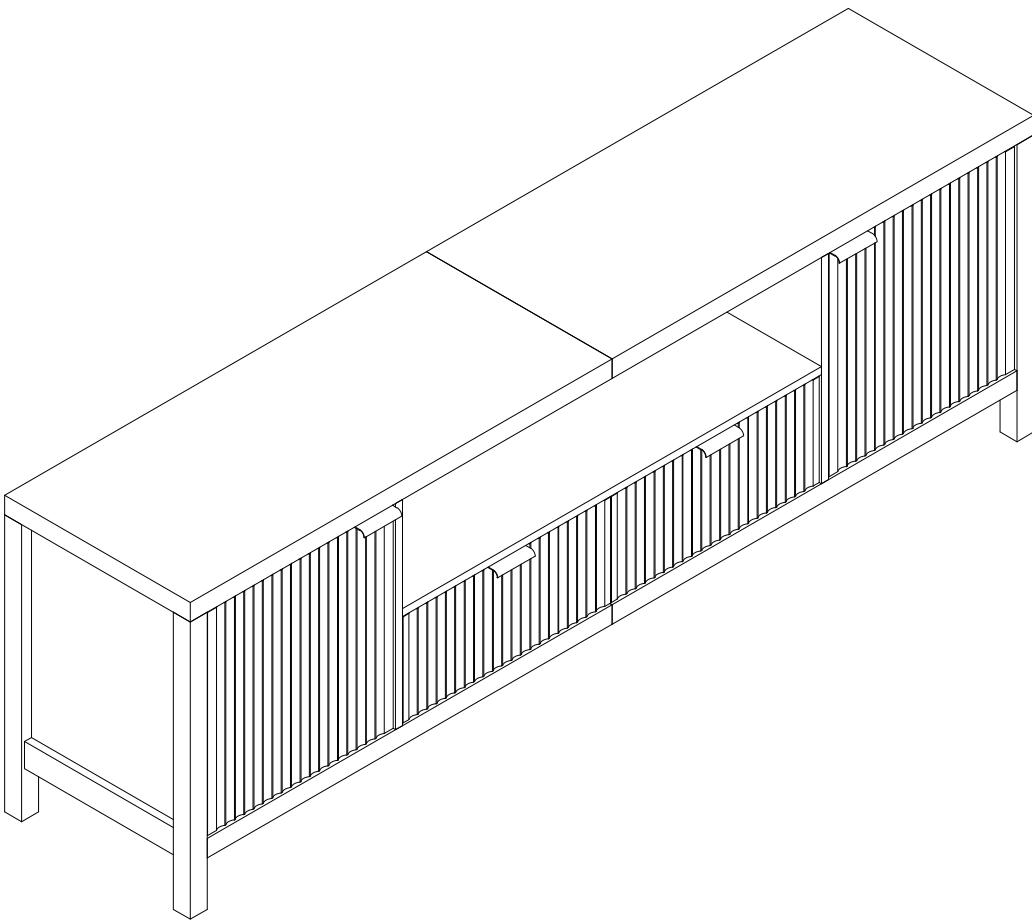


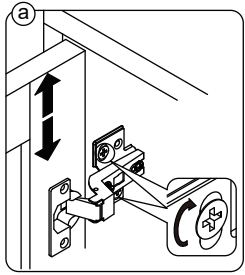

 
To adjust the door vertically loosen the screw as shown and move up and down as needed.

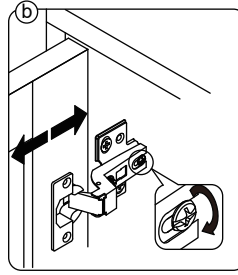

 To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

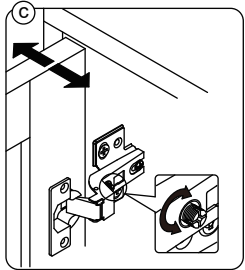

 To adjust the door laterally adjust the screw as shown by turning clockwise or anti-clockwise.

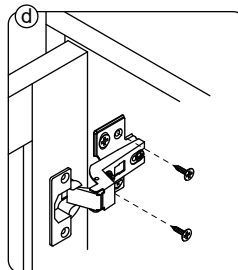

Please fix other screws.

WARNING



Children have died from furniture tipover.
To reduce the risk of furniture tipover:



- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

Limited Liability & Warning

No Unauthorized Modifications/Repairs: Do not modify or attempt to repair this product unless you are an authorized technician. Unauthorized actions may create hazards and void all warranties

Misuse & Non-Compliance: We are not liable for any injury, damage, or loss resulting from:

- (a) misuse, abuse, neglect, or improper installation;
- (b) failure to follow instructions or safety precautions;
- (c) use of unauthorized parts/accessories;
- (d) unauthorized modifications/repairs;
- (e) accidents, natural disasters, or external causes.

If you doubt any step of installation or operation, stop using the product and contact authorized service or the customer support.

LIMITACIÓN DE RESPONSABILIDAD Y ADVERTENCIA

Modificaciones o Reparaciones No Autorizadas: NO modifique ni intente reparar este producto a menos que sea un técnico autorizado. Las acciones no autorizadas pueden generar riesgos y anularán todas las garantías.

Uso Indebido e Incumplimiento: No asumimos responsabilidad alguna por lesiones, daños o pérdidas que resulten de:

- (a) uso indebido, abuso, negligencia o instalación incorrecta;
- (b) incumplimiento de las instrucciones o precauciones de seguridad;
- (c) uso de piezas o accesorios no autorizados;
- (d) modificaciones o reparaciones no autorizadas;
- (e) accidentes, desastres naturales o causas externas.

Si tiene dudas sobre algún paso de la instalación o el funcionamiento, deje de usar el producto y póngase en contacto con el servicio técnico autorizado o con atención al cliente.

GARVEE
support@garvee.com