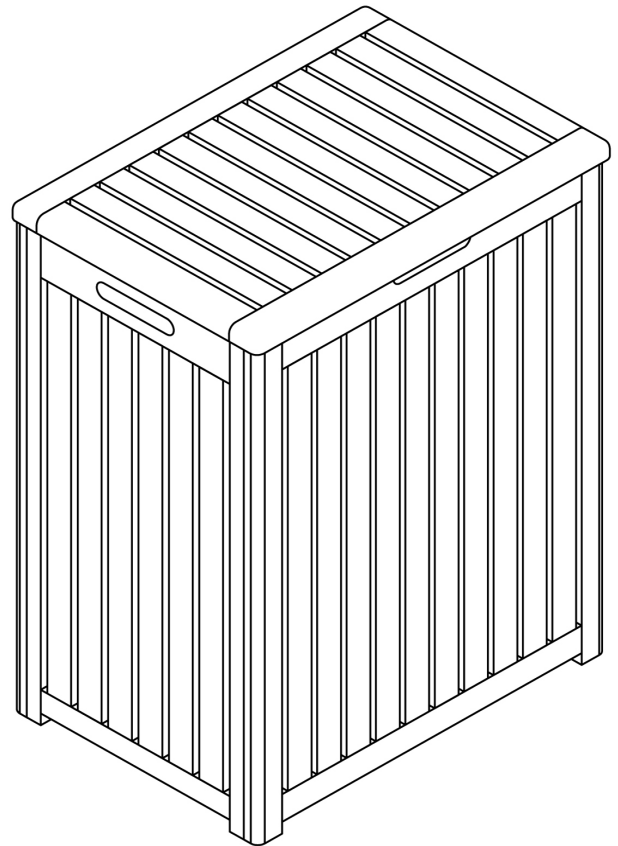


# OWNER'S MANUAL

# LAUNDRY HAMPER

## **CAUTION:**

Carefully Read  
Instructions and  
Procedures for Safe  
Operation.



**FURNITURE CARE FACTS:**

Wood, when first cut contains more than 50 percent water. When it is prepared for furniture construction it is placed in a Kiln and the moisture content is brought down to 8 to 10 percent. Wood is porous and responds to its environment. If the room has high humidity it will absorb it and expand and if the humidity is low it will lose moisture and shrink. It is important that the humidity levels in the room be controlled from extremes of too much humidity or too little. Furniture should not be placed close to air-conditioning outlets, fireplaces, radiators, space heaters, humidifiers or dehumidifiers. Exposure to extreme variations of temperature and humidity can damage any fine wood product.

**THE IDEAL ENVIRONMENT FOR FINE FURNITURE:**

Fine wood furniture will have fewer problems when its environment is controlled at a temperature between 65 and 75 degrees and a relative humidity between 35 and 40 percent. Wood placed in an environment outside of those limits can and will shrink or expand and may develop some small cracks which are not material or structural defects.

**AVOID DIRECT SUNLIGHT:**

Keep the furniture out of direct sunlight. Ultraviolet rays will fade colors and in some cases darken them. It can also cause crazing or hairline cracks in the finish. White finishes will yellow naturally over time and exposure to direct sunlight will hasten this natural process along with some woods darkening naturally over time; this is not considered to be a quality defect.

**PROPER STORAGE:**

If you need to put your furniture in storage for an period of time do not store them in a damp basement or hot dry attic. Allow air movement around the furniture and do not stack anything on it.

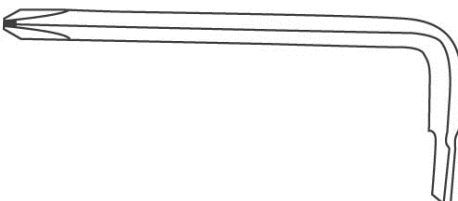
**CARE & MAINTENANCE:**

When cleaning your furniture, use a non-toxic and non-abrasive cleaner. Apply to the surface with a soft cloth, dampened in the solution. After cleaning, dry completely with a soft dry cloth. When moving furniture, always lift the unit. DO NOT push or drag it to avoid damaging the legs. Protect furniture surface from hot or extremely cold items. Avoid spilling foreign substances onto the item. If you happen to have an accident or a spillage, clean it immediately because this will prevent possible permanent staining..

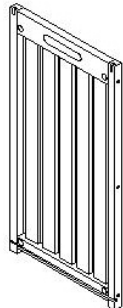
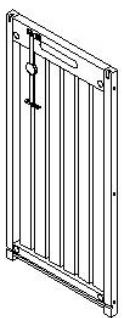
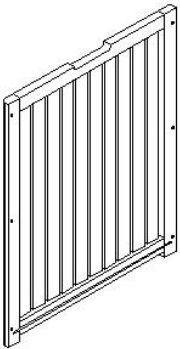
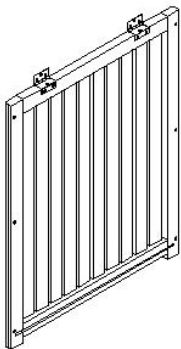
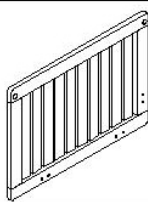
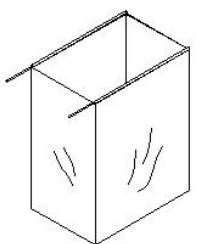
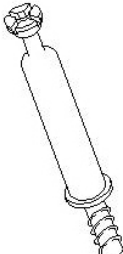
 

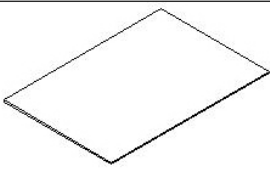
**CAUTION: DO NOT** apply pressure to the hinges by opening the lid past its normal stopping point which is at 90-120 degrees.

**WARNING:** TO AVOID DANGER OF SUFFOCATION, KEEP THIS AND ALL OTHER PLASTIC BAGS AWAY FROM BABIES AND CHILDREN. DO NOT USE IN CRIBS, BEDS, OR PLAYPENS. THE THIN FILM MAY CLING TO NOSE AND MOUTH AND PREVENT BREATHING


**Tools required for assembling the hamper:**

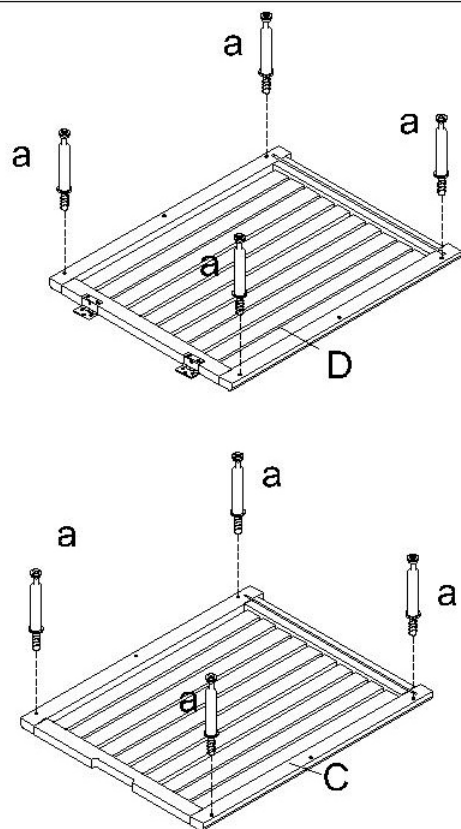L Tool ( for screws and Cam Inserts)	
	


**Part List:**

				
A:1pc	B:1pc	C:1pc	D:1pc	E:1pc
				
G:1pc	a:8pcs	b:8pcs	c:4pcs	d:8pcs


1




2

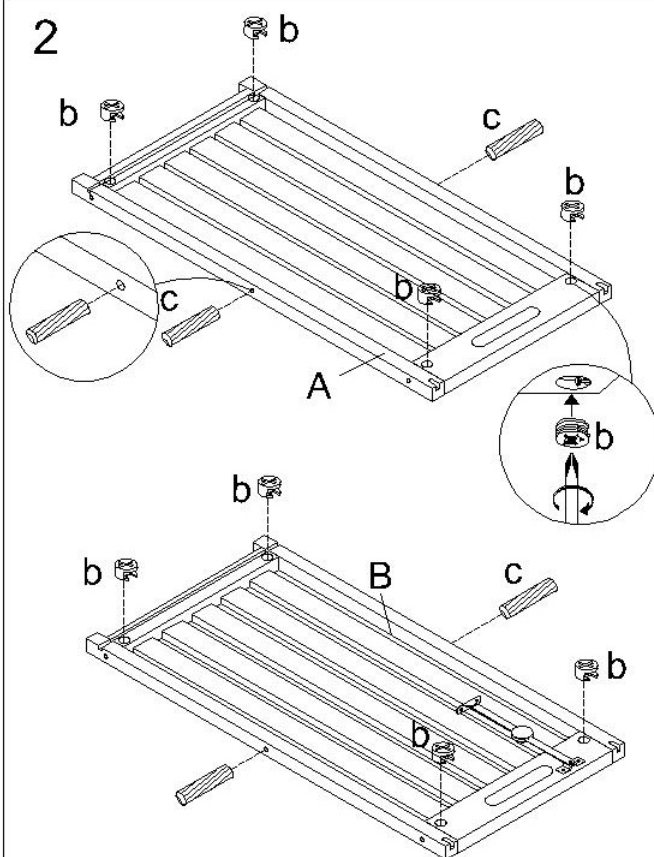


3

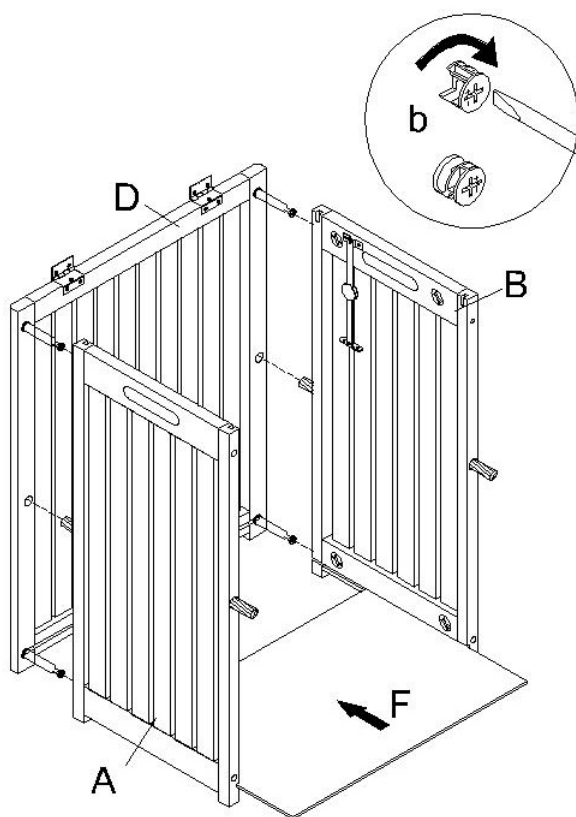

4

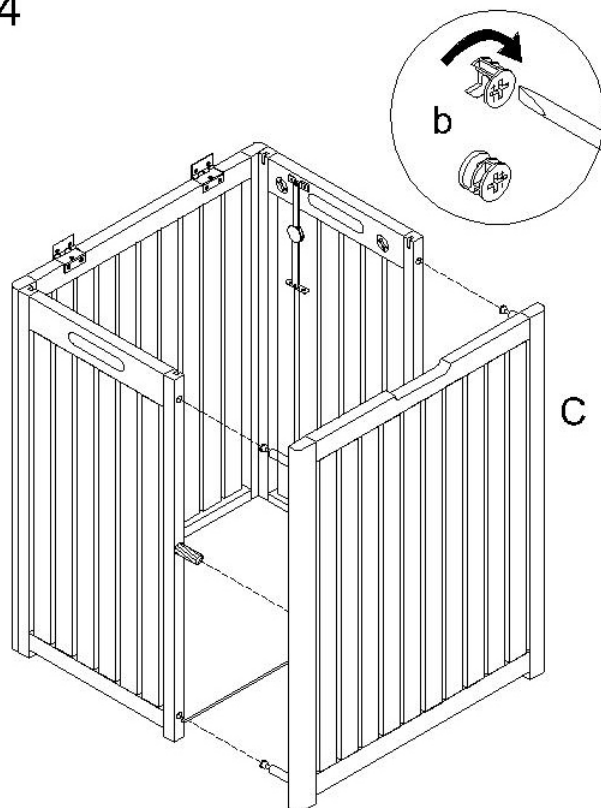

5

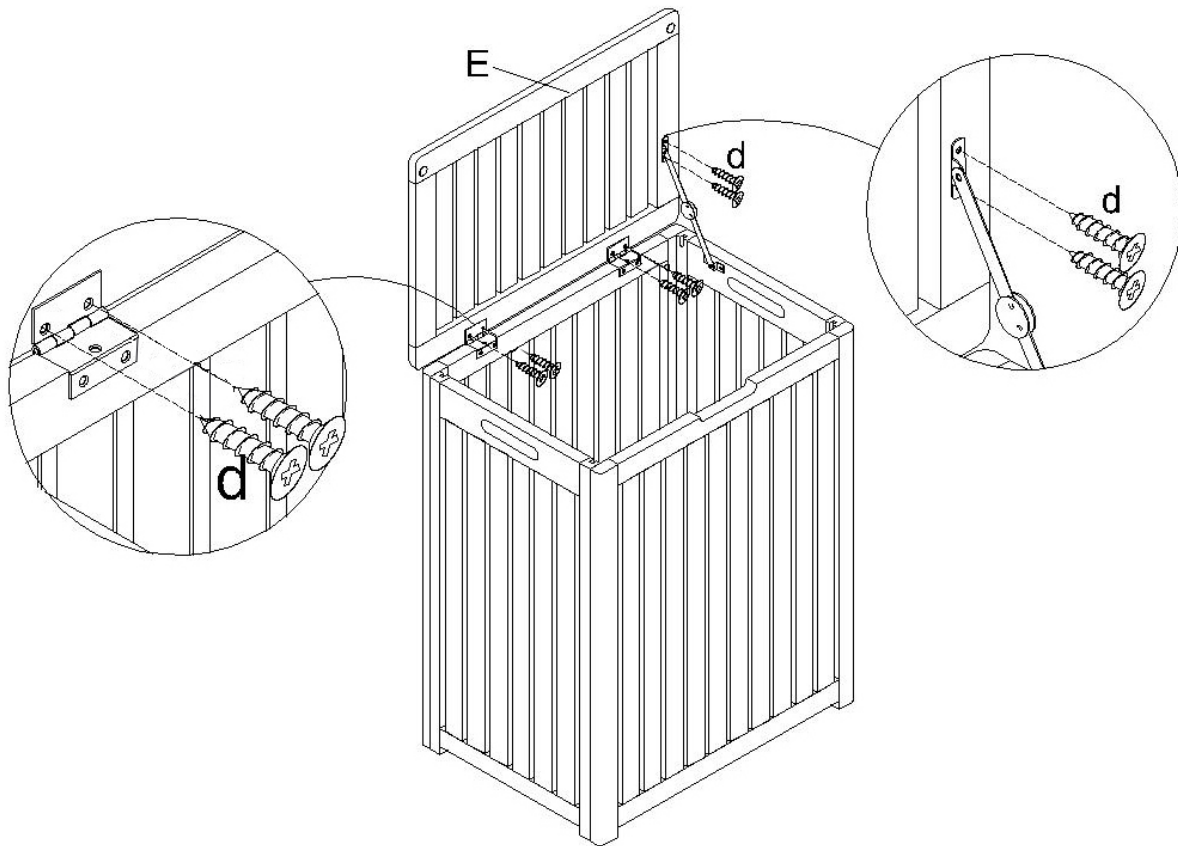

6

