


PARTS LIST

Your TRINITY Basics Stainless Steel Workbench w/ Pegboard should include the following parts. Please inspect box contents to ensure you have received all components.

If you are missing any parts, need assistance with assembly or have questions, please contact TRINITY Customer Service: 800.985.5506 or customerservice@trinityii.com. Parts can also be requested online via "Contact Us" section at www.trinityii.com.


You will need 14mm wrench (for casters) and 12mm wrench (for pegboard) for assembly. These are NOT included.

A

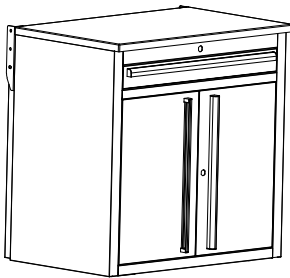

**WORKBENCH
w/PEGBOARD (1)**

B

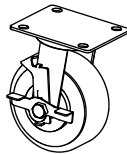

**LOCKING
CASTER (2)**

C




**NON-LOCKING
CASTER (2)**

D




**CASTER
BOLT (16)
M10**

E

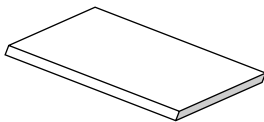

SHELF (1)

 F



**SHELF
SUPPORT (4)**

G



 
LINER (3)

H



KEY (4)

I




HOOK (10)

ASSEMBLY INSTRUCTIONS

STEP 1

Location of parts:

- 1) KEYS (H) are hooked to key leash mounted inside Drawer.
- 2) LINERS (G) are inside Drawer.
- 3) CASTERS (B/C) / CASTER BOLTS (D) / SHELF SUPPORTS (F) and HOOKS (I) are boxed inside Cabinet.
- 4) SHELF (E) is inside bottom Cabinet.

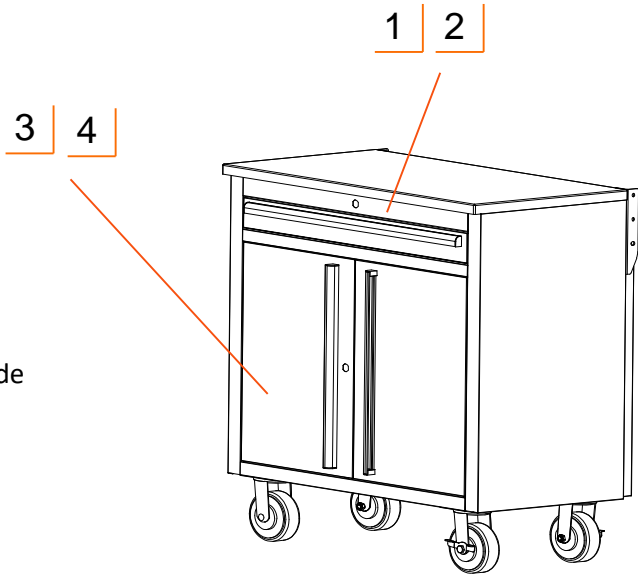

STEP 2



With two people, carefully lay WORKBENCH (A) on its backside. Do NOT attempt this alone.

Position LOCKING CASTERS (B) on side of WORKBENCH (A) of your choice and align holes to pre-installed nuts on underside of WORKBENCH (A). Use a 14mm socket wrench to fully tighten CASTER BOLT (D) to WORKBENCH (A).

Repeat above steps to install NON-LOCKING CASTERS (C).

Notes:

- * Make sure to install both LOCKING CASTERS (B) on same side of workbench, either left or right side. Do NOT install both on front or back side.
- ** For ease of use, place LOCKING CASTERS (B) on side you will regularly push.
- *** If you plan to push the workbench against a wall, push NON-LOCKING CASTER (C) against the wall first then swing LOCKING CASTERS (B) against the wall.

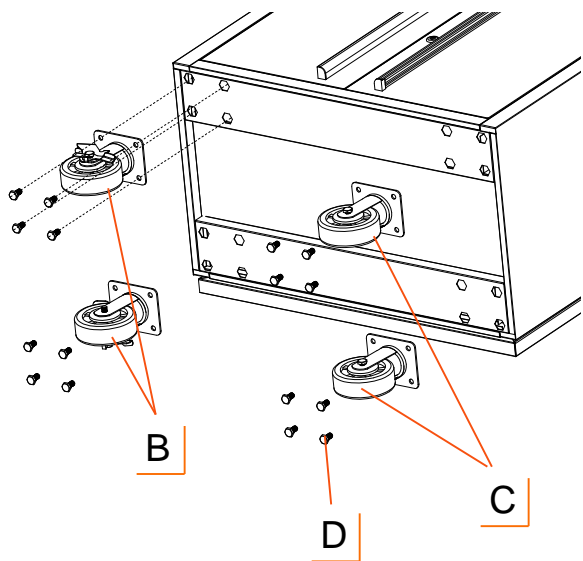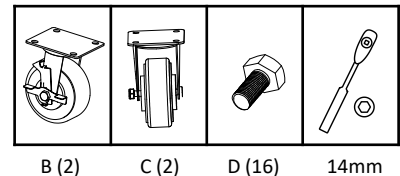


ASSEMBLY INSTRUCTIONS


STEP 3

Carefully lift Workbench upright. Two people are needed. Do NOT attempt this alone.


Unscrew bottom Bolt on left and right side of Pegboard with a 12mm socket wrench. Lift Pegboard upright. With one person holding Pegboard in place, have second person insert bottom Bolt into top hole of each bracket. Securely tighten both Bolts back with socket wrench.

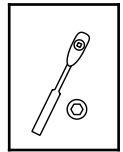


12mm

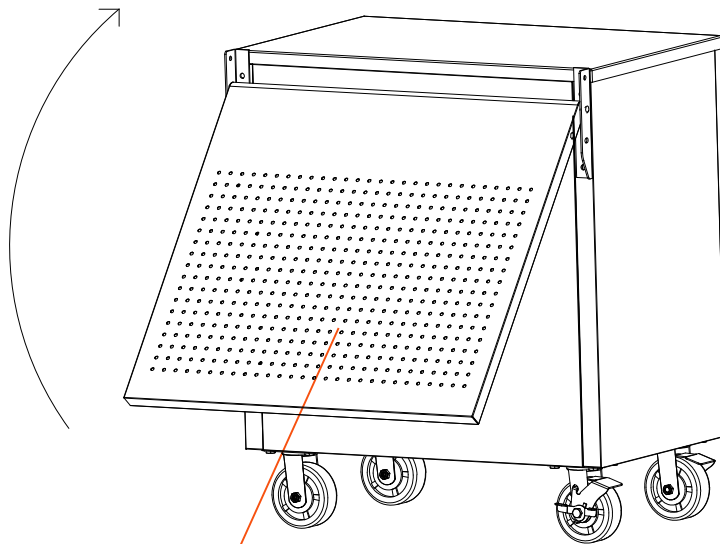

PEGBOARD

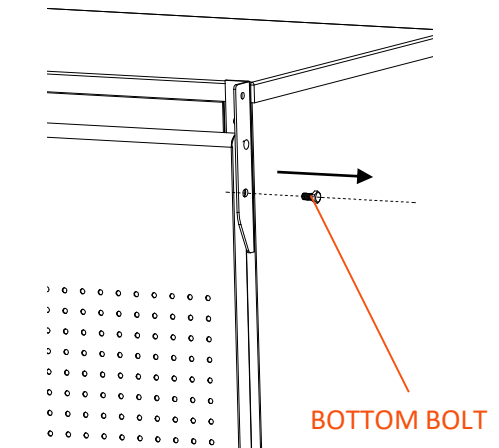

BOTTOM BOLT

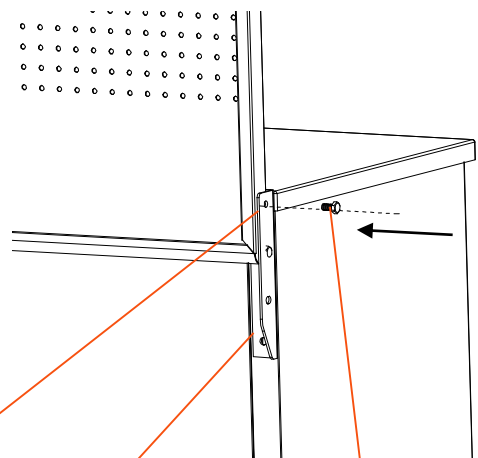

TOP HOLE

BOTTOM BOLT

BRACKET


ASSEMBLY INSTRUCTIONS

STEP 4

SHELF (E) is shipped inside the bottom cabinet. Tilt SHELF (E) diagonally and remove it from cabinet.


Attach SHELF SUPPORT (F) by hooking it over position tab at desired height. Make sure all four SHELF SUPPORTS (F) are at same level. Tilt SHELF (E) diagonally to move it inside cabinet. Place SHELF (E) on top of all four SHELF SUPPORTS (F).

You can adjust shelf height position by removing shelf, re-locating shelf supports and replacing shelf.

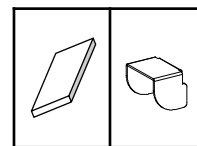


E (1)

F (4)

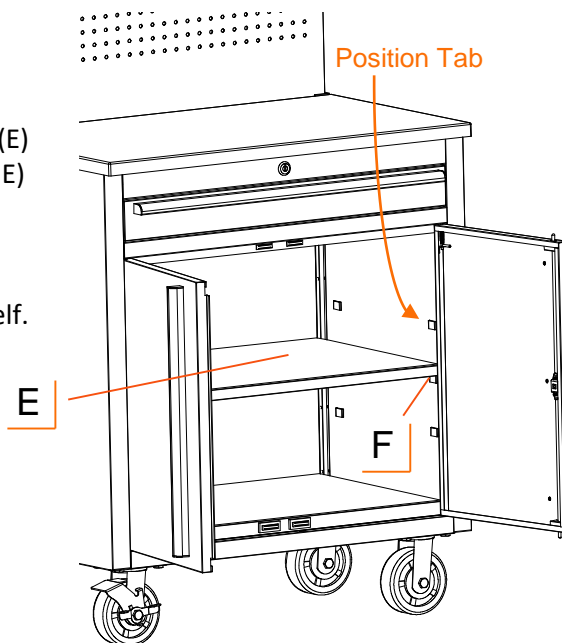


STEP 5

 Place LINERS (G) inside drawer, on cabinet shelf and on bottom of cabinet.




G (3)

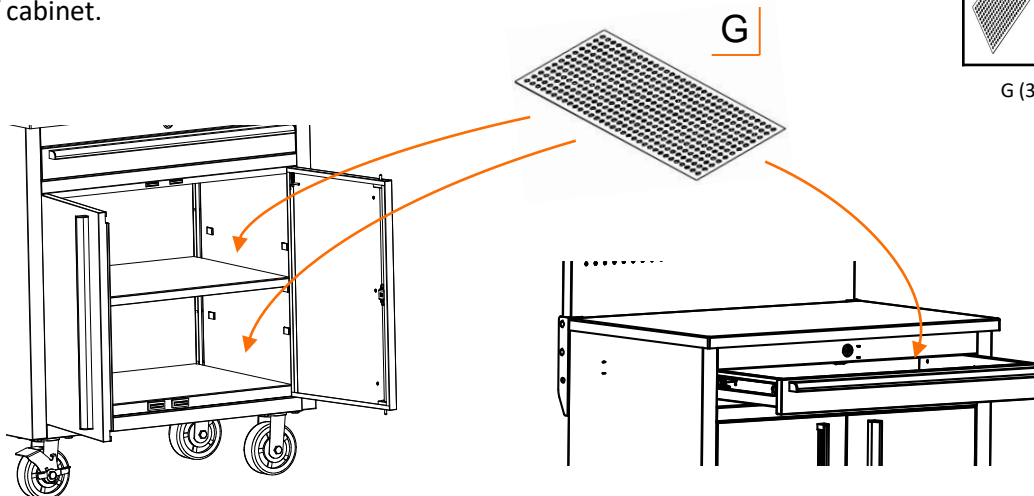


ASSEMBLY INSTRUCTIONS

STEP 6

 Hang HOOKS (I) into holes on pegboard at your desired location.



I (10)

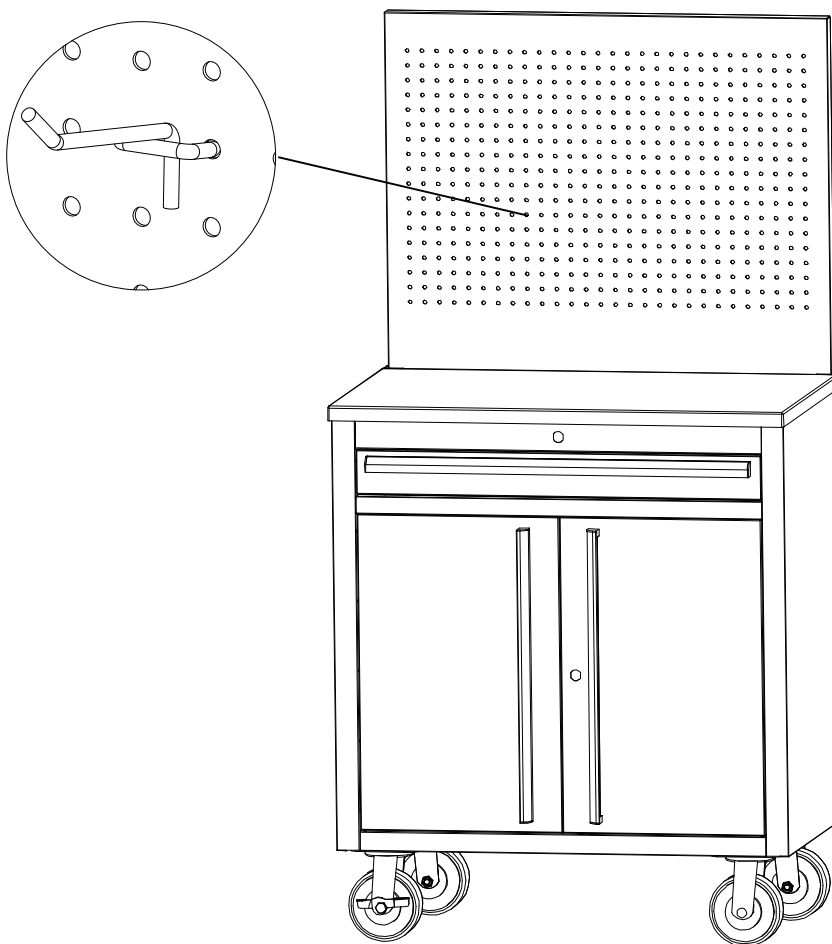


USAGE INSTRUCTIONS

DRAWER REMOVAL


Pull drawer out so that it is almost fully extended. On RIGHT-hand side, push black release lever DOWN. On LEFT-hand side, pull black release lever UP. While holding levers as instructed, pull drawer forward until released from slides attached to Workbench ("Workbench Slides").

Note: Slides attached to drawer ("Drawer Slides") are an integral part of drawer and must be removed along with drawer itself.

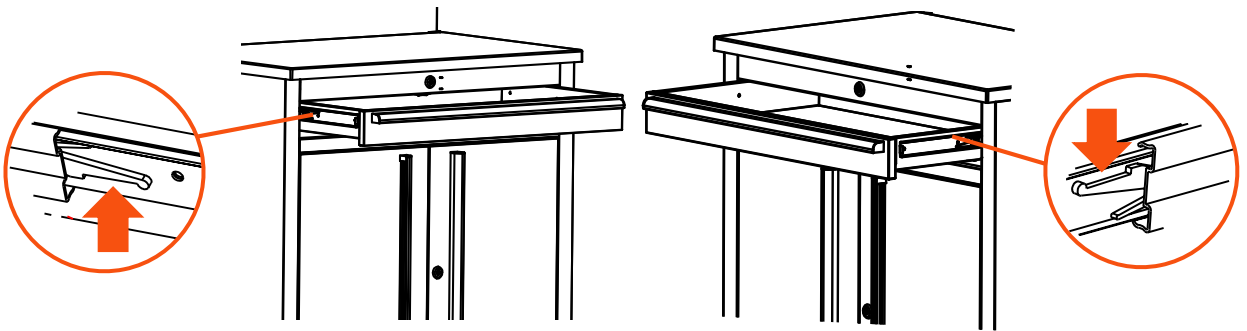

DRAWER REPLACEMENT

To replace drawer, pull slides out completely. Insert brackets on each side of Drawer Slides into corresponding slots on Workbench Slides, making sure they are properly positioned. Once brackets are inserted into slots, completely close drawer to set all slides in their proper positions.

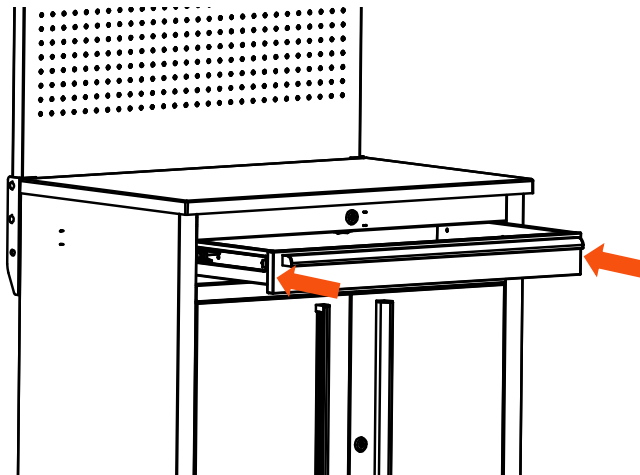

SERVICE PARTS LIST – TLS-4820

TRINITY Customer Service provides the following replacement parts:

	Part Number	Description		Part Number	Description
1)	XBK-02-047-0001	Key leash	13)	XBK-22-007-2717	Shelf Liner
2)	XBK-10-001-0XXX	Key	14)	ZSV-99-004-5020	Locking Caster
3)	XBS-07-013-2716	Drawer	15)	XBS-08-015-2114	Left Door
4)	LNA-06-015-3119	Wood Top	16)	AMA-05-007-2000	Door Handle
5)	ZSV-12-010-1575	Slide (workbench side)	17)	XBK-23-010-3012	End cap
6)	AMA-05-007-2600	Drawer Handle	18)	XBS-19-011-0825	Pegboard Bracket-Right
7)	XBS-08-014-2114	Right Door	19)	XBS-19-008-0825	Pegboard Bracket- Left
8)	XSV-02-017-0001	Shelf Support	20)	XSV-01-009-0816	Pegboard Bolt
9)	PBK-03-001-2717	Shelf	21)	CSV-11-001-0XXX	Lock
10)	ZSV-99-003-5020	Non-locking Caster	22)	ZSV-12-009-1575	Slide (drawer side)
11)	ZSV-01-001-1020	Caster Bolt	23)	PBK-15-016-3024	Pegboard
12)	XBK-22-007-1626	Drawer Liner	24)	ZSV-02-025-0001	Hook

SERVICE PARTS LIST – TLS-4820

TRINITY Customer Service provides the following replacement parts:

NOTE: Replacement keys may be ordered using the code shown on the face of the lock.

