 


TV Stand

Thank you for purchasing !

Before you start, here are some helpful advice:

1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the TV Stand, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.

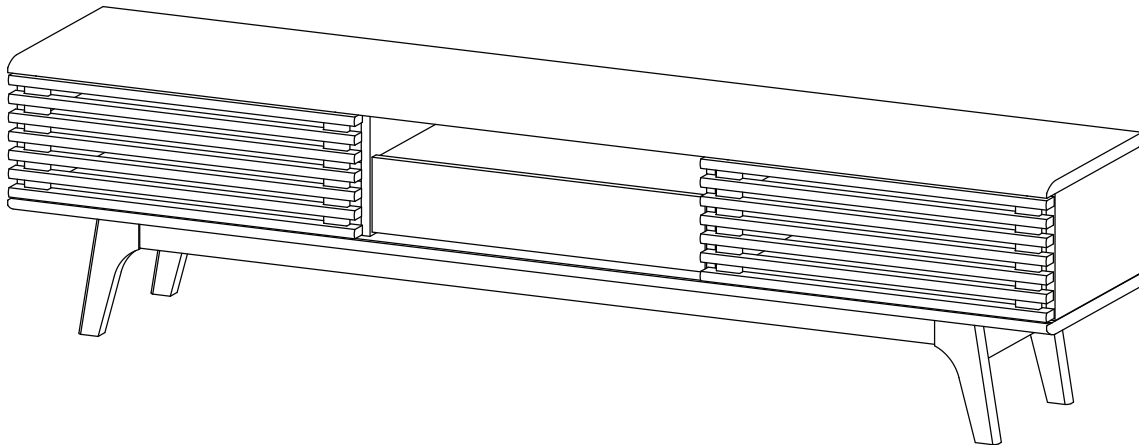 


Hardware :

A Ø 6 x 35 mm x 12	B Ø 15 mm x 10	C Ø 12 mm x 2	D Ø 8 x 30 mm x 40	E Ø 6 x 30 mm x 2
F 250 mm x 1	G M 6.5 x 10.5 mm x 4	H M 3.5 x 13 mm x 4	I M 8 x 39 mm x 4	J M 7 x 50 mm x 6
K L 4 x 1	L M 12 x 35 mm x 8	M M 12 x 45 mm x 4	N Ø 5 x 15 mm x 8	O 9 x 14 x 10 mm x 12
P M 3.5 x 15.5 mm x 12	Q 25 x 25 x 2 mm x 4	R Ø 8 x 19 mm x 4	S Ø 8 x 16 mm x 4	T Ø 8 mm x 1
U 42 x 14 x 8 mm x 2	V Ø 15 mm x 6	W 1185 x 20 x 20 mm x 1	X Screwdriver (Not Include) x 1	

TV Stand

 
Components:

 
 
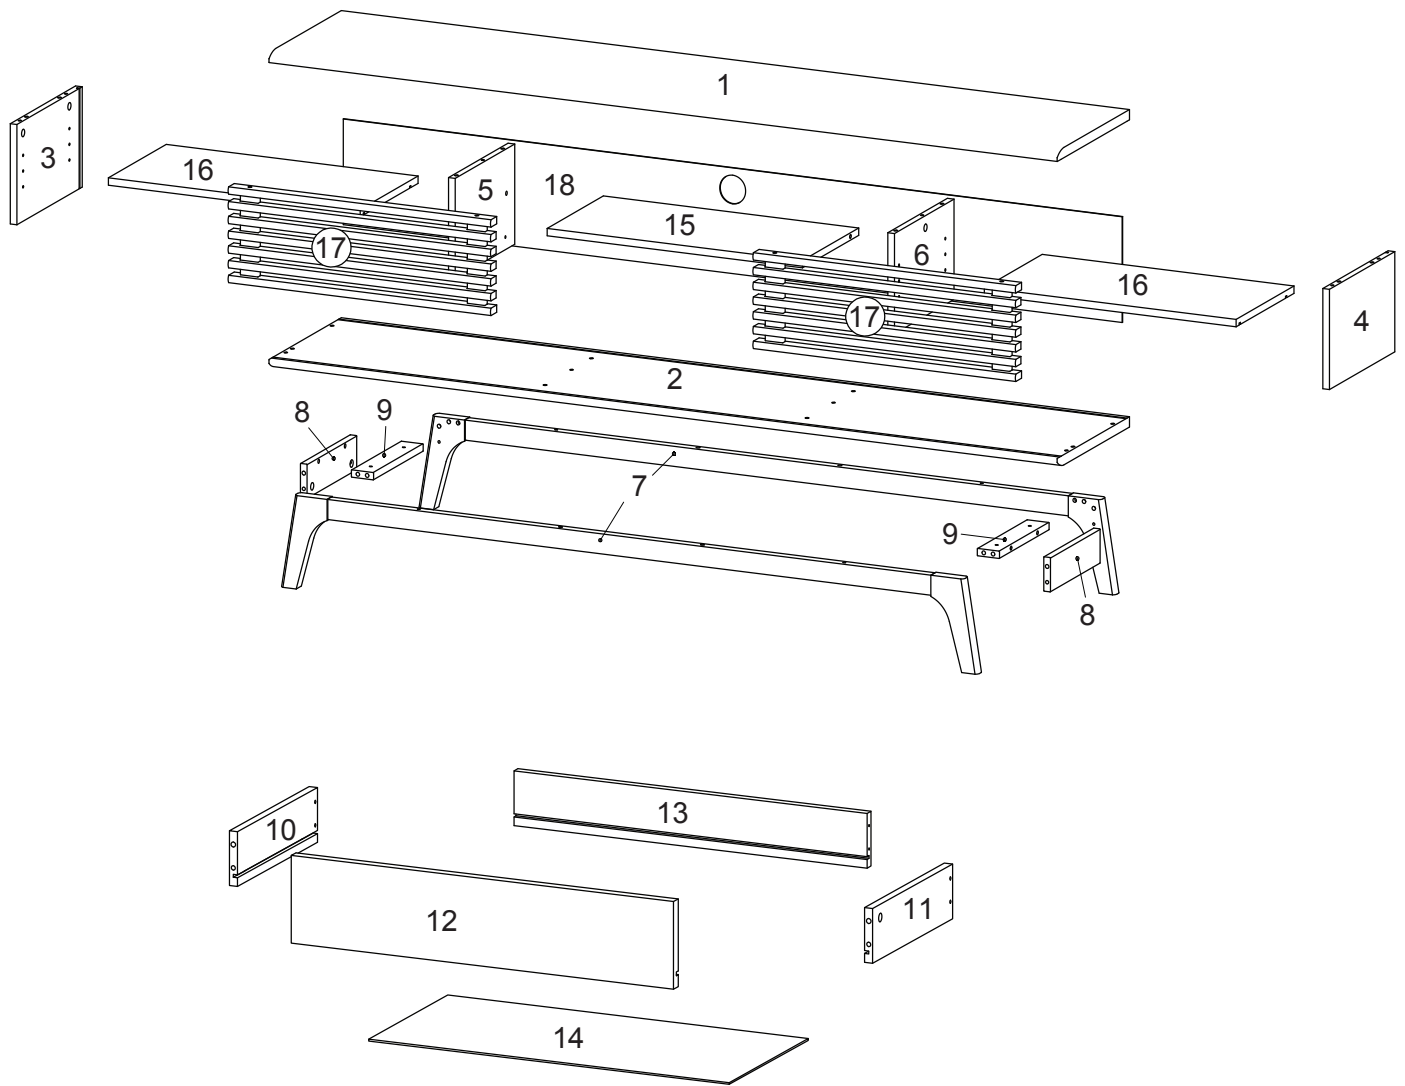 


1	Top Board	x1	2	Bottom Board	x1	3	Side Board Left	x1	4	Side Board Right	x1
5	Centre Board Left	x1	6	Centre Board Right	x1	7	Assembly Leg	x2	8	Support Board 2	x1
9	Support Board 3	x1	10	Side Drawer Left	x1	11	Side Drawer Right	x1	12	Front Drawer	x1
13	Back Drawer	x1	14	Bottom Drawer	x1	15	Fixed Shelf	x1	16	Adjustable Shelf	x2
17	Frame Door	x2	18	Back Board	x1						

TV Stand

 
STEP 1:

 
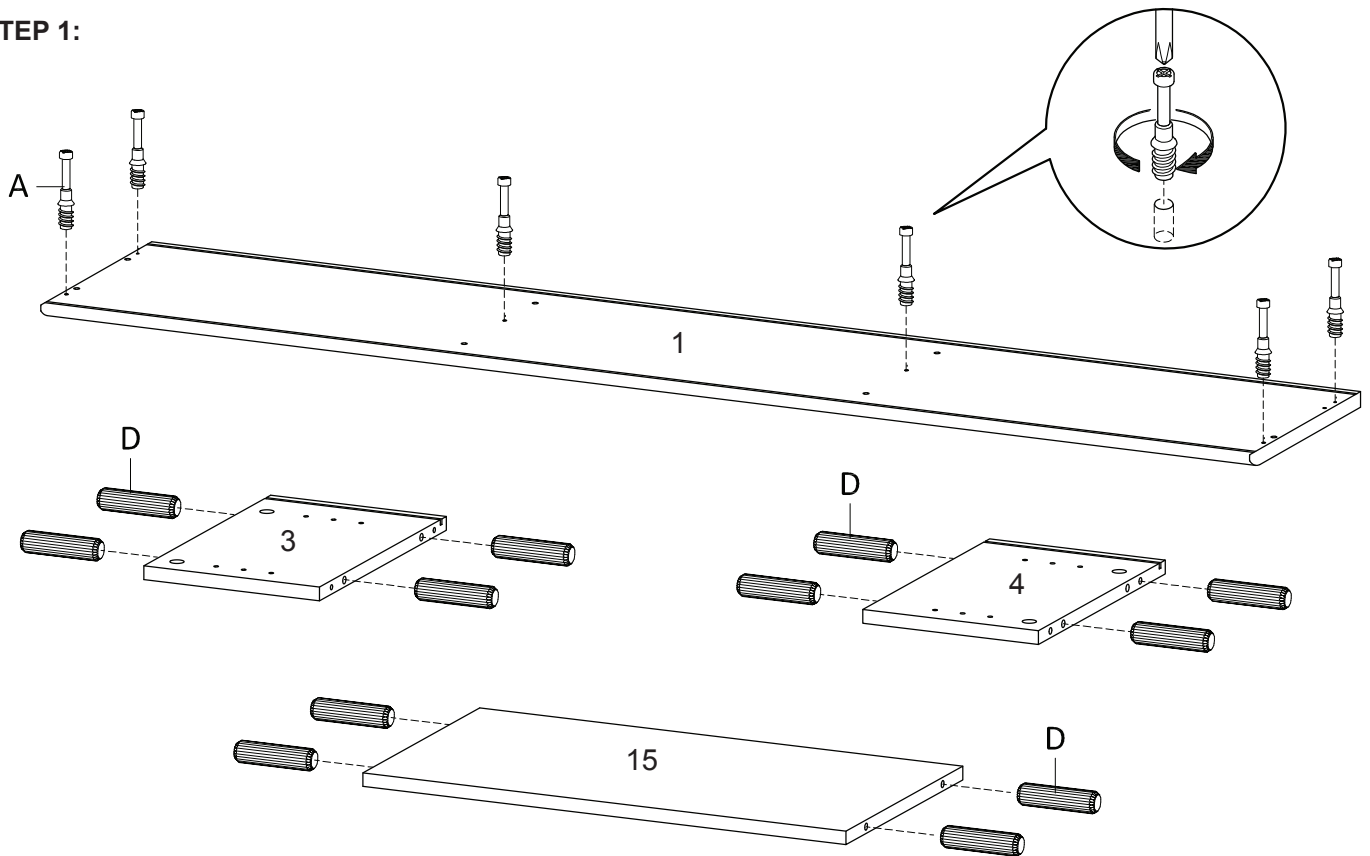 

 


		
Ax6	Dx12	Xx1

Hardware required. Screwdriver not included

 
STEP 2:

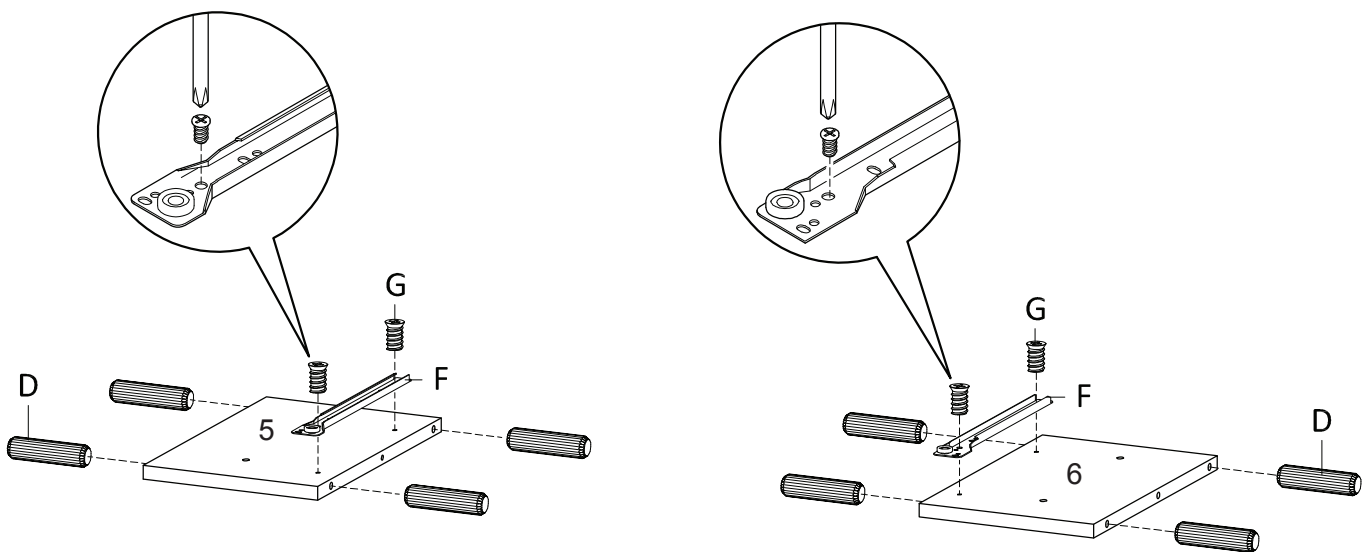

 
			
Dx8	Fx1	Gx4	Xx1




Hardware required.
Screwdriver not included

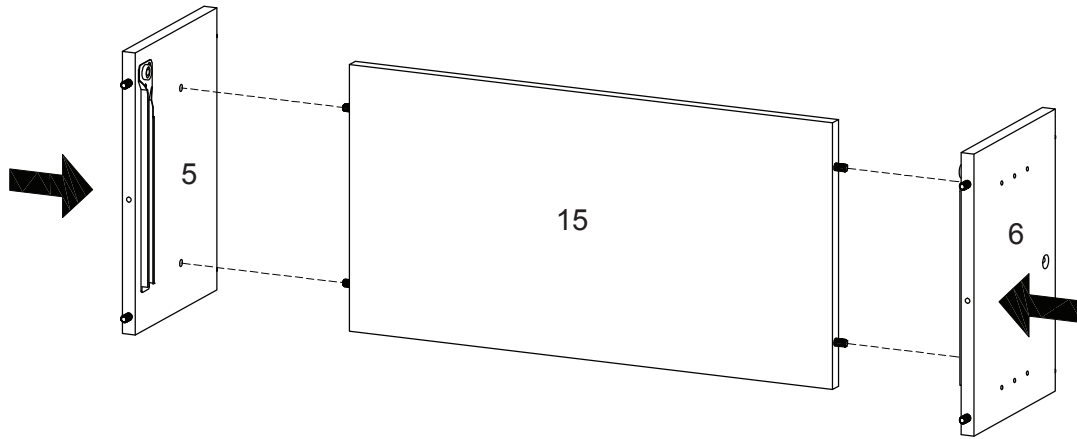STEP 3:

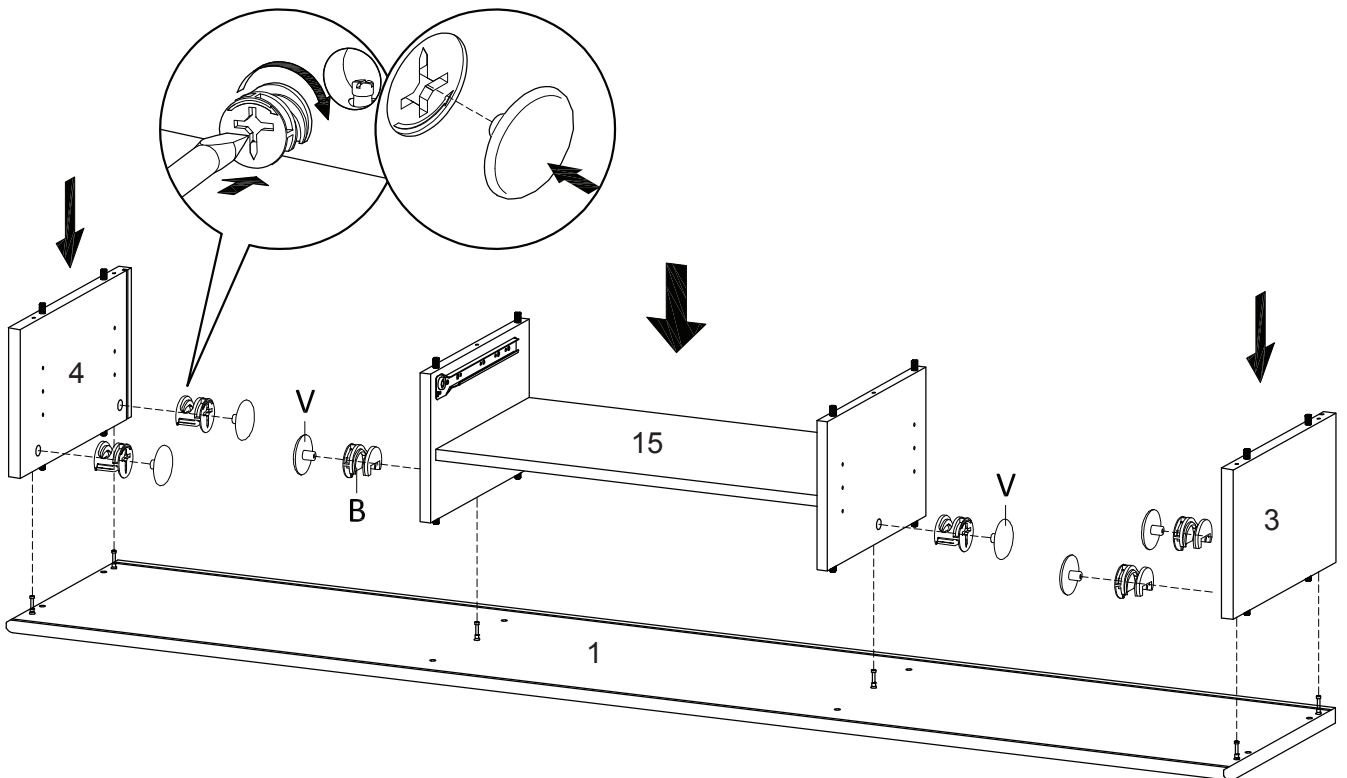

 
STEP 4:



 
		
Bx6	Vx6	Xx1

Hardware required.
Screwdriver not included

 
STEP 5:

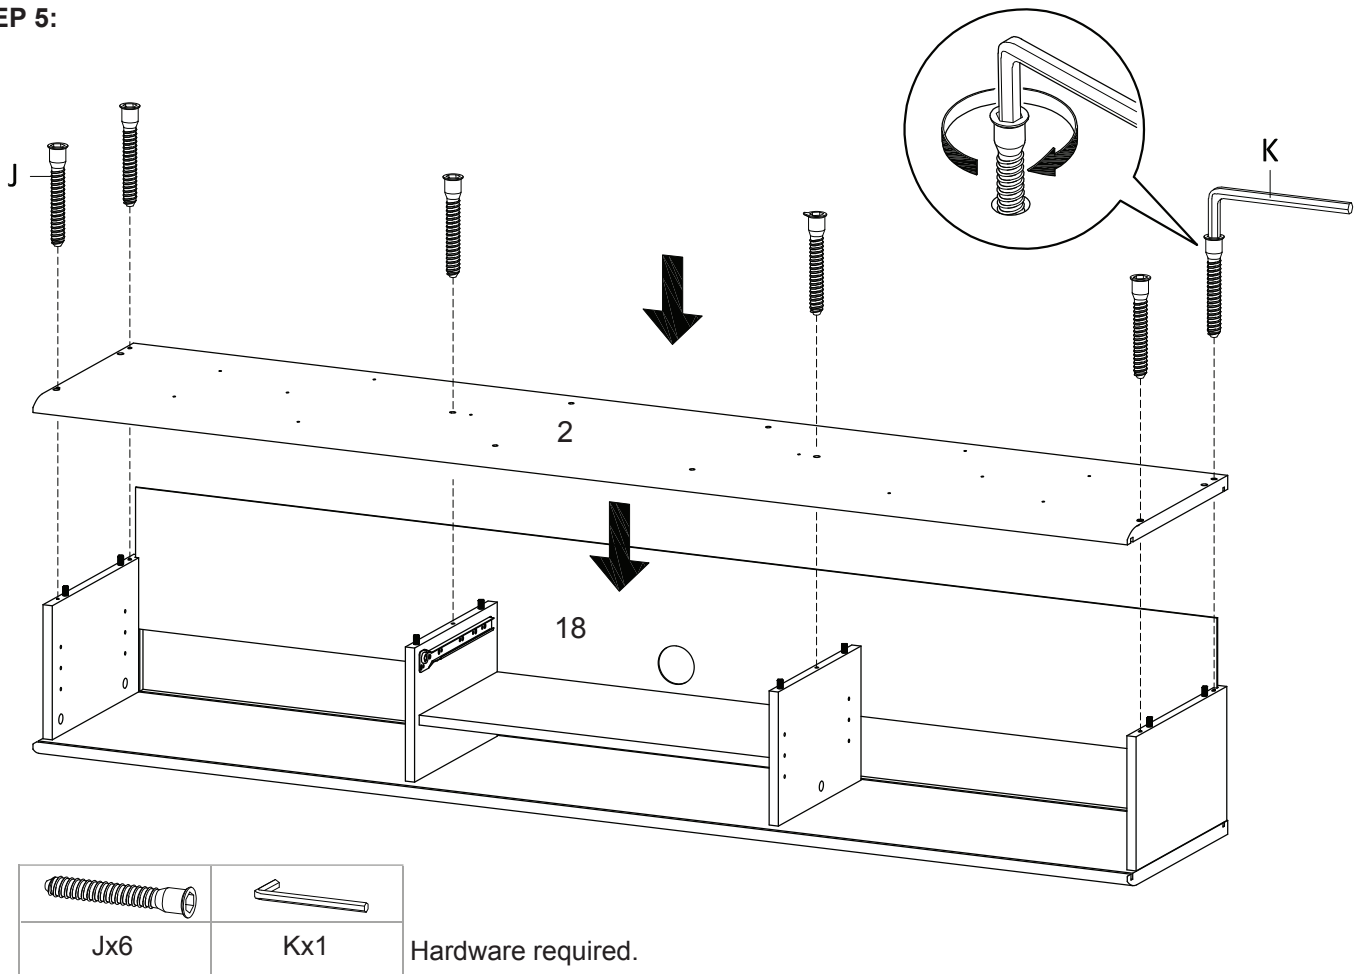 

 


STEP 6:

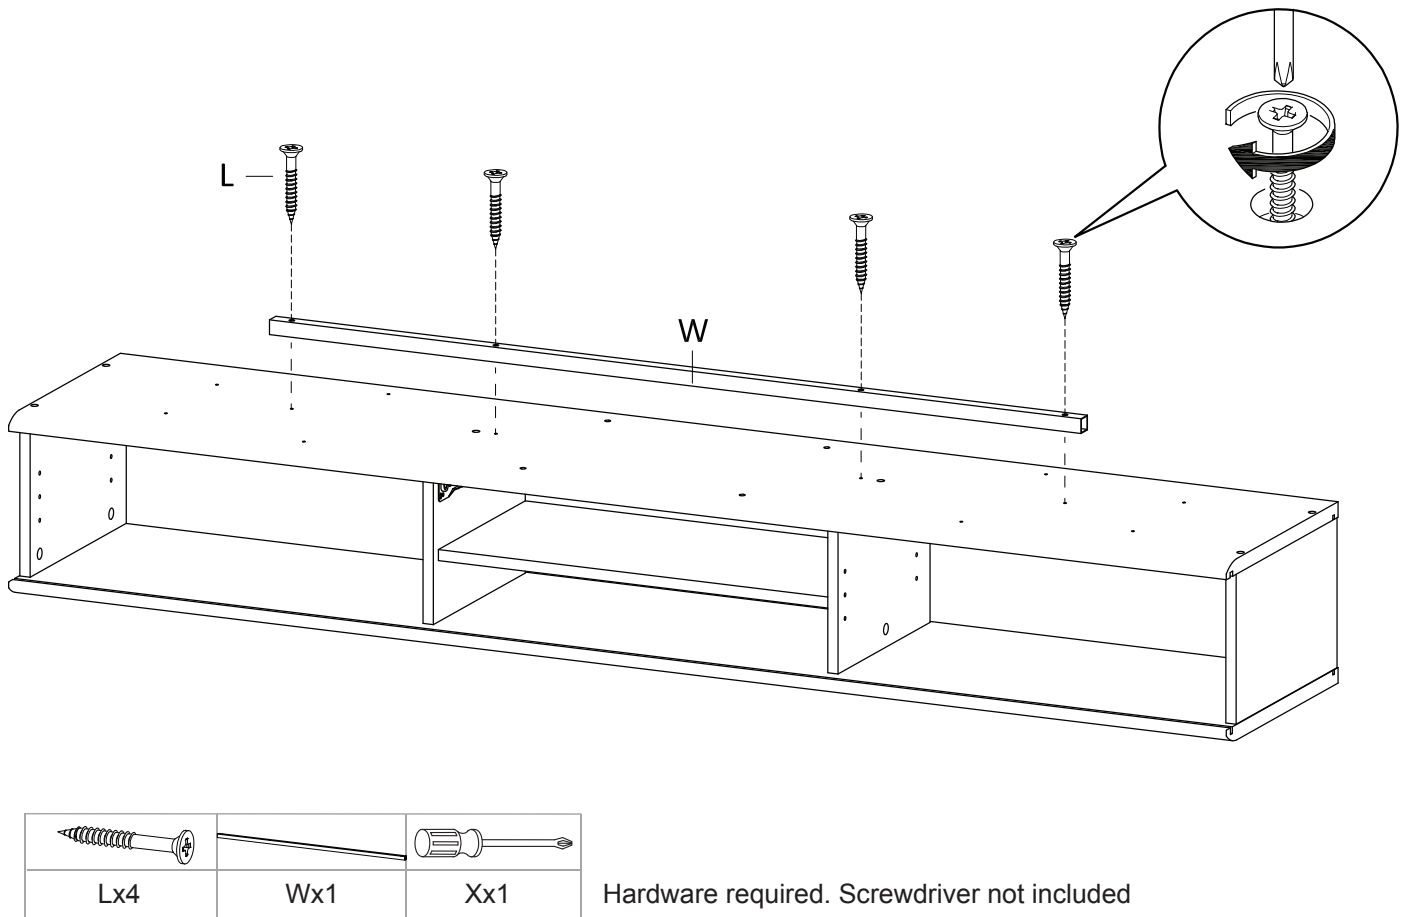

 
STEP 7:

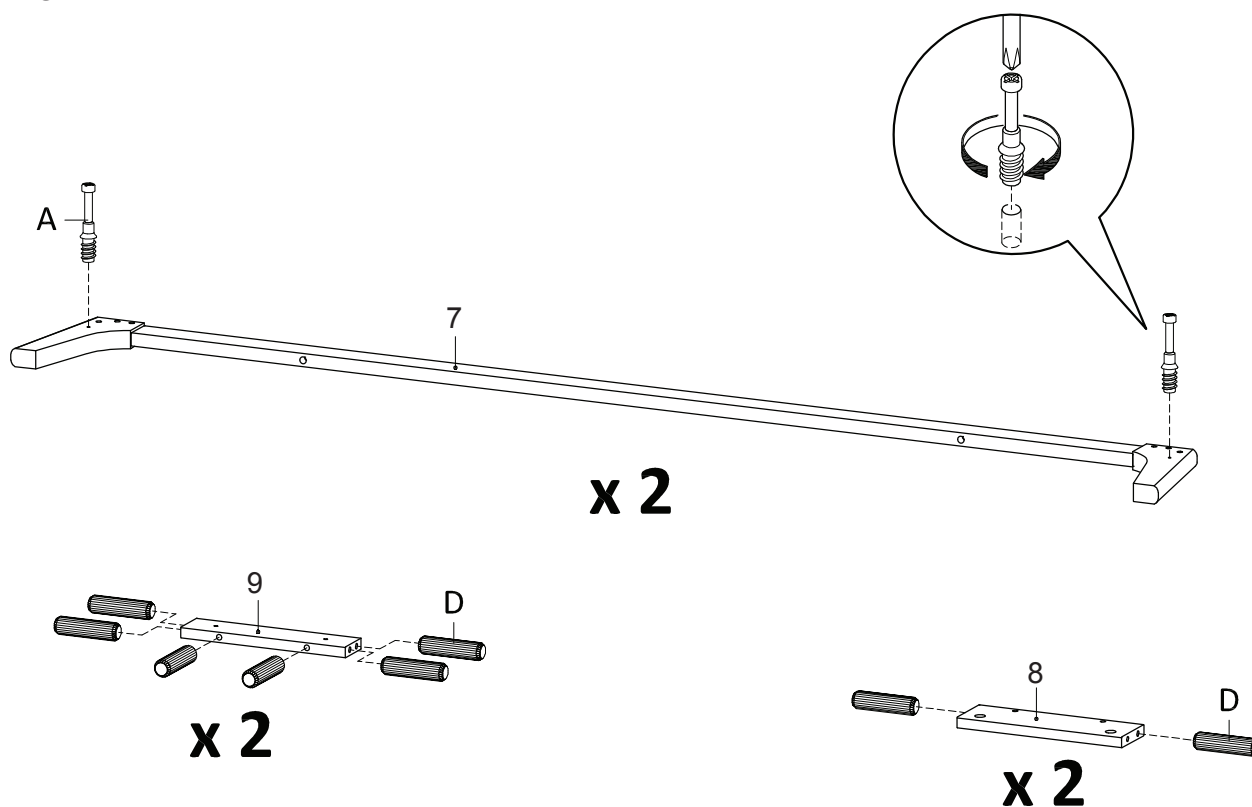

 
		
Ax4	Dx16	Xx1


 
Hardware required. Screwdriver not included

STEP 8:

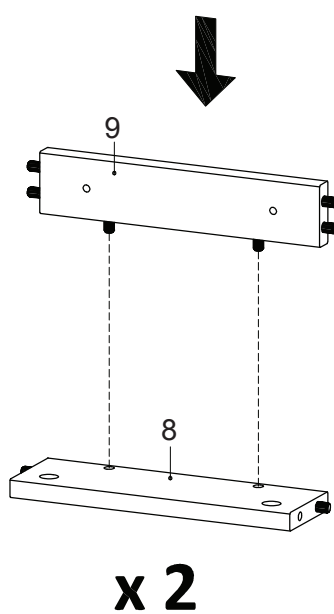

 
STEP 9:

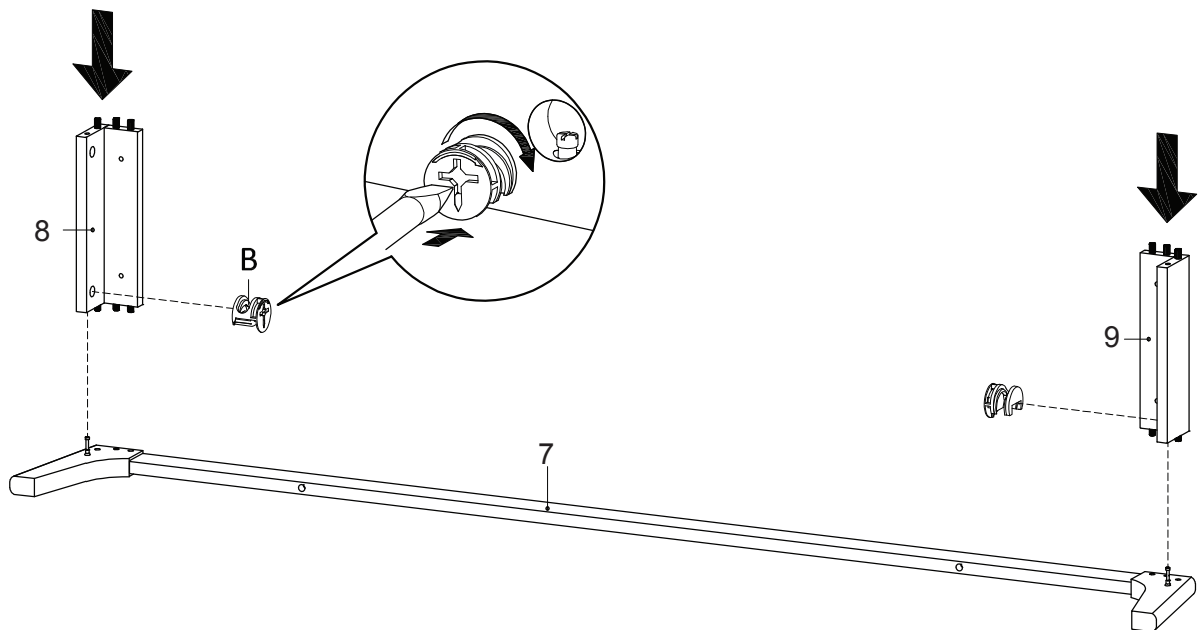
 


	
Bx2	Xx1

Hardware required. Screwdriver not included

 
 
STEP 10:

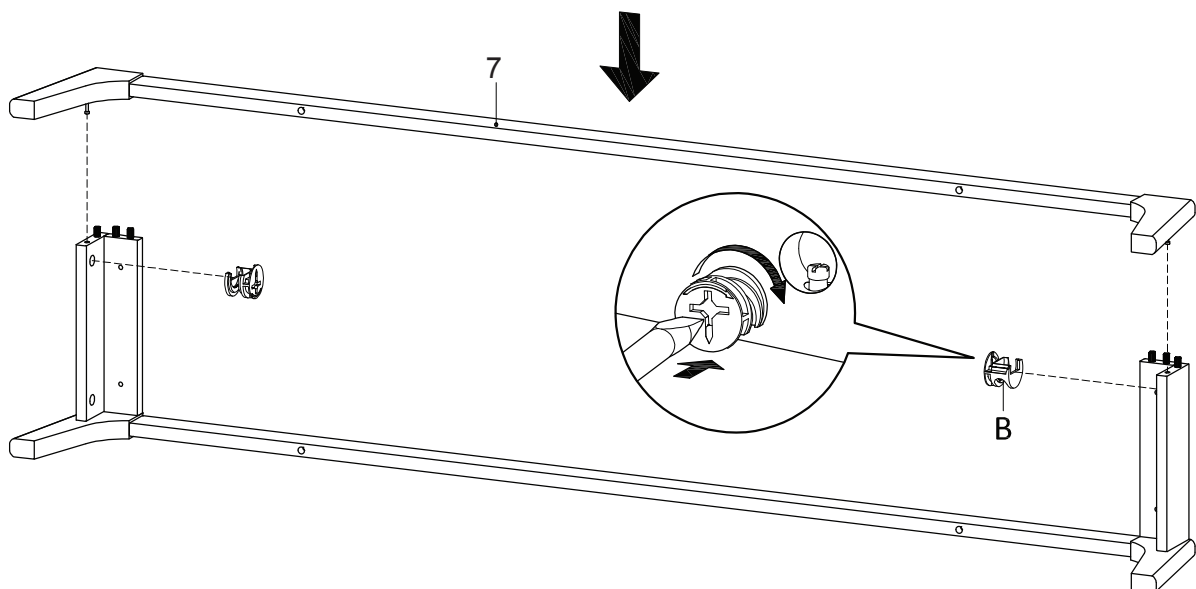

	
Bx2	Xx1

 
 
Hardware required. Screwdriver not included

STEP 11:

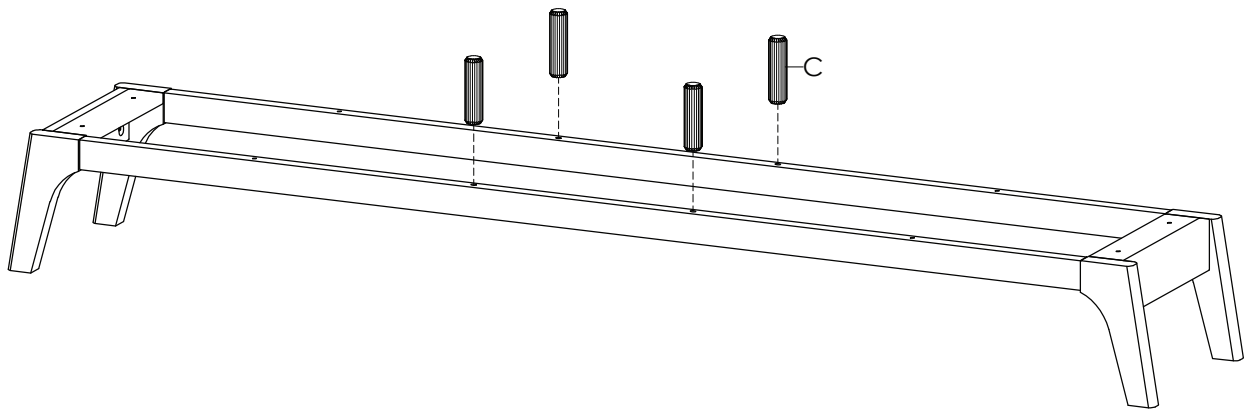

 
 
Dx4 Hardware required.

STEP 12:

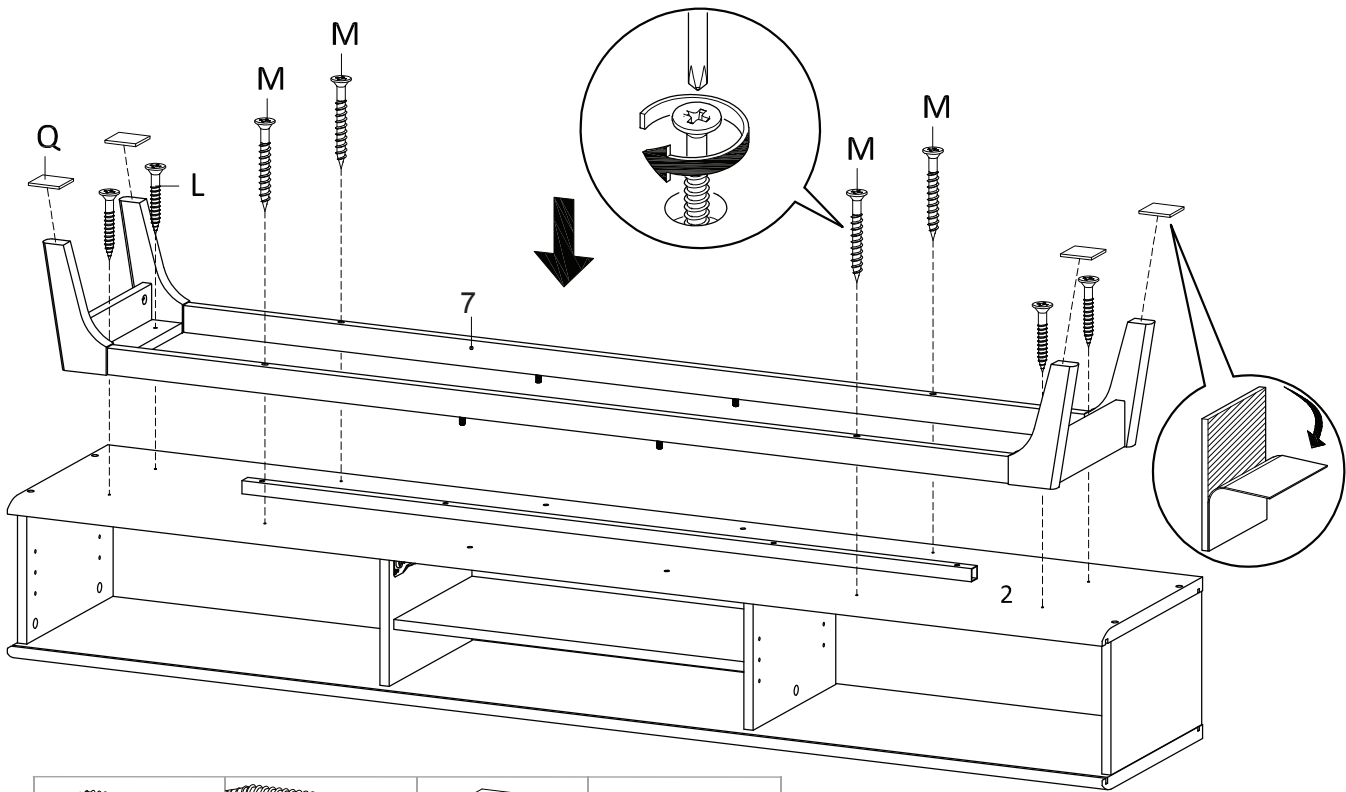

 
 
Hardware required.
Screwdriver not included

STEP 13:

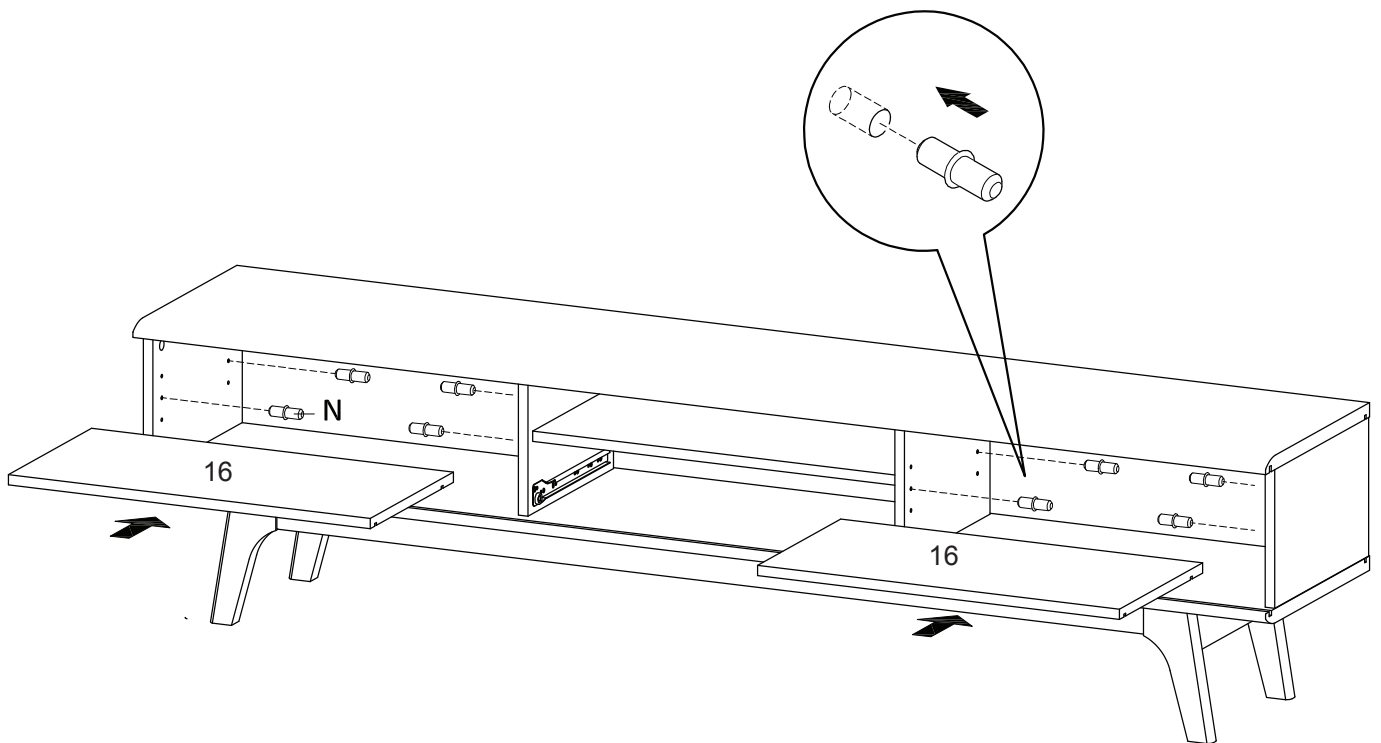

 
Hardware required.


 
 
STEP 14:

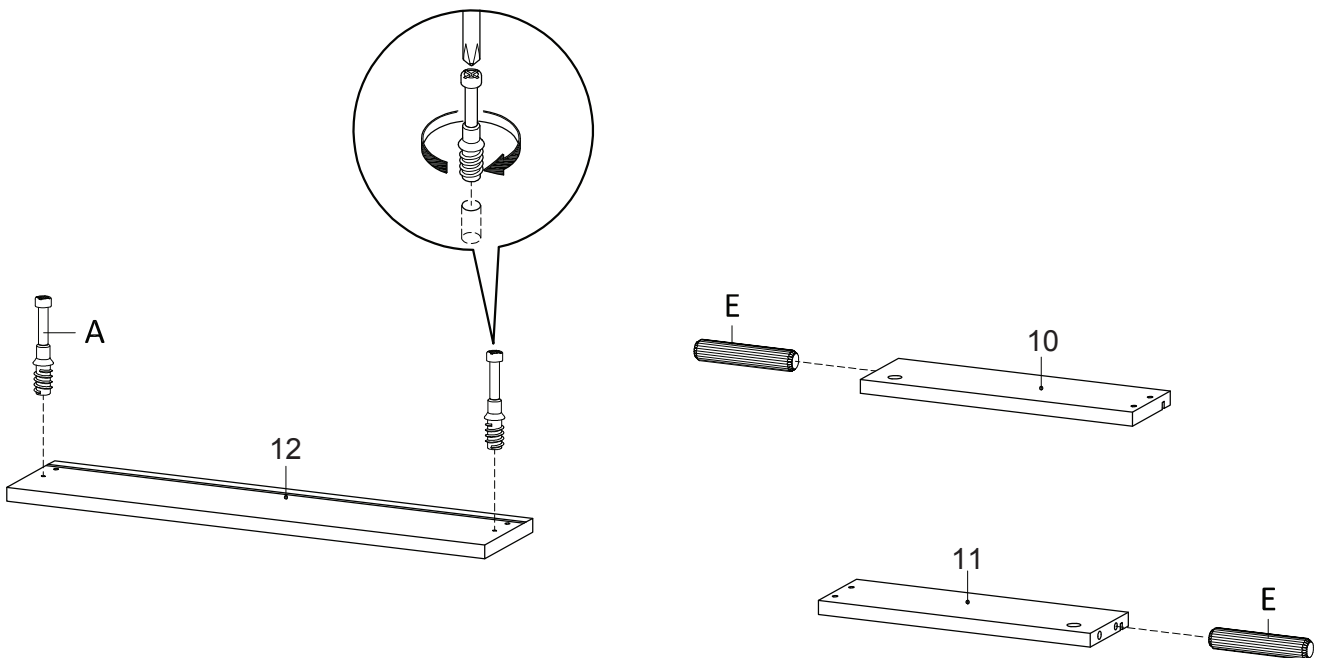

Hardware required. Screwdriver not included

 
STEP 15:

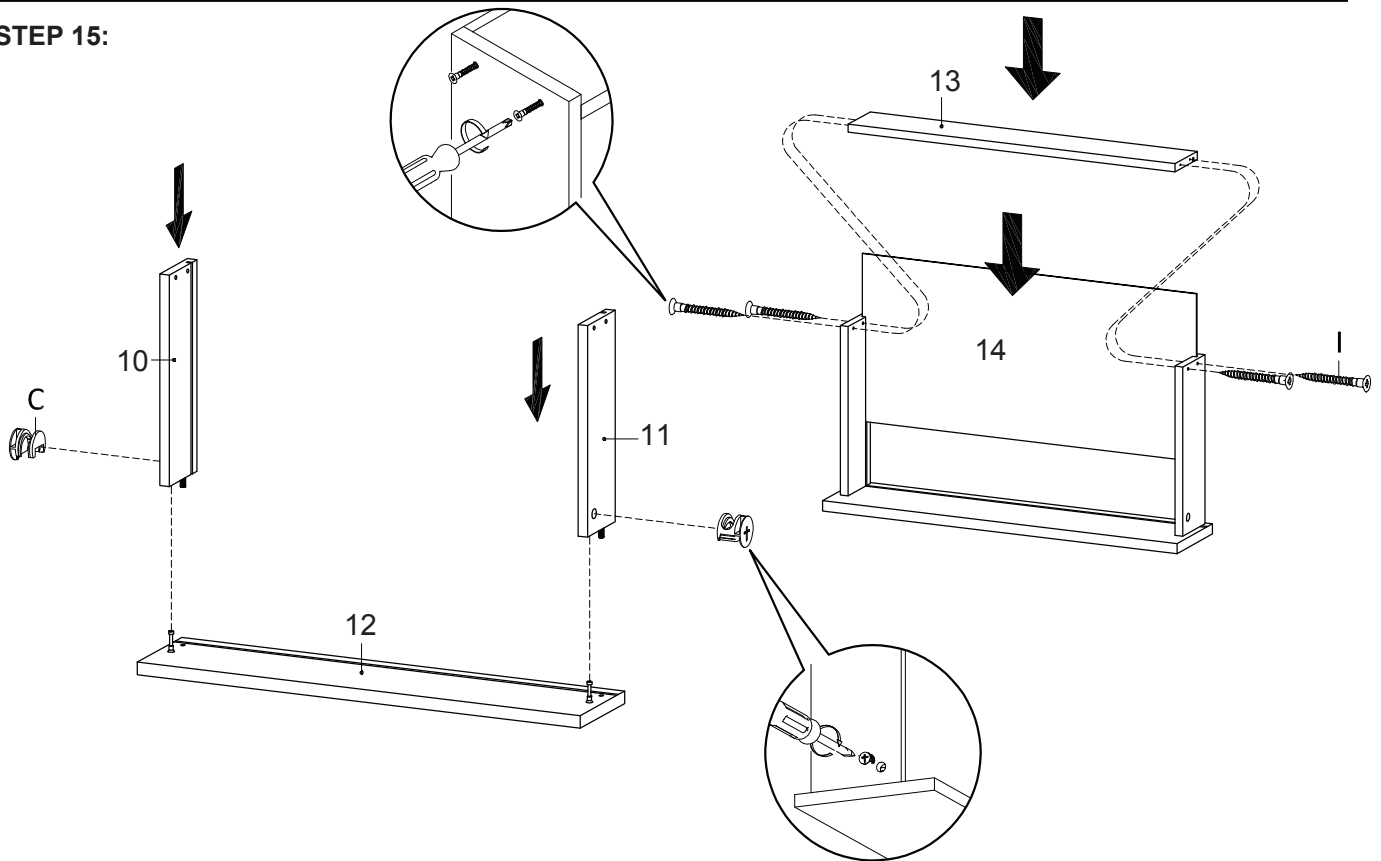

 


		
Cx2	Ix4	Yx1

Hardware required. Screwdriver not included

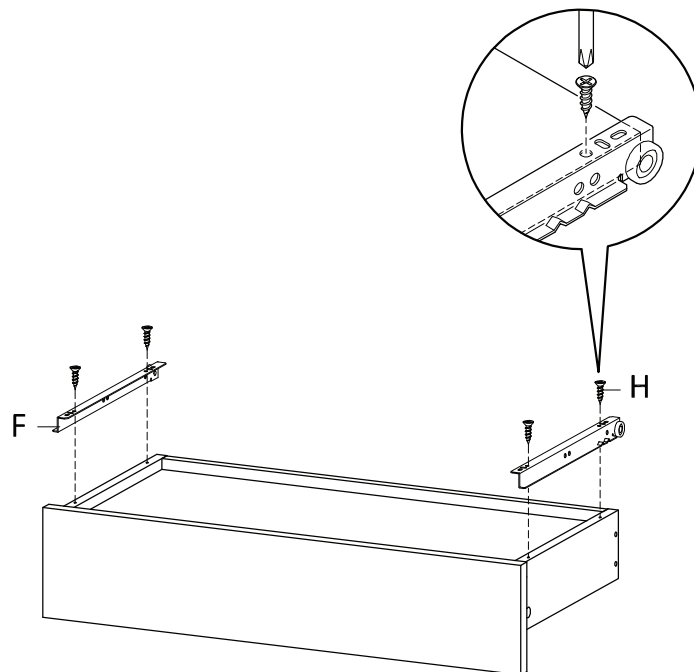 
STEP 16:



 
		
Fx1	Hx4	Xx1

 

 
Hardware required. Screwdriver not included

STEP 17:

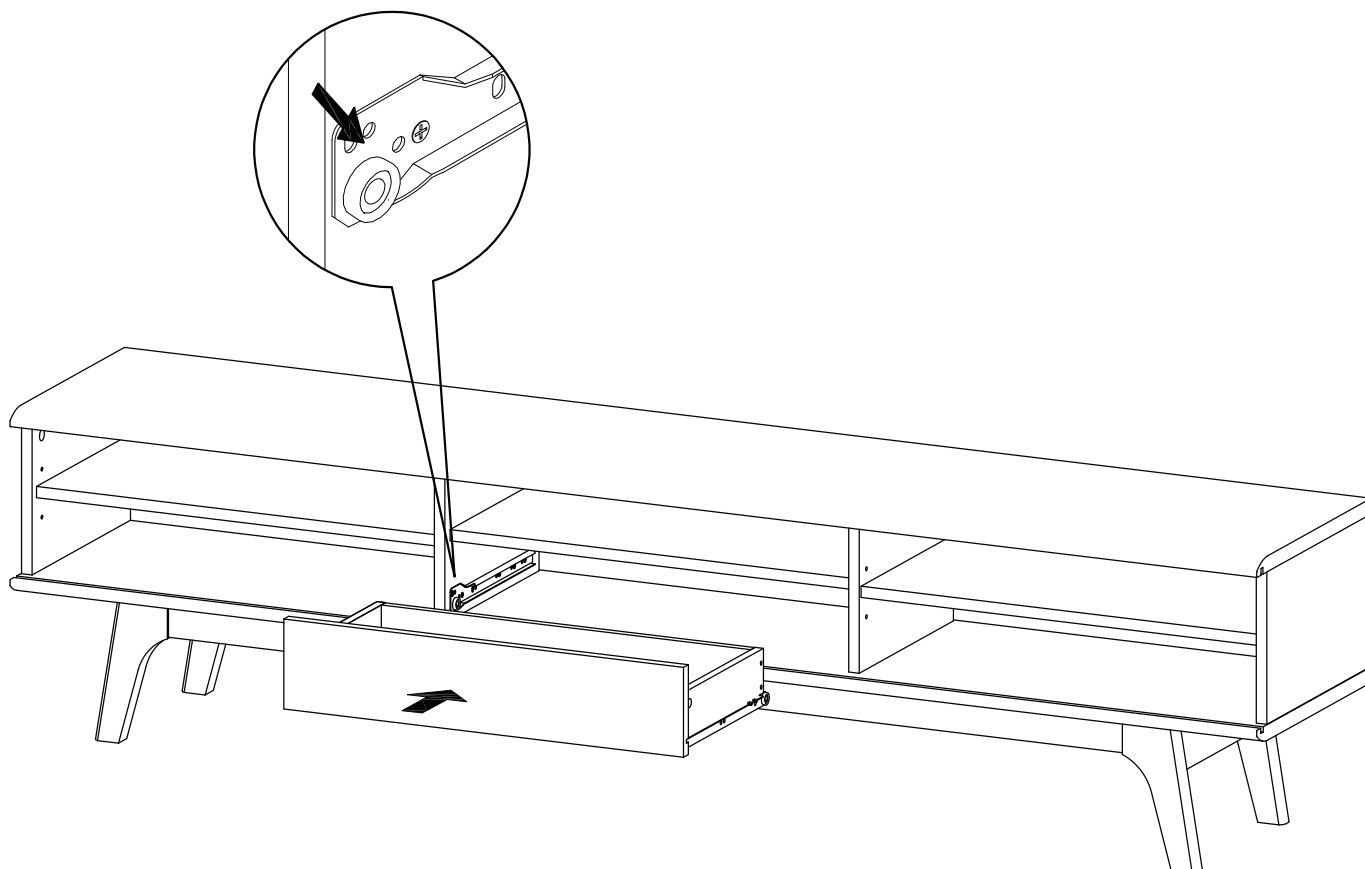 


STEP 18:

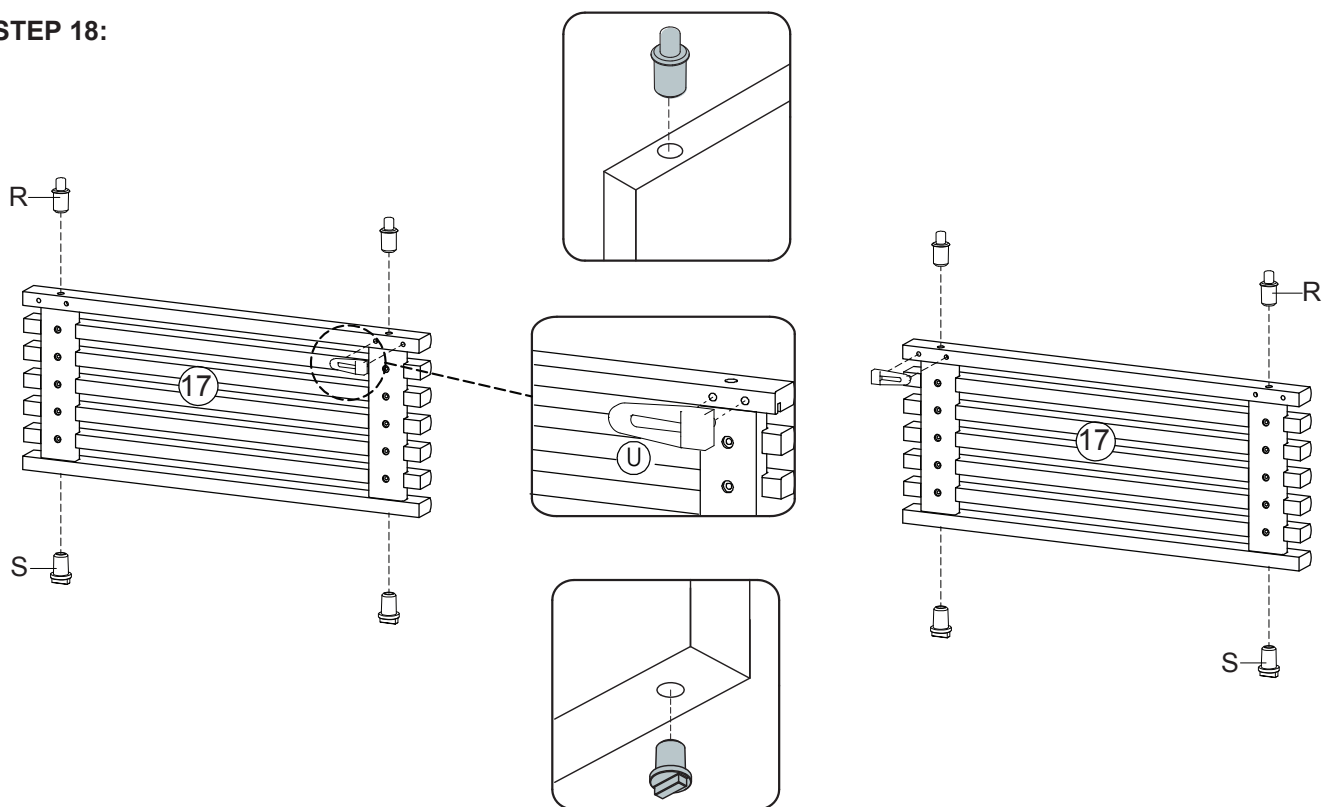

 
		
Rx4	Sx4	Ux2

Hardware required.



Page 12 of 13

STEP 21:

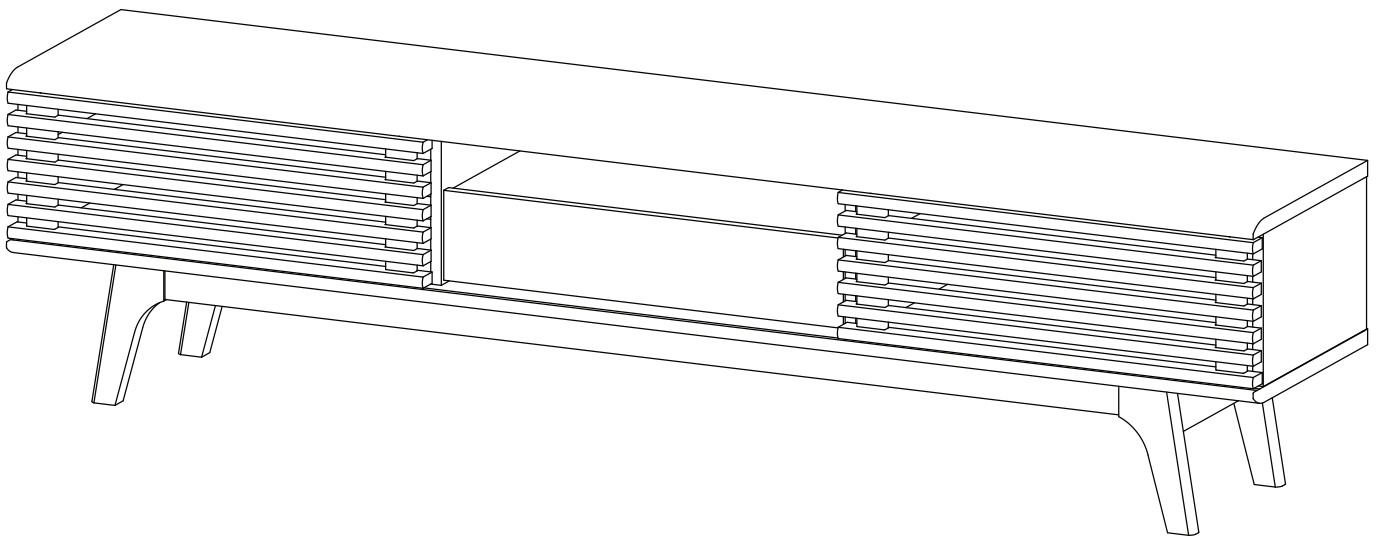

Assembly is complete. The TV Stand is ready to enjoy now !