

 
ASSEMBLY INSTRUCTION

SIDE LIFT OTTOMAN TV KING BED













Important

If for any reason you need to return this
Item, you must return it in its original packaging.
Assembled items cannot be returned.





- IMPORTANT NOTE *
- PLEASE CHECK ALL PARTS CAREFULLY BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE
 - * PLACE ALL PARTS ON A CLEAN AND FLAT SOFT SURFACE TO PREVENT SCRATCHES.
 - * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

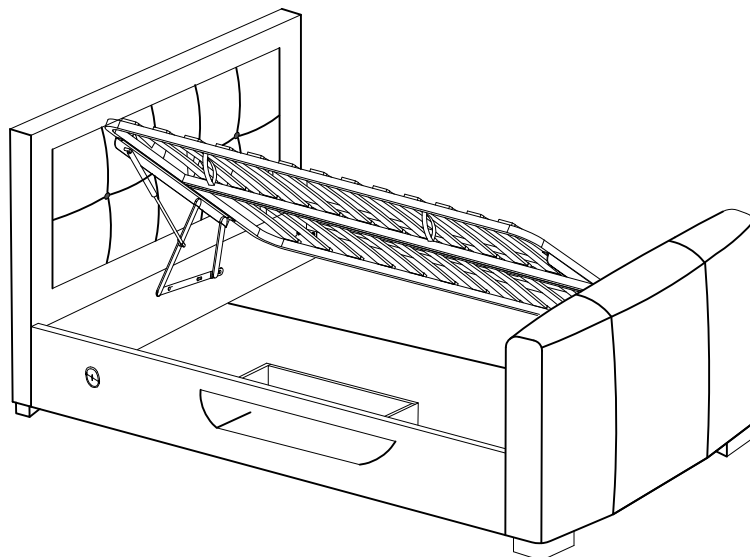

Parts

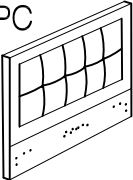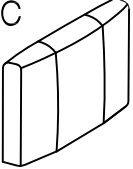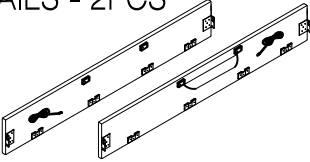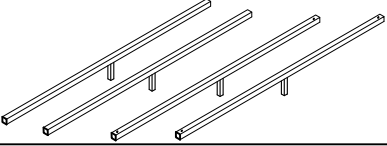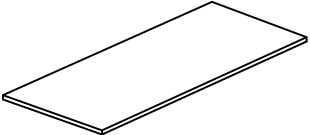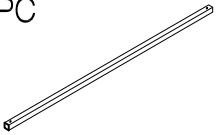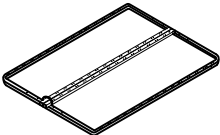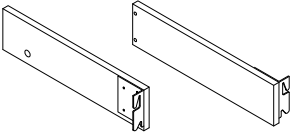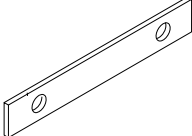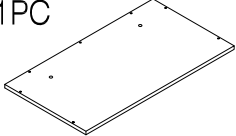            
① HEADBOARD - 1PC 	② FOOTBOARD - 1PC 	③ SIDE RAILS - 2PCS 
④ WOODEN SUPPORT - 4PCS 	⑤ GAS LIFT PARTS - 2PCS 	⑥ METAL CORNER - 4PCS 
⑦ BASE BOARD - 2PCS 	⑧ HORIZONTAL SUPPORT BAR - 1PC 	⑨ METAL FRAME BASE - 1PC 
⑩ HEADBOARD FEET - 2PCS 	⑪ FOOTBOARD FEET - 2PCS 	⑫ BRACKET - 2PCS 
⑬ SLATS - 26PCS 	⑭ SUPPORT LEG - 2PCS 	⑮ DRAWER SIDE PANEL - 2PCS 
⑯ BACK PANEL OF DRAWER - 1PC 	⑰ BOTTOM BOARD OF DRAWER - 1PC 	

    Fittings

Ⓐ 30x 30mm M8 bolt 	Ⓑ 8x 40mm M8 bolt 	Ⓒ 6x 45mm M8 bolt 	Ⓓ 2x 70mm M8 bolt 	Ⓔ 8x M8 Nut 
Ⓕ 44x Flat Washer M8X17mm 	Ⓖ 32x Spring Washer M8 	Ⓗ 12x 50mm M5 screw (Gold) 	Ⓙ 4x 45mm M4 screw 	⓫ 1x spanner 
Ⓚ 1x M5 allen key 	Ⓛ 11x Spring Washer M8 	Ⓜ 11x 50mm M5 screw (Silver) 	Ⓝ 4x Flat Washer M6X16mm 	Ⓞ 4x 15mm M4 bolt 
Ⓟ 1x M4 allen key 	Ⓠ 52x Single cap 	Ⓡ 2x 		

Step 1

 Ⓜ
12x
50mm M5 screw (Gold)

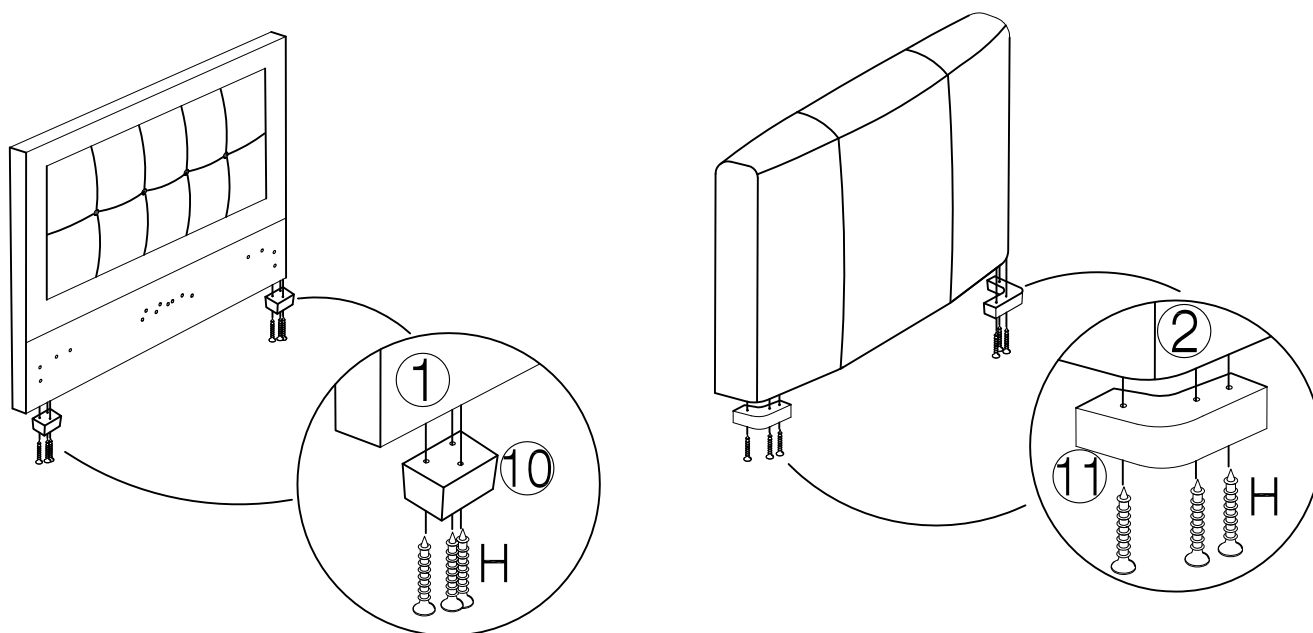



Step 2

ⓑ
8x
40mm M8 bolt

ⓕ
8x
Flat Washer M8X17mm



ⓖ
8x
Spring Washer M8

  Ⓚ
1x
M5 allen key

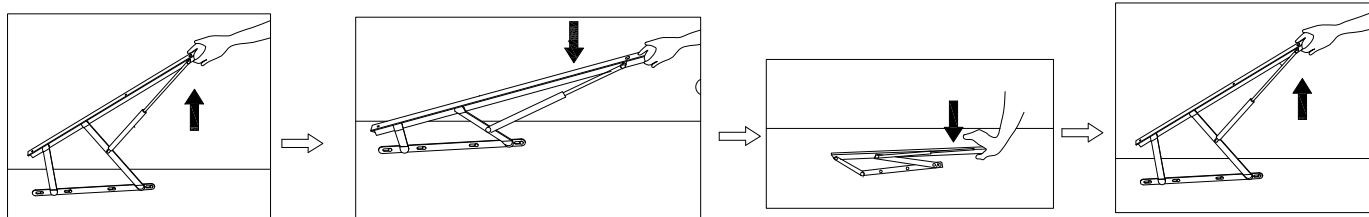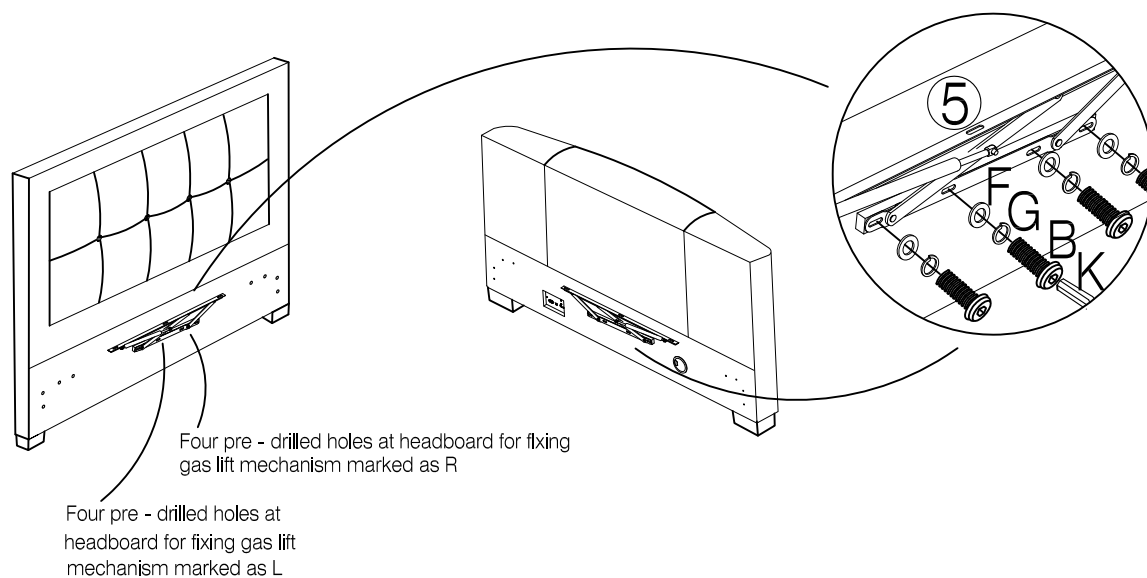



Step 3

(A)  8x 30mm M8 bolt	(F)  8x Flat Washer M8X17mm	(G)  8x Spring Washer M8	(K)  1x M5 allen key	
---	--	---	---	--

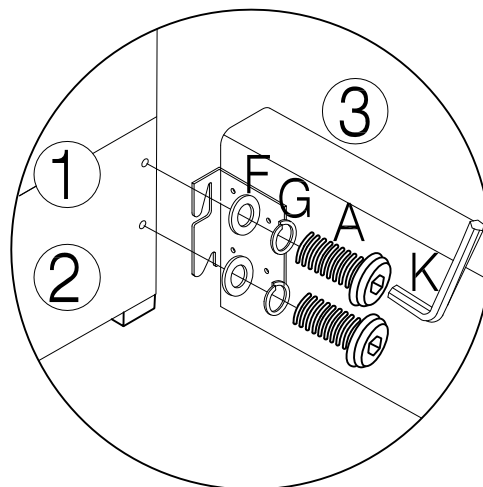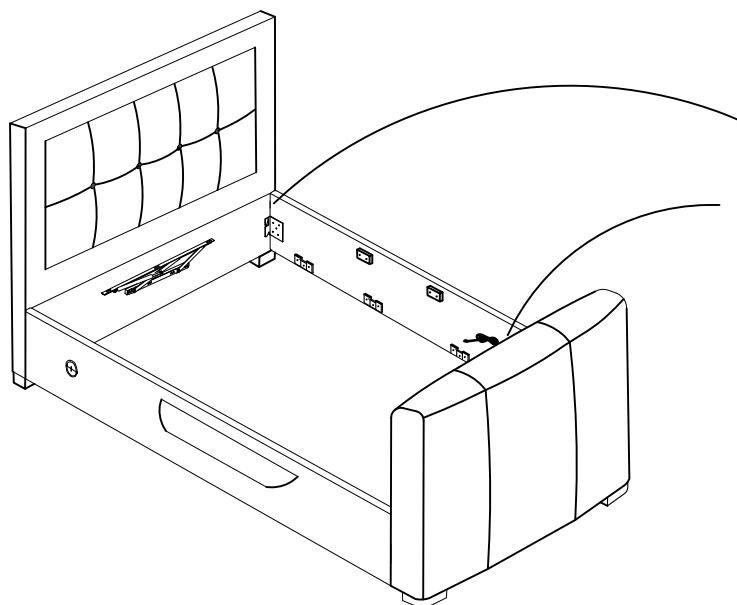  


Step 4

(A)  16x 30mm M8 bolt	(F)  16x Flat Washer M8X17mm	(G)  16x Spring Washer M8	(K)  1x M5 allen key	
--	---	--	---	--

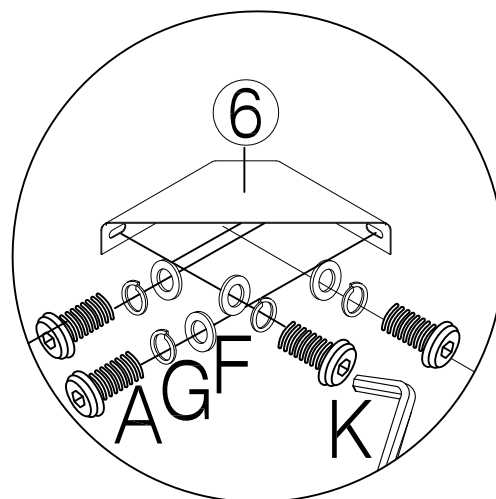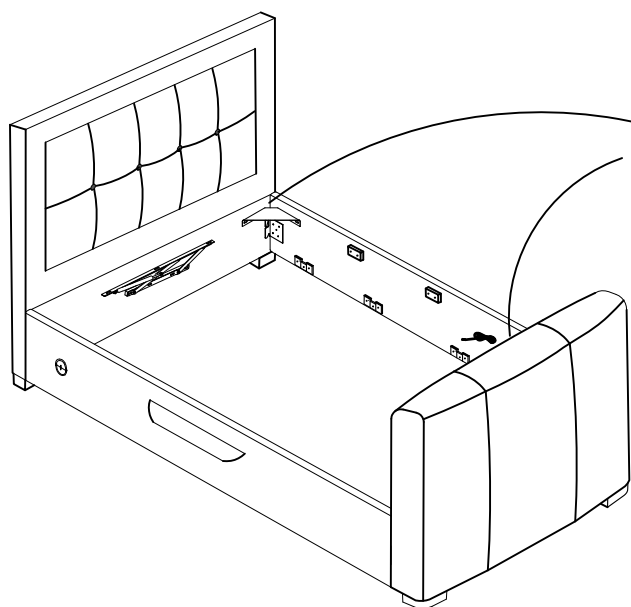  


Step 5

 ①
4x
45mm M4 screw

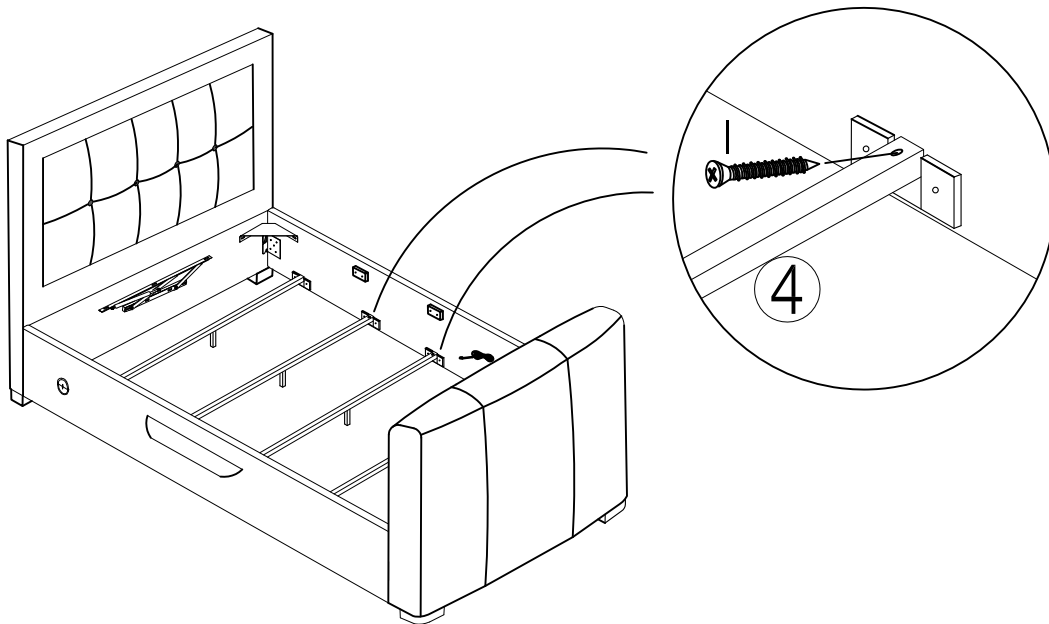


 Step 6

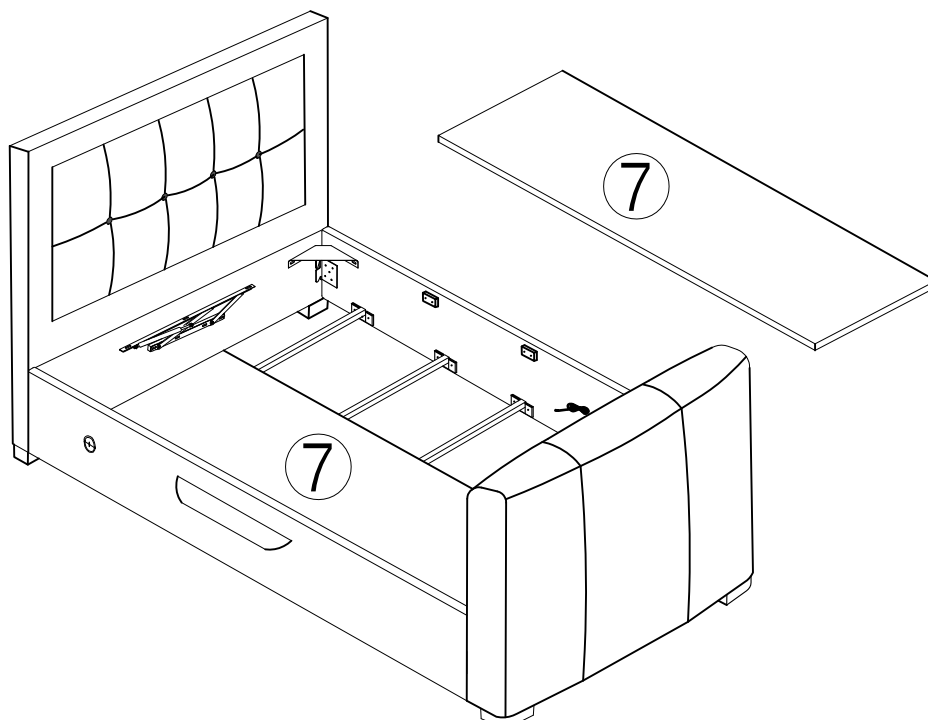


Step 7

M 4x 50mm M5 screw (Silver)	L 4x Spring Washer M8			
---	---	--	--	--

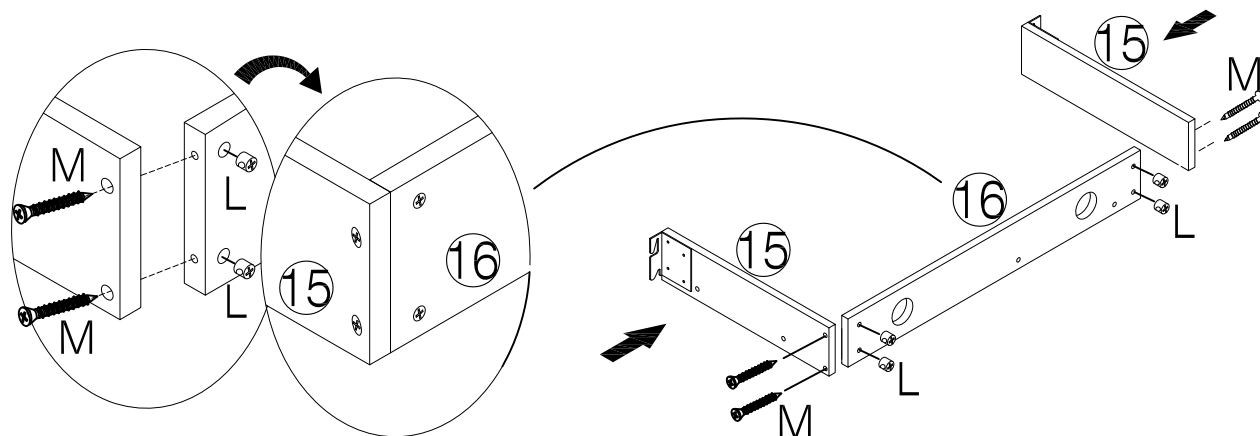 



Step 8

M 7x 50mm M5 screw (Silver)	L 7x Spring Washer M8			
---	---	--	--	--

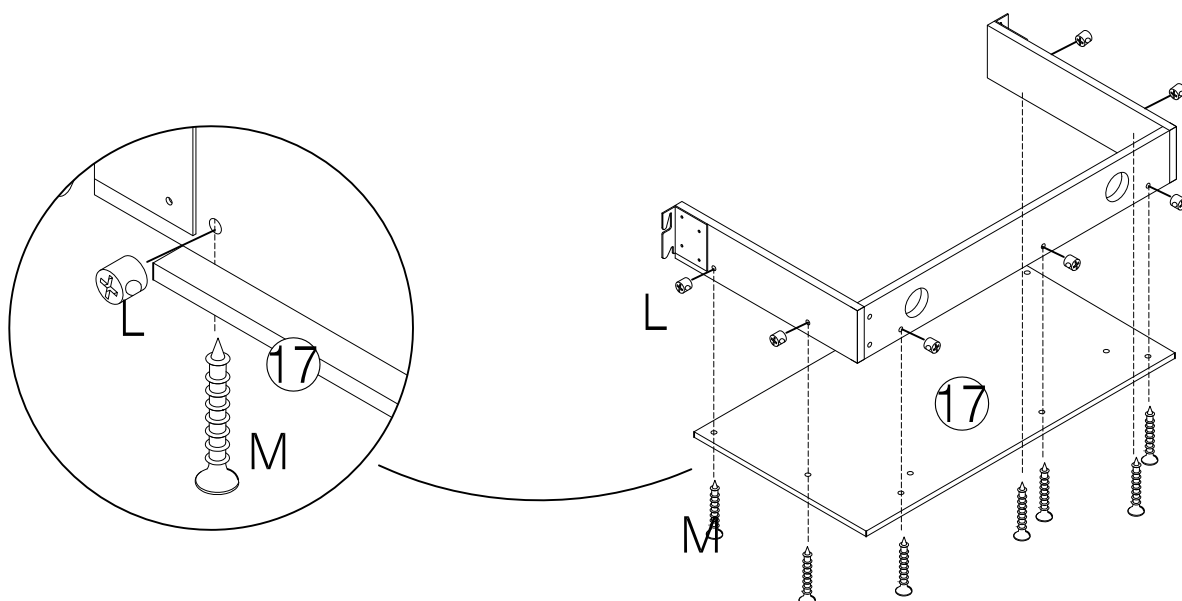 

 
Step 9

(A) 2x 30mm M8 bolt 	(R) 2x 	(K) 1x M5 allen key 		
--	---	---	--	--

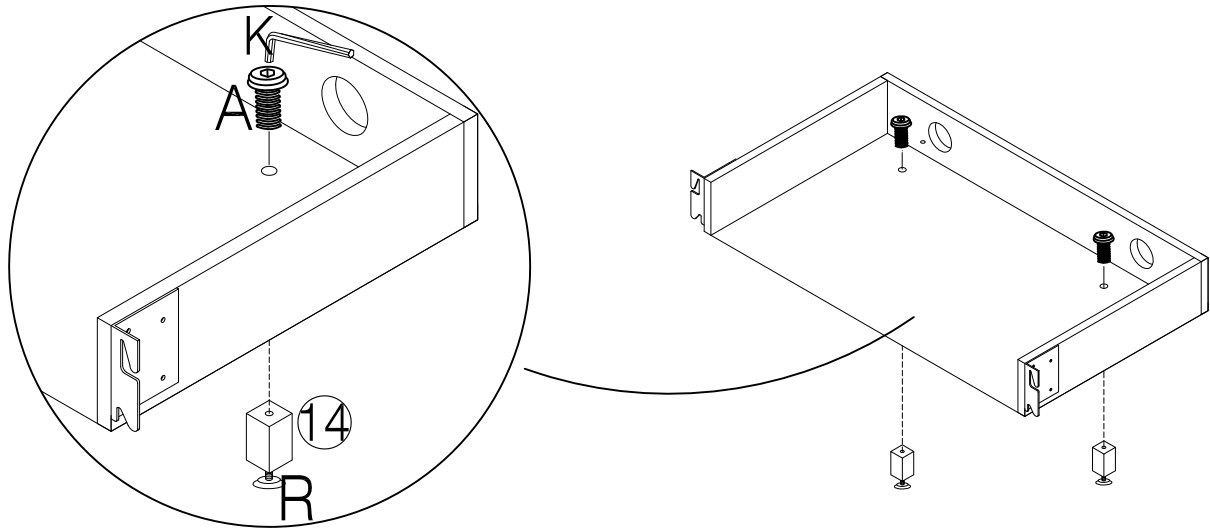 


Step 10

(A) 4x 30mm M8 bolt 	(F) 4x Flat Washer M8X17mm 	(K) 1x M5 allen key 		
--	---	---	--	--

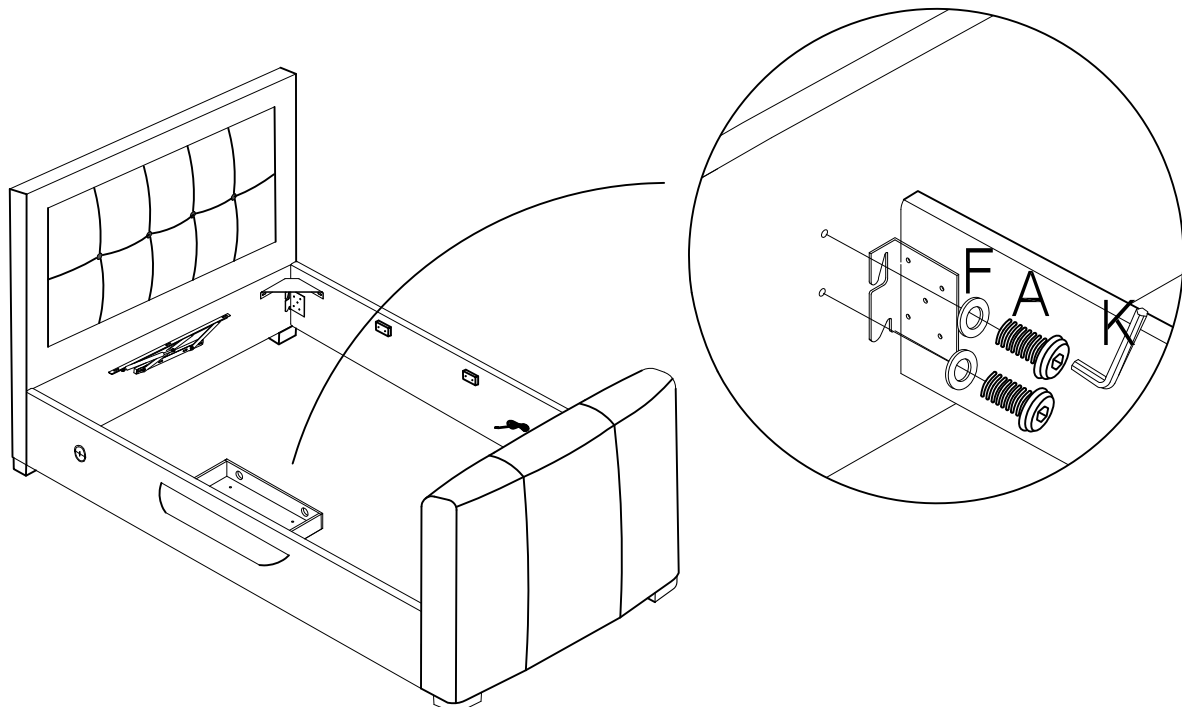 

 
Step 11

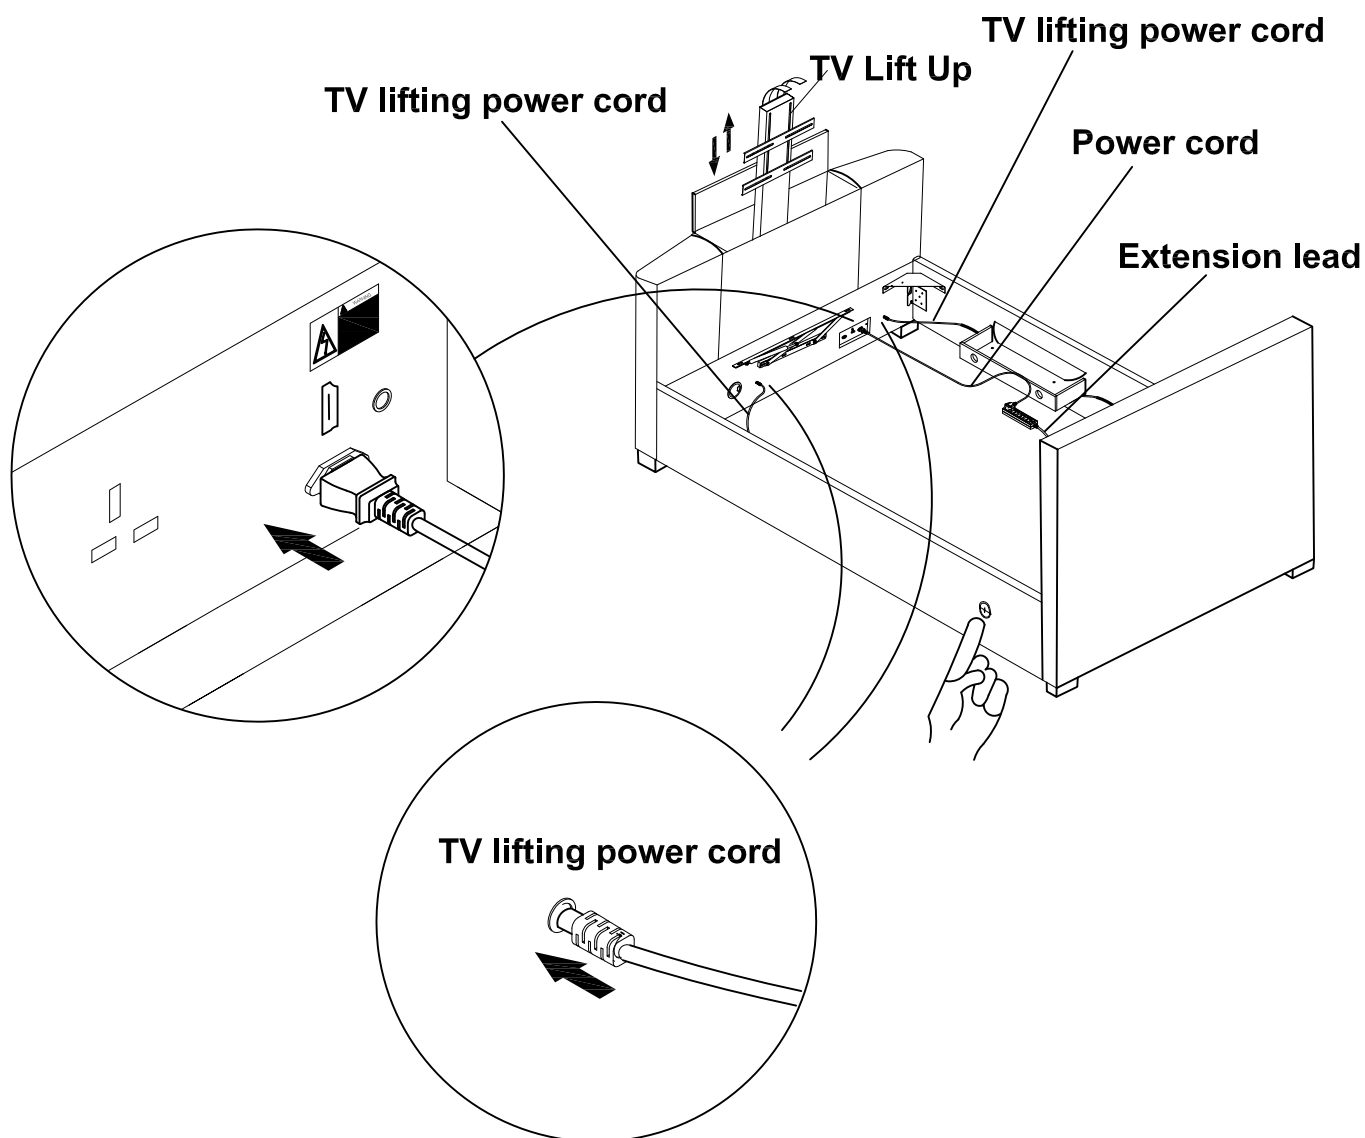

Plug the TV power cable into the socket at the bottom of footboard then connect your own media cables as required.

Connect the cables to the television & media equipment making sure the cables are not loose. If necessary use cable ties & cable clips to route cable safely.

 
When TV is fitted, it is easier to push due to balance of the weight.
When down, power for TV turns off automatically.
When TV is raised, power turns back on automatically


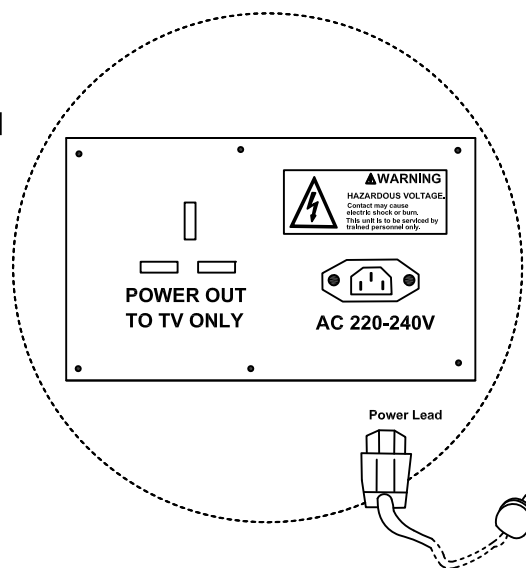


Step 12

 4x Flat Washer M6X16mm	 4x 15mm M4 bolt	 1x M4 allen key		
--	---	---	--	--

   
Attach TV using the appropriate screws and adjust the sliding vertical arm to sit neatly on top of the TV.


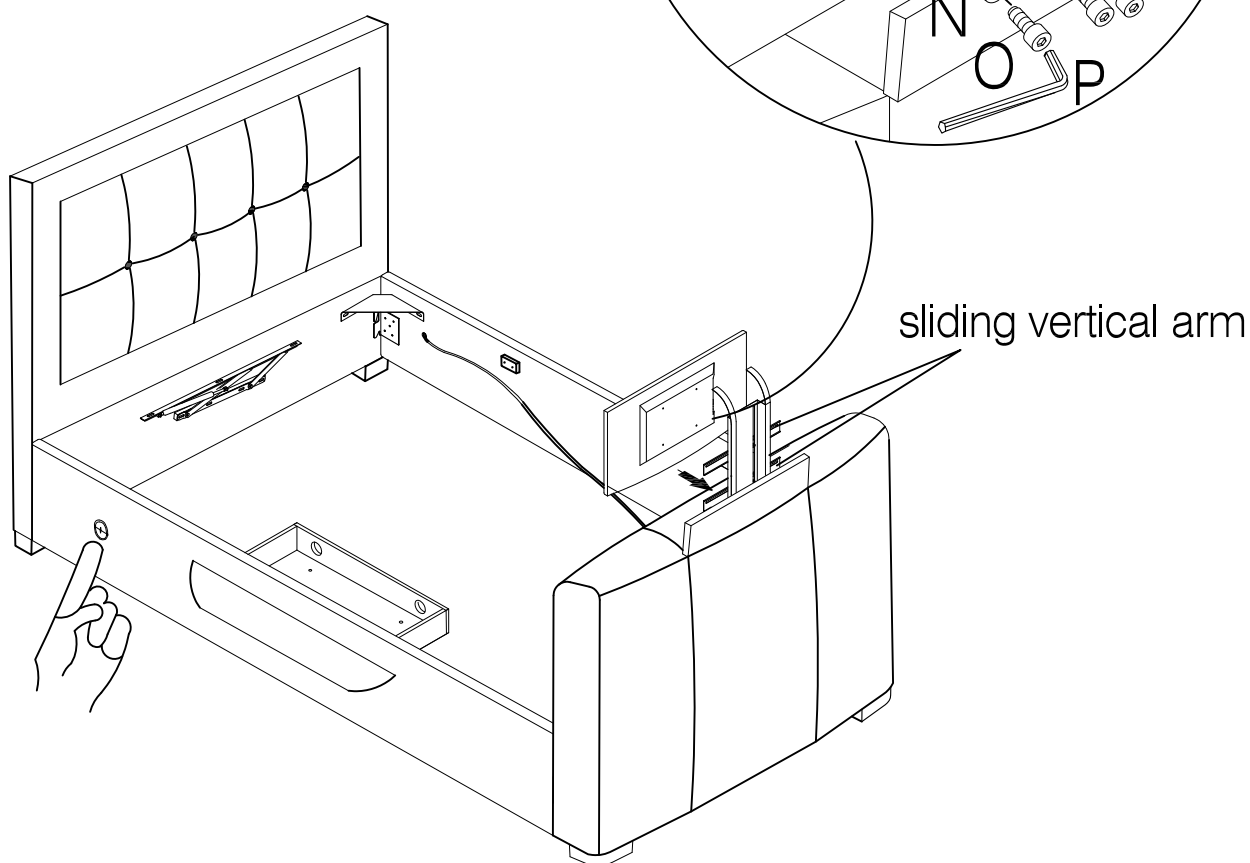


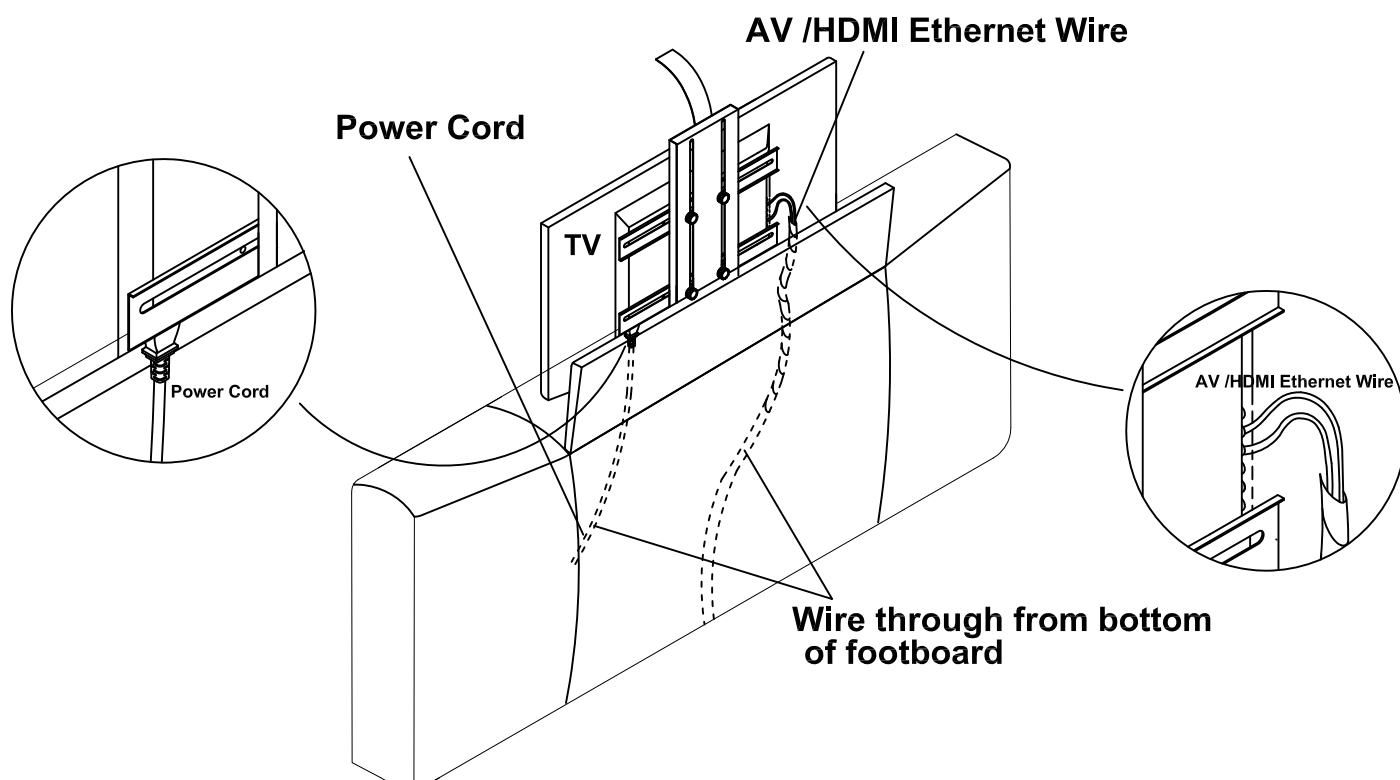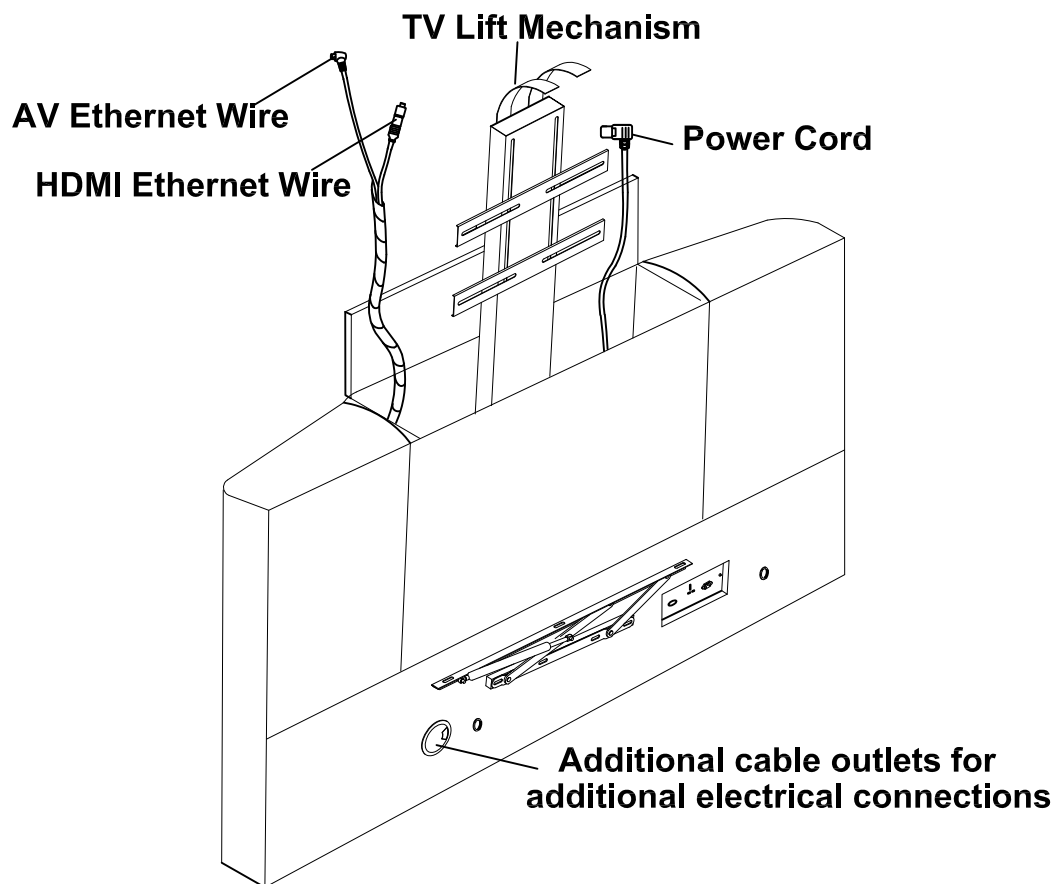


Place the wire cable through the Cable Management Caps to prevent any damage to the wire cable (eg. other power cord) when TV Lift Mechanism is operating.
Make sure the wire cables are long enough to let the TV Lift Mechanism move freely.


 
Step 13

 6x 45mm M8 bolt	 6x Flat Washer M8X17mm	 6x M8 Nut	 1x M5 allen key	 1x spanner
---	--	---	---	--

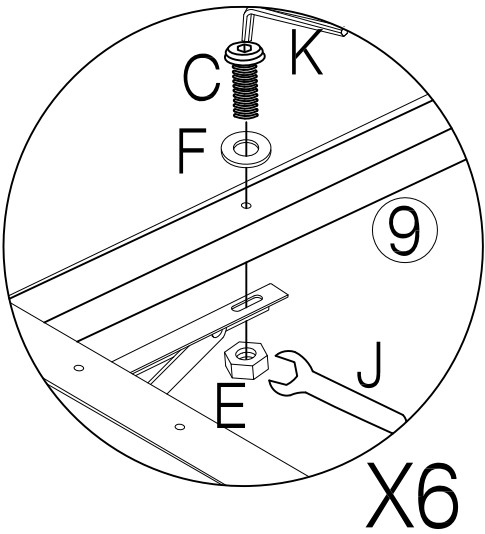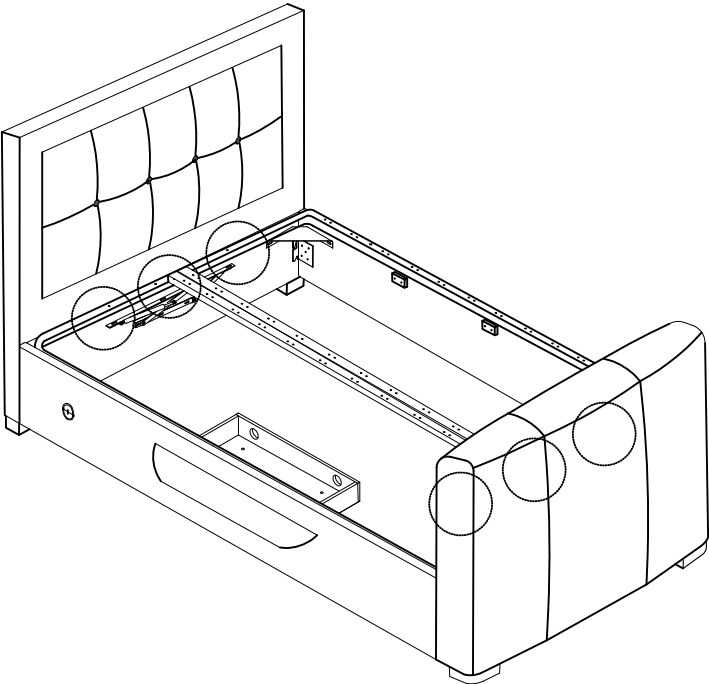  

 
Step 14

 2x 70mm M8 bolt	 2x Flat Washer M8X17mm	 2x M8 Nut	 1x M5 allen key	 1x spanner
---	--	---	---	--

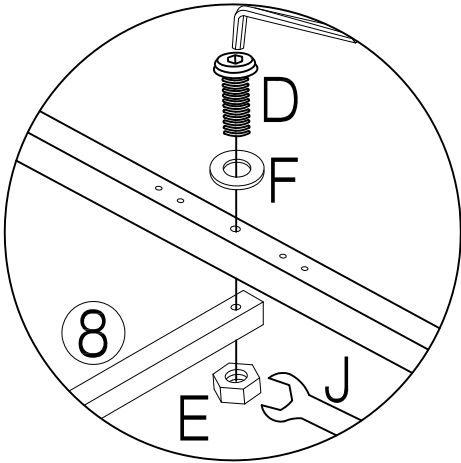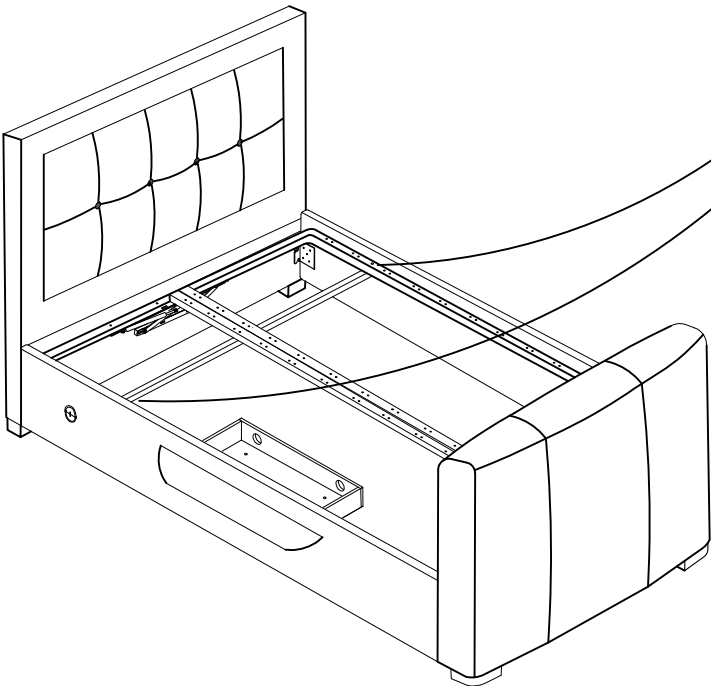  

Step 15

 Q
52x
Single cap

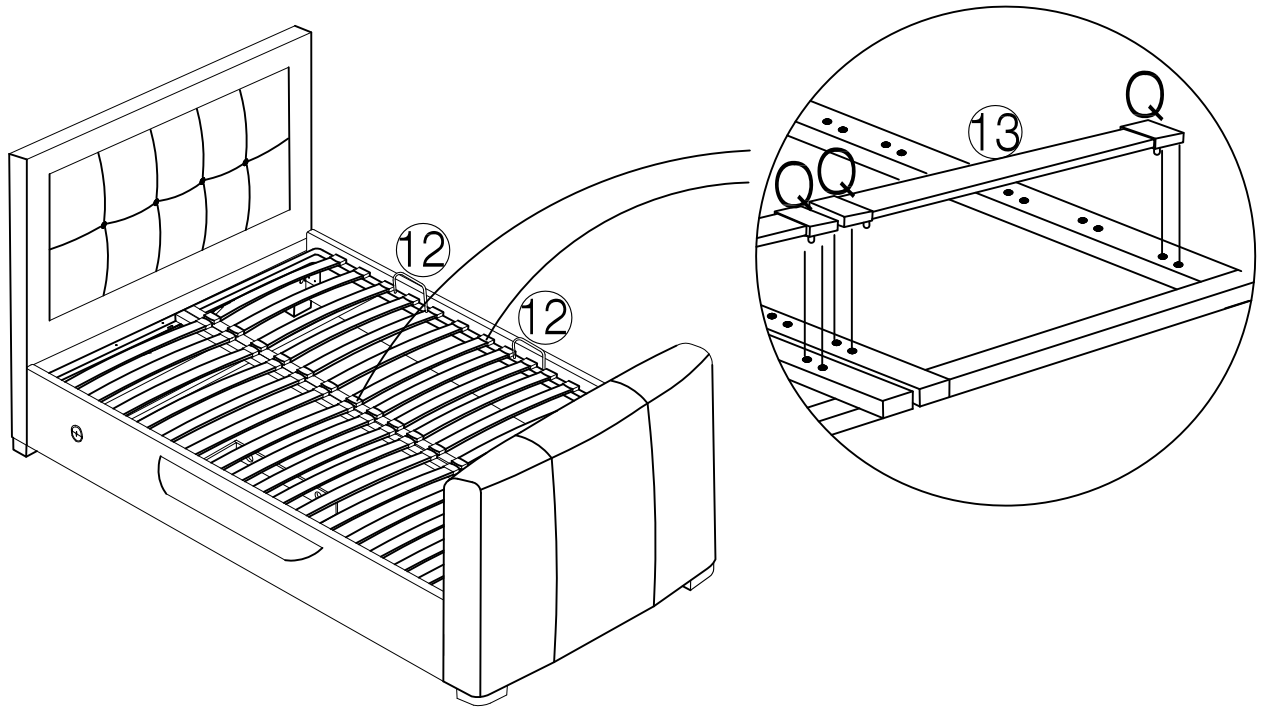

Step 16

J
1x
spanner

