

# INSTRUCTIONS MANUAL



## Patio Wicker Swivel Rocking Chair

---

**Loosely assemble before tightening.**

IF YOU PURCHASED THE SWIVEL ROCKING CHAIRS ONLINE AND  
HAVE ANY QUESTIONS OR CONCERNS  
PLEASE CONTACT US VIA EMAIL, TEXT, OR PHONE

---

EMAIL: [service2outdoor@gmail.com](mailto:service2outdoor@gmail.com)  
TEXT: +1 628-263-4608 (TEXT ONLY)  
PHONE: +1 877-561-6450

Date of Manufacture: 25W10

# Warning:

## 1. Very important!


After receiving the product, please check if all parts are intact.

Do not open the vacuum-sealed packaging of the mat immediately.

Only proceed with opening the packaging if you are satisfied with the product.

2. When unpacking the box, please use tools carefully to avoid scratching the mat.

**Note: Since the mat is vacuum-packed, if you are not satisfied with the product after opening, it may affect the after-sales process.**

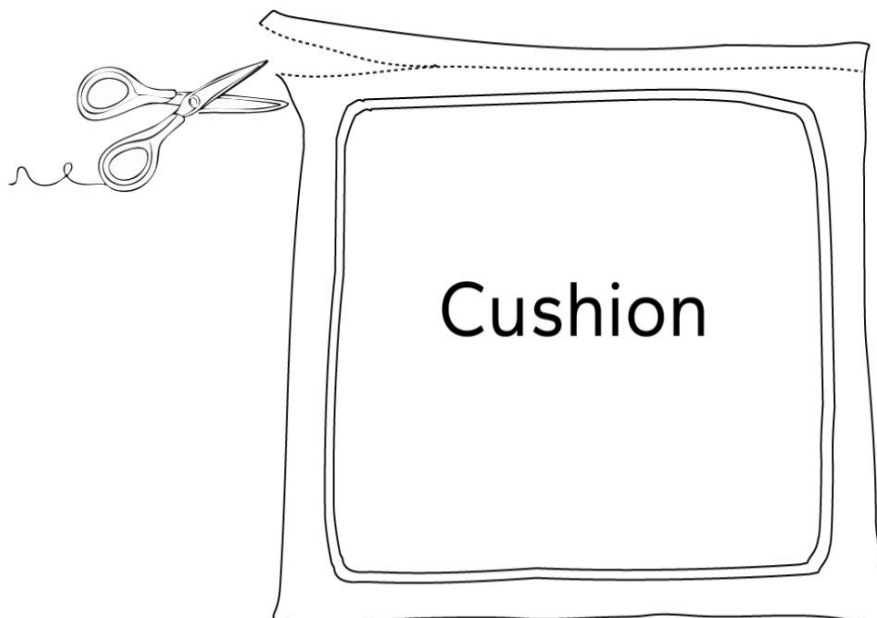

## Warning and Cautions:

Thank you for choosing our furniture. Please read and understand this entire manual before attempting to assemble or install the product.

### GENERAL BEST PRACTICES FOR ASSEMBLY

1. Familiarize yourself with the product and check all parts against the packing list. If any Parts are missing or damaged, do not install. Contact us immediately.
2. Some parts may contain sharp edges. Wear protective gloves, if necessary, during assembly.
3. Check all nuts and bolts periodically for tightness and, when required, tighten them again.
4. Pay attention to the parts orientation.
5. Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.

### IMPORTANT

- Make sure to place the washer on the bolt before inserting it into the bolt hole.
- To ensure the best fit, assemble loosely before tightening.
- Tighten all bolts after all parts are assembled.

### WARNINGS

 **Keep children and pets away from the working area during assembly and adjustments.**

1. Keep the assembly area at least 6 feet from any obstruction, such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.
2. When assembling and using this product, always follow basic safety precautions to reduce the risk of personal injury and product damage. Please read all instructions before assembly and use.
3. Check all bolts for tightness before use. **IMPORTANT** - check and tighten bolts often to keep them secure!
4. The chair is not to be used for standing purposes and will not function as a stool or step-ladder. Use on even surfaces only.
5. The chair supports a weight of 300lb (136.4 kg). Improper use of this product or failure to use it as directed may result in injury. Not intended for commercial use.

## WARRANTY





### •WHAT IS COVERED?





- The limited warranty is extended to the original purchaser and covers material and manufacturing defect, provided the item is properly maintained and used for personal residential purposes only.
- Warranty: 180 DAYS.
- Lost Accessories or Parts Policy: Costs for lost accessories or parts will be charged after 90 days from the date of purchase.




 
## MAINTENANCE




- STAIN RESISTANT CUSHIONS CARE:** Keep cushions in storage on rainy days.
- SPILLS:** Immediately wipe up spills using a white damp cloth. Repeat if necessary until the stain is gone. Allow cushions to air dry.
- **FABRIC CARE:** Hand wash with cold water, non-chlorine bleach when needed, and lay flat to dry. Cool iron if necessary. Do not dry clean.
- **RESIN WICKER PRODUCT CARE:**
  1. General Cleaning: Before use, clean the product with a soft, dry towel. When not in use, wipe off any dirt or loose debris. For regular cleaning, use a mild soap and water solution, rinse thoroughly, and dry completely.
  2. Weather Protection: To prolong the life of your resin wicker, avoid prolonged exposure to intense sunlight or heavy rain. Whenever possible, use a protective cover when the furniture is not in use, especially during extreme weather conditions.
  3. Avoid Harsh Cleaners: Do not use strong detergents or abrasive cleaners, as these may damage the finish.
- Regular Maintenance:** Over time, nuts and bolts may loosen. Occasionally check and re-tighten them on all products as needed.

## Assembly Instructions for 1PC Swivel Rocking Chair


<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>
			
2PCS Arm	1PC Chair Back	1PC Seat Panel	1PC Right Side Panel

<b>E</b>	<b>F</b>	<b>G</b>	<b>H</b>
			
1PC Left Side Panel	1PC Swivel Base	1PC U-Shaped Fitting	1PC Seat Cushion

<b>I</b>	<b>J</b>	<b>K</b>	<b>L</b>
			
1PC Back Cushion	2PCS Bolt <b>M6*40mm</b>	20PCS Bolt <b>M6*35mm</b>	4PCS Bolt <b>9.5*30*M6</b>


<b>M</b>	<b>N</b>	<b>O</b>	
			
26PCS Washer	8PCS Spring Washer	4PCS Nut	

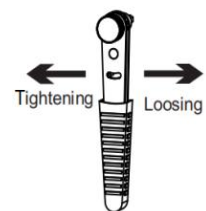

### Tools:




**Ratchet Wrench**

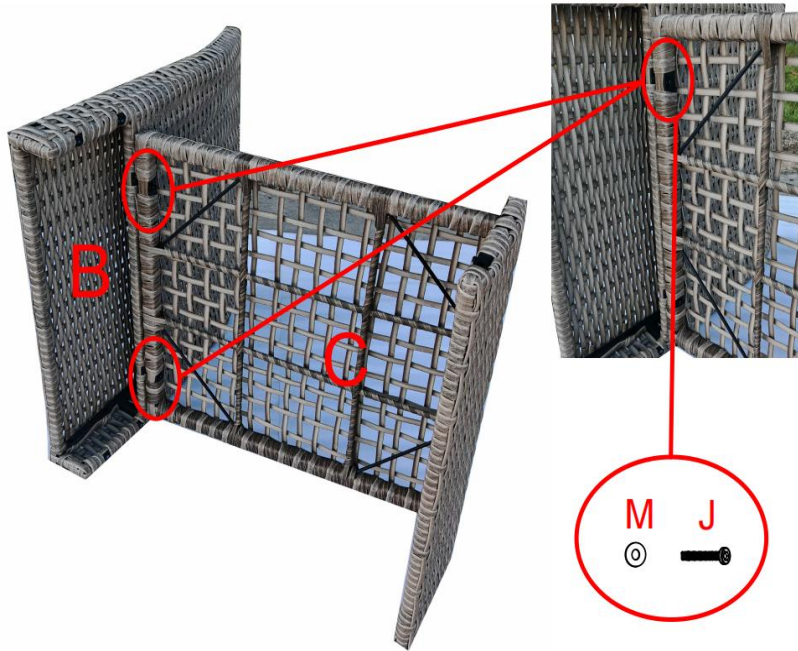

1. Secure seat panel (C) to chair back (B) with 2 bolts (J) and 2 washers (M) by using allen wrench. **Keep the bolts loose.**




J		M6*40mm	2
M		Ø16*Ø6.5*1mm	2

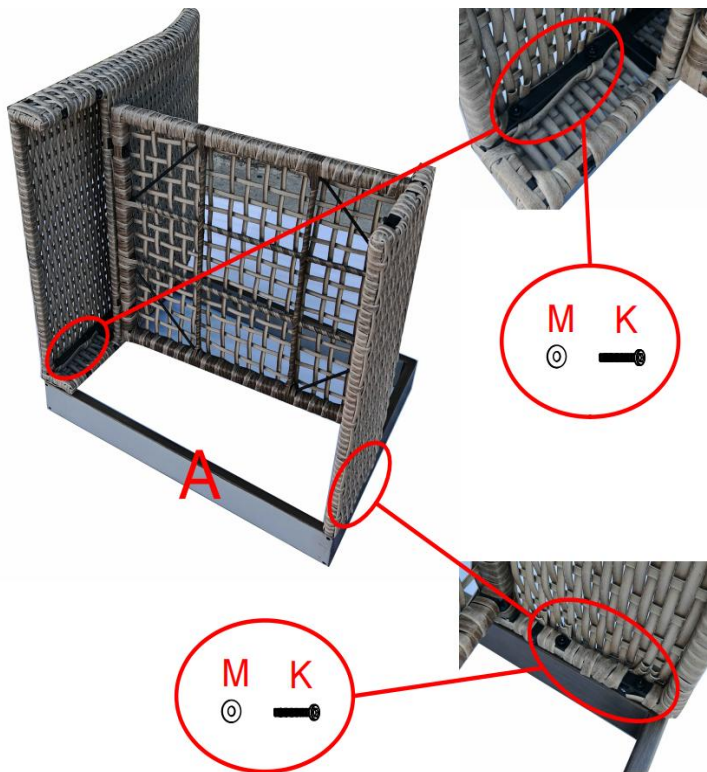2. Secure assembled chair arms (A) to seat panel (C) and chair back (B) with 4 bolts (K) and 4 washers (M) by using allen wrench. **Keep the bolts loose.**




K		M6*35mm	4
M		Ø16*Ø6.5*1mm	4


3. Secure assembled another chair arms (A) to seat panel (C) and chair back (B) with 4 bolts (K) and 4 washers (M) by using allen wrench. **Keep the bolts loose.**

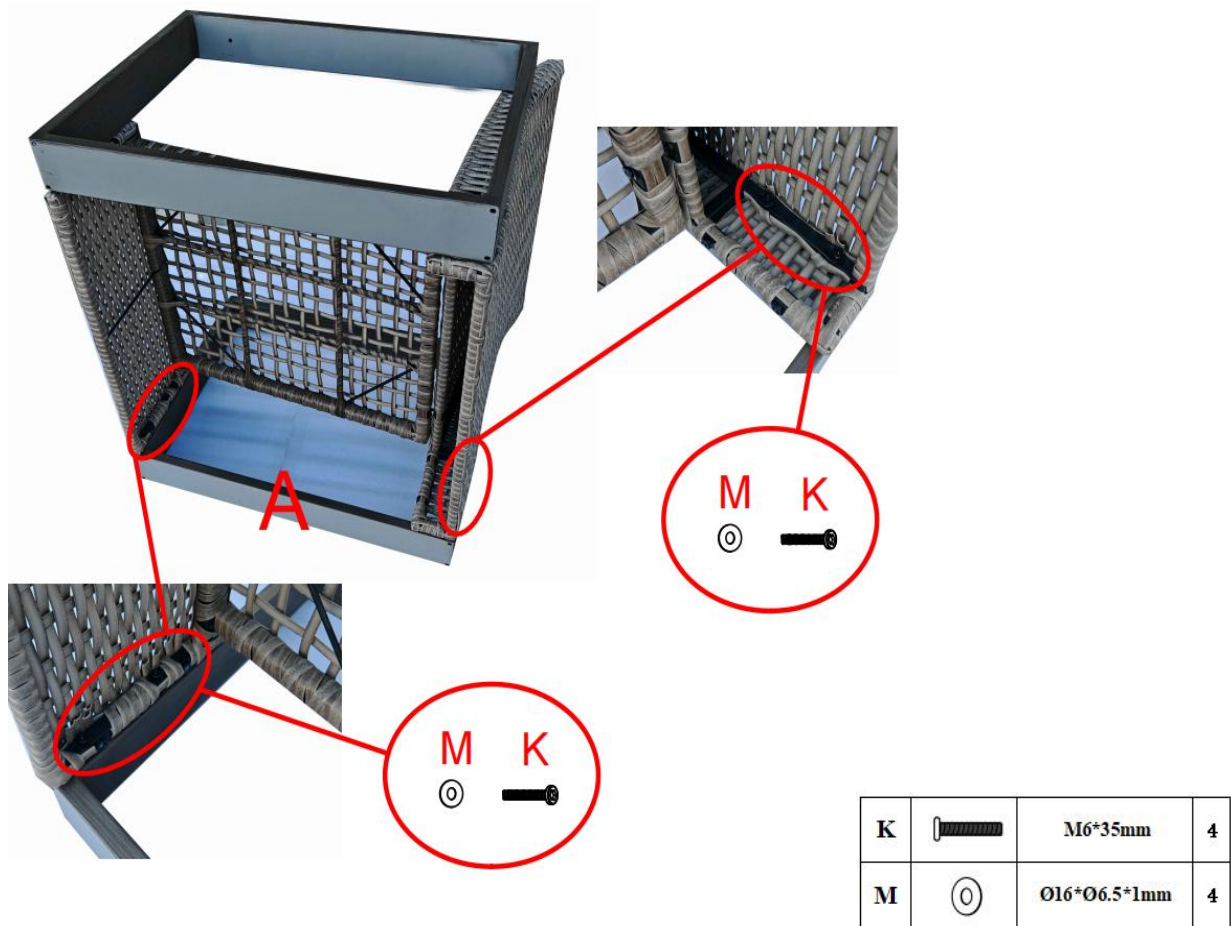


4. Secure assembled side panel (D) to seat panel (C) and chair back (B) with 4 bolts (K) and 4 washers (M) by using allen wrench. **Keep the bolts loose.**

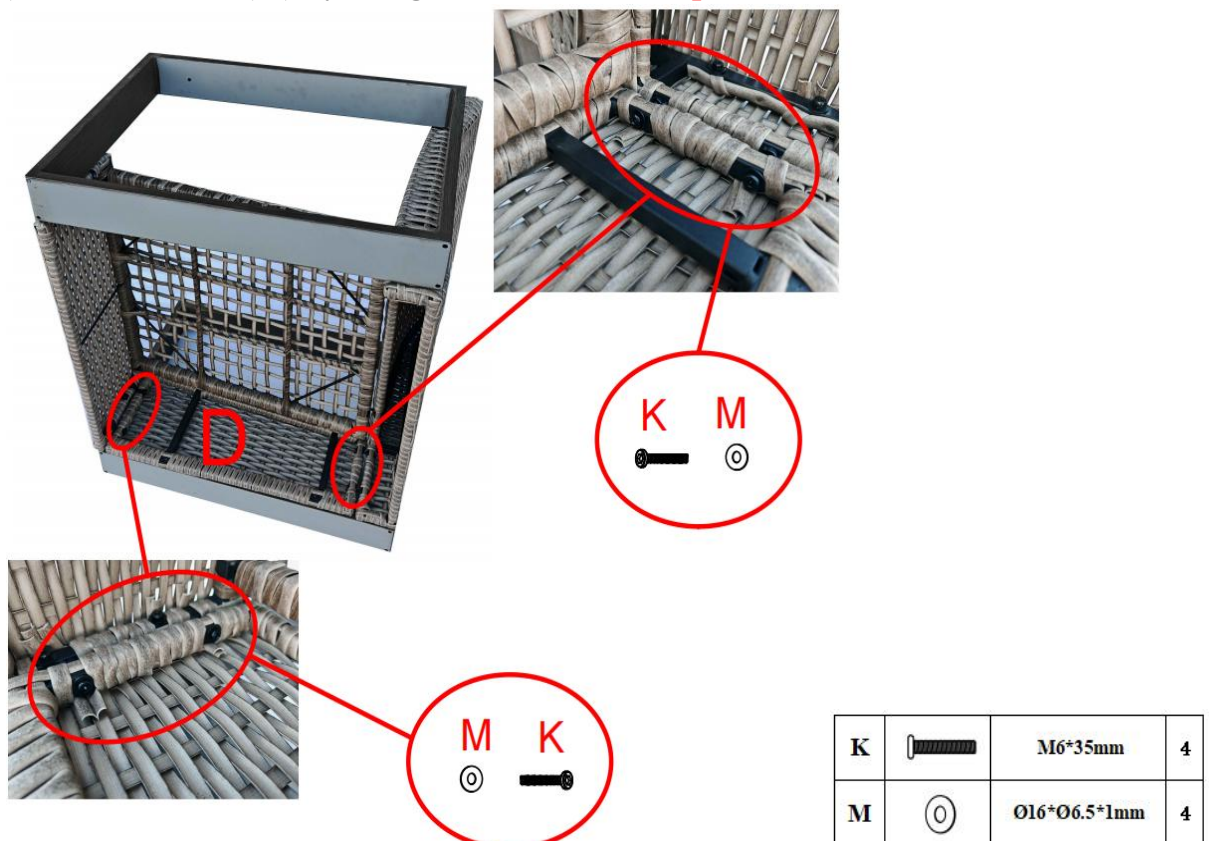



5. Secure assembled another side panel (E) to seat panel (C) and chair back (B) with 4 bolts (K) and 4 washers (M) by using allen wrench. **Keep the bolts loose.**

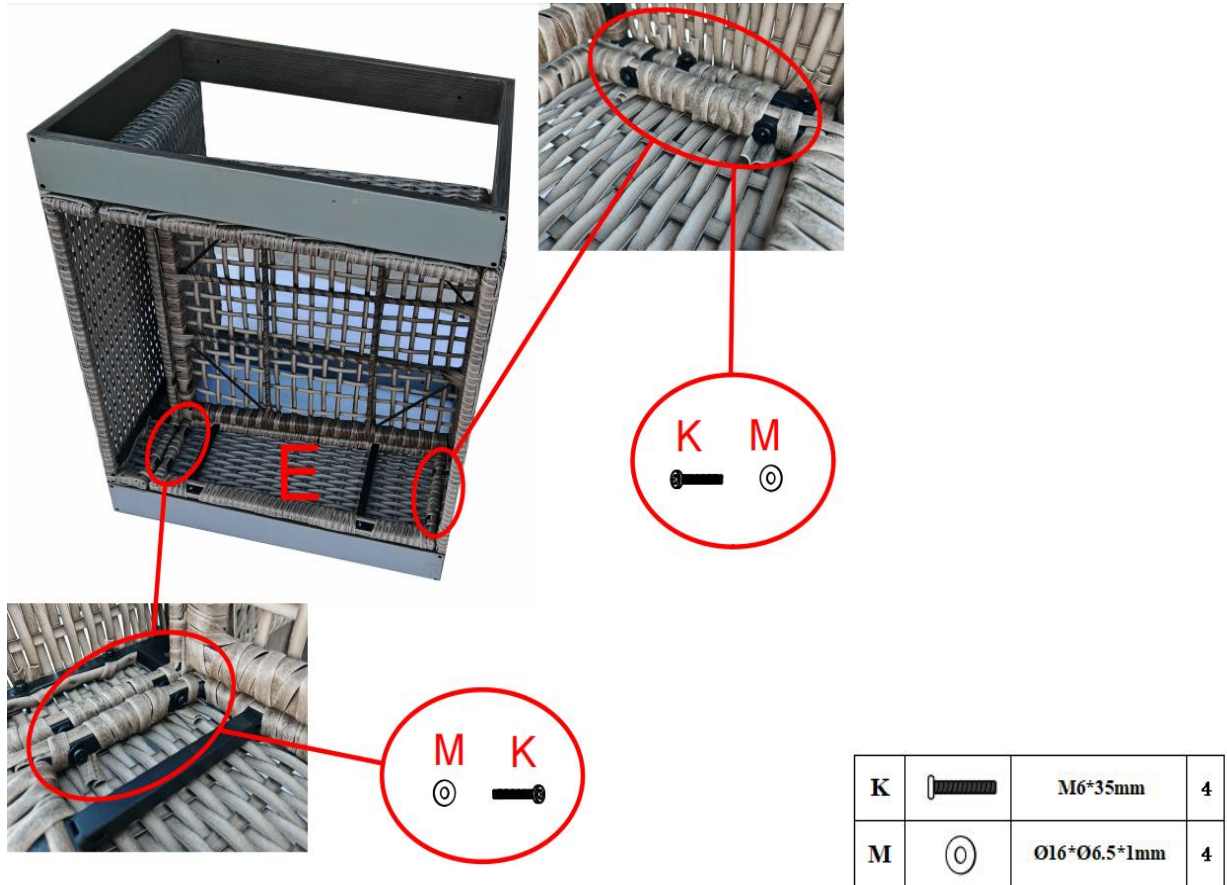



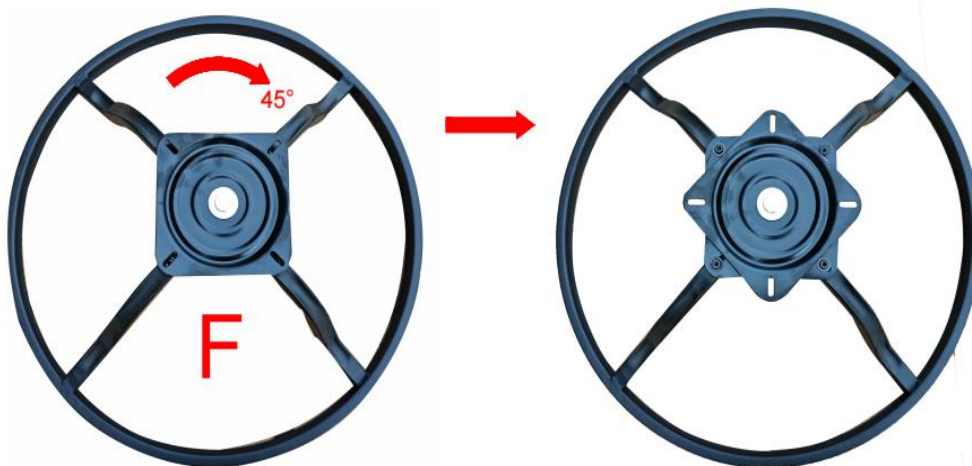

6. Pay attention to this step for the swivel base (F).

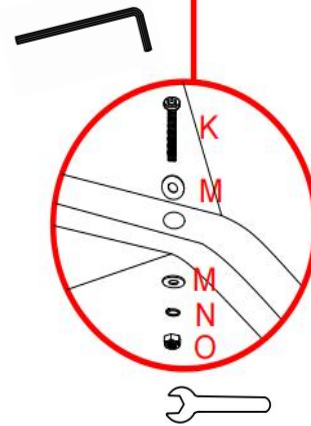
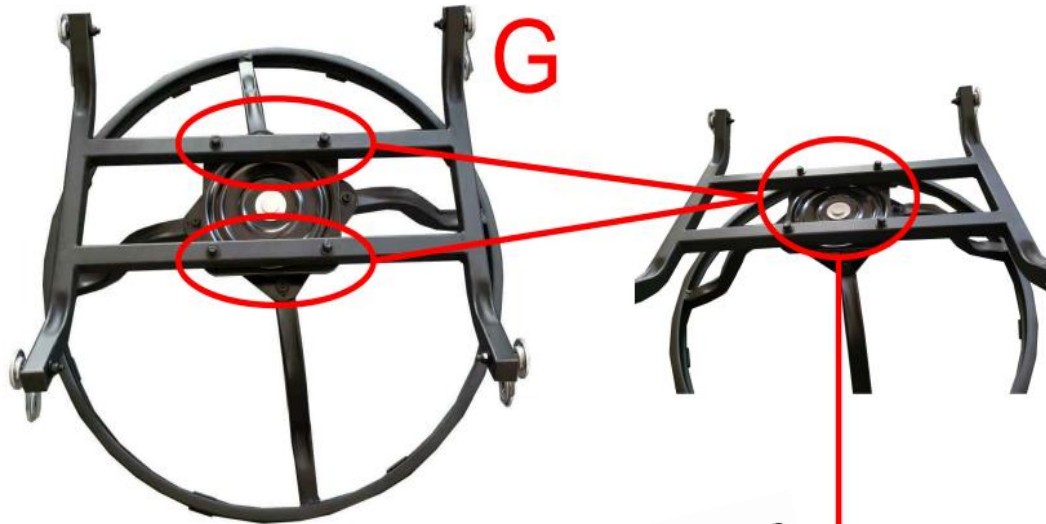




7. Secure U-Shaped Fitting (G) to Swivel Base (F) with 4 bolts (K), 8 washers (M), 4 spring washers (N) and 4 nuts (O) by using allen wrench and spanner. **Fully tighten all bolts in Step 4 now.**




K		M6*35mm	4
M		Ø16*Ø6.5*1mm	8
N		M6	4
O		M6	4

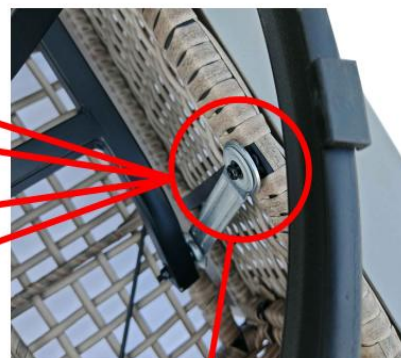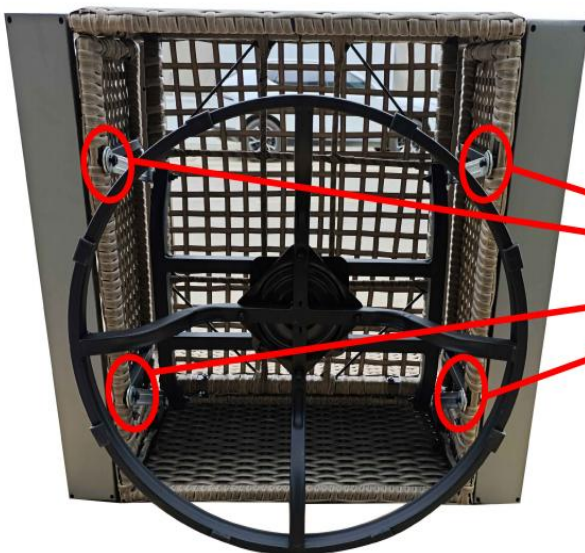8. Secure U-Shaped Fitting (G) to side panels (D&E) with 4 bolts (L) and 4 spring washers (N) by using allen wrench. **Fully tighten all bolts now.**



L		9.5*30*M6	4
N		M6	4

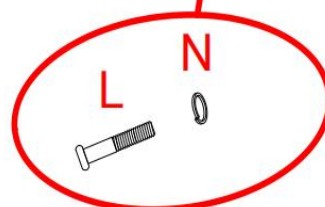

**9. Place the seat and back cushions (I&H) on the chair, and it is ready for use.**



**SPECIAL WARNING**



**THIS CHAIR IS NOT A TOY.  
DON'T OVER-SWING THE CHAIR.  
OVER-SWING THE CHAIR MAYBE  
MAKE THE CHAIR TIP OVER AND  
RESULT IN INJURY.**



**DO NOT STAND ON THE  
CHAIR. ANY IMPROPER USE  
OF THIS PRODUCT MAY  
RESULT IN INJURY.**