 


ELECTRIC FIREPLACE

HOMEOWNERS OPERATING MANUAL

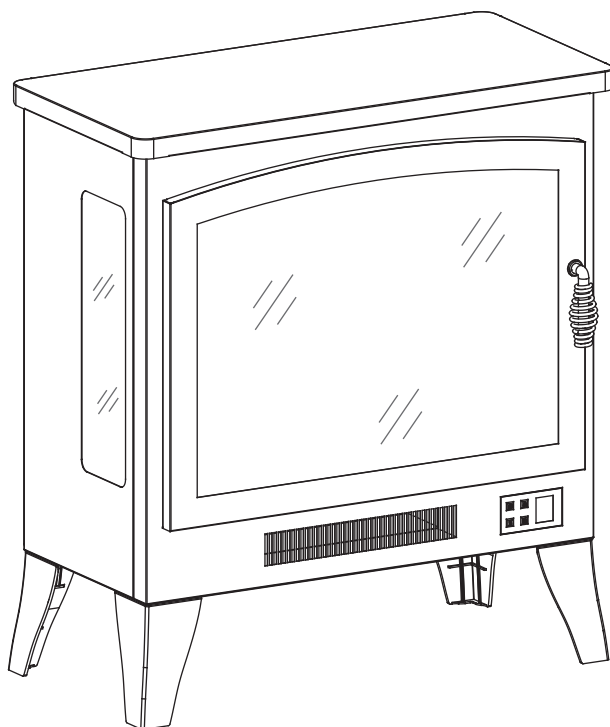

The actual appearance should be subject to the purchase model



**MODELS: T15V1-MT01
T20V1-MT01
T24V1-MT01
TXXVYY-MTFF**

(Note: XX=15, 20, 24; YY=1~9; FF=01~20)

CONSUMER SAFETY INFORMATION: PLEASE READ THIS MANUAL BEFORE INSTALLING AND OPERATING THIS APPLIANCE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN A POSSIBLE ELECTRIC SHOCK, FIRE HAZARD, AND/OR INJURY AND WILL VOID THE WARRANTY.

WARNING: IF THE INFORMATION IN THIS MANUAL IS NOT FOLLOWED, AN ELECTRIC SHOCK OR FIRE MAY RESULT IN PROPERTY DAMAGE, PERSONAL INJURY, OR LOSS OF LIFE.

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

IMPORTANT INSTRUCTIONS

When using electrical appliance, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surface. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
3. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
8. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
9. To disconnect heater, turn controls to off, then remove plug from outlet.
10. Connect to properly grounded outlets only.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
14. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
15. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

16. **SAVE THESE INSTRUCTIONS**

GROUNDING INSTRUCTIONS

This heater is for use on 120 volts. The cord has a plug as shown at (A) in figure1.


An adaptor as shown at (C) is available for connecting three-blade grounding-type plugs to two-slot receptacles.

The green grounding lug extending from the adaptor must be connected to a permanent ground such as a properly grounded outlet box.

The adaptor should not be used if a three-slot grounded receptacle is available.

NOTE: Adaptors are NOT for use in Canada.

 Figure 1

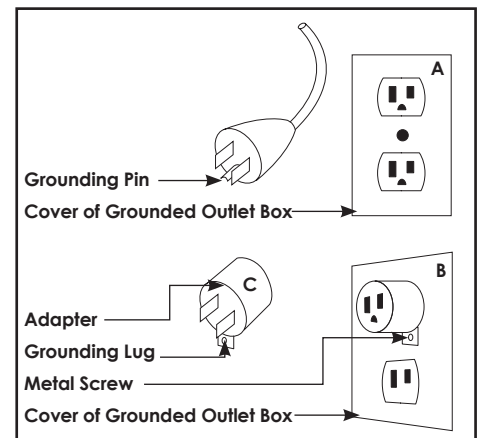


ELECTRICAL SPECIFICATIONS

Rated voltage: 120VAC

Frequency: 60Hz

Rated input: 1400 Watts

 
PACKAGE CONTENTS

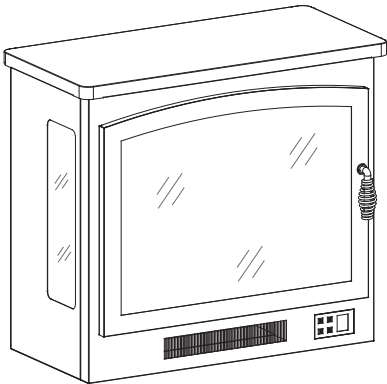


Fireplace



 
Feet

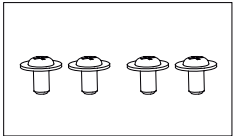

Screws

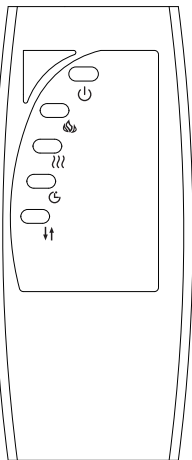 

Remote Control



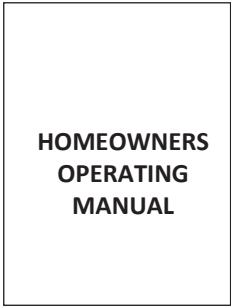 


Manual


INSTALLATION INSTRUCTIONS



   Do not share a socket with other appliances when using the electric fireplace. Please use a dedicated socket.

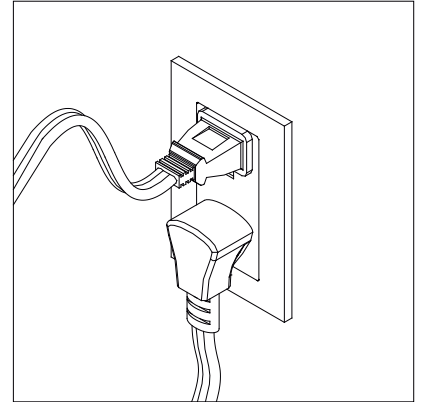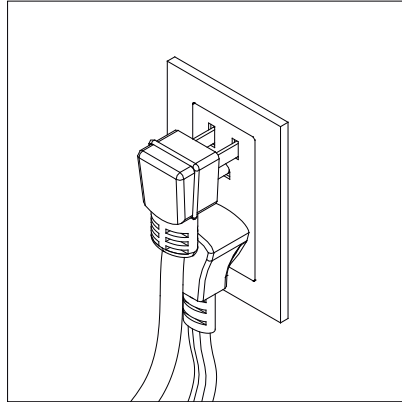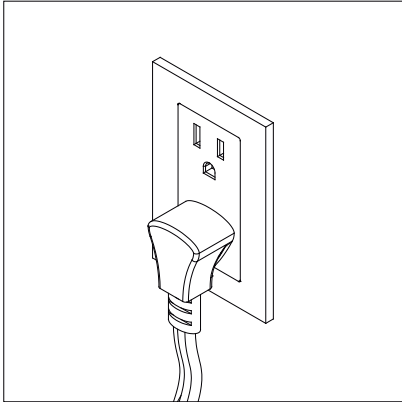

 Never use with an extension cord or relocatable power tap (outlet / power strip).

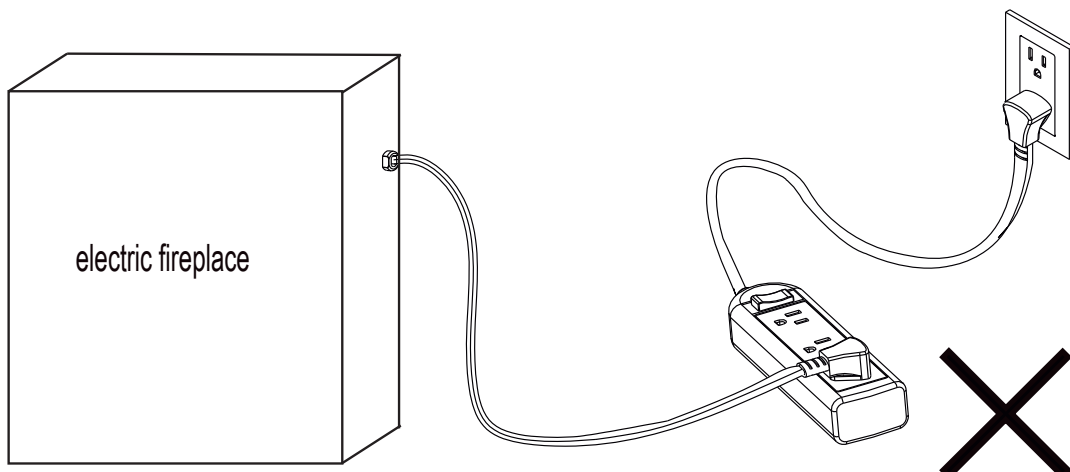


Before you begin assembly, locate the instructions and hardware. Compare all parts with the Hardware Included and Package Contents lists. Be sure you have all the parts and can identify them. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts. A helping hand is always good. Assemble your fireplace with an adult assistant if possible. Some pieces are heavy and will need to be held by a helper. Assembly time will take approximately 5-15 minutes.

This appliance, when installed, must be electrically grounded in accordance with local codes or, in the absence of local codes, with the current CSA C22.1 Canadian Electrical Code or for USA installations, follow local codes and the National Electrical Code, ANSI/NFPA NO.70.




WARNING: Do not install unit on shelves, raised platforms, beds, blankets, pillows etc. Keep combustible materials such as furniture, bedding, papers, clothes and curtains at least 3 feet (914 mm) from the stove.

 Tools Required for Assembly (not included): Phillips screwdriver

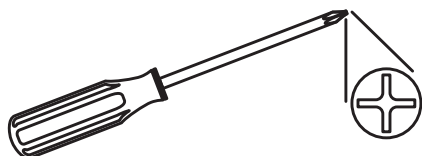

Lay stove upside down on a padded surface with the underside accessible. Attach leg to stove by inserting the tab on the top of the leg into the corresponding slot on the bottom of the stove. Insert screw into predrilled hole and tighten securely.

 Repeat with remaining three legs.

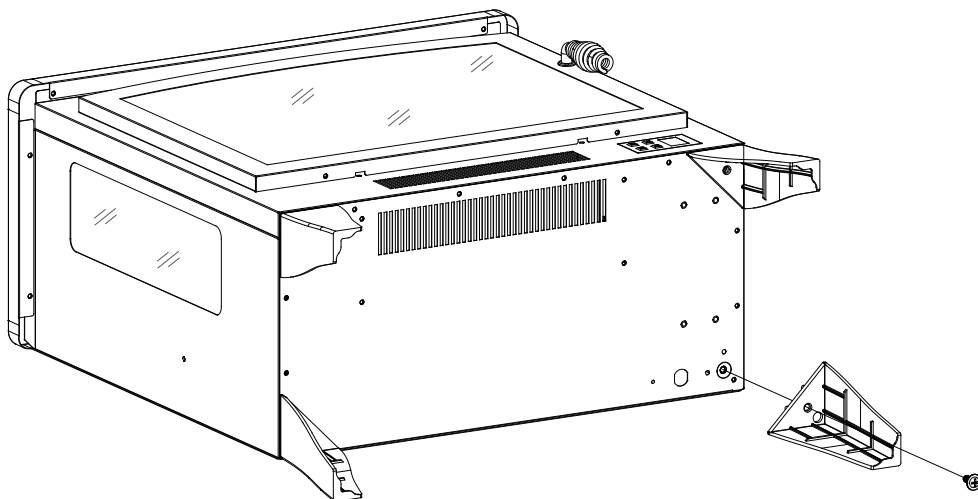


OPERATING INSTRUCTIONS

CAUTION: DO NOT LOCATE AGAINST WALLS OR BEHIND DRAPES OF FURNITURE.

Fireplace must be properly installed before it is used.

CONTROL PANEL

 The mechanical control panel is located on the bottom right corner of the unit. This panel contains the buttons to properly operate the fireplace.

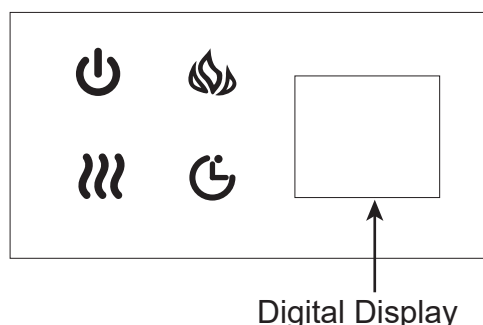

POWER BUTTON

The Power Button turns the fireplace on or off. It has a memory function. The button turns off all functions at once but retains the settings in the memory (except the timer). By pressing the button again, the unit will turn on with the same settings. If the timer has been set and time has expired, all functions will stop. Press the Power Button to start the fireplace.

FLAME BUTTON

Each time the FLAME button is pressed, the brightness of the flame changes. There are 4 brightness levels(L4-L3-L2-L1), and the OFF setting you can cycle through. When the flame is in OFF position and the heat is turned on, the ember bed will be slightly bright to indicate that the heat has been turned on.

HEATER BUTTON

The HEATER button turns the heat on and off. When in ON position, press and hold the HEATER button for 5 seconds to change the desired temperature. There are 11 temperature settings: 82°F - ON -64°F-66°F-68°F-70°F-72°F-74°F- 76°F -78°F-80°F (27°C-ON-18°C-19°C-20°C-21°C-22°C-23°C- 24°C-25°C-26°C).

ON means the heater keep working.

Temperature unit convert function: The heater includes Celsius and Fahrenheit temperature scales. To change the temperature unit, turn the heater on, and then press and hold the Power Button for 5 seconds. The current temperature unit display will flash 3 times and convert to the other temperature unit. Note: The remote control cannot convert the temperature units.

Lock and Unlock Heater Function: Press and hold the Heater Button for 10 seconds. The ember bed will flash 6 times, indicating that the heater function is locked. To unlock the heater function, press and hold the Heater Button for 10 seconds. The ember bed will flash 6 times, indicating the heater function is unlocked. Note: The remote cannot set the lock and unlock heater function.

TIMER BUTTON

The Timer has adjustable settings in a range from 1 hour to 8 hours and OFF. As shown below: 1h-2h-3h-4h-5h-6h-7h-8h-OFF. If the digital display turns on and no operation is performed within 10 seconds, the display will automatically shut off. Once the timer is set and expires, all functions will turn off and the unit will enter standby mode. In this mode, press the Power Button to restart the fireplace.

REMOTE CONTROL

The remote control has an effective range of up to 19 ft.

POWER BUTTON

The Power Button turns the fireplace on or off.

FLAME BUTTON

Each time the FLAME button is pressed, the brightness of the flame changes. There are 4 brightness levels(L4-L3-L2-L1), and the OFF setting you can cycle through.

HEATER BUTTON

The HEATER button turns the heat on and off.

 
TIMER BUTTON

The Timer has adjustable settings in a range from 1 hour to 8 hours and OFF.

LEVEL INCREASE/DECREASE BUTTON

This button is used to adjust the temperature settings. There are 11 temperature settings: 82°F - ON -64°F-66°F-68°F-70°F-72°F-74°F- 76°F -78°F-80°F (27°C -ON-18°C-19°C-20°C-21°C-22°C-23°C - 24°C-25°C-26°C).

ON means the heater keep working.

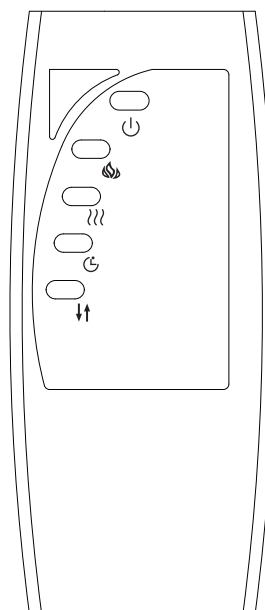


BATTERIES REPLACEMENT

This remote control requires 2 of AAA batteries to operate. Due to safety concern in transportation, the batteries are not included with the unit.

When the remote control stops operating or its range seems reduced, it is time to replace the batteries.

The battery compartment is located on the back end of the remote control.

 1. Press and slide the battery cover open.
2. Insert two 1.5V (AAA) batteries ensuring they are installed correctly with regard to the polarities (+ and -) marked on the inside of the battery compartment.
3. Replace the battery cover.

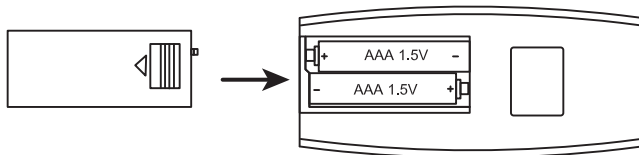

NOTE:

1. The batteries should be removed if the product is to be left unused for a long time.
2. When replacing the batteries, replace both batteries at the same time with new batteries of the correct type.
3. Do not mix old and new batteries.
4. Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nicad, Nimh, etc) batteries.
5. Non-rechargeable batteries are not to be recharged. Exhausted batteries are to be removed from the product.
6. Keep away from children. If swallowed, seek medical attention immediately.

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MAINTENANCE INSTRUCTIONS

IMPORTANT: Always unplug the power cord before cleaning the unit. Allow the unit to cool before cleaning it.

- Wipe the exterior surface of the electric firebox occasionally with a soft, damp cloth (not dripping wet), and dry the exterior surface before operating.
- Do not immerse the electric fireplace in water.
- Do not use any cleaning chemicals such as detergents and abrasives.
- Do not allow the interior to get wet, as this could create a hazard.
- Light accumulated dust may be removed from the electric fireplace with a soft, dry cloth.
- To store the electric fireplace, put it back into its original packaging and store in a clean, dry place.
- The blower and flame motor are pre-lubricated for a durable using time and need no further lubrication or maintenance. Dust particles will accumulate on/in the electric fireplace, so periodic cleaning/vacuuming of the electric fireplace is recommended.
- During any service of this appliance, the power to the unit must be turned off, Always remember to remove the electrical plug from the wall outlet.
- Any electrical repairs or rewiring of this unit should be carried out by a licensed electrician in accordance with national and local codes. If repairing or replacing any electrical component or wiring, the original wire routing, color coding and securing locations must be followed.
- Do not use this fireplace if any part of it has been under water. Immediately call a qualified service technician to inspect the fireplace and replace any part of the electrical system.

TROUBLESHOOTING

Fault code	Fault Cause	Solution
E3	Heater is not working	Turn the unit off and unplug it from the electrical outlet. Check for dirty or clogged vents. Clean the dust and debris from the vent area. Wait 5 minutes, plug in the fireplace, and then turn it back on. If the heater still doesn't work, contact customer service.

1 YEAR LIMITED WARRANTY

Our electrical fireplace is free from manufacturing and material defects for a period of one year from date of purchase, subject to the following conditions and limitations.

1. This electric fireplace must be installed and operated at all times in accordance with the installation and operating instructions furnished with the product, Any unauthorized repair, alteration, willful abuse, accident, or misuse of the product shall nullify this warranty.
2. This warranty is non-transferable, and is made to the original owner, provided that the purchase was made through an authorized supplier of the company.
3. The warranty is limited to the repair or replacement of parts found to be defective in material or workmanship, provided that such part(s) have been subjected to normal conditions of use and service, after said defect is confirmed by the Company's inspection.
4. The Company may, at its discretion, fully discharge all obligation with respect to this warranty by refunding the wholesale price of the defective part(s).
5. Any installation, labor, construction, transportation, or other related costs/expenses arising from defective part(s), repair, replacement, or otherwise of same, will not be covered by this warranty, nor shall the Company assume responsibility for same.
6. The owner/user assumes all other risks, if any, including the risk of any direct, indirect or consequential loss or damage arising out of the use, or inability to use the product, except as provided by law.
7. All other warranties-expressed or implied-with respect to the product, its components and accessories, or any obligation/liabilities on the part of the Company are hereby expressly included.
8. The Company neither assumes, nor authorizes any third party to assume, on its behalf, any other liabilities with respect to the sale of our product.
9. The warranties as outlined within this document do not apply to non our accessories used in conjunction with the installation of this product. This warranty is void if :
 - a. The fireplace is subjected to prolonged periods of dampness or condensation.
 - b. Any unauthorized alteration, willful abuse, accident, or misuse of the product.
 - c. You do not have the original receipt of purchase.

Made in China
Printed in China