



Assembly Instructions



www.tribesigns.com

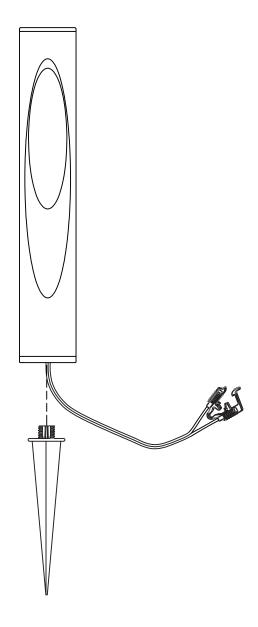


 PACKAGE CONTENTS





 B – Wire Connector x1 (with 15 in. wire attached to lamp body)



C-Ground Stake (6. 535 in.) x1

Assembly and Installation


1 Attaching and installing the light



WARNING:

Never push the fixture into the ground by the lamp body (A) or use a hammer to insert the ground stake (C) into the ground.

- ☐ Insert the fixture wire on the wire connector (B) into the groove located on the top of the ground stake (C).
- ☐ Ensure the fixture wire on the wire connector (B) stays in the center of the groove to avoid damage to the fixture wire. Screw the ground stake (C) into the lamp body (A).
- ☐ Prepare a hole in the installation location. Use a tool such as a screwdriver (not included) to prepare the installation hole to ensure the hole is not larger than the ground stake (C).
- □ Install the ground stake (C) in the ground by pushing on the lamp body (A).

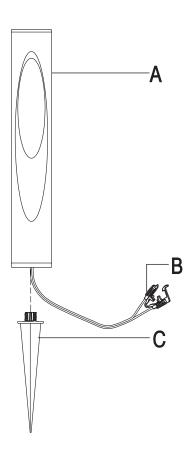

2 Connecting the wires



WARNING: The wire connector (B) contacts have sharp edges for piercing the main low voltage cable. To avoid injury, do not touch the metal contacts.




CAUTION: The wire from low voltage power unit should be 12-16 AWG type underground low Energy Circuit Cable.

IMPORTANT

☐ Protect the wiring by routing it in close proximity to the light fitting, or next to a building structure such as a house or a deck



- ☐ The landscapewire and connector can also be hidden under stone or buried under grass at a maximum depth of 6 in. (15.24 cm).
- $\hfill \square$ Do notinstall the fixture within 10 ft. of a pool, spa, or fount an.
- ☐ Do not submerge the fixture in water.
- ☐ Place the wire connector (B) on opposite sides of the low voltage cable (not included) from the transformer (not included) where the fixture will be located.
- ☐ Align and fit the main low voltage cable vertically to the slot of the wire connector(B).
- ☐ Press the wire connector (B) together until it is locked around the main low voltage cable. The pre-set prongs will pierce the cable insulation and establish contact with the electrical wire inside.
- ☐ Once the wire connector(B) is in place, it is recommended to wrap it with electrical tape (not included).
- $\hfill \square$ After all fixtures are installed, t urn on the transformer.

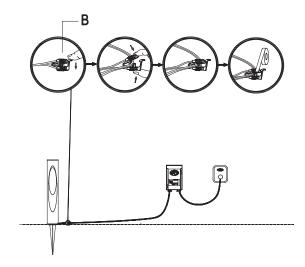



Care and Cleaning

□ Clean the fixture with a soft dry cloth. □ Do not use any cleaners with chemicals, solvents or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The fixture will not light.	 □ There is no power . □ There is a disconnection or break in the wire. □ The transformer setting is incorrect. 	 Check the outlet and e nsure that a breaker or GFCI circuit has not been tripped. Follow the wires from the fixture and ensure a continuous connected path back to the transformer. Check the settings on the transformer.
The light flickers (one fixture).	☐ There is a loose wire connector to the fixture.	☐ Tighten the wire connector and ensure the metal contacts pierce the insulation on the low voltage cable from the transformer.
The lights flicker (all fixtures).	☐ There is a loose connection at the transformer .	Unplug the transformer from the outlet and visually inspect the positive and negative connecting points. Each wire should be securely screwed in and not in contact with any other.

Warranty

WHAT IS COVERED

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of five (5) years from date of purchase. This warranty applies only to the original consumer and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

The manufacturer does not warrant apelcifically disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shelliable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HamptonBay.com.

Cable Selection

12 VOLT TAP	Cable Length		
Total Fixture Wattage	0-50 feet	51-100 feet	101 -150 feet
0-60 Watts	16 AWG	16 AWG	14 AWG
61-120 Watts	16 AWG	14 AWG	12 AWG
121 -180 Watts	14 AWG	12 AWG	Not Recommended
181-240 Watts	14 AWG	12 AWG	Not Recommended
241-300 Watts	12 AWG	Not Recommended	Not Recommended
600W Transformer = (2x300) Watts	12 AWG	Not Recommended	Not Recommended
900W Transformer = (3x300) Watts	12 AWG	Not Recommended	Not Recommended

15 VOLT TAP	Cable Length		
Total Fixture Wattage	0-50 feet	51-100 feet	101 -150 feet
0-60 Watts	16 AWG*	16 AWG	16 AWG
61-120 Watts	16 AWG*	16 AWG	12 AWG
121 - 180 Watts	14 AWG*	14 AWG	12 AWG
181-240 Watts	14 AWG*	14 AWG	12 AWG
241-300 Watts	12 AWG*	12 AWG	Not Recommended
600W Transformer = (2x300) Watts	12 AWG*	12 AWG	Not Recommended
900W Transformer = (3x300) Watts	12 AWG*	12 AWG	Not Recommended

^{*} NOT RECOMMENDED FOR HALOGEN LANDSCAPE LIGHTS

This data is provided as a general guideline. Actual performance will depend on the installation layout, the fixtures, and the condition of the cable.




NOTE: Most LED landscape lighting fixtures can operate with full illumination from 9V down to as little as 6V. It is possible to have extended length runs with LED fixtures that go beyond the specifications shown in the guidelines above.



DESIGNED FOR LIFE

Thank you for your support!

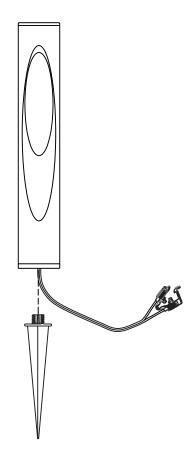

Contact our customer service team



support@tribesigns.com www.tribesigns.com



1-424-220-6888 7 AM to 8 PM EST, Monday to Friday.

Follow Tribesigns







Instagram



Pinterest



Twitter



YouTube



TikTok



WhatsApp