

Description

Name	DK-PM666
Battery	12V4.5AH / 12V7AH / 12V10AH / 12V14AH / 24V5AH
Motor	12V15000 RPM of 390# driving motor 12V12000 RPM of 550# driving motor 12V4800 RPM of 380# steering motor (2 motors) 12V8000 RPM of 390# steering motor (4 motors) 24V12000 RPM of 555# driving motor 24V5000 RPM of 395#steering motor
Maximum weight	30 KGS
Dimension	1080*630*520 mm
Speed	3-6 KM/H
Charging time	8-12 hours
Remote control battery	AAA battery 1.5V*2 (not including)
Applicable age	37-95 months
Charger specification	Input: 220V / 110V 12V Output : DC12V1000mA 24V Output: DC28.8V800mA or DC24V1000mA

Charging the Drive Battery:



IMPORTANT! Before using the unit for the first time the battery needs to be charged for at least **8 to 12** hours - no more than **20** hours. Once battery is depleted, recharge for **8 to 12** hours - no more than **20** hours.

IMPORTANT!

Check the drive battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred. Only replace with the same type and voltage rechargeable battery and charger supplied by the manufacturer.

- Only use the rechargeable battery (or equivalent replacement) and charger supplied with your vehicle.
- Always turn power off and charge battery after riding.
- The drive battery should be charged when depleted, or if not used regularly, once a month. Failure to charge the battery as directed will cause permanent damage to the battery and will void the warranty.

STEPS:

1. Locate Charging Port.
2. Plug Charger plug into unit Charging Port.
3. Plug Charger into Wall outlet.
4. When battery is fully charged, unplug charger from the wall outlet and disconnect from charger port.

NOTE: The charger may feel warm during the charging. If excessively hot, unplug and replace.

NOTE: This product has charging protection: When charging, all functions are turned OFF.

Installation And Operation Manual



Model: DK-PM666

Applicable age: 37-95 months

Maximum weight: 30 KG

Execution Standard:

GB6675&GB19865 EN71&EN62115 ASTM-F963



© 2025 Porsche AG. Porsche Crest, Porsche Logotype, Macan and Turbo are trademarks of Porsche AG used under license.

Pinghu Dake Baby Carrier Co.,Ltd

Address: No.88,Qinsha section,Pinglang Road,Xincang Town,
Pinghu City, Jiaxing City, Zhejiang Province ,China

Website: www.daketoys.com

 
Warning: This is a Child's Toy and NOT intended for Off-Road Use.

Installation steps

1.Spare parts list

Car body 1 PC	Steering wheel 1 PC	Rearview mirrors 1 Pair
Window shield 1 PC	Seat 1 PC	Spanner 2 PCS
Rear wheels 2 PCS	Front wheels 2 PCS	Wheel cover 4 PCS
Stickers for wheel 4 PCS	Stickers for wheel cover 4 PCS	Rear cover 1 PC
Remote control 1 PC	Charger 1 PC	Manual 1 PC
MP3 line 1 PC (not including under the MP4 version)		
Decoration on dashboard 1 PC (not including under the MP4 version)		
Screw bag: 1 PC		
Including: M12 gasket - 7 PCS; M10 nut - 1 PC; M4*12 screw - 4 PCS;		

2.Names of spare parts

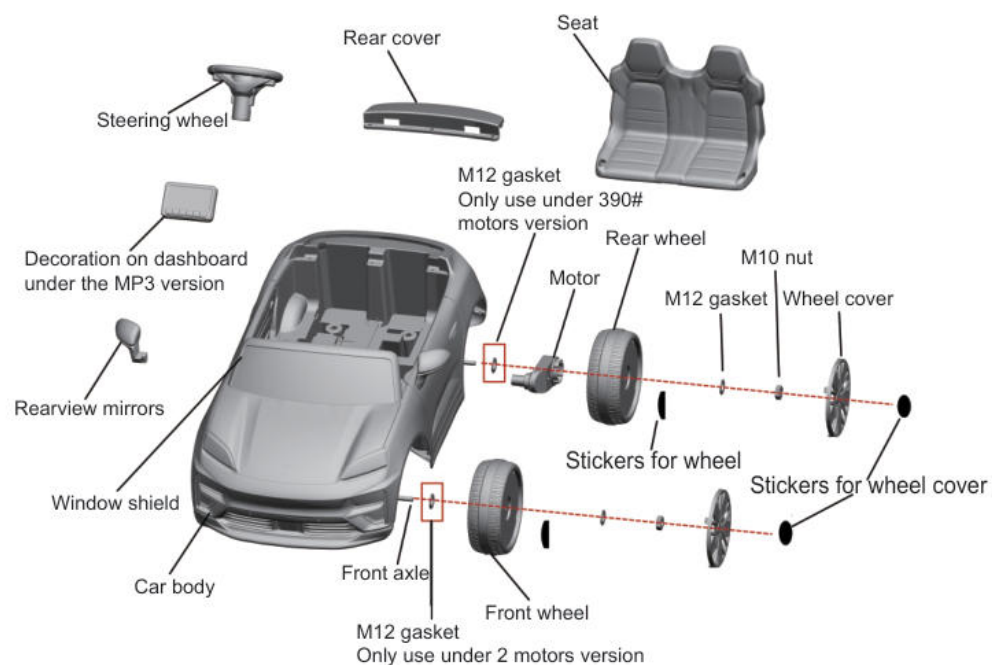

3. Installation steps

Step 1: Install front wheels

A: Under 2 motors version: install spare parts onto front axle following the sequences: M12 gasket - Front wheels - Stickers for wheel - M12 gasket - M10 nut - Wheel cover - Stickers for wheel cover.

 
B: Under 4 motors version: install spare parts onto front axle following the sequences: Front wheels - Stickers for wheel - M12 gasket - M10 nut - Wheel cover - Stickers for wheel cover.

* Under 2 motors version, there are no plum blossom parts on the front wheels.
Under 4 motors version, the front and rear wheels are the same and can use randomly.



Step 2: Install rear wheels

Install spare parts onto rear axle following the sequences: Motors - Rear wheels - Stickers for wheel - M12 gasket - M10 nut - Wheel cover - Stickers for wheel cover.

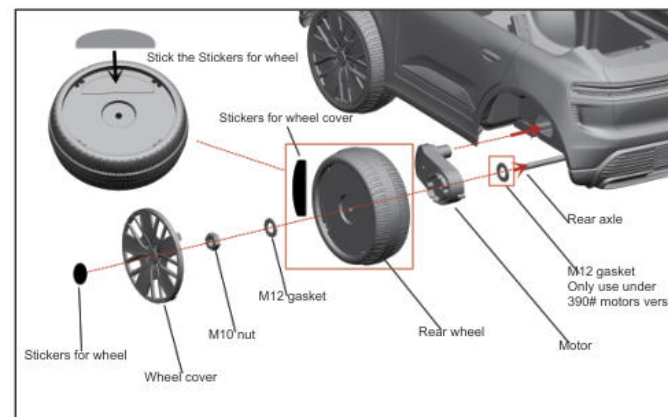

Step 3: Install Rear cover

Insert the rear cover into the slot, and secure it with 3 pcs of M4*12mm screws.



Step 4: Connect the power

 
Please connect the plug to the controller.

* According to the photo, there are charge hole, the switch of High / Low speeds and the switch of Manual / Remote, the switch of Manual / Remote is optional.

Description for the switch of Manual / Remote:

Under the manual version: the car can only be driven by the child.

Under the Remote version: the car can only be controlled by the remote control.

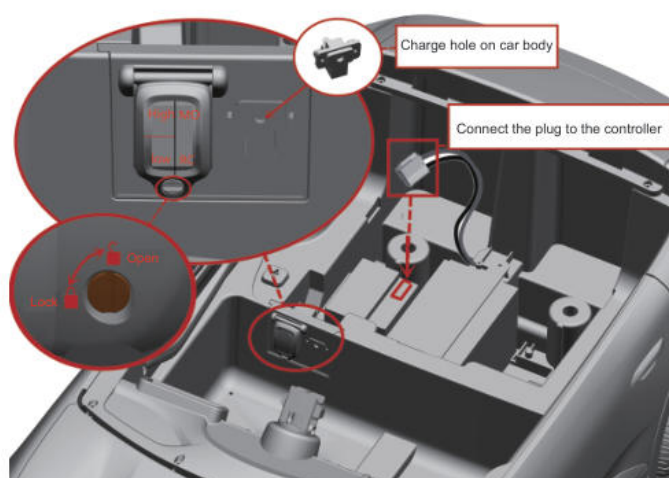

Instructions

01. While driving , adult supervision is required all the time
02. Always wear a helmet when driving
03. Please don't drive near road or on the footpath.
04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please don't drive this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please don't allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please don't let children touch the wheels or be near them when the car is moving.
20. Please mind fingers when opening and closing doors.

WARNING:
To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.

Warning: This toy has no brake.

Warning: This toy cannot be used in the sands.

WARNING!

For safety reasons,

*please use this vehicle under adult guidance and supervision.

*do not use this product on main roads, slopes, highways or other dangerous places.

*children must wear shoes and protective gears when operating the vehicle.

*children should be seated with the seat belt fasten when driving.

*only load a maximum of 30Kg on the vehicle.

*only children aged 37 - 95 months should be allowed on this vehicle.

*use this toy strictly according to safety manual.

*please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle.

*this toy vehicle should be used with caution and requires skill to avoid fall or collision with third parties.

*Non-rechargeable batteries are no to be recharged;

*The supply terminals are not to be short-circuited.

*Rechargeable batteries are to be removed from the toy before being charged;

*The toy should be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

-Only use the battery specified by the manufacturer

-Only use the charger specified by the manufacturer.

Pictures are for reference only, please adhere to the original Products as standard

The product must be assembled by Adults.

Warning! Not suitable for children under 36 months.

Long cord. Strangulation hazard.

Pictures are for reference only, please adhere to the original products as standard

WARNING:

The car contains battery that are non-replaceable.

The instruction manual must be retained since it contains important information.

WARNING:

For the purposes of recharging the battery, only use the detachable supply unit provided with this toy, DC adaptor.

WARNING:

The remote control is not a toy. It is for adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmental conditions.

WARNING:

 
RISK OF FIRE. DO not bypass. Replace only with ZYC1018RXR-RM-12V DC 12V or CSR-12T-2B DC 12V Max 25A or JR1932RX-RM-24V DC 24V Max 35A.

Installation steps

Step 5: Install seat

A: Put the seat into the car.


B: Fix the seat by locking the lock catch.

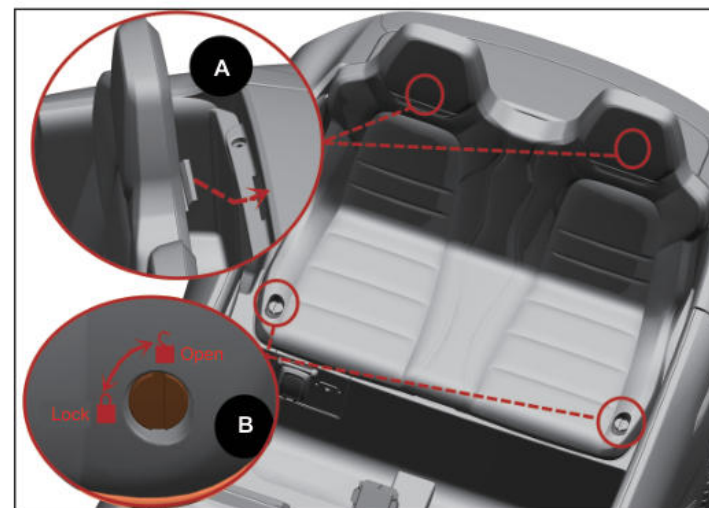

Step 6: Install steering wheel

A: Connect the steering wheel properly with the lines on dashboard.

 
B: Insert the steering wheel into the quick detach part.

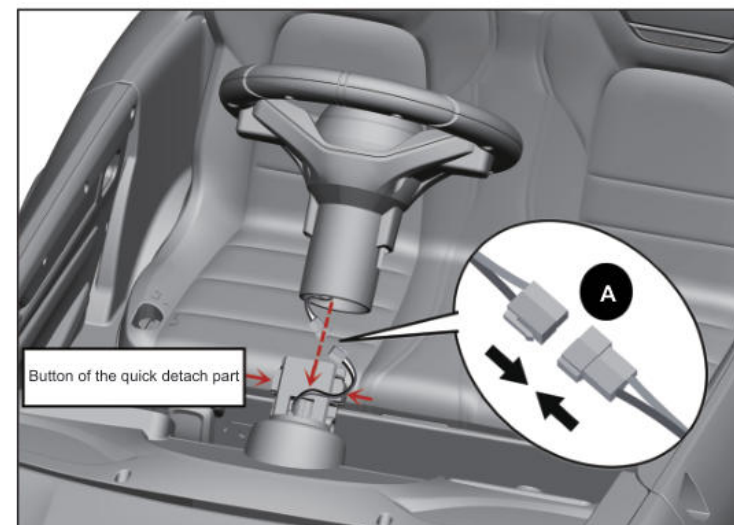

Installation steps


Step 7: Install decoration on dashboard or MP4 player

 Insert the decoration on dashboard or MP4 player into dashboard according to the figure below.

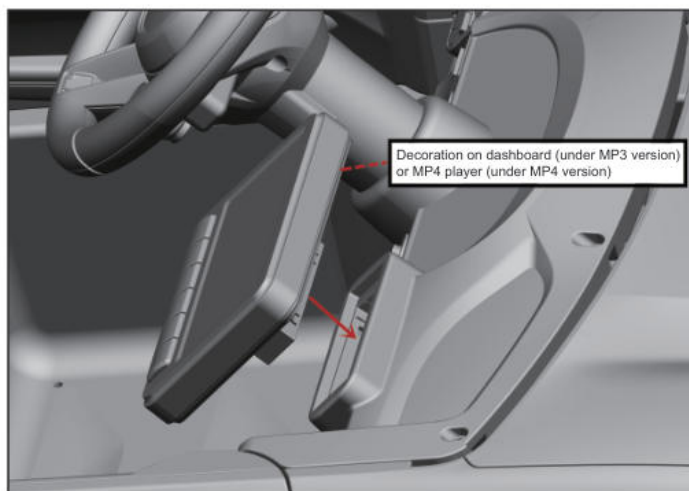

Step 8: Install window shield

 Insert the window shield into the car according to the figure below.

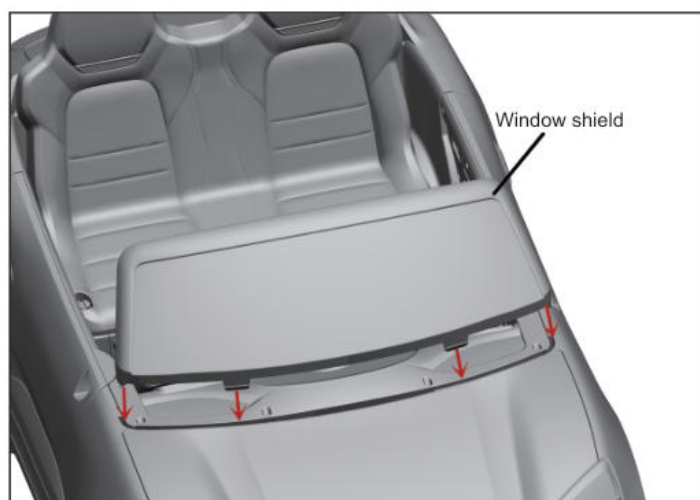

Instructions

Troubleshooting

Problem: The vehicle cannot be driven.

Cause of the problem: the battery is insufficient

Please charge in time after each use, and charge at least once a month.

 
It is recommended to charge for 8-12 hours, not more than 20 hours.

Problem: The car does not move.

Answer: The battery is low, please charge for 8-12 hours

but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active.

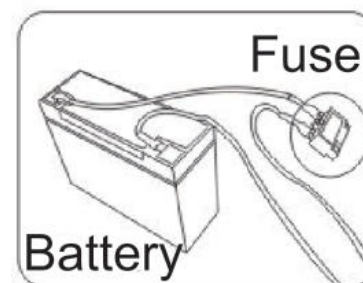

To avoid short fuse or power cut off:

1. Do not overload the product. Max load is 30Kg.
2. Do not drag any item behind this product.
3. Do not allow water or any liquid into electric parts.
4. Do not change wire system without a professional.

TROUBLESHOOTING

Problem: The car only runs for a short time.

Answer 1: The battery is low, please charge for 8-12 hours

but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active.

Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem: The sound does not work.

Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.

 
Problem: Charger overheating.

It is normal for battery and charger to be slightly warm during charging.

If the charger feel excessively hot, please check for a current overload or battery short circuit.

Instructions

For 12V + 2 * 550 # Motors or 12V + 4 * 390# Motors

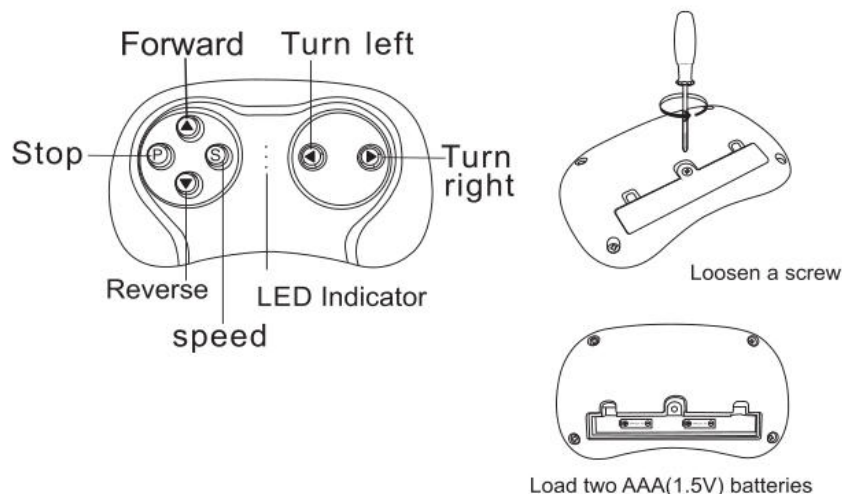

1. Turn off the Power Switch on the car.
2. Remove the battery cover on the Remote Control and put in 2 AAA battery, the three LED indicators will flash.
3. Turn on the Power Switch on the car, when the LED indicators stop flashing and 2 of them are on, matching successes.
4. Once the matching is made, there is no need to match code again only if the battery is replaced.
5. The Remote Control will enter a sleep mode if not used for a long time and the LED indicators will be off. Press any buttons to wake up the Remote Control, and it can be used normally.
6. All batteries should be inserted in the correct polarity.
7. Non-rechargeable battery cannot be recharged
8. Take out and properly deal with the dead battery. To avoid injury, please keep kids away from the battery.
9. The direct contact between the positive and negative terminals may result in fire or explosion. Avoid direct connect between the terminals.
10. Do not mix old and new batteries. DO not mix alkaline, standard(carbon-zinc), or rechargeable(nickel-cadmium) batteries.
11. Only an adult who has read and understood the safety warnings can recharge the battery.

Warning:

When replacing a replaceable battery of remote control, first open the lid and take out the old battery. Put in the new battery, pay attention to the positive and negative poles, and then cover the lid.

Installation steps

Step 9: Install rearview mirrors

Insert the rearview mirrors(left and right) into the sides of the car according to the figure below.


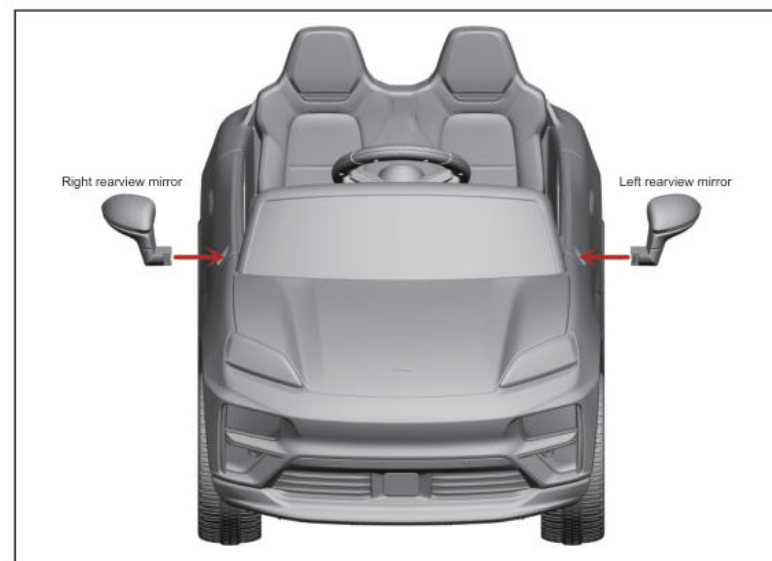 



Diagram of the hidden tow wheels

 When the car is powered off, it can be easily pulled by adults. Adults need to pull out the hidden tow wheels under the car and lift the head of the car.

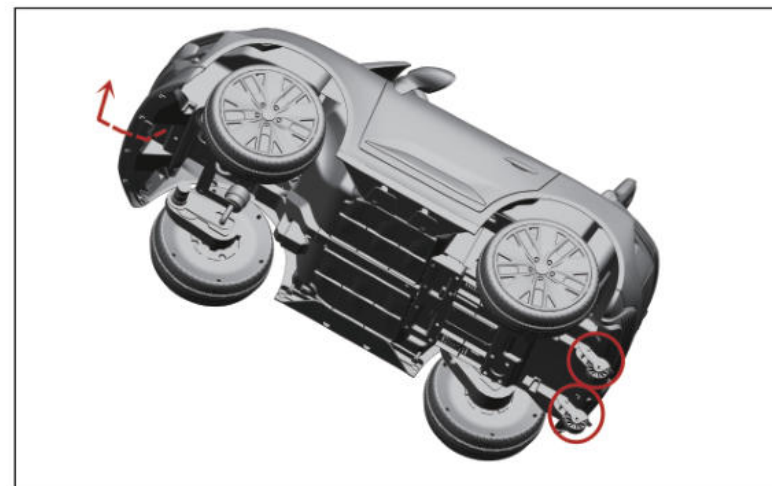


Instructions

 4. Introduction for the car

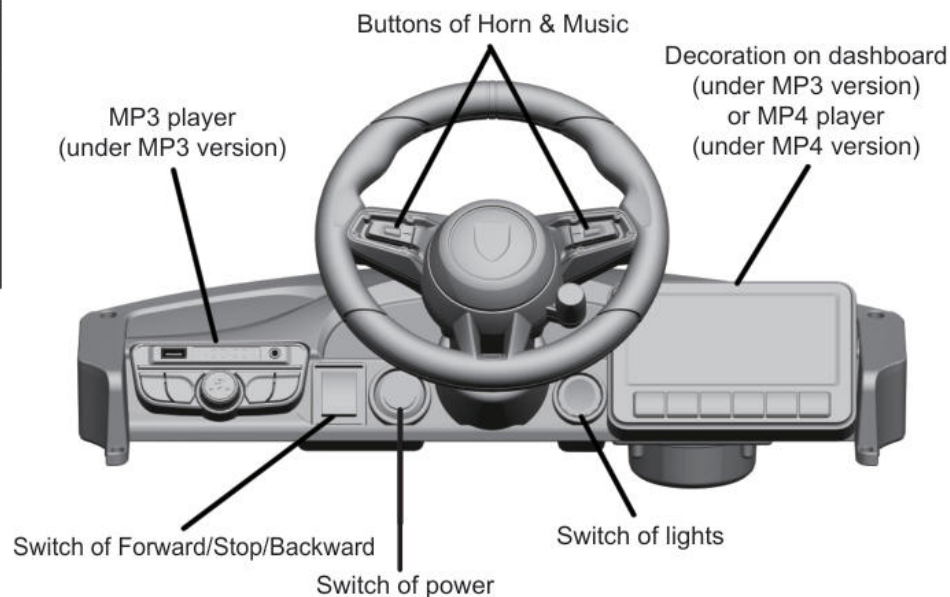


 5. Introduction for MP3

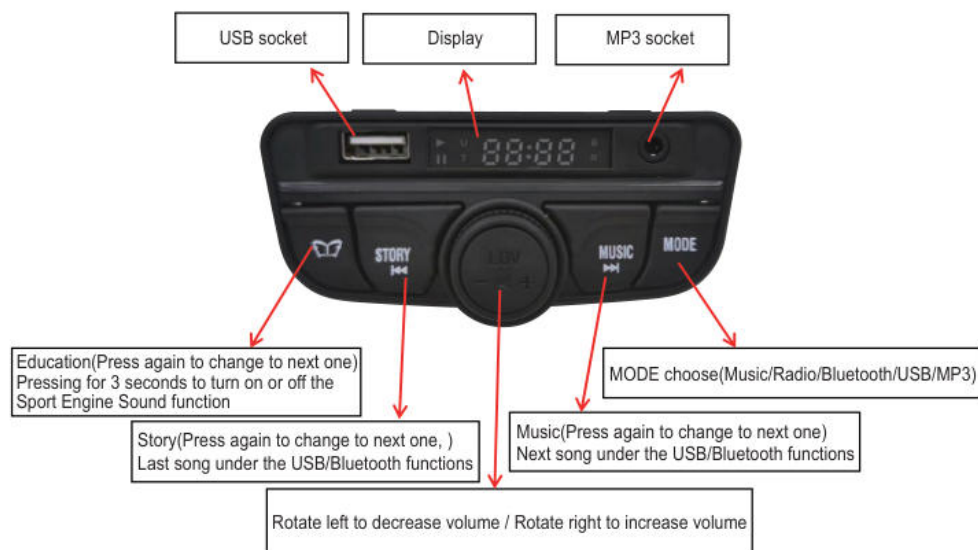

Instructions

 For 12V + 2 * 390 # Motors or 24V + 2 * 555# Motors
Connect with Remote Control

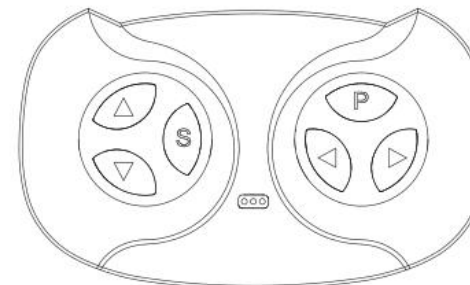

2.4G Remote Control Instructions

Step 1: The Remote Controller is loaded with two AAA batteries.

 
Step 2: Turn off the power switch on the vehicle.

Step 3: Hold down "▲" & "▼" keys for 3 seconds start match code, The first LED flicker, Now turn on the vehicle power switch

The red indicator lights stop flashing, and the code is successful.

Keys caption : "S" set up speed, 1 led lit up is low speed, 2 leds lit up is medium speed, 3 leds lit up is high speed,

"▲" Forward, "▼" Back, "◀" Left, "▶" Right, Press "P" key hold the brake, All LED flicker

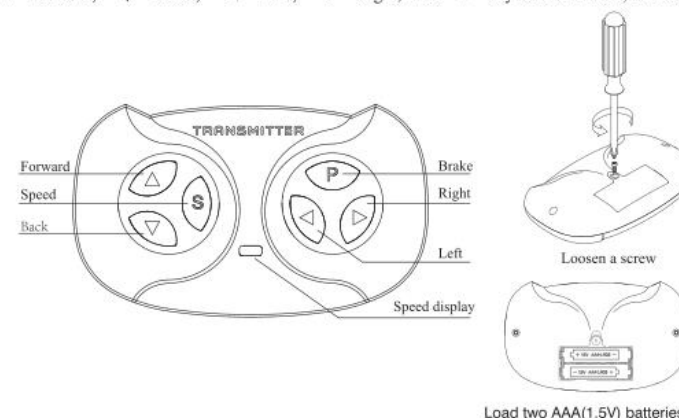

WARNING! Not for children under 3 years. Small parts. Choking hazard

-Load two AAA (1.5V) batteries according to the diagram.

-Non-rechargeable batteries are not to be recharged.

-Different types of batteries or new and used batteries are not to be mixed.

-Batteries are to be inserted with the correct polarity.

-Exhausted batteries are to be removed from the toy.

-The supply terminals are not to be short-circuited.

-The packaging must be retained since it contains important information.

*Manufactured according to FCC certification testing and EMC credential.

*This remote is to be used by adult only.