 
 


Tools Required

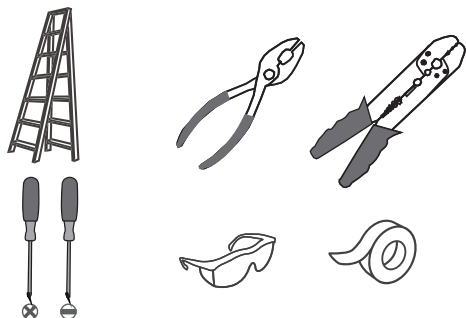

Light Source

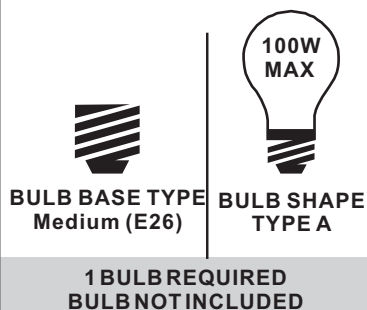

Fixture Height Adjustable 17.5" to 53.5"

⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG


 
 
 
 
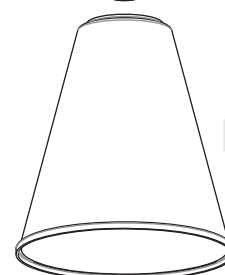 


Table of Contents

 Crossbar Assembly

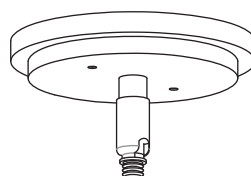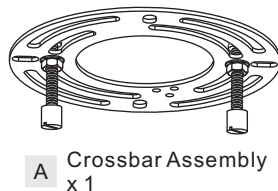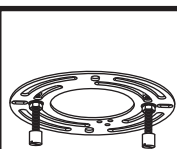


STEP 1

Downrod




STEP 2

 Wiring

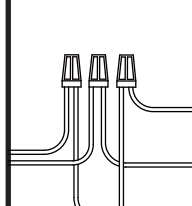


STEP 3

 Ceiling Canopy




STEP 4

 Glass Shade

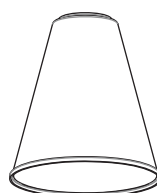

STEP 5

 Ring

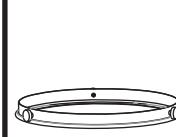


STEP 6

Bulb




STEP 7

 STEP 1


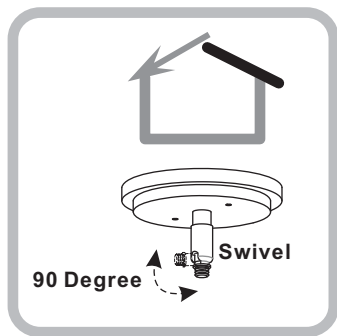


For angled ceilings,
Swivel opening towards wall.

 
1 Step 1 Install crossbar assembly

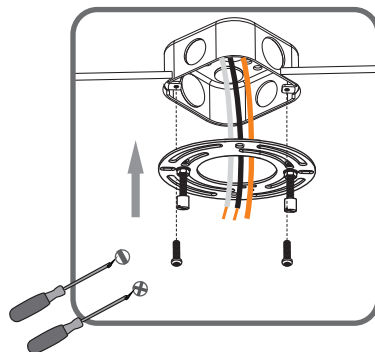

 
 
2 Step 2 - 3 Test fitting ceiling canopy to mounting screws

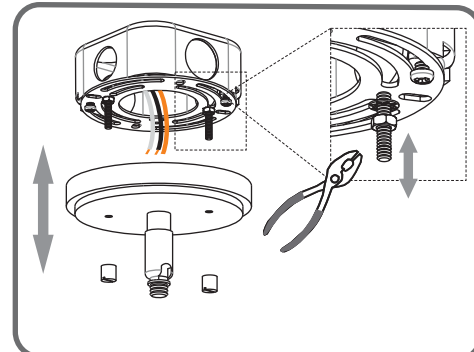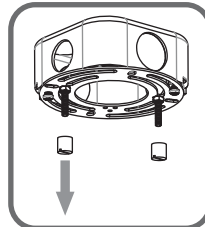

 
STEP 2

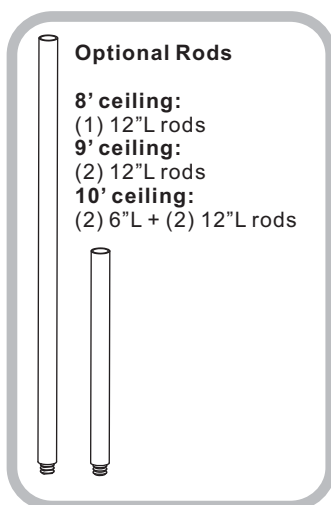


1 2

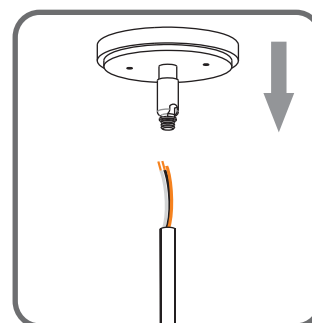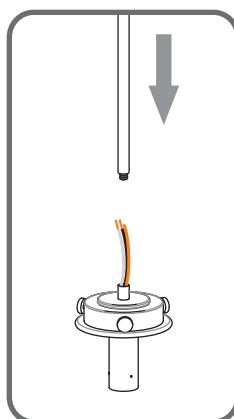  

 STEP 3

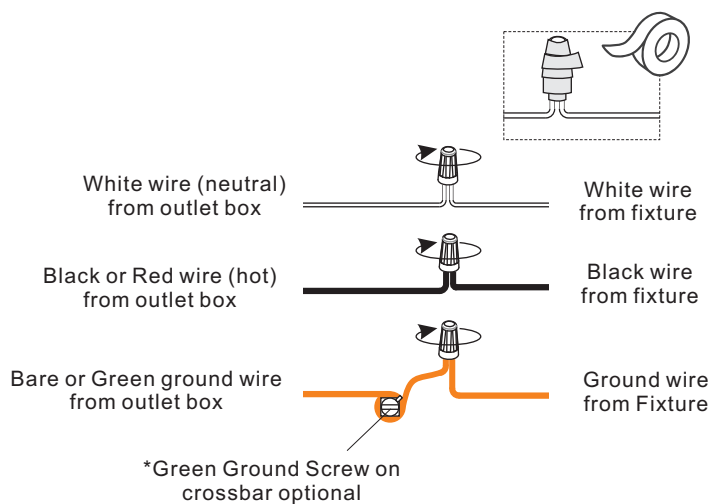

 
STEP 4

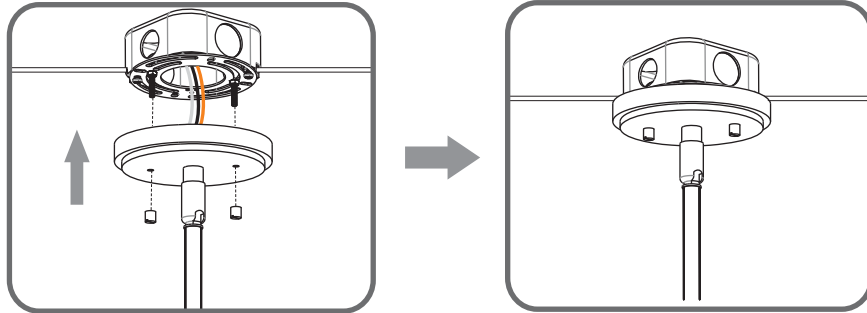

STEP 5



1

 Remove socket collar and
steel collar

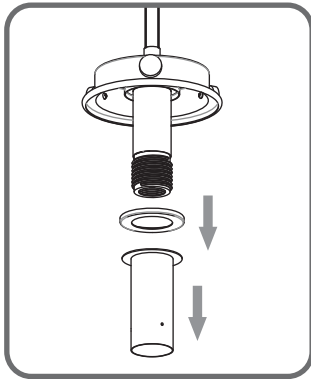

2

  
Install glass shade

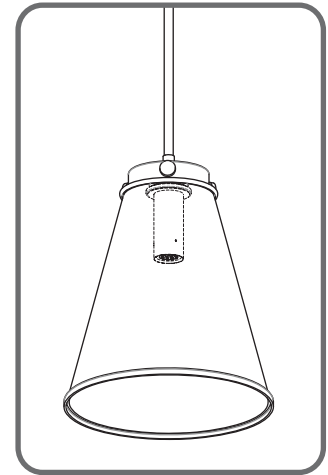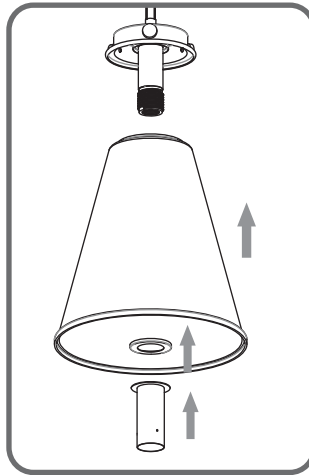

STEP 6


1

 Remove lock balls,
bolts from ring

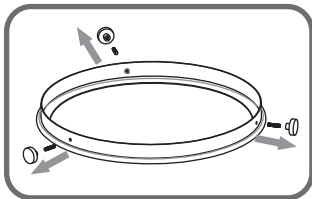



2

 Install glass shade

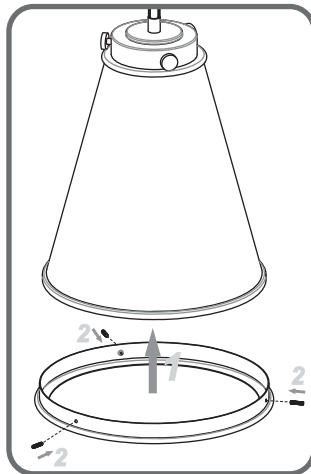

3

  Install lock ball

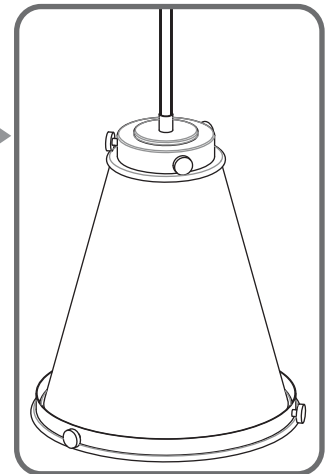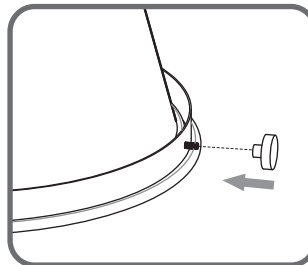

STEP 7

