


Assembly Instruction

Description: BOOKCASE

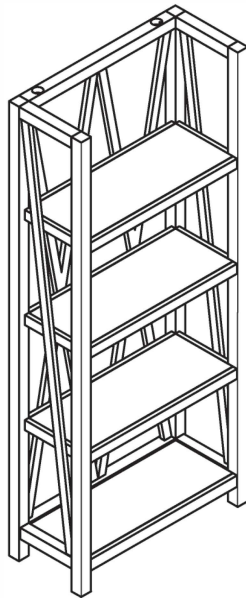

PARTS LIST:

①




②




LEFT SIDE FRAME: 1PC

RIGHT SIDE FRAME: 1PC

③

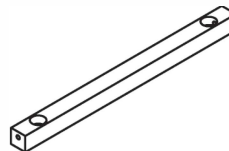


④

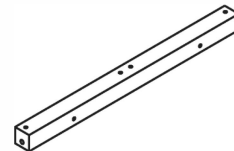

TOP RAIL BACK: 1PC


BOTTOM RAIL BACK: 1PC

⑤

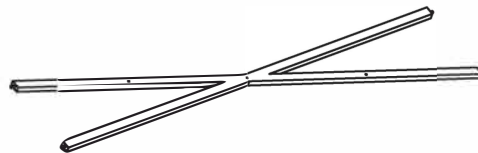


BACK FRAME : 2PCS

⑥

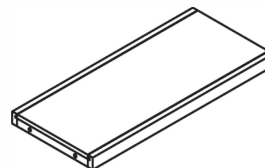

TOP SHELF : 3PCS

⑦

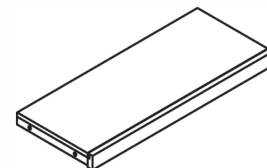


BOTTOM SHELF : 1PC

HARDWARE LIST


NO.	Drawing	Description	
A		Allen wrench (4mm)	1pc
B		Bolt Ø1/4"x1-1/4"	18pcs
C		Spring washer (Ø1/4")	18pcs
D		Flat washer (Ø1/4"x16mm)	18pcs
E		Cover cap plastic (Ø20 x Ø18 x 7mmH)	18pcs
F		Ø5/16" Wrench(12mm)	1pc
G		Threaded bolt Ø5/16" X3-1/2"	4pcs
H		Hex nut (Ø5/16")	4pcs
I		Flat washer (Ø28x14.5x7.5)	4pcs
J		Wood screw (Ø8x1")	6pcs
K		Bracket	2pcs
L		Tie warp	1pc
M		Long screw	1pc
N		Short screw	1pc

Description: BOOKCASE


STEP1

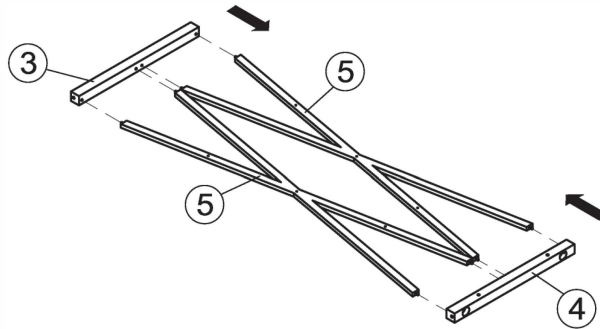


STEP2

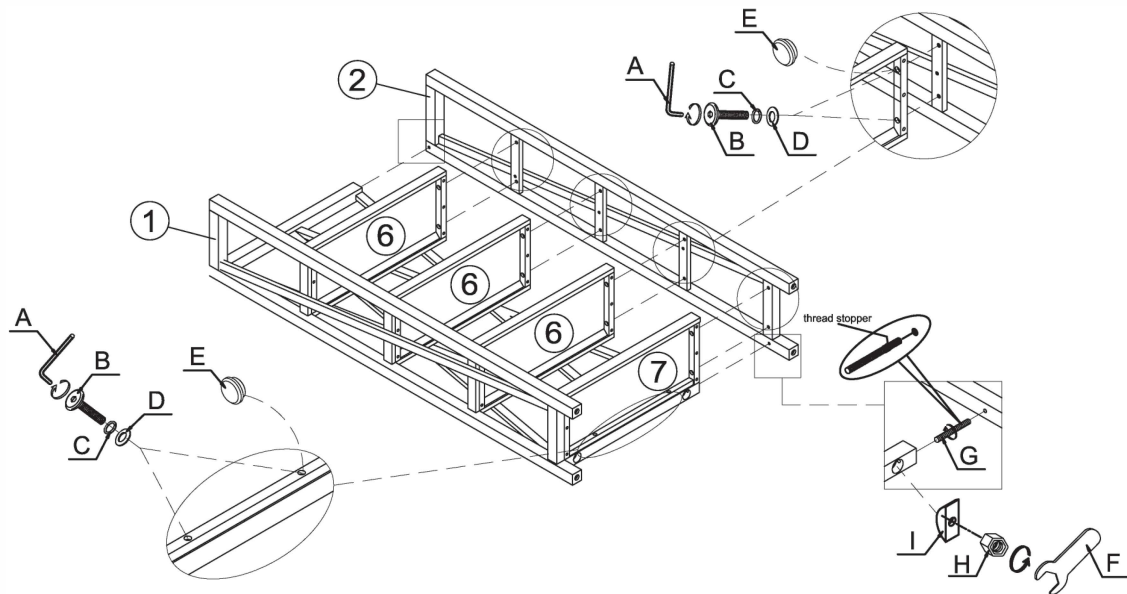

STEP3

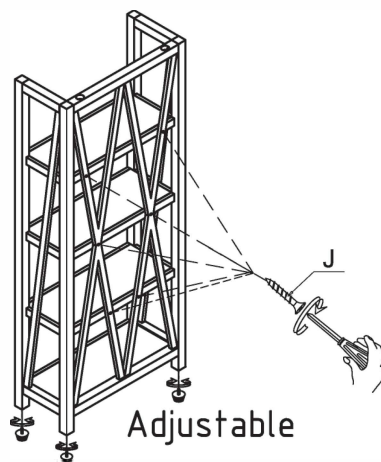


STEP4

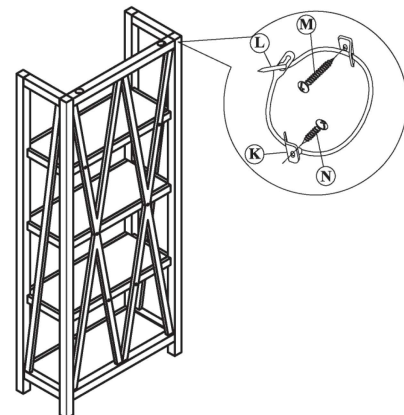

Anti-Tip Hardware Installation Instructions

Notice: In homes where small children may be present, We recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. We recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

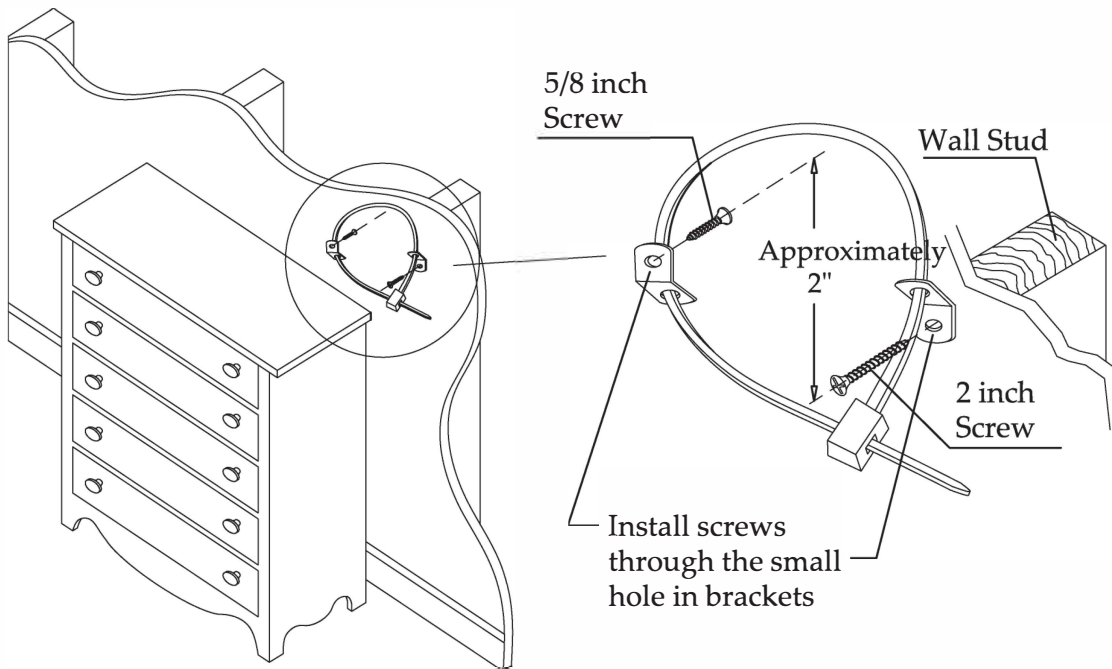

1. Temporarily locate the furniture to near it's final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the **2 inch long** Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the **5/8 inch long** Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: We assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.