

ASSEMBLY INSTRUCTIONS

ROUND DINING TABLE









Please read instructions carefully.


Remove all wrapping materials, staples and packing straps from the carton. Refer to Parts List and Hardware List and ensure they are complete before you start assembling. Place all wooden parts on a clean, flat and soft surface (e.g carpet or rug) to prevent parts from being scratched.

CAUTIONS:

- 1) DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
- 2) DO NOT OVER-TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.
- 3) KEEP ALL HARDWARE PARTS OUT OF REACH CHILDREN.

NO.	COMPONENT	QTY.
P1	TABLE TOP	1
P2	METAL LEG FRAME with LED cable	1
P3	METAL LEG FRAME	3
P4	BASE PANEL	1
P5	SHELVE PANEL	1

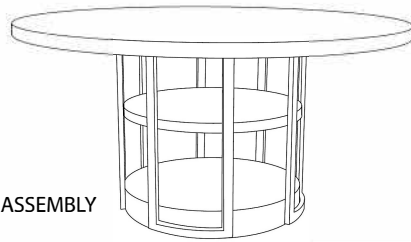


NO.	HARDWARE LIST	QTY.
H1	M6 x 40mm JCBC SCREW 	16
H2	M6 x 20mm JCBC SCREW 	20
H3	SPRING WASHER 	36
H4	FLAT WASHER 	36
H5	ALLEN KEY 	1
H6	METAL ANGLE 	4
H7	LEG LEVELER 	4
H8	LED FEATURES 	2




COMPLETE ASSEMBLY

STEP 1

 



Take three pieces of Metal leg (P3) and assemble them to the Top Panel (P1) by aligning the Bolt (H2) that fit with Spring washer (H3) & Flat washer (H4) through the holes at the underside of the Top Panel. Tighten all the bolts using Allen key (H5), but not too fully tighten yet.

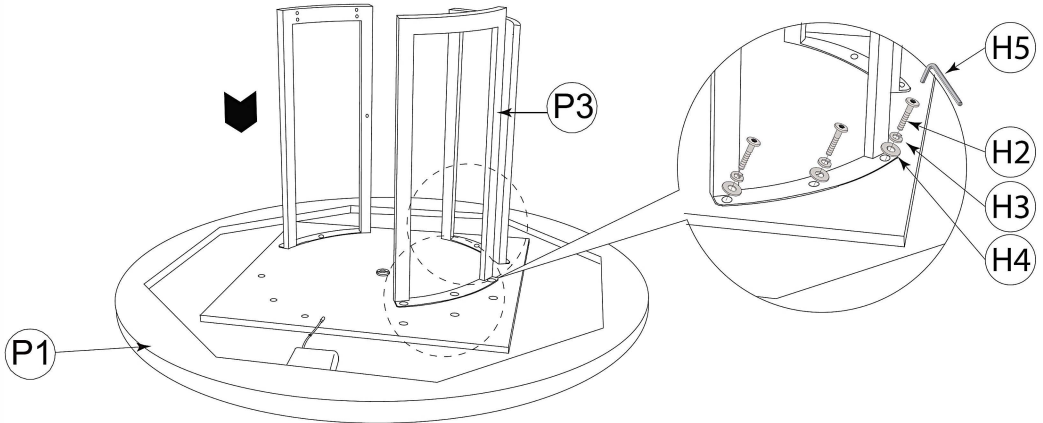
H2 x 9		M6 x 20mm
H3 x 9		
H4 x 9		



STEP 2

 


Assemble the Shelf Panel (P5) into the table legs (P3) by using the Metal L-Angle (H6) and fit it by aligning the Bolt (H2) that fit with Spring washer (H3) & Flat washer (H4). Tighten all the bolts using Allen key (H5).

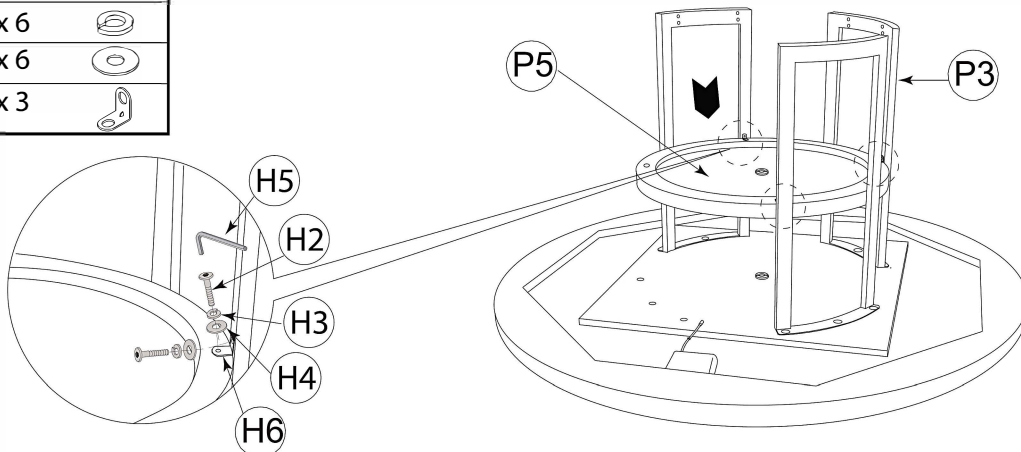
H2 x 6		M6 x 20mm
H3 x 6		
H4 x 6		
H6 x 3		



STEP 3

 
 



Assemble the Base Panel (P4) to the three Metal Legs (P3), and Align the Bolts (H1) that fit with Spring washer (H3) & Flat washer (H4) through the holes in the Base Panel right to the nuts in the Metal Legs. Tighten the bolts using the Allen key (H5).

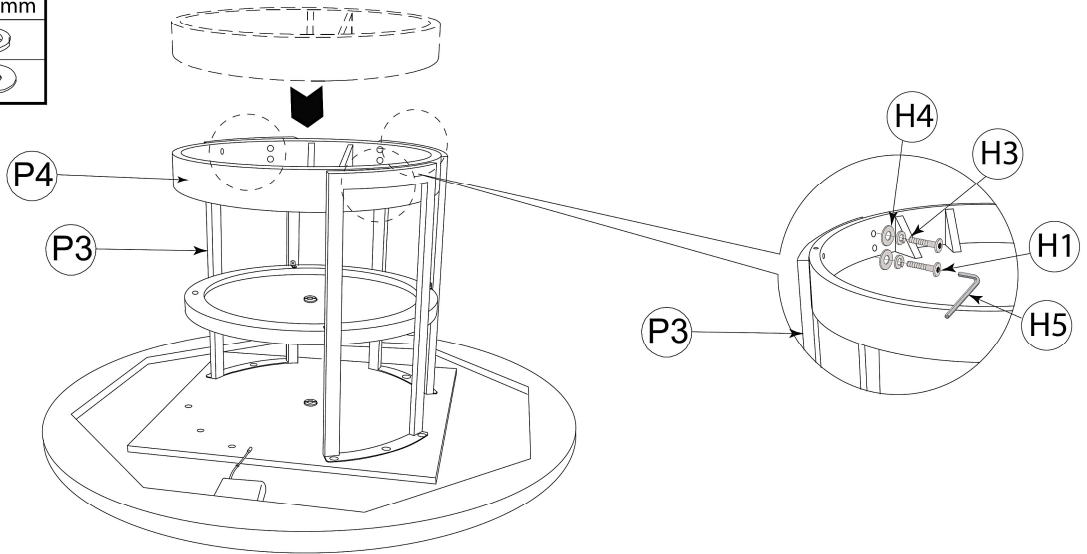
H1 x 12	
M6 x 40mm	
H3 x 12	
H4 x 12	



STEP 4

Assemble the Metal Leg (P2) that come with wire management for the LED lights, to the Top Panel (P1), Shelf Panel (P5) and the Base Panel (P4). Use the Bolt (H1) fitted with Spring Washer (H3) and Flat Washer (H4). Tighten the bolts using the Allen key (H5).

H1 x 4	
M6 x 40mm	
H2 x 5	
M6 x 20mm	
H3 x 9	
H4 x 9	
H6 x 1	

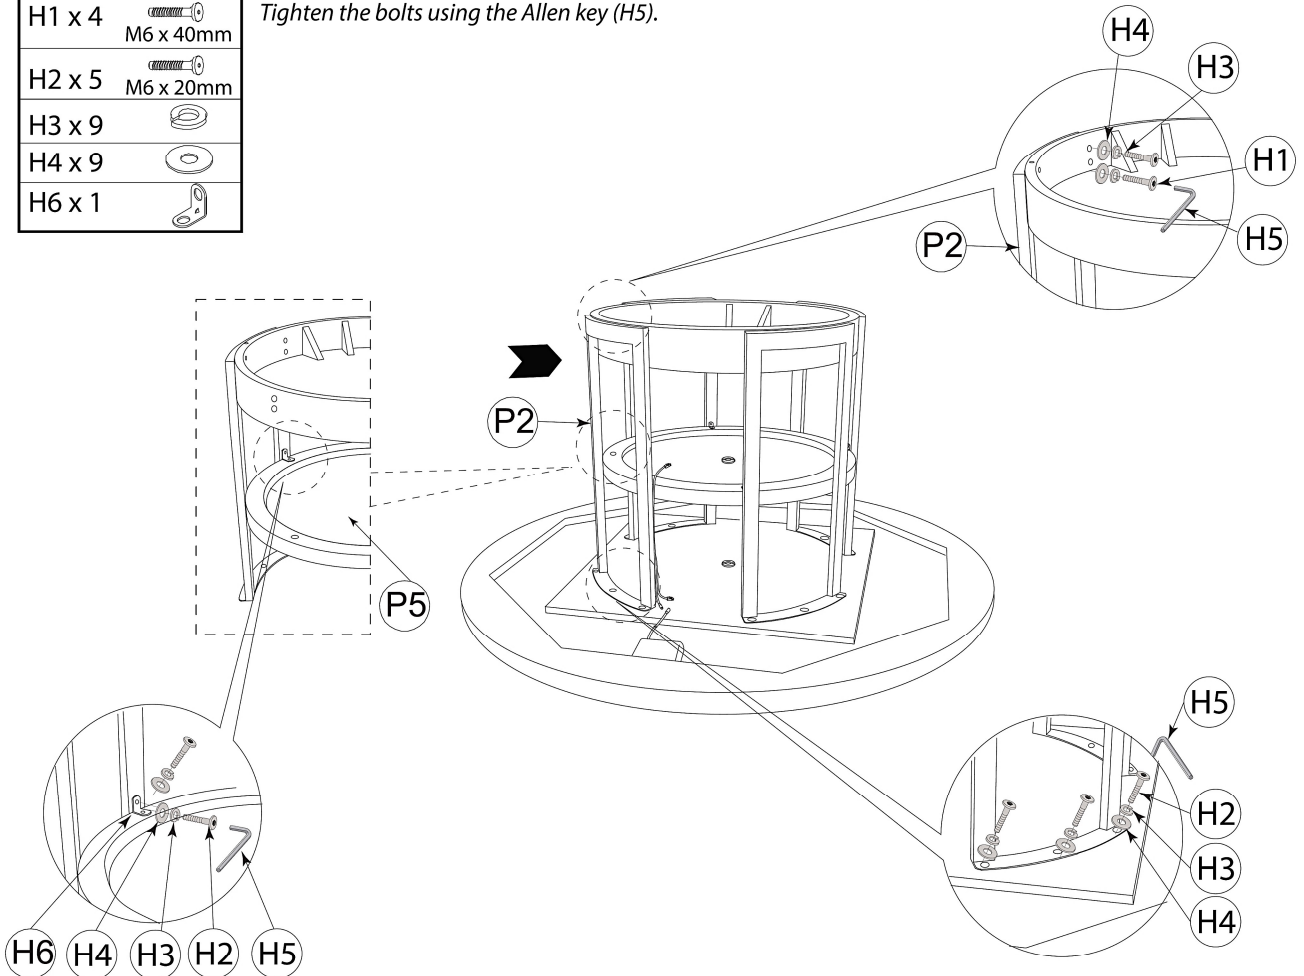

Fit the Metal Leg (P2) to Shelf (P5) using the Metal Angle (H6) that tighten with Bolt (H2) with Spring washer (H3) & Flat washer (H4). Use Allen key (H5) to tighten the bolts.

STEP 5



H7 x 4



H8 x 2



Align the Leg Leveler (H7) to the table base. Before turn the table upright, attach the LED fittings (H8) to the magnetic brackets at Shelf Panel (P5) and the Top Panel (P1): connect the wire sockets of the LED fittings to the wire sockets that clip on the Leg (P2).

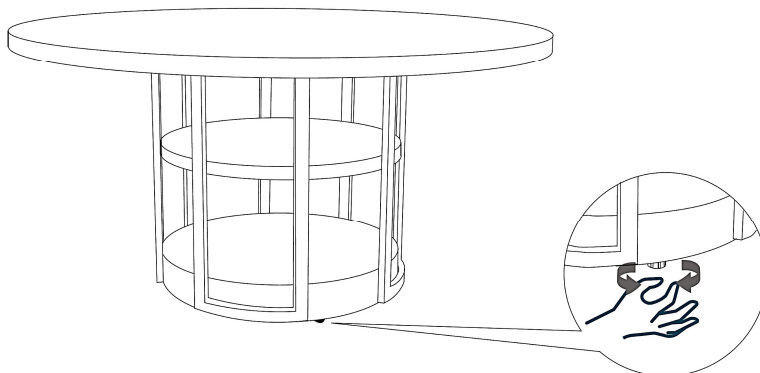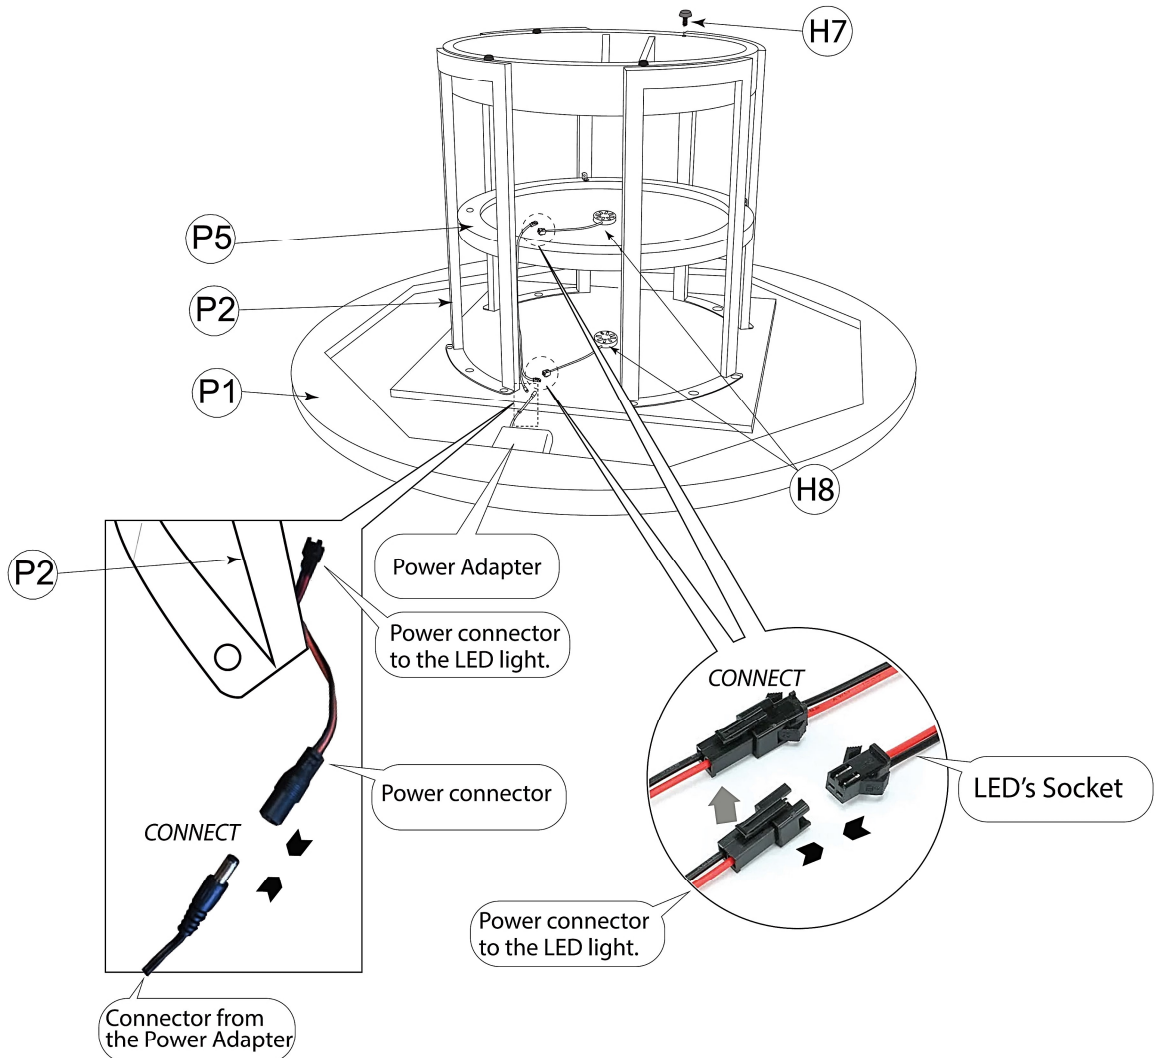

**CAREFULLY PUT THE TABLE UPRIGHT BY TWO OR MORE ADULT PEOPLE.
ADJUST THE LEVELER (H6) TO LEVEL THE TABLE**