



Ax2 	Bx3 	Cx4 	Dx1 	Ex1 	Fx8 6x13mm 
Gx12 6x25mm 	Hx1 6x35mm 	Ix4 8x40mm 	Jx22 	Kx4 	Lx20 
Mx1 	Nx1 	Ox4 	Px1 	Qx1 	
SPARE(Ersatzteile)					
Fx1 6x13mm 	Gx1 6x25mm 	Hx1 6x35mm 	Ix1 8x40mm 	Jx1 	
Kx1 	Lx1 	Mx1 	Nx1 	Ox1 	


### Step1

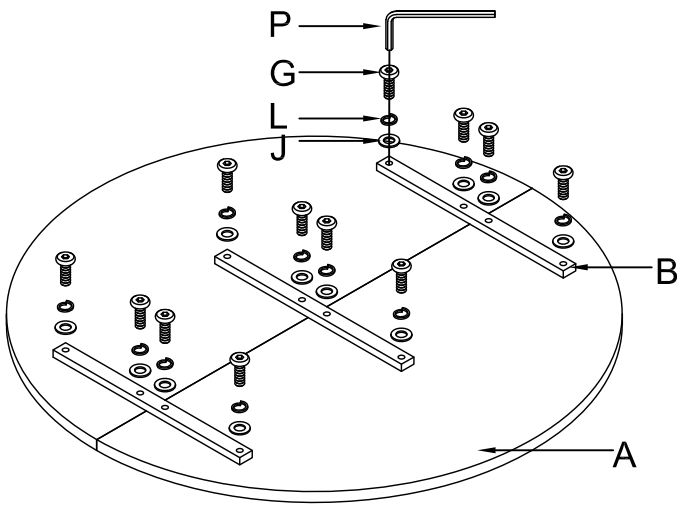

### Step2

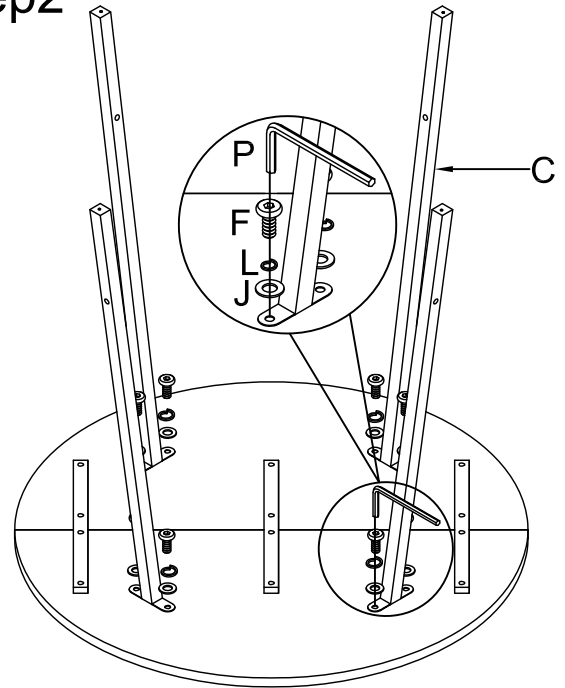

### Step3

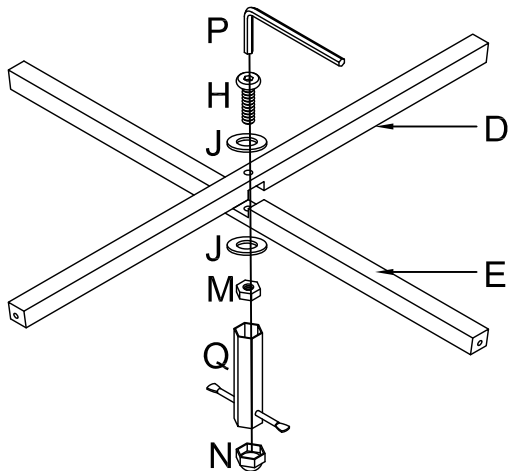

### Step4

