










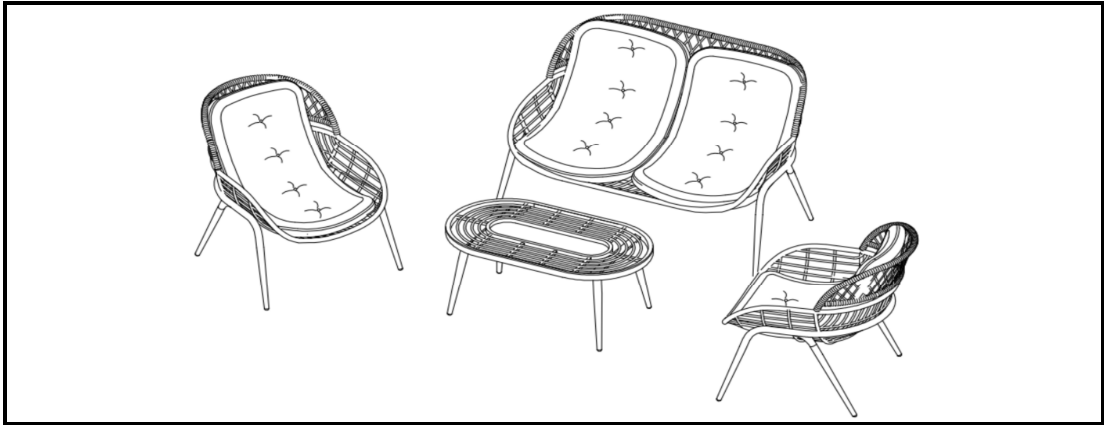


# ASSEMBLY INSTRUCTIONS

## 4 Pc Outdoor Set

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.


PARTS LIST			
ITEM	DESCRIPTION	SKETCH	QUANTITY
HW1	Bolt and Washer M6*15		28 PCS
HW2	Allen Key		1 PC
A	Chair		2 PCS
B	Chair Frame		2 PCS
C	Rear Leg		6 PCS
D	Cushion		4 PCS
E	Loveseat		1 PC
F	Loveseat Frame		1 PC
G	Table Top		1 PC
H	Table Leg		4 PCS
I	Table Glass		1 PC




## ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.


STEP 1

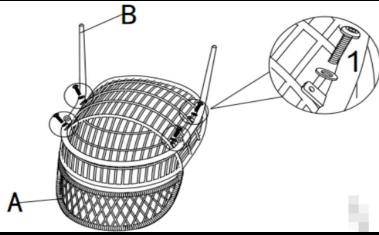


STEP 2

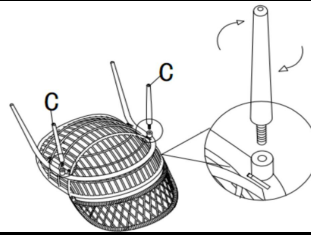


STEP 3

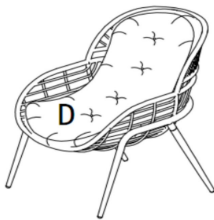


STEP 4

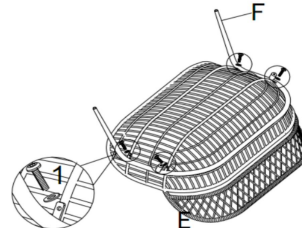


STEP 5

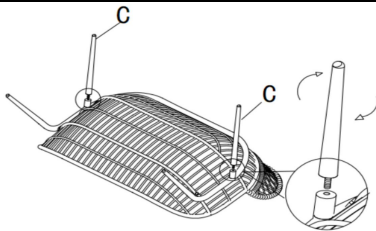


STEP 6

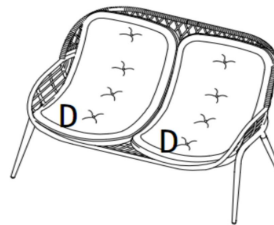

STEP 7

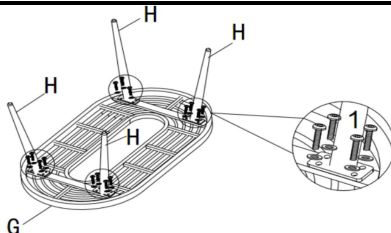

STEP 8

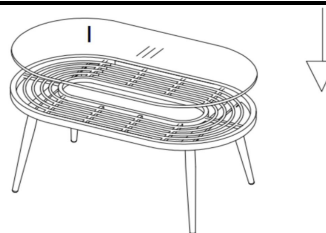

**CLEANING INSTRUCTIONS:** clean with a soft cloth, brush or lightly vacuum.

### ADULT ASSEMBLY REQUIRED

If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll-free, customer service number and have this assembly manual open to the parts list ready to provide the model name, number and part name or number.

