 


ASSEMBLY INSTRUCTIONS



PACKAGE INCLUDE

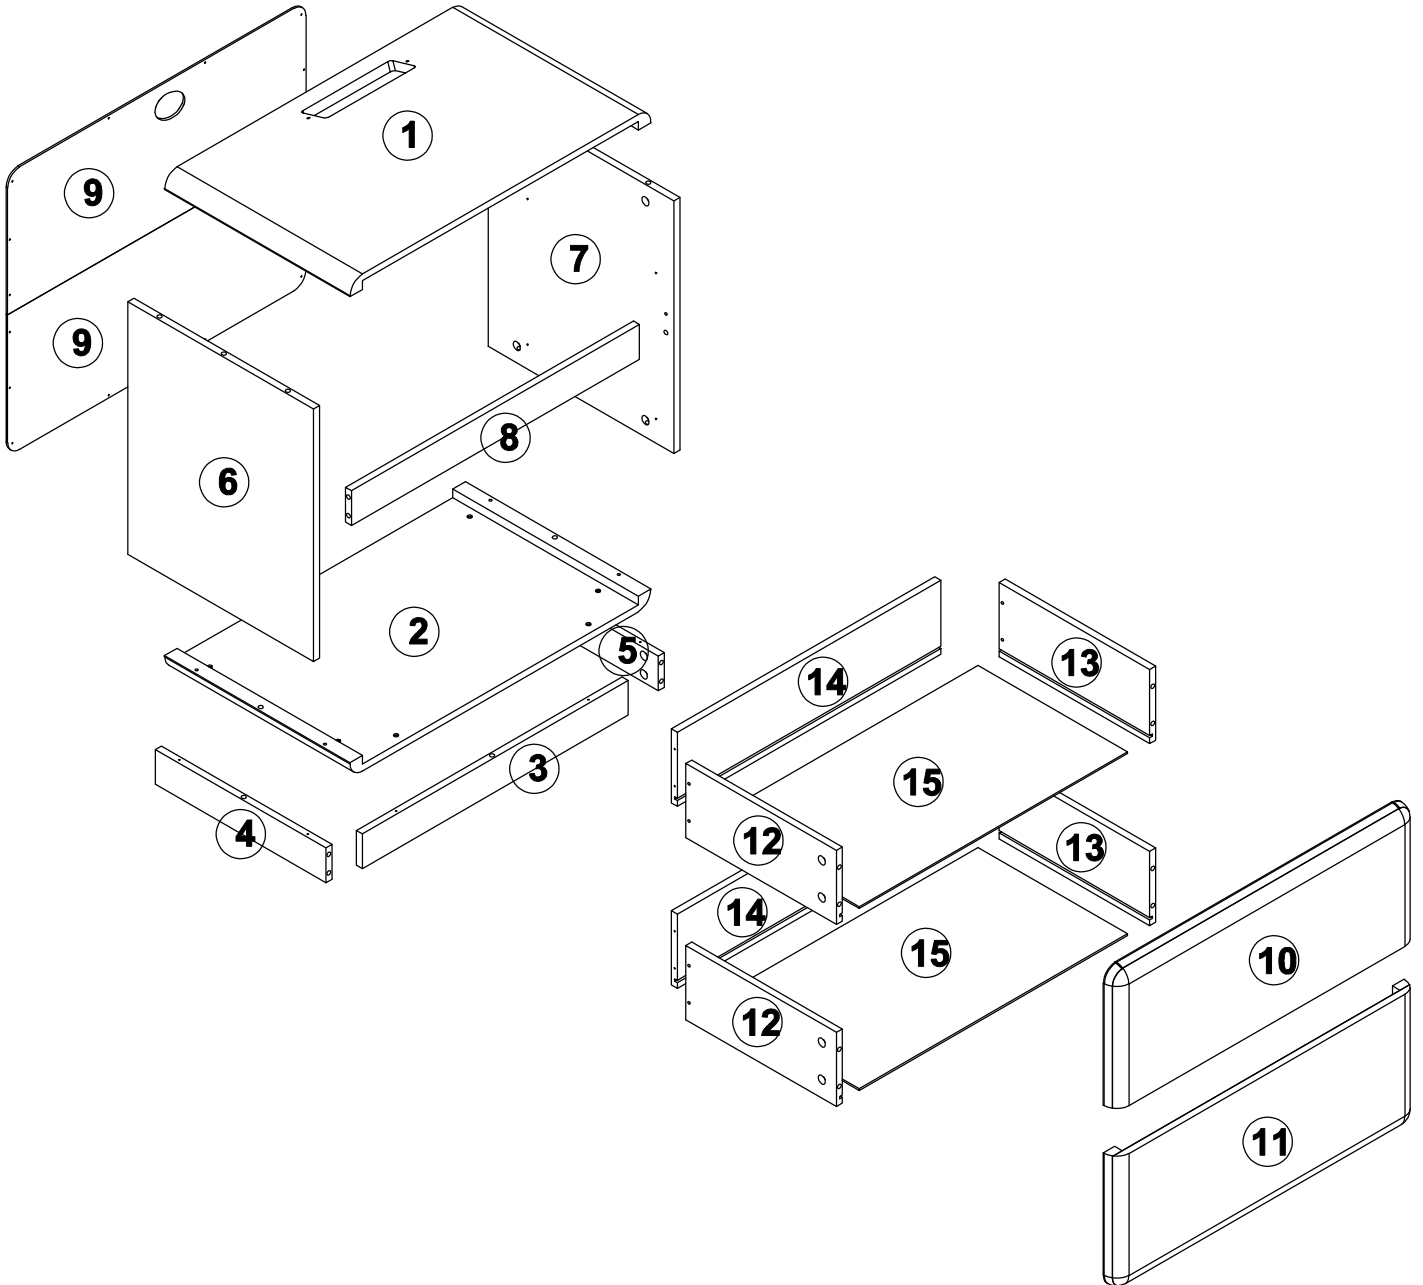


PACKAGE INCLUDE


CODE	DESCRIPTION	QTY
1	Top Panel	1
2	Base Panel	1
3	Fore foot Plate	1
4	Left foot Plate	1
5	Right Side Panel	1
6	Left Side Panel	1
7	Right Side Panel	1
8	Front connecting rod	1
9	Back Plate	2
10	Upper Padded Panels	1
11	Lower Padded Panels	1
12	Drawer Left Side Panel	2
13	Drawer Right Side Panel	2
14	Drawer Back Panel	2
15	Drawer Bottom Panel	2

PACKAGE CONTENT

 
Ø8X30mm




Ø6X34mm

 

Ø15X9.5mm

 

Ø4X30mm

 

A

9X+1

B

22X+2

 
C

22X+2


D

14X+1


12"

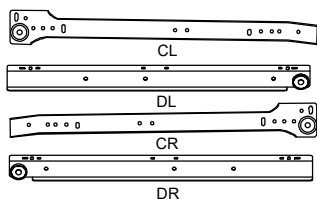

Ø3.5X12mm

 

Ø3X12mm

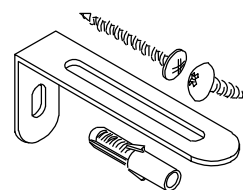 

E

2X

F

16X+1

G

16X+1

H

 
2X

Ø3X12mm



I


1X

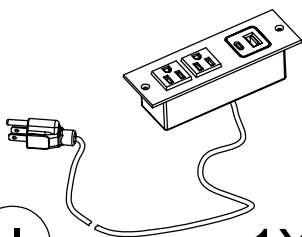


J

2X

 
How to use the cam lock system

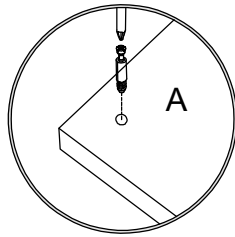

 
1. Screw cam bolt into panel

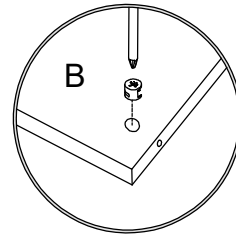

 
2. Push cam into panel - arrow feature on cam top points to panel edge

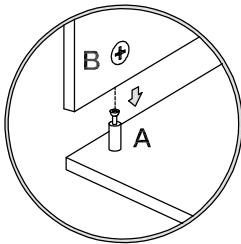

 3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

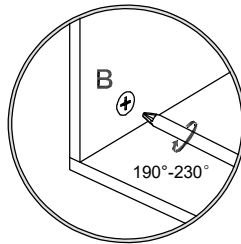


 4. Rotate cam(s) clockwise 190°-230° to lock panels together


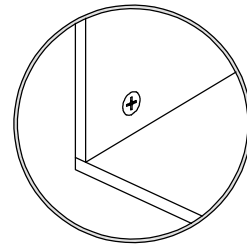


5. Panels should be tight against each other and connection should be rigid


 
Insert the wood dowel [C] at least half way by tapping lightly with a rubber mallet, IF NECESSARY.

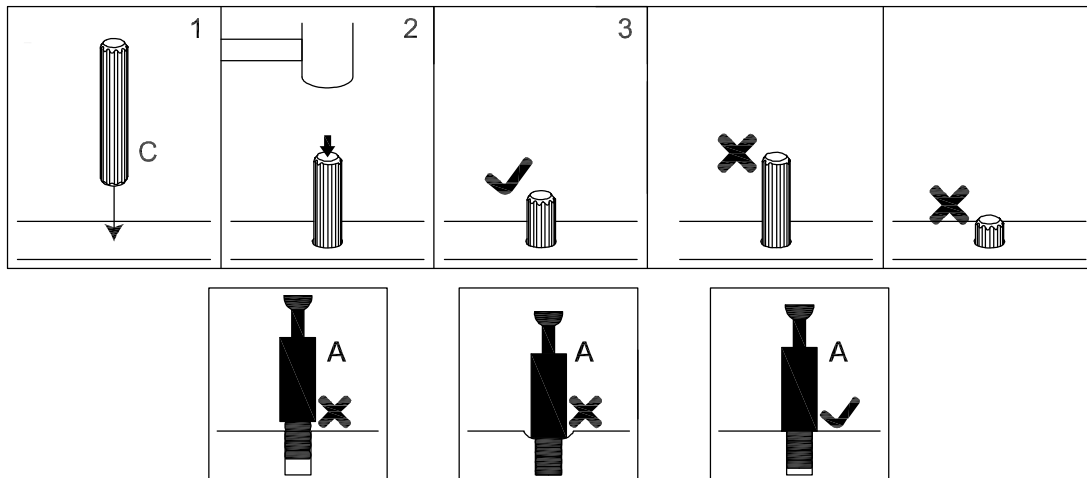

  
STEP 1

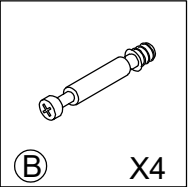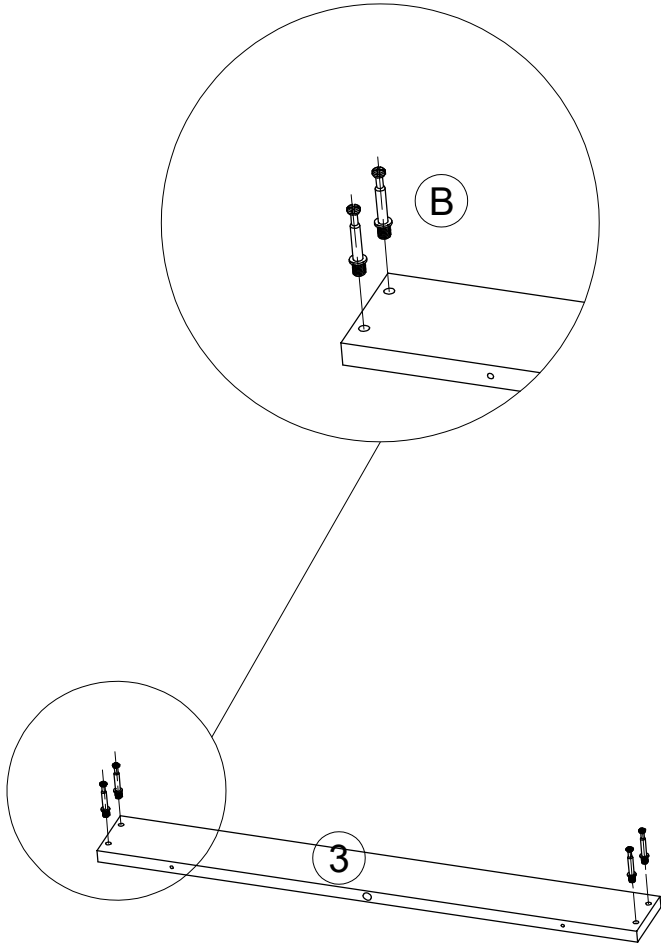

  
STEP 2

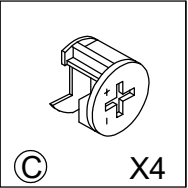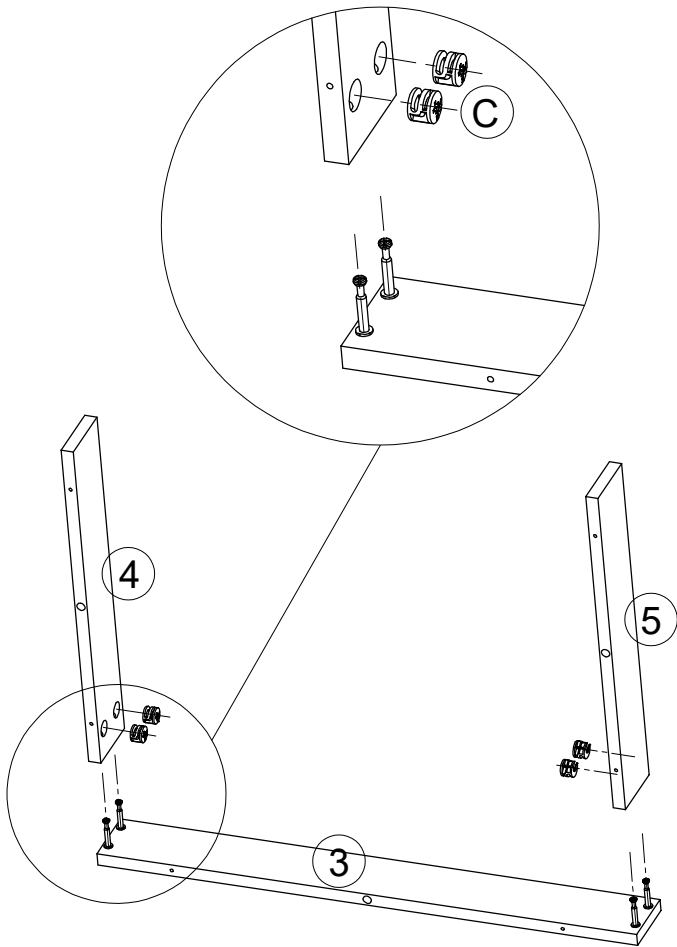



 
STEP 3



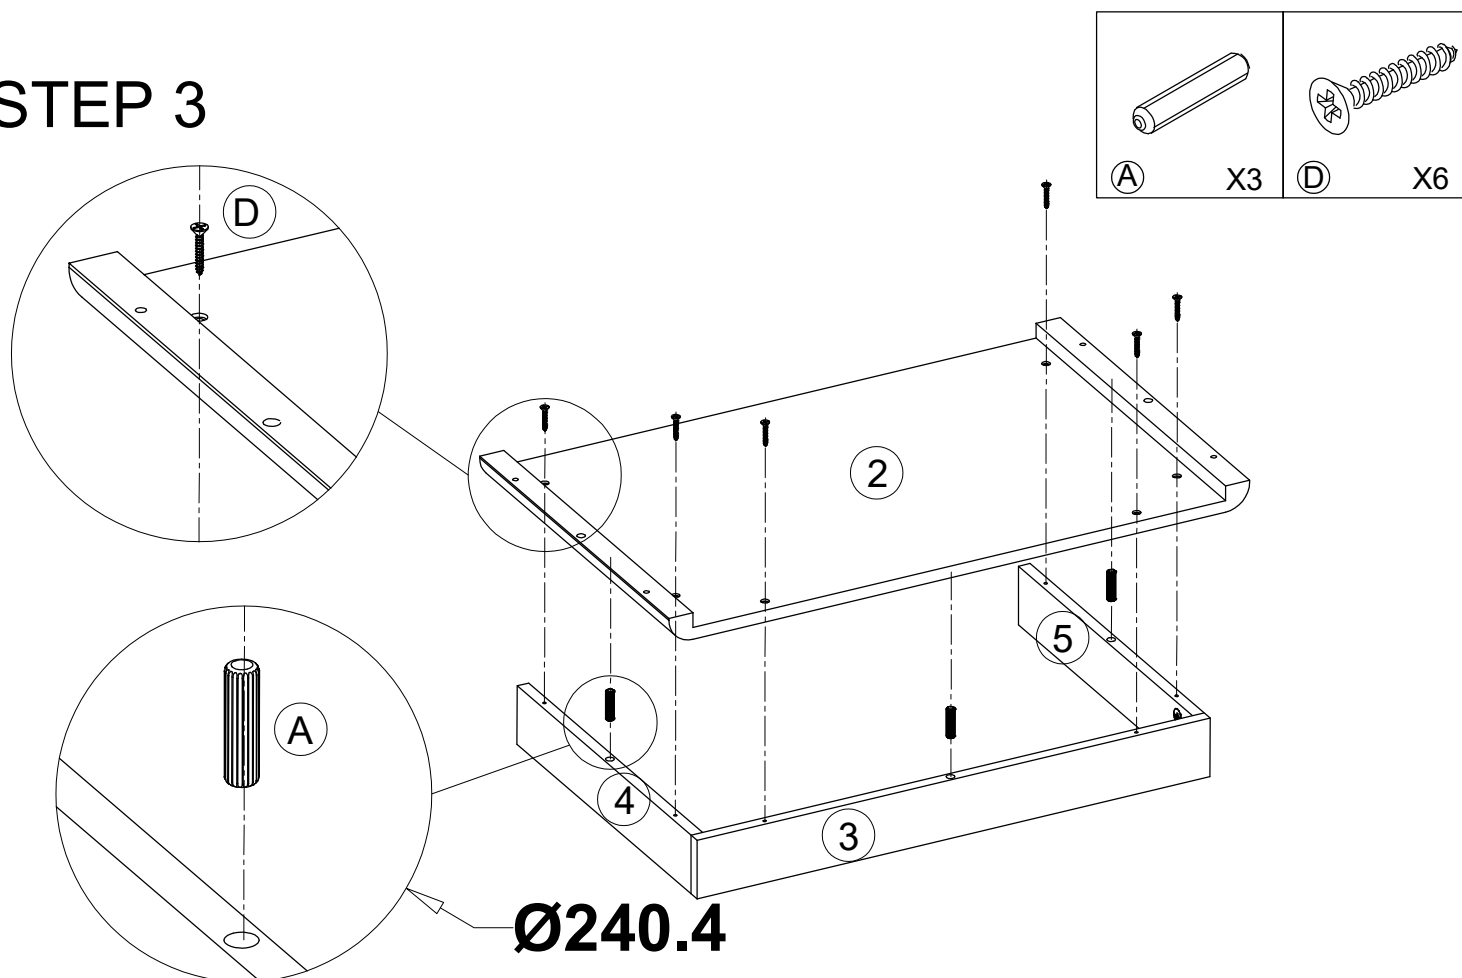


 STEP 4



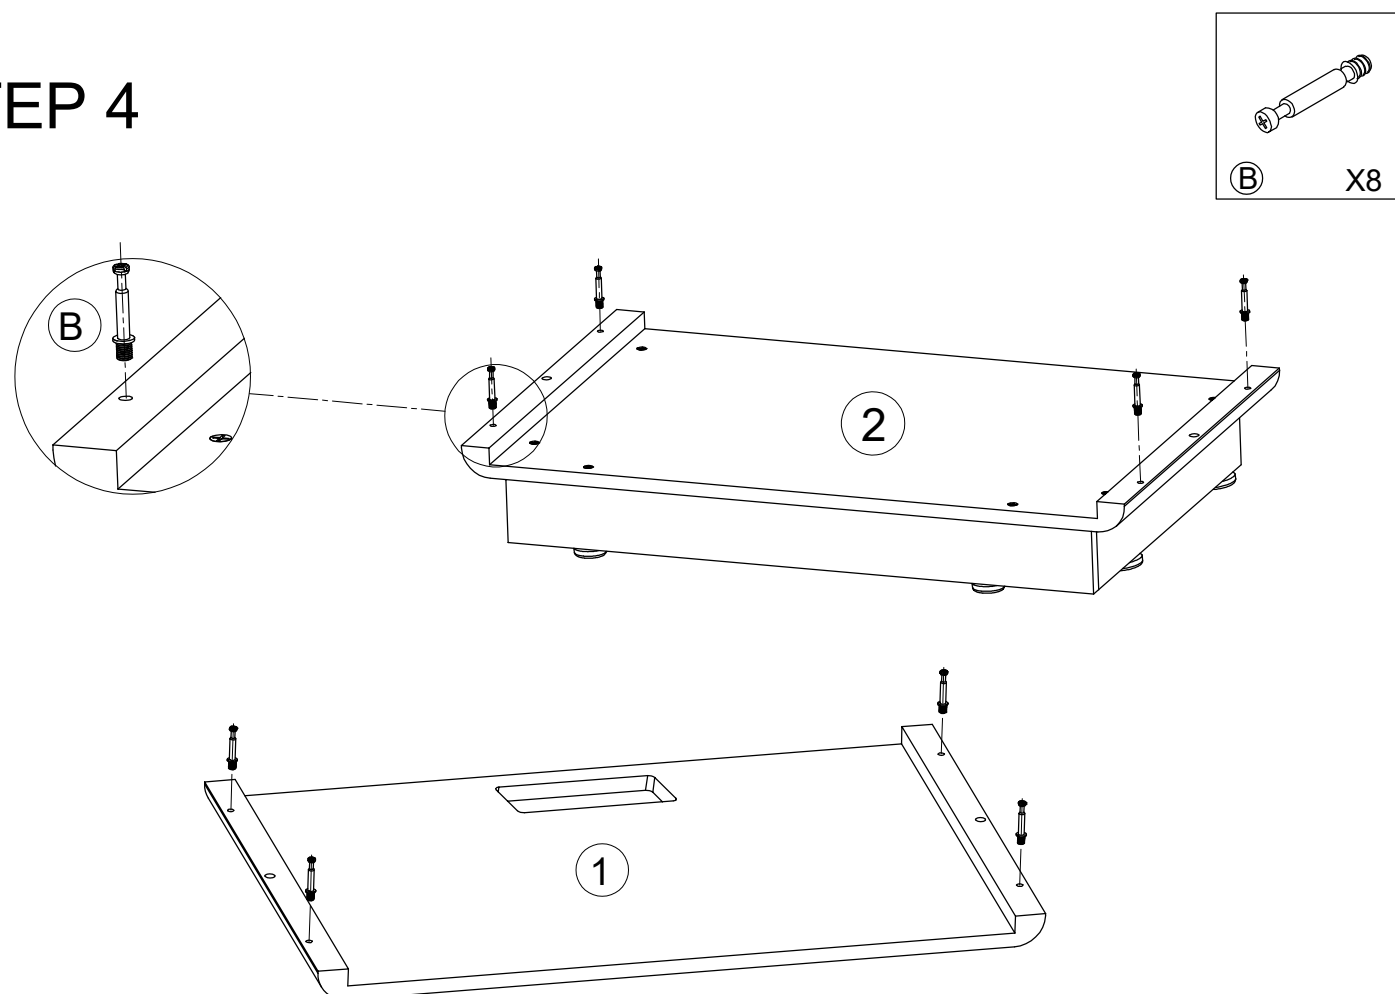


    
 
 
STEP 5

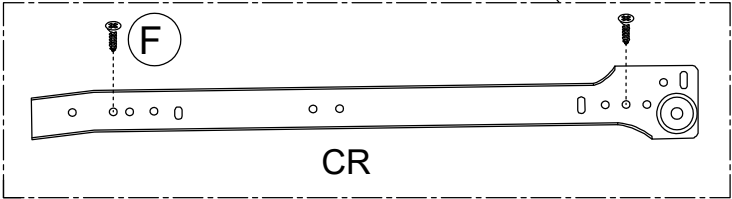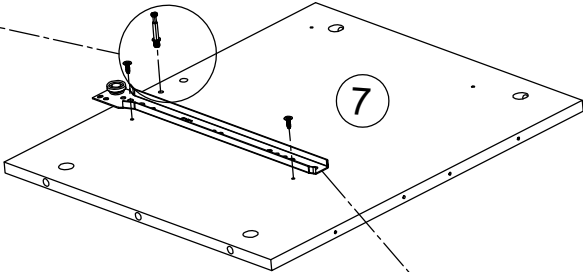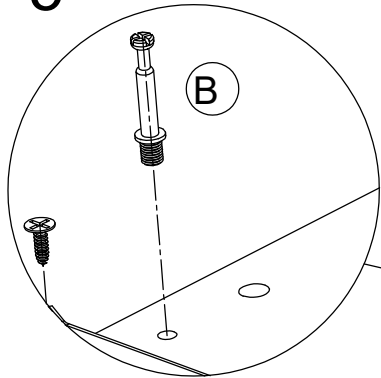




 CR		
(E) X1	(F) X2	(B) X1

      STEP 6

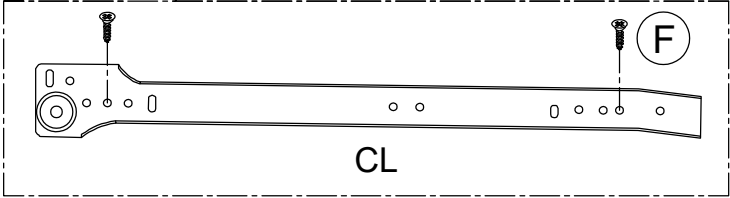
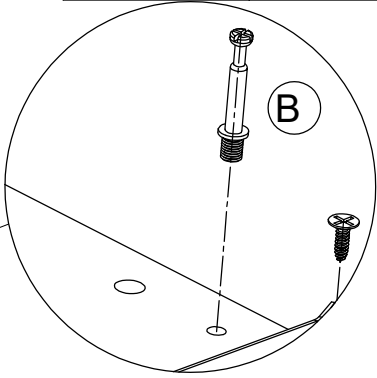
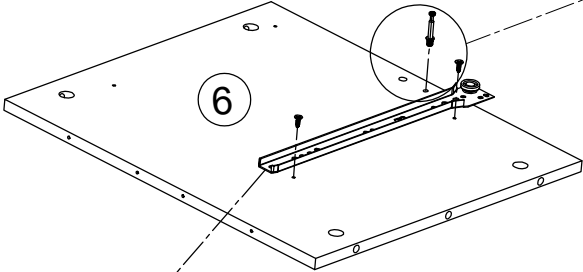


 CL		
(E) X1	(F) X2	(B) X1

 
 
 
STEP 7

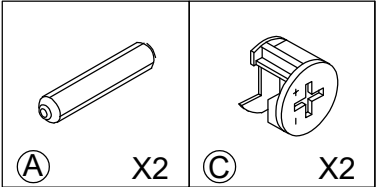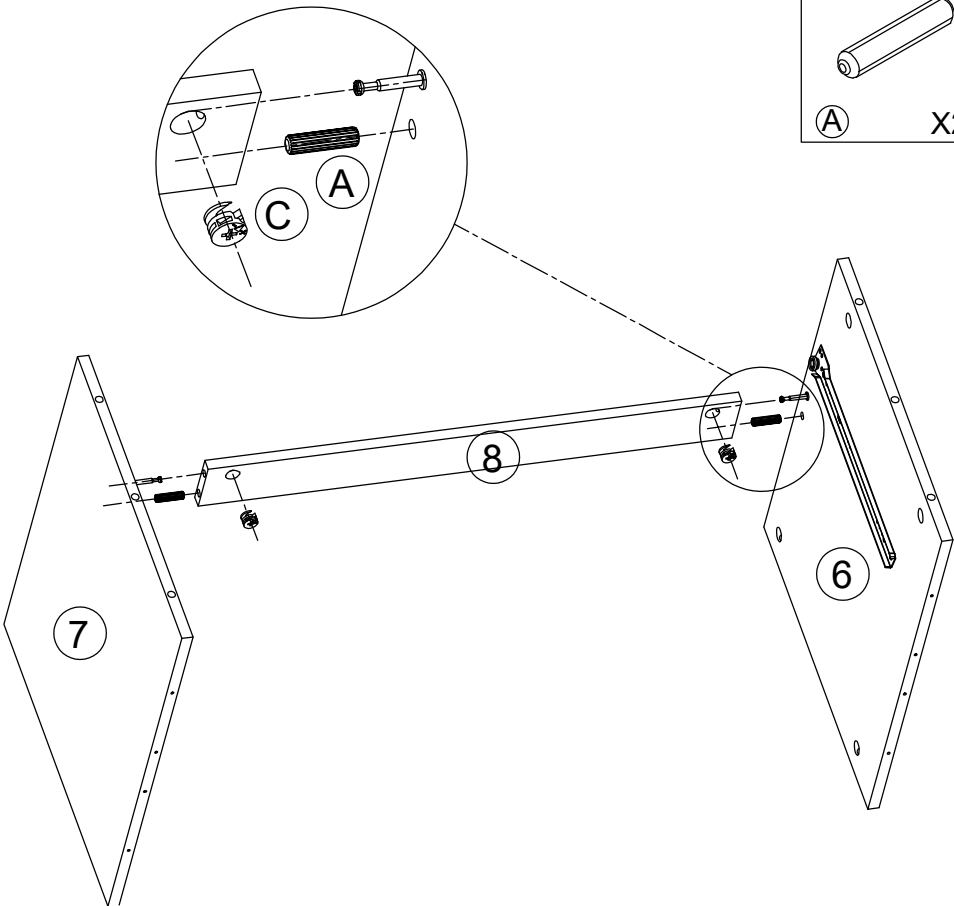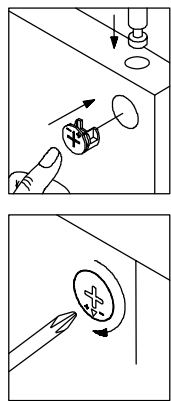

 
 
 
STEP 8

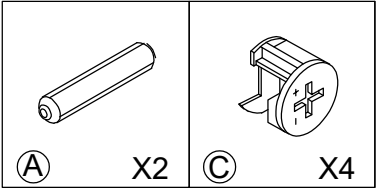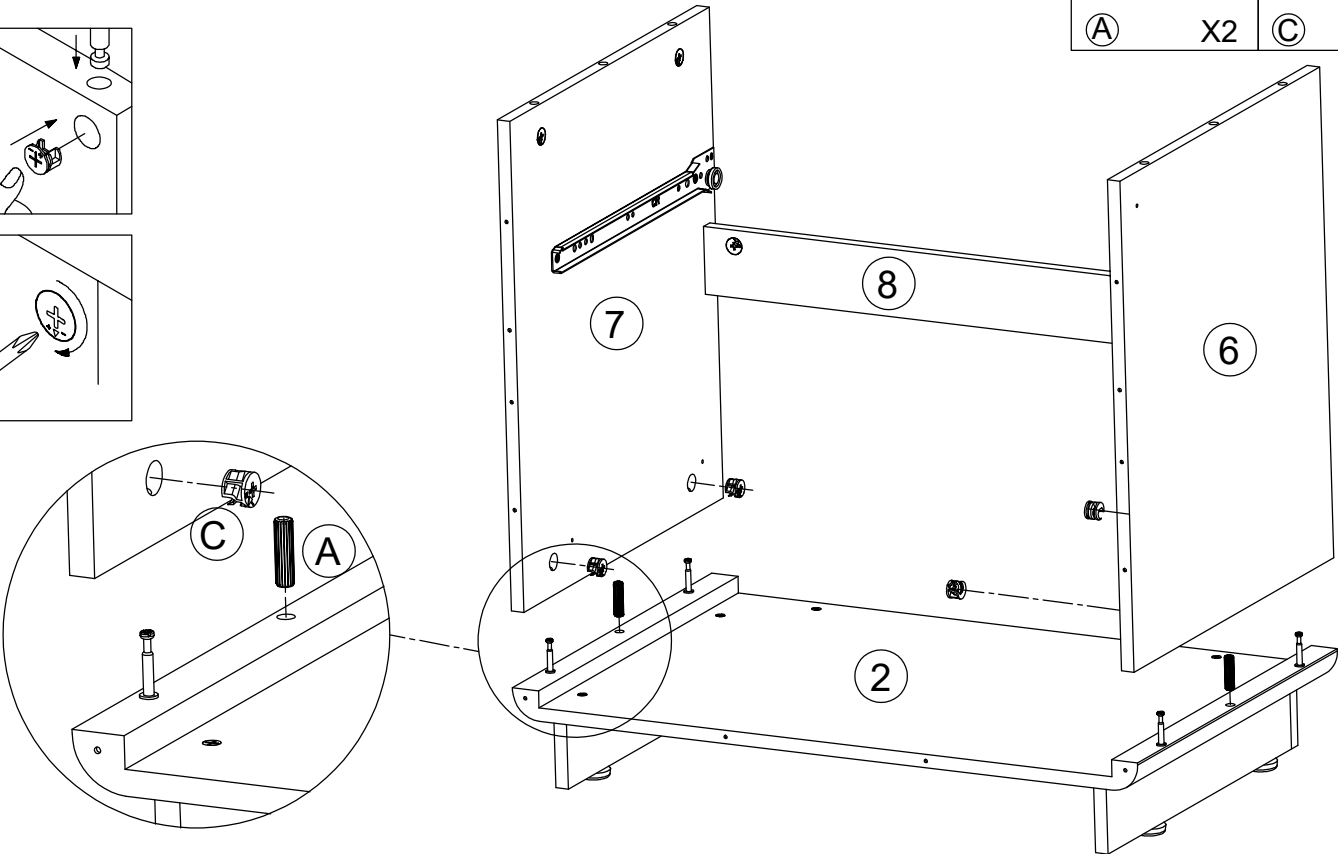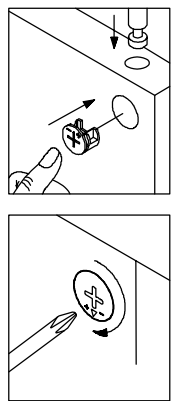

 
 
 
STEP 9

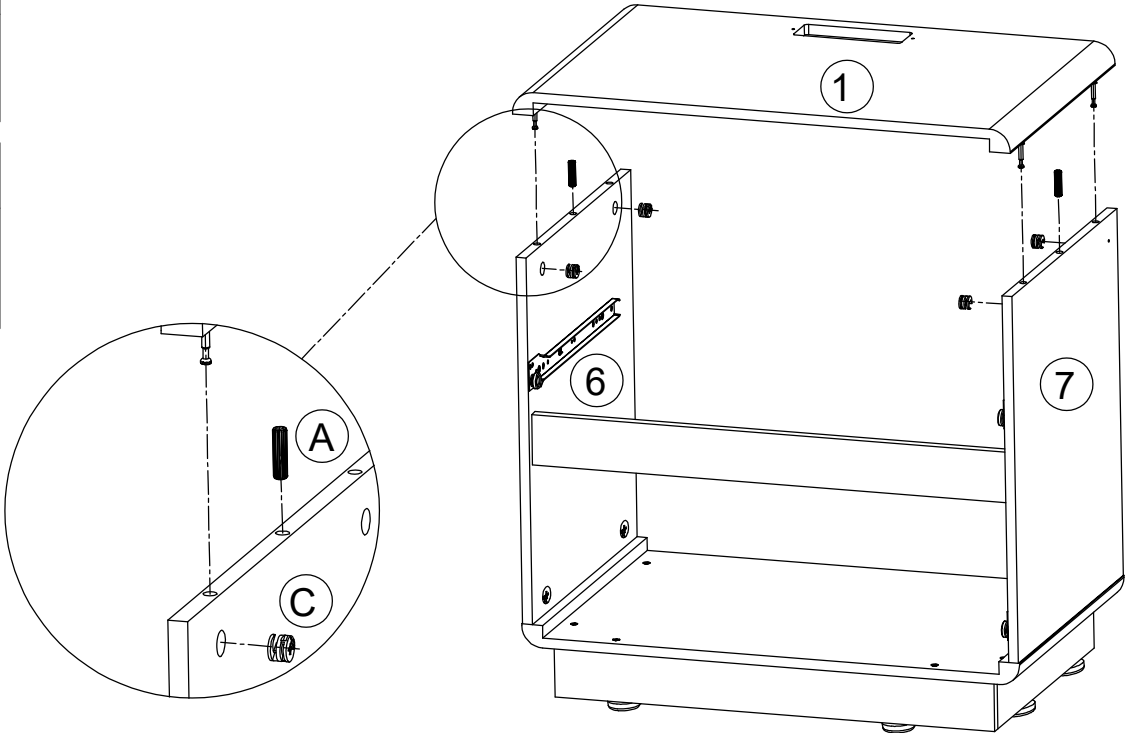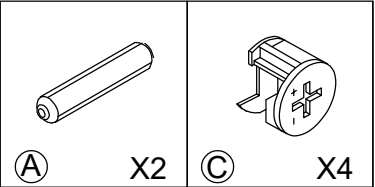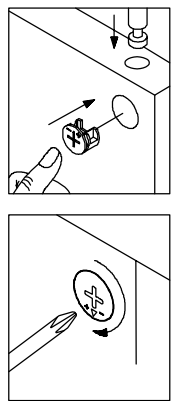

 
 
 
STEP 10

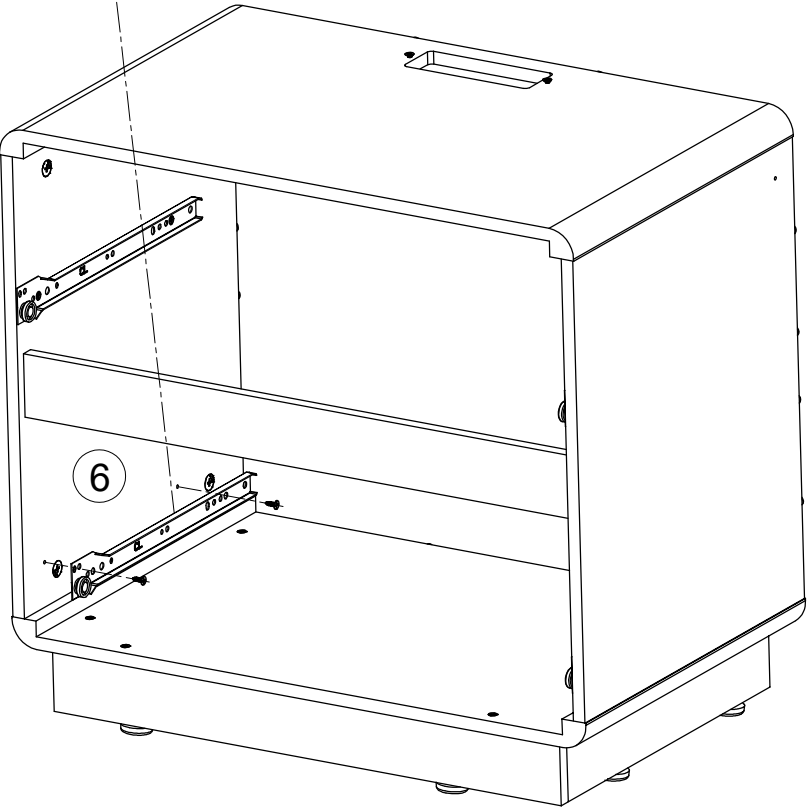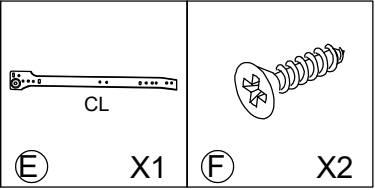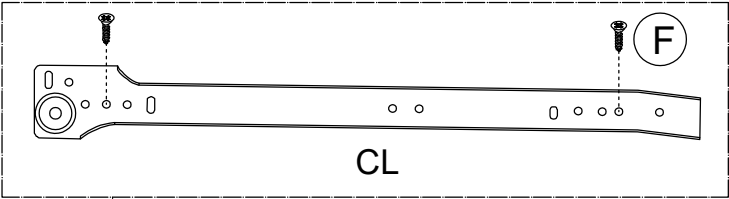

  
 
STEP 11

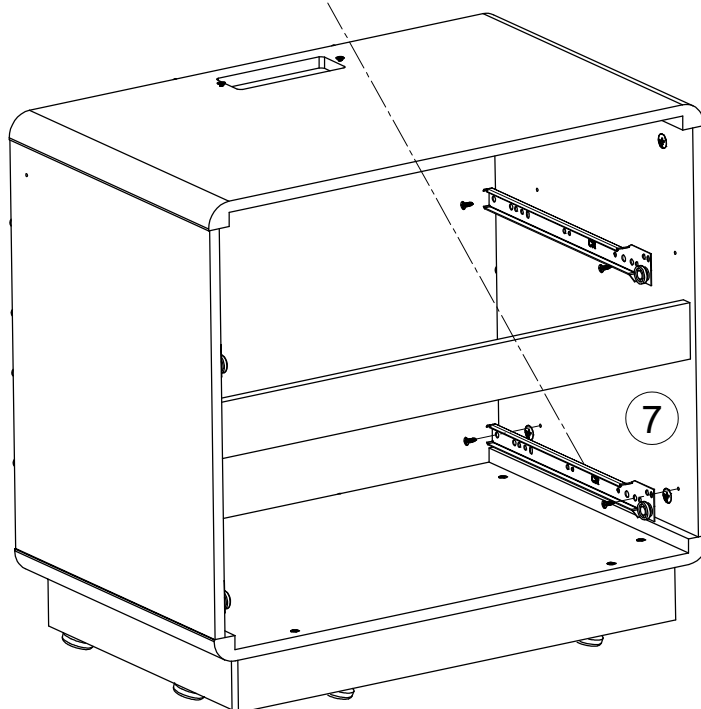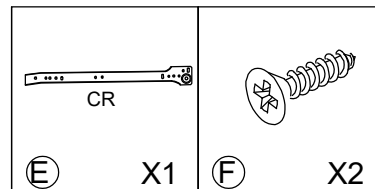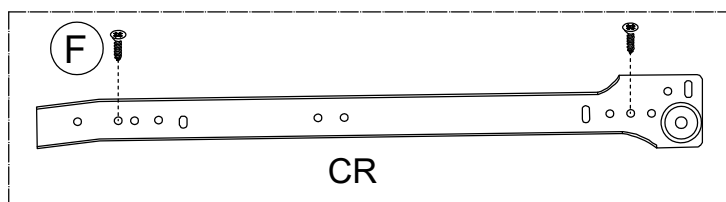

   STEP 12

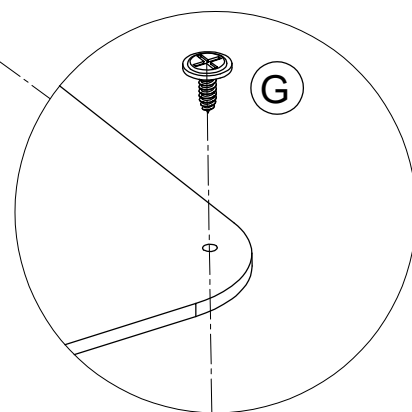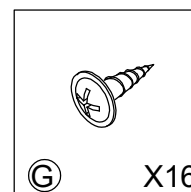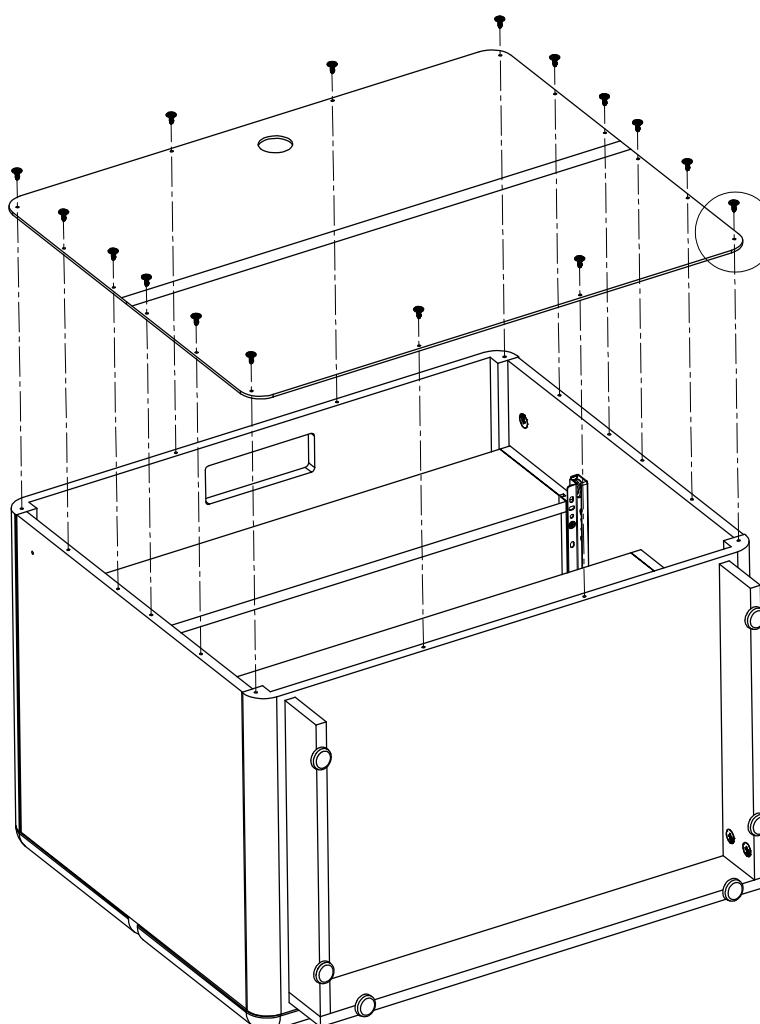


  STEP 13

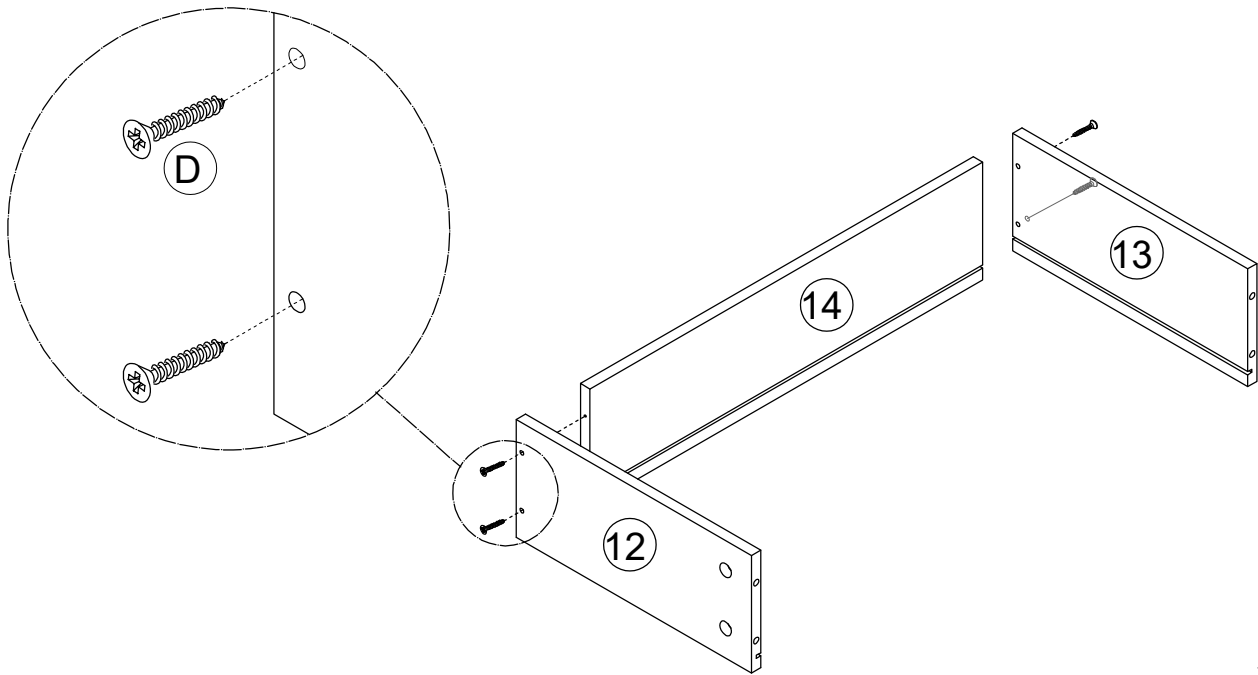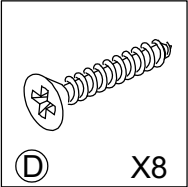



X2

 STEP 14


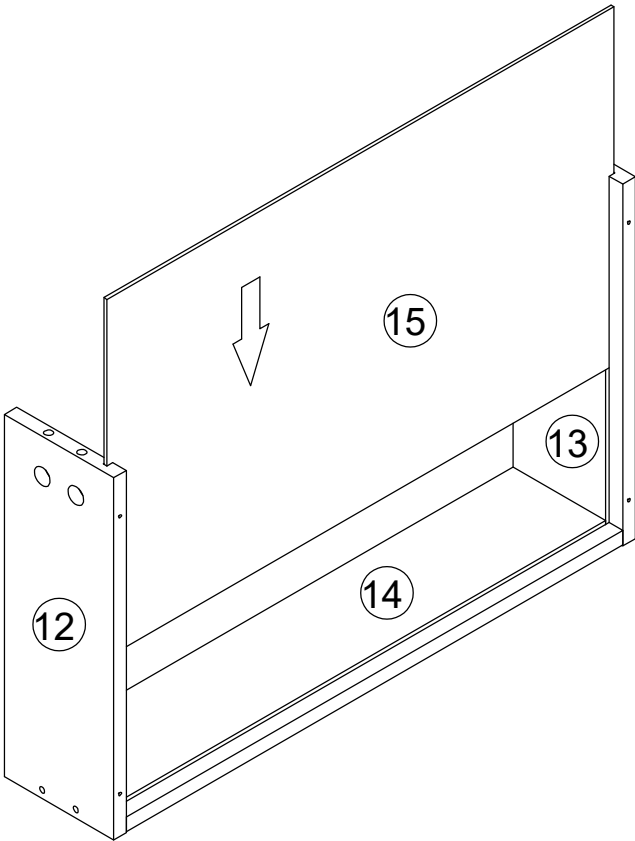


X2

 
 
STEP 15

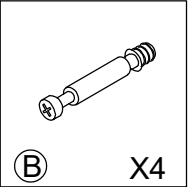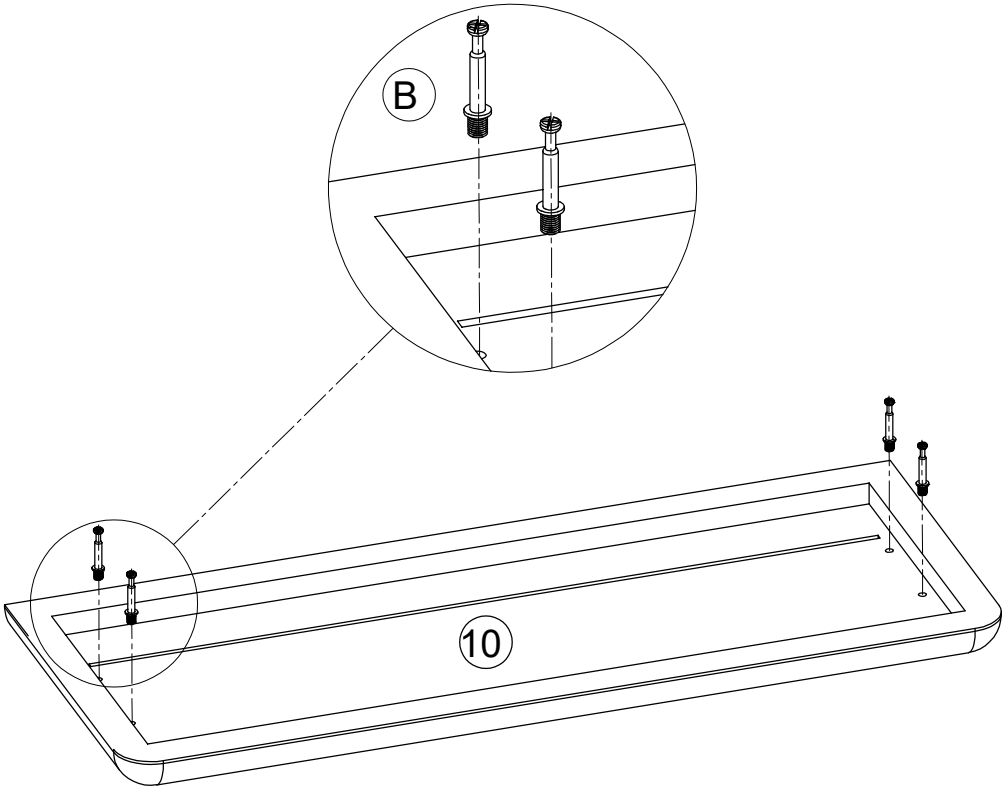

 
 
STEP 16

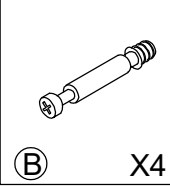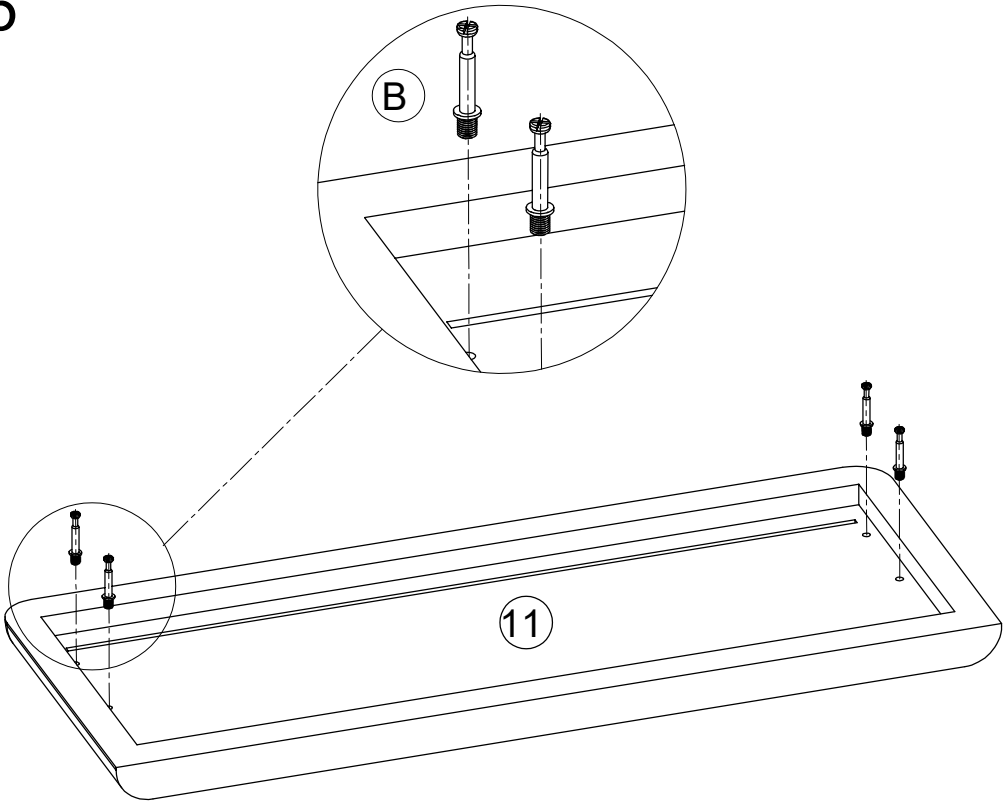

  
STEP 17

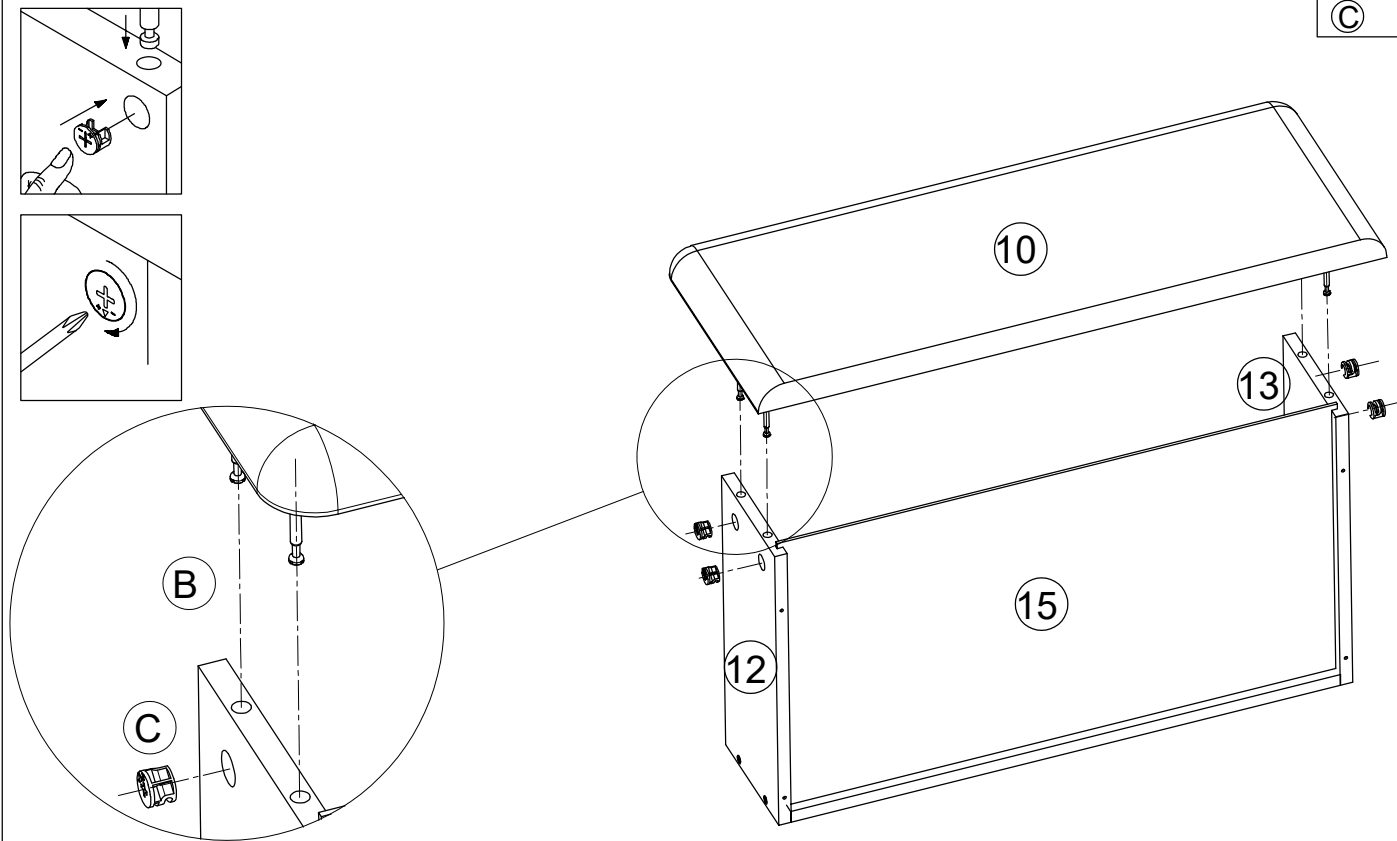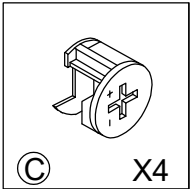


  STEP 18

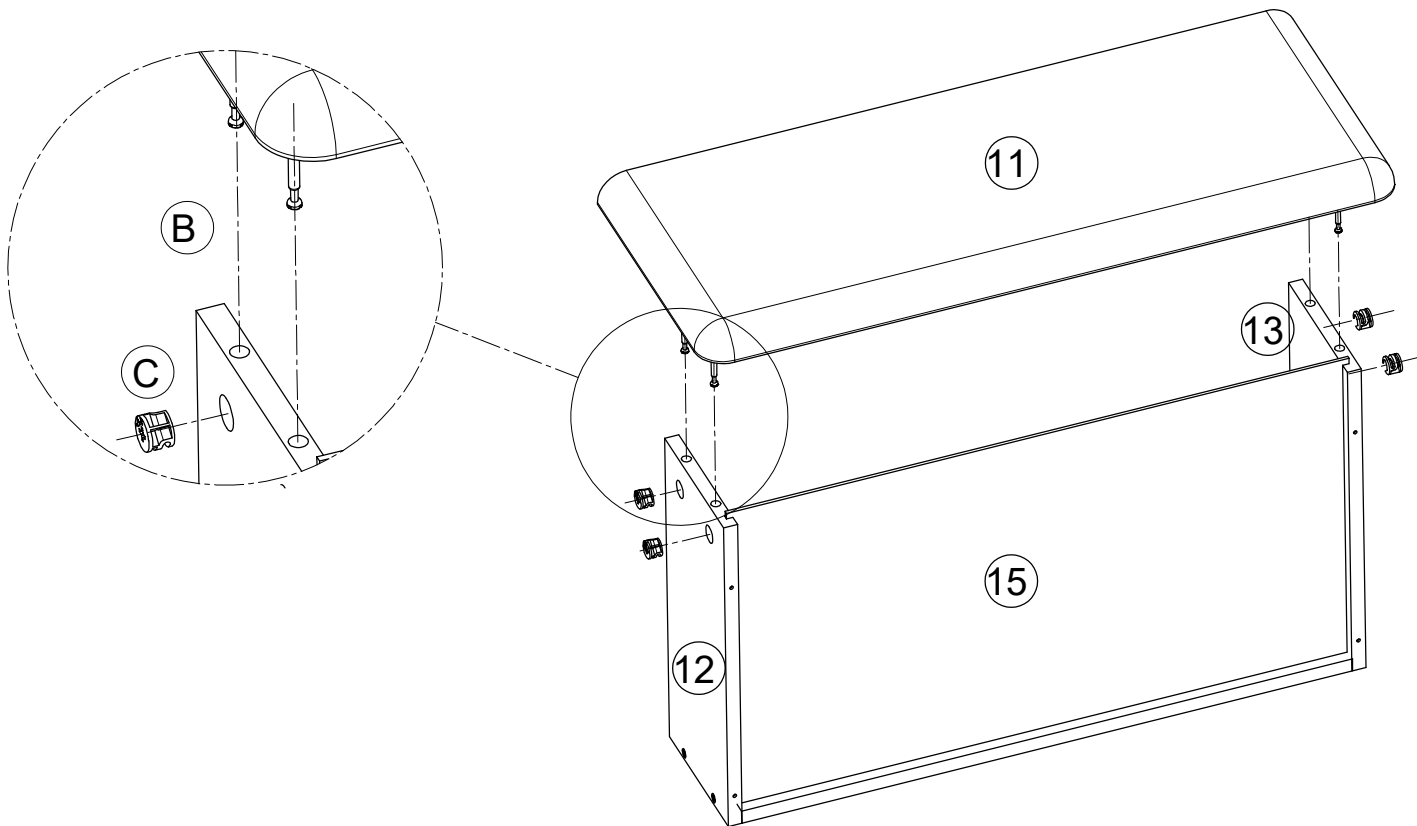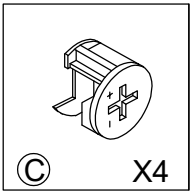


 
STEP 19

	
(E) X1	(F) X4

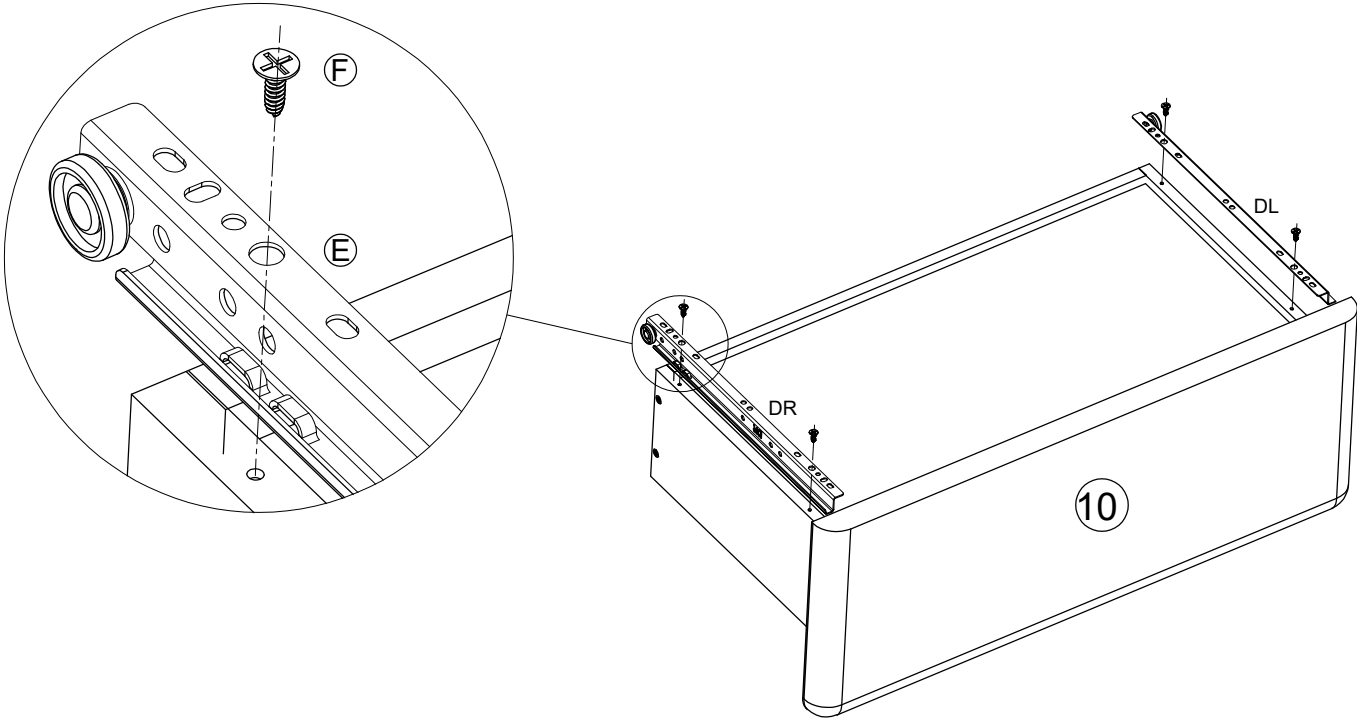 


 STEP 20


	
(E) X1	(F) X4

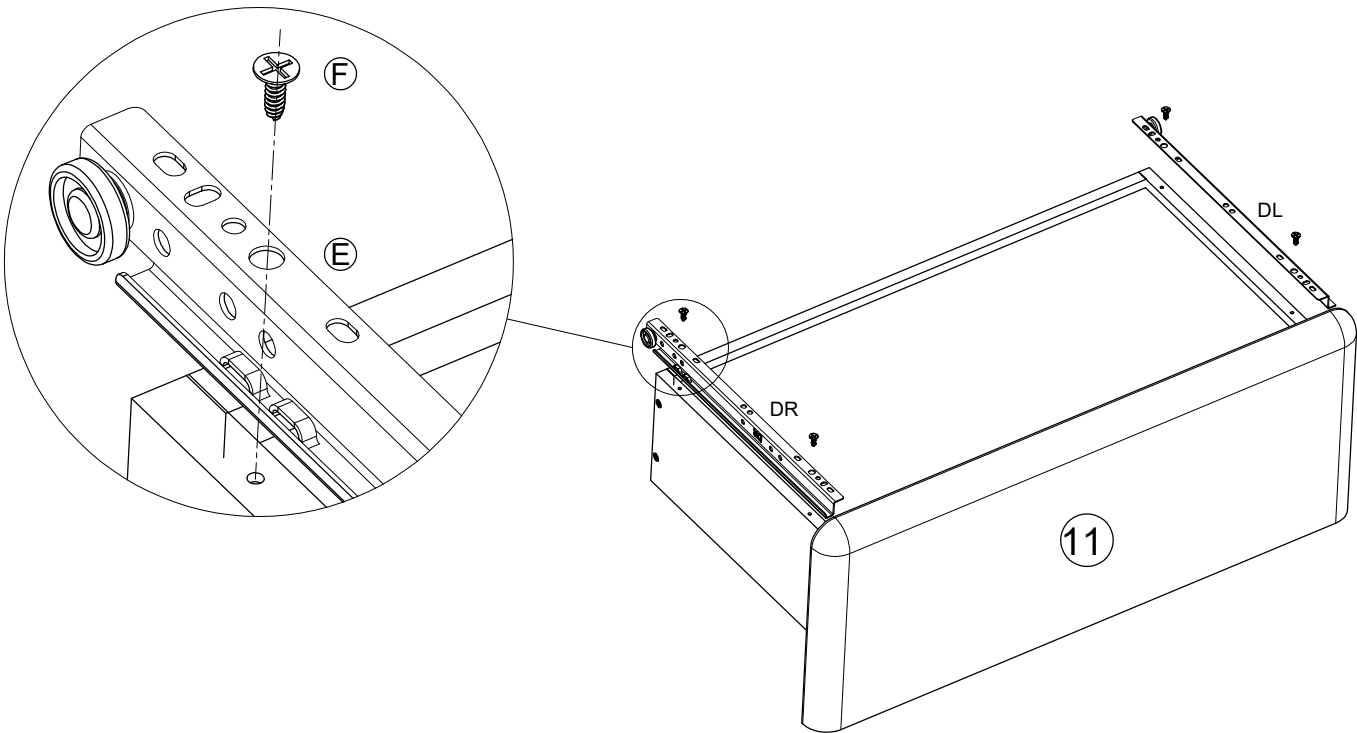 


 
STEP 21

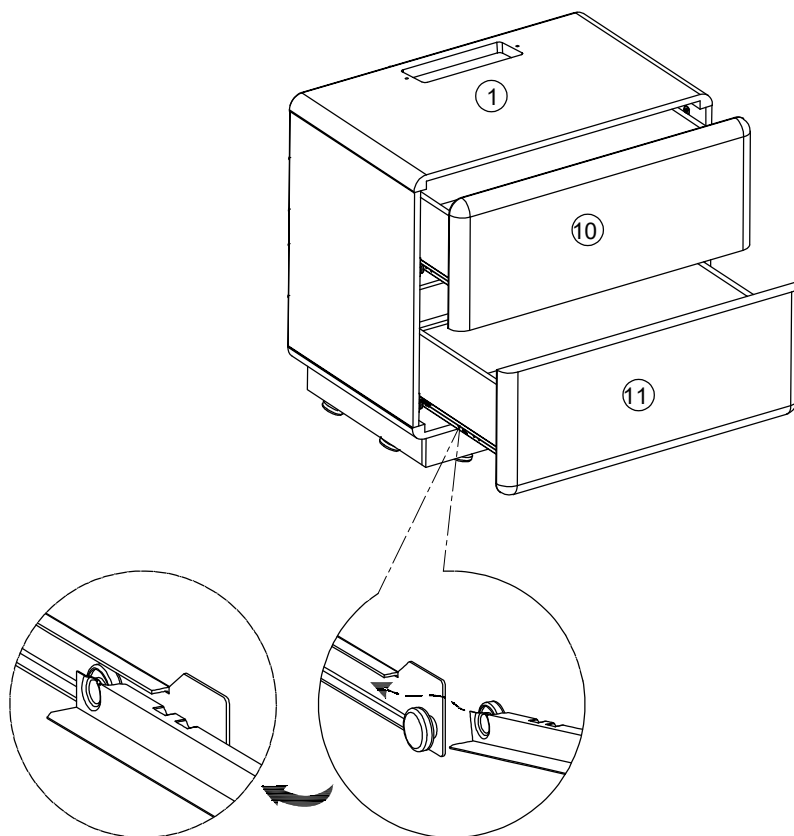

 STEP 22

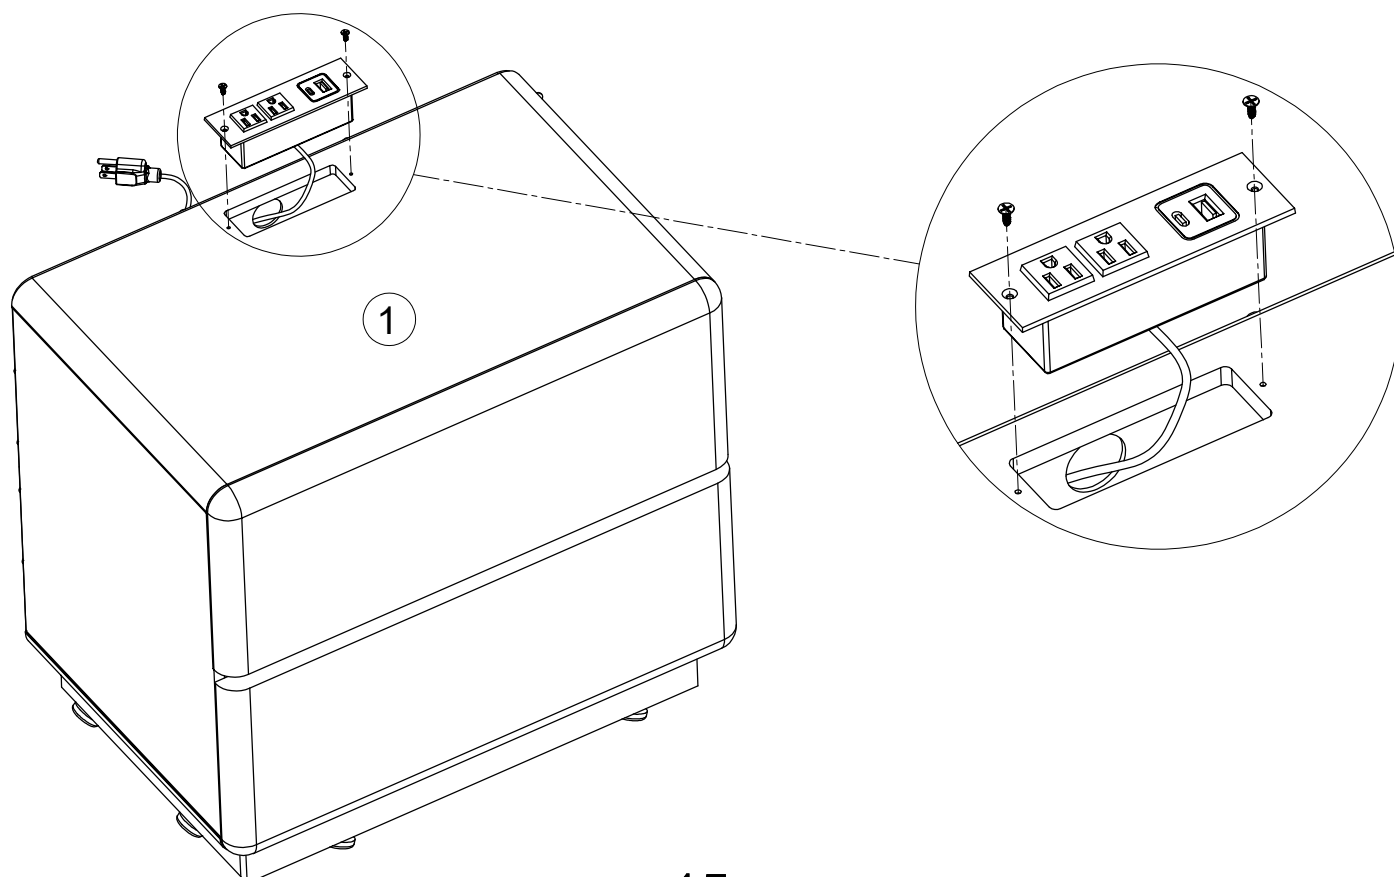

  STEP 23

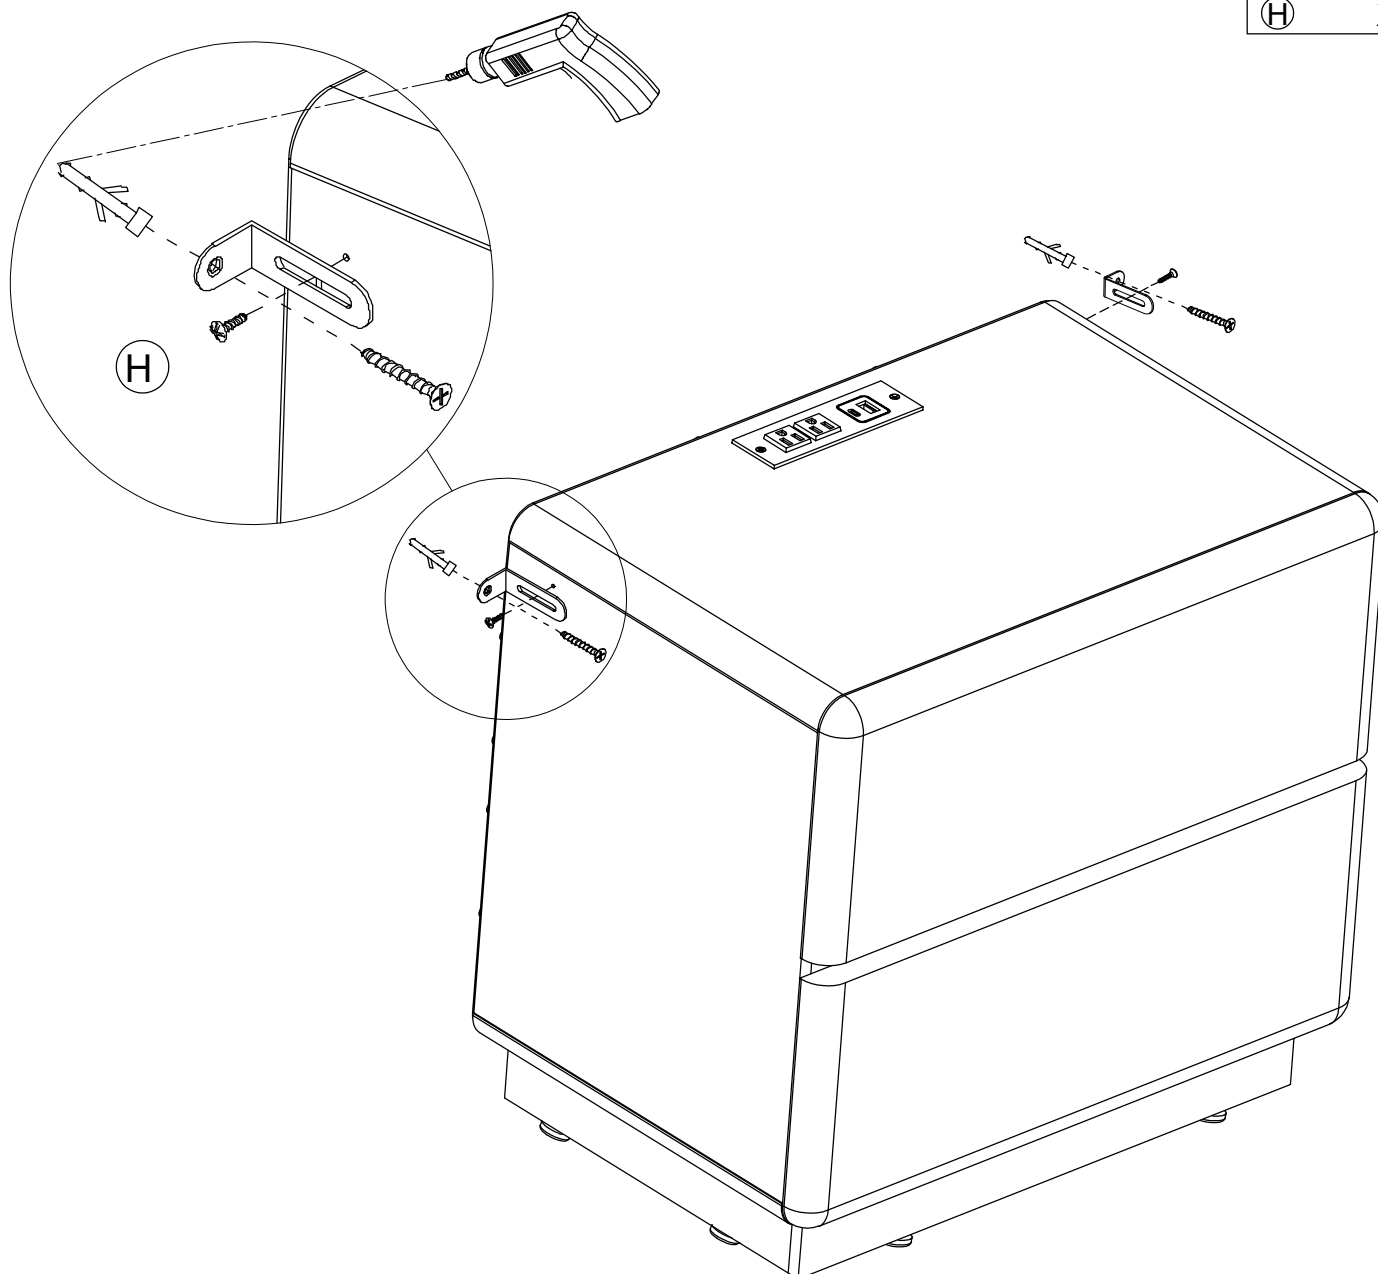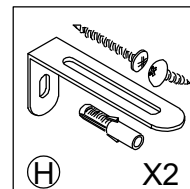

▲ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers. This is a permanent label. Do not remove!

