FULL SPECTRUM ULTRA-LUXURY LED HAND SHOWER

Easy Hand-tighten Installation with Advanced Crack-resistant Nylon Connection Nut

Nylon seals better then metal! It can stretch and bend around worn or damaged shower arm threads, yet will not break!

- Remove old shower head by turning it counter-clockwise. Remove any excess material left on Shower Arm threads. Use steel wool if necessary.
- 2. Make sure Thick Washer is positioned FLAT and STRAIGHT inside Connection Nut of Bracket (Fig. 1, 4). Hand tighten Connection Nut onto Shower Arm.

WARNING: DO NOT OVERTIGHTEN Connection Nut as it may cause Washer to dislocate and be squeezed into Shower Arm. If leakage occurs, see below.

- 3. Turn Holder clockwise to position Hose Outlet pointing Down (Fig.1). If it does not turn, loosen Ball Joint Nut slightly by turning it in CLOCKWISE Direction (Fig. 1), then tighten it back after you are done.
- 4. Turn on water to check for leakage. If leakage occurs, follow instructions below.
- 5. Screw Hose with Hose Washer in place onto Hose Outlet (Fig. 2).
- 6. Remove Protective Cap from bottom of Hand Shower Handle (Fig. 3). Screw Handle with Hose Washer in place onto other Hose end (Fig. 3). Insert Handle into Holder (Fig. 5).

Have a Leak? Make your shower 100% leak-free in less then a minute!

Leakage between Bracket and your Shower Arm is caused by Washer inside Connection Nut not pressing evenly against edge of Shower Arm Thread (fig. 1). This is usually the result of Washer not nested correctly. To seal properly, Washer must stay FLAT and STRAIGHT inside Connection Nut (Fig. 4).

You can eliminate this leak by simply re-positioning Thick Washer:

Unscrew Bracket from Shower Arm and adjust position of Washer by
a) pushing it down with your finger, or b) using screwdriver or pointed metal tool to press
down around Washer edges until it nests completely FLAT and STRAIGHT inside Nut (fig. 4).
Once Washer is nested correctly, re-connect Bracket and run water to test.

If Washer is positioned correctly but leak remains, it is likely the result of Damaged Washer Surface or Worn Shower Arm Threads. If you suspect Damaged Washer Surface, using screwdriver or pointed metal tool, pull out Washer from Connection Nut, turn it up-side-down and nest back into Nut (repeat step 2). If the leak is caused by Worn Shower Arm Threads, wrap some Plumber's Tape (included) around Shower Arm threads.



PROTECTIVE CAP

YOUR SHOWER ARM

THICK WASHER

HOSE OUTLET

HOSE WASHER

HOSE

WASHER

SHOWER ARM

THICK

WASHER

CRACK-RESISTANT CONNECTION NUT

BRACKET

HANDLE

BALL JOINT NUT

HOLDER

IMPORTANT: Hand tighten connections ONLY. DO NOT use wrench or pliers.

DO NOT overtighten - this may cause washer to bend and be pushed into shower arm. Use plumber's tape ONLY if needed on shower arm thread if Washer fails to stop leakage. DO NOT use plumber's tape on any other connections.

To Set Hand Shower Angle

Loosen Ball Joint Nut and Rotate Holder to desired position, then tighten Ball Joint Nut.

To Set Hand Shower Settings

Turn Dial Lever (Fig. 5) to select desired water pattern. Choose from 5 full and 2 combination settings.

To Save Water while Lathering or Shampooing

To reduce water flow, turn Dial Lever to Economy Rain or Pause mode.

Pause mode does not shut off water completely? It is designed this way for your protection.

For safety (to prevent pressure buildup), Pause mode has water dripping instead of complete shut-off (Fig. 6). After use, DO NOT leave hand shower set to Pause mode.

Hydro-Powered, No Batteries or Electricity!

LED lights are powered by running water, so no batteries are needed.

Full-Spectrum Multiple Colors Change Automatically

LED lights change color automatically while water is running

Long-Life LED Lights

LED lights have long life of 100,000 hours (over 10 years of heavy daily use).

Cleaning Instructions

To maintain proper working condition, cleaning is required when mineral deposits appear on jet tips.

Clean flexible nozzles by rubbing with a finger or soft bristled toothbrush. Do not clean or rinse any part with harsh chemicals, heavy-duty cleaners or abrasives. This may damage parts or finish and may void warranty.

NOTE: If your shower arm has a ball on the end of it instead of thread, it will not work with this shower unit and will need to be replaced with a standard shower arm available at most plumbing supply stores.

If you have installation problem or missing parts, please DO NOT return this product before calling us first. We can easily solve it on the phone or by quickly sending needed parts.

For Questions on Installation or Part Replacement Call Toll Free

1-888-869-4010

Monday - Friday 9:00 AM - 4:00 PM Eastern Time

For other products visit us at ipshowers.com

ONE YEAR WARRANTY

BALL JOINT NUT

HOLDER

PAUSE MODE

6

DIAL LEVER

Interlink will repair or replace any of this product's parts that exhibit defects in workmanship or materials for above stated period from date of purchase. If malfunction occurs, send only defective part(s) with proof of purchase to Customer Service Department at the address listed below. Your warranty does not cover malfunction or damage due to accident, misuse, or failure to follow any written instructions accompanying this product.

