


# INSTRUCTION MANUAL

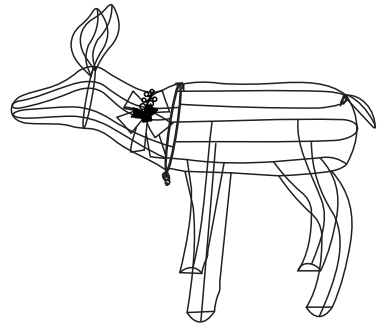

Thank you for shopping with us!

We appreciate your purchase and are ready to be at your service!

If you find parts missing, broken, or hard to put together or when you are not satisfied or have any valuable suggestions, please do not hesitate to contact us first!

We will definitely give you a satisfactory solution or answer then!

## NOTICE! Please retain these instructions for future reference.

- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.




## WARNINGS!

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- This product contains glitter, do not assemble indoors to avoid unintended property damage and cleanup.
- Do not allow glitter to contact your eyes or face as this may result in skin irritation or injury.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the reindeer.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- Replace burned-out bulbs immediately. Make sure to purchase bulbs of the same rated voltage and wattage.

## TROUBLESHOOTING









PROBLEM	REASON	SOLUTION
One section does not light	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
Lights do not work	Not plugged in	Firmly plug into wall outlet
	Extension cord does not have power	Plug in/turn on extension cord
	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
	Blown fuse	Replace fuse on plug

# HARDWARE

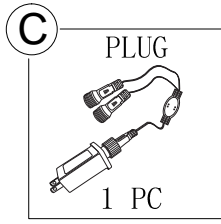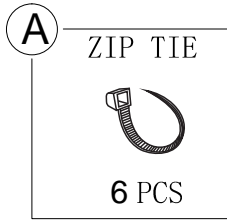
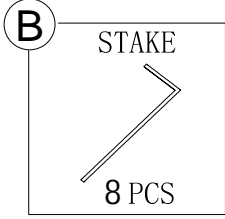


# PARTS

## Male Deer

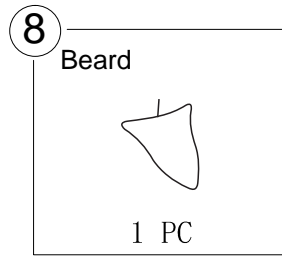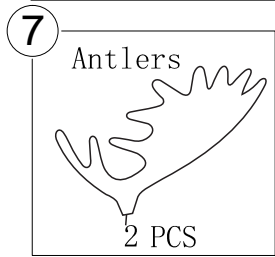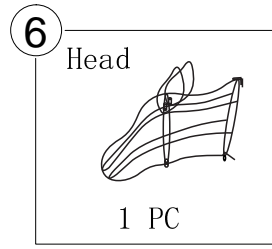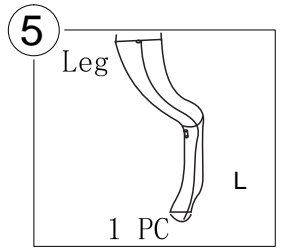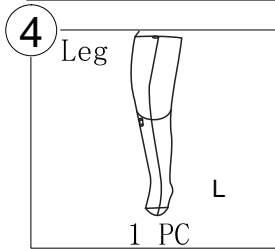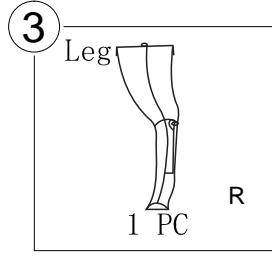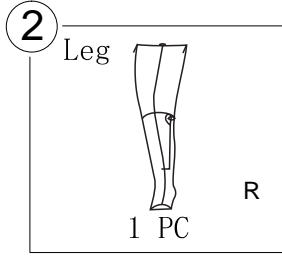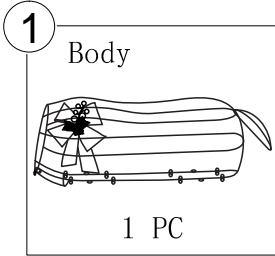




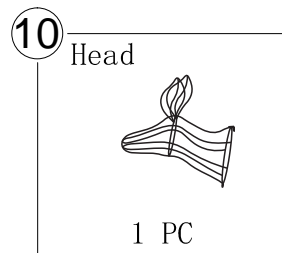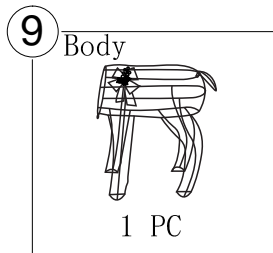


## Fawn

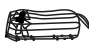 


**1**


# Male Deer

①	 x1	②	 x1	③	 x1	④	 x1
⑤	 x1	(A)	 x4				


Carefully remove protective wrap. Do not use a knife to avoid damaging parts or light bulbs.

 Insert the part(2)(3)(4)(5)legs into the designated holes on the part (1)body. Secure the four legs with a part A zip tie.

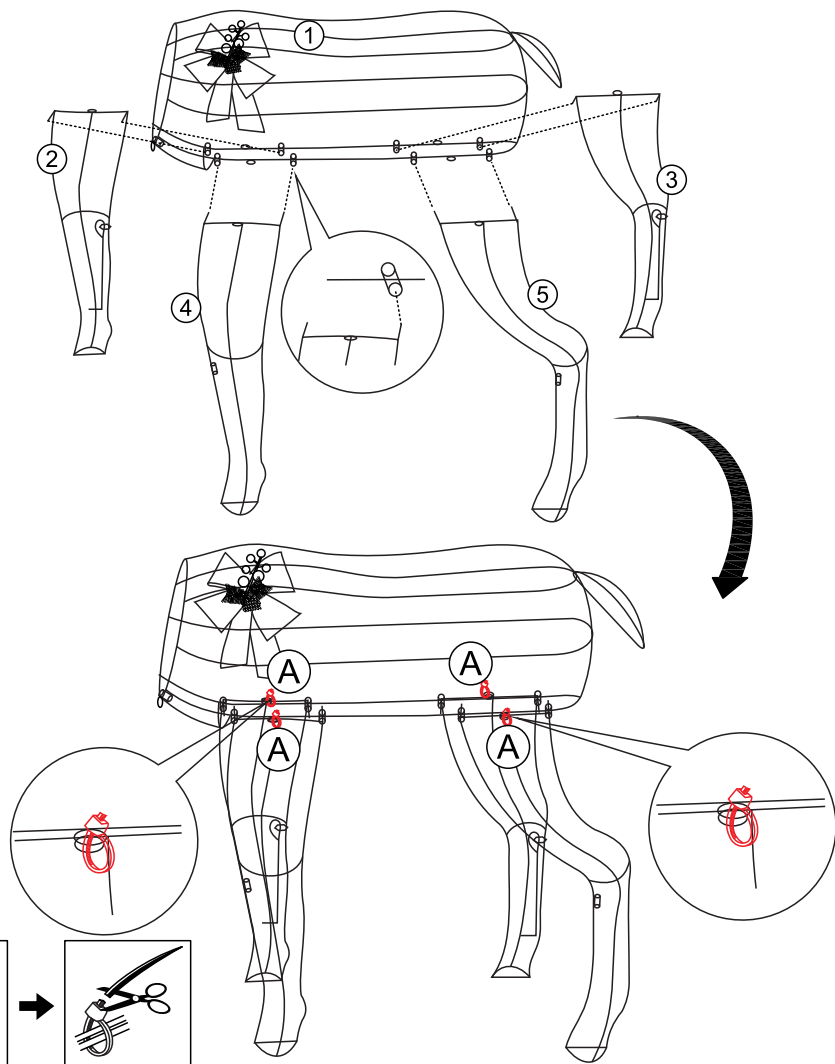

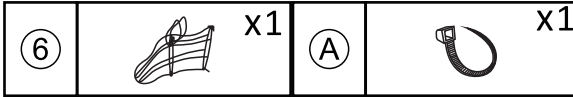**2****Male Deer**

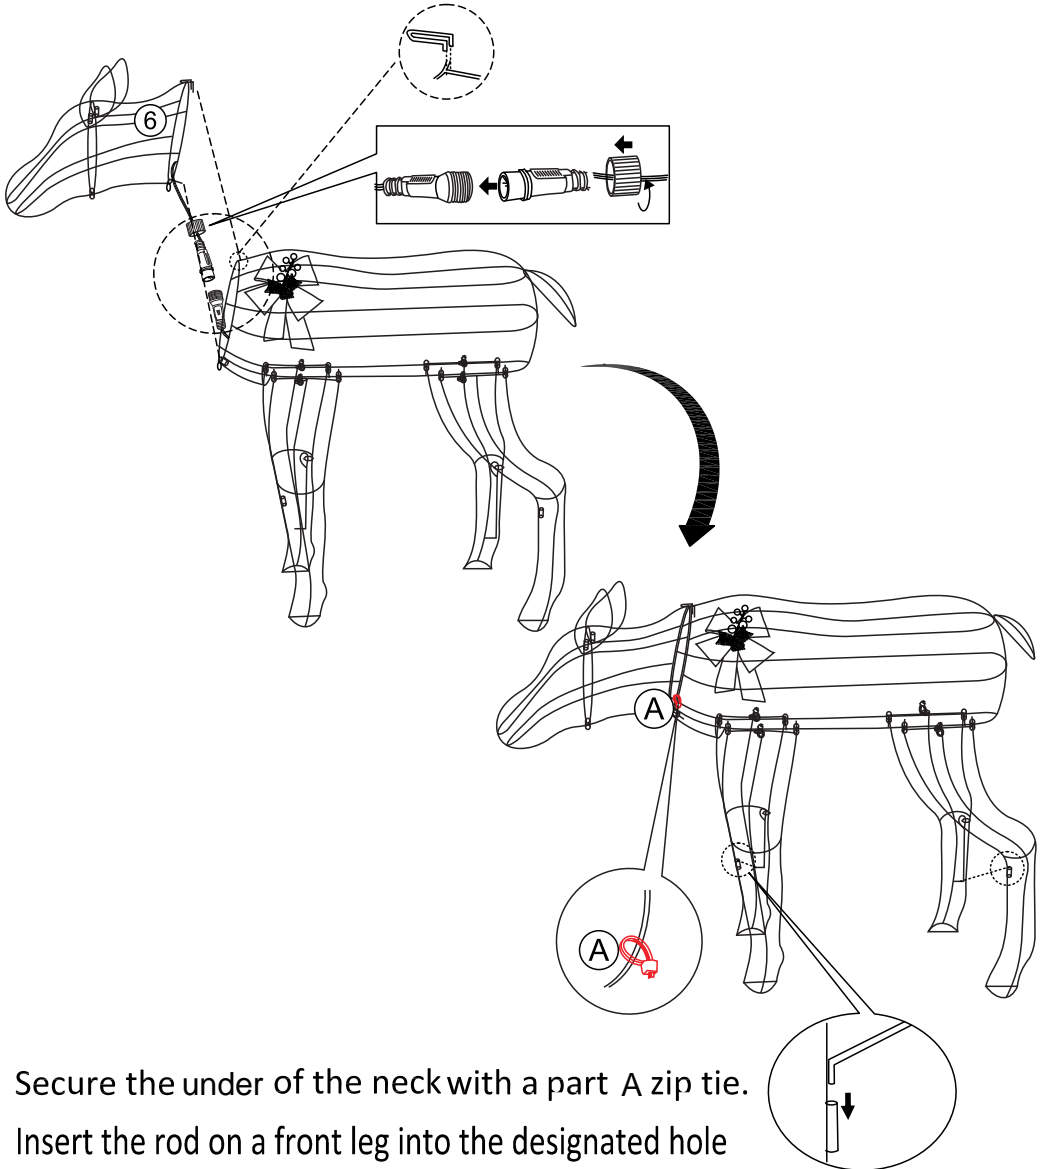

Insert the part(6)head. Connect the power connector between the head and the body.




Secure the under of the neck with a part A zip tie.  
Insert the rod on a front leg into the designated hole  
on the other front leg. Repeat on the back legs.

3

# Male Deer

⑦	 x2	⑧	 x1
---	---	---	---

Insert the part(7) antlers and (8)beard .

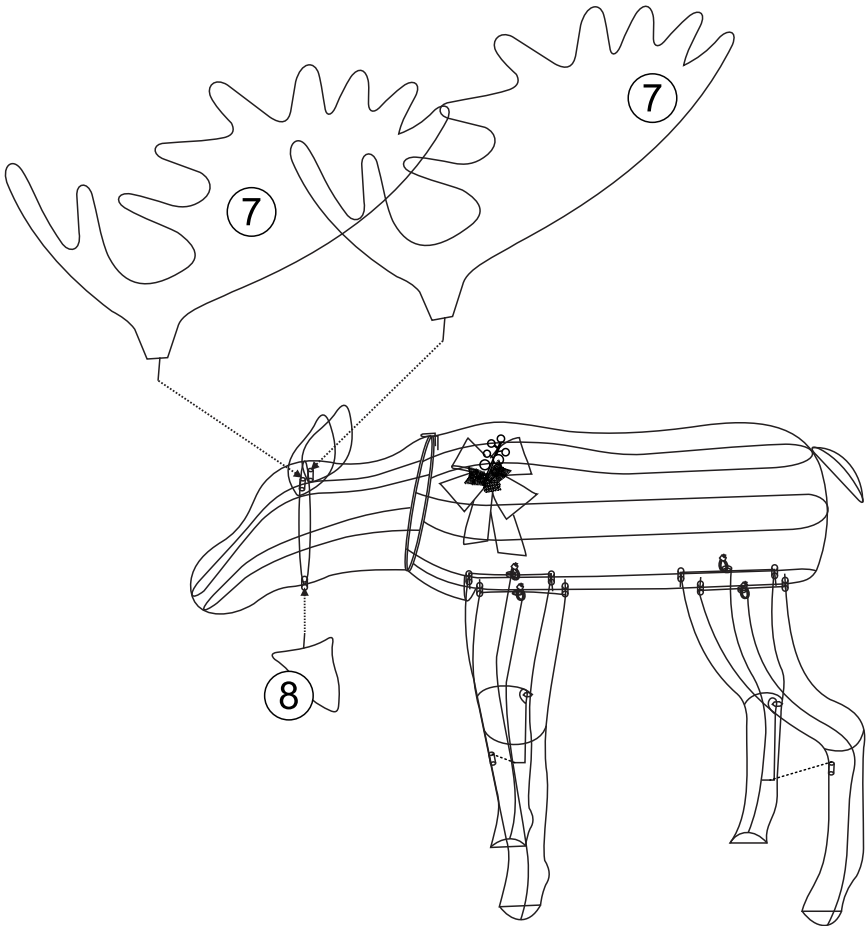


4

# Fawn

9	 x1	10	 x1	A	 x1
---	---	----	---	---	--

Insert the part (10) head. Secure the under of the neck with a part A zip tie.

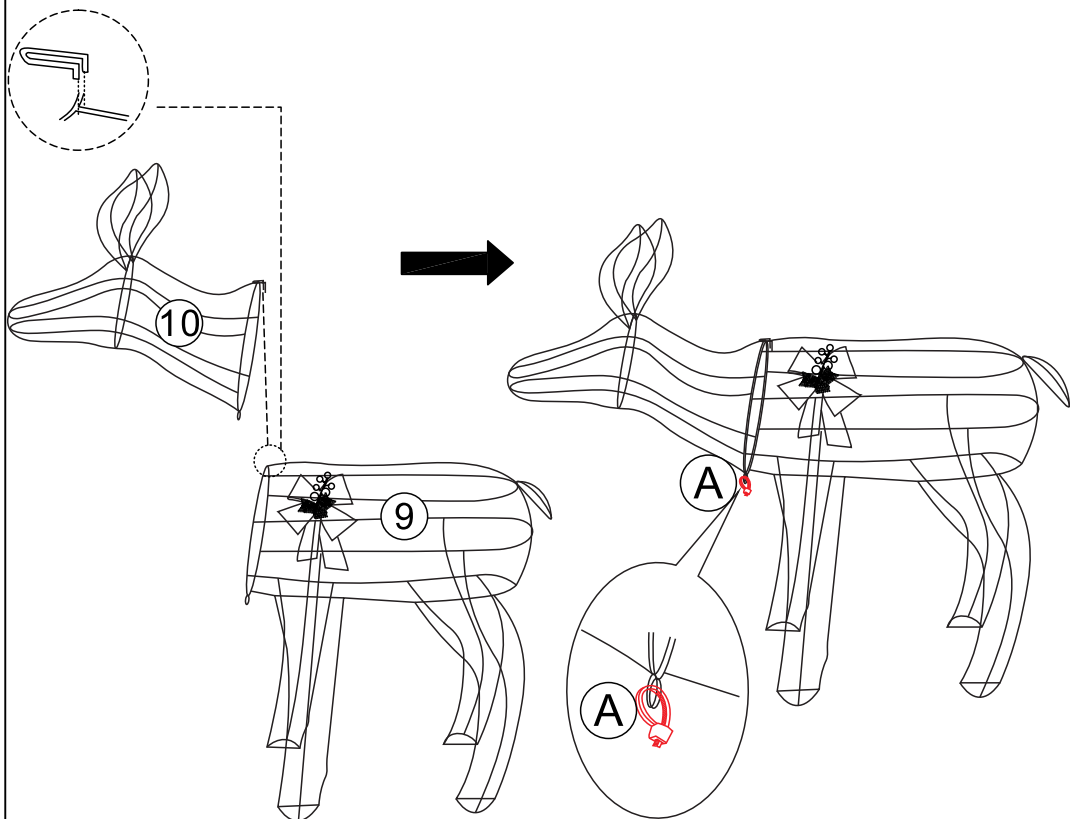

5

(B)	1	x8
-----	---	----

Secure the reindeers to the ground with 8 part B stakes.

