










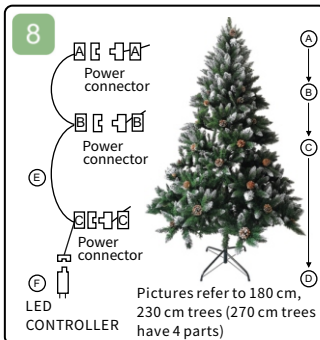
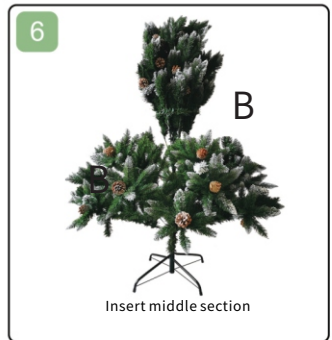
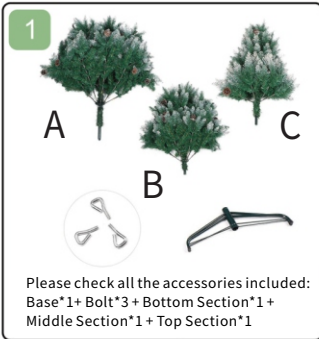
Christmas tree

INSTRUCTION MANUAL

Assembly Instructions

NUMBER	COMPONENT	QUANTITY
Bottom Section A		1PC
Middle Section B		1PC
Top Section C		1PC
Stand		1PC
Bolts		3PCS
LED Lights E		1PC
Function Controller F		1PC

Assembly Instructions



Shaping Instruction

How to fluff the branches

Shaping the tree branches is the last step of assembly. The care and attention given to this final process will result in a genuinely beautiful and appealing holiday centerpiece.

Assembly Instructions



Every tree style is shipped from the factory with the tips of each branch compressed to the center(Fig.1).





Each branch tip must be shaped to it's proper position to give the treenatural look. Spread tips away from the branch gently(Fig.2).



Each individual tip should then be spread out separately. Tips should then be bent slightly upward to add a more natural looking appearance(Fig.3).

Fig.3 shows a typical tree branch after shaping. Branch tips should be carefully pressed back toward center tip when trees disassembled for storage in original carton.

HARDWARE

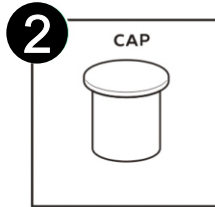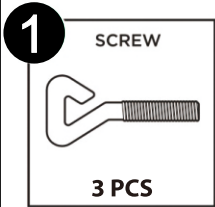

1 PERSON
ASSEMBLY



APPROXIMATELY
15 MIN.
ASSEMBLY

NOTE: Please remove the circular protector caps on the end of each pole before assembling. If the caps were broken, it will not affect the use of

CAUTION

- Firmly secure all screws before use.
- Product is intended for indoor use only.
- Do not place this tree in a wet location.
- This seasonal product is not intended for permanent installation or use.
- Do not use or store this item in the proximity of open flame, flammable/combustible chemicals, or other strong heat sources.



Return /Damage Claim Instructions



DO NOT discard the box / original packaging

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.



Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.



Take a photo of the damaged part (if applicable).

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.



Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.

CLEANING & STORAGE

- Store this tree in a cool and dry place away from heat and moisture.
- Before putting this tree in storage, do the following:
 - Completely remove all decorations.
 - Clean the tree with a slightly dampened cloth and let it dry naturally.
 - Raise all branches to original upright position; make sure not to damage any branches in the process.

Thank you for selecting the Christmas Tree With Us

We are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts, please contact us and we guarantee you complete satisfaction.

Your Home Our Passion

