

## Instruction Manual



Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from date of purchase

**For correct usage, please read these instructions carefully before first use and store in a safe place for future reference.**




## General information and safety warnings





- This set has been designed for careful domestic outdoor use only. Assemble on a flat, soft and even surface where the finish cannot be scratched.
- Position on a flat even surface, never on a slope.
- To avoid tipping over, do not throw your weight against the back of the furniture.
- Do not allow children to play on the furniture.
- Only one person should sit on a chair or stool at a time.
- Do not stand on the chair or arms.
- Never drag the furniture it should always be lifted to be moved.
- The maximum user weight is 100kg per section.
- For outdoor use only.
- Do not use if damaged.
- Do not use if cracked or damaged.
- We strongly advise covering up or storing away your furniture when not in use to protect it from the elements and prolong the life of the furniture.
- The glass in the table is tempered glass.
- If the glass is chipped or broken, stop using the product and replace with tempered glass.
- Always use an adequately thick insulating material to prevent any extremely hot or cold items coming into contact with the glass.
- Do not sit or stand on the glass surface.
- Do not use the glass as a chopping surface. Do not strike the glass with hard or pointed items.
- There is no warranty on glass tabletops after delivery.
- Not suitable for commercial purposes.

## Assembly


- Carefully unpack the product and ensure that you have all the correct parts.
- Assemble the furniture on a flat, level surface.
- Lay out everything that you need on a flat, soft and level surface.
- We recommend that two people assemble this furniture.
- If you have trouble tightening the bolts you can use a socket set to assist you (not included).
- During assembly, if any of the bolts are tight or out of line when fitting them, it may be that the others are screwed in too far, loosen them and this will make it easier to get the bolt into its location.
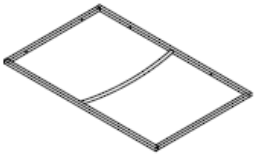
# Left chair parts

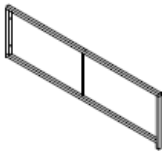
<b>A</b>		<b>1</b>
<b>B</b>		<b>1</b>
<b>C</b>		<b>1</b>

<b>D</b>		<b>1</b>
<b>E</b>		<b>1</b>
<b>U</b>	 M6*35	14
<b>W</b>		14


- Join parts A and B together using screws (U) and washers (W).

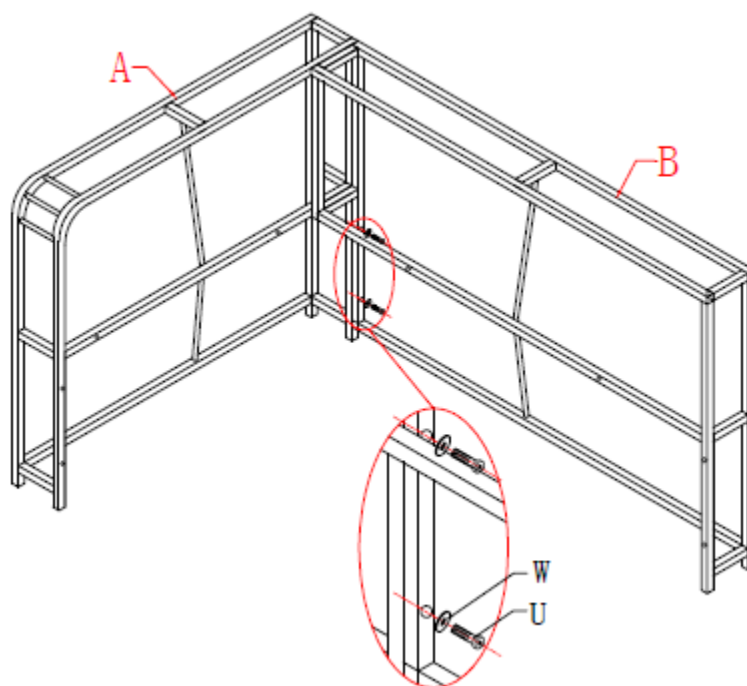


2. Attach the base of the seat (C) using screws and washers (W & U).

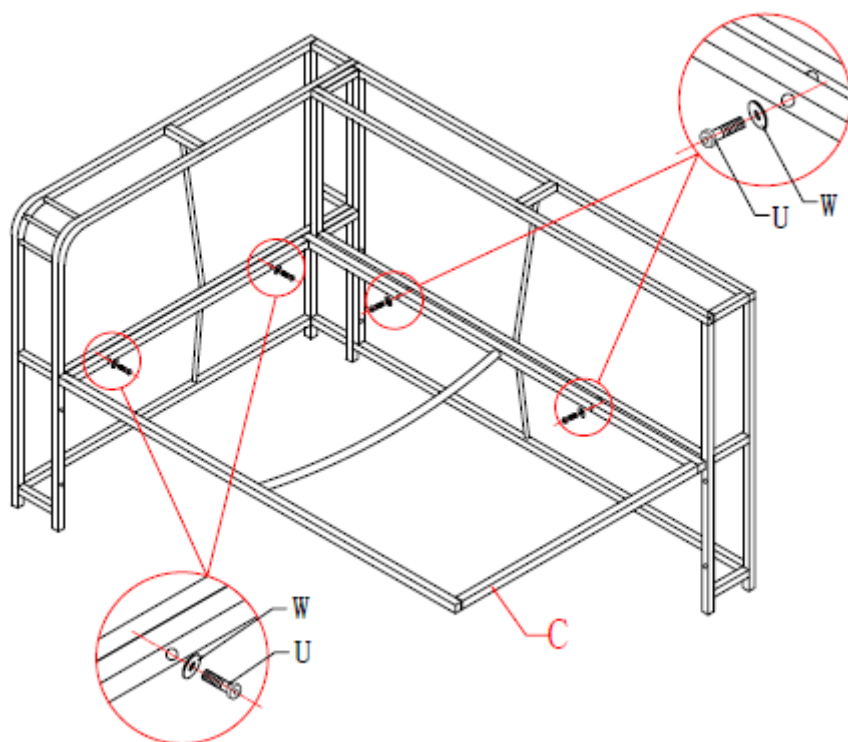

  3. Secure the front piece (D) by using screws and washers (W & U).

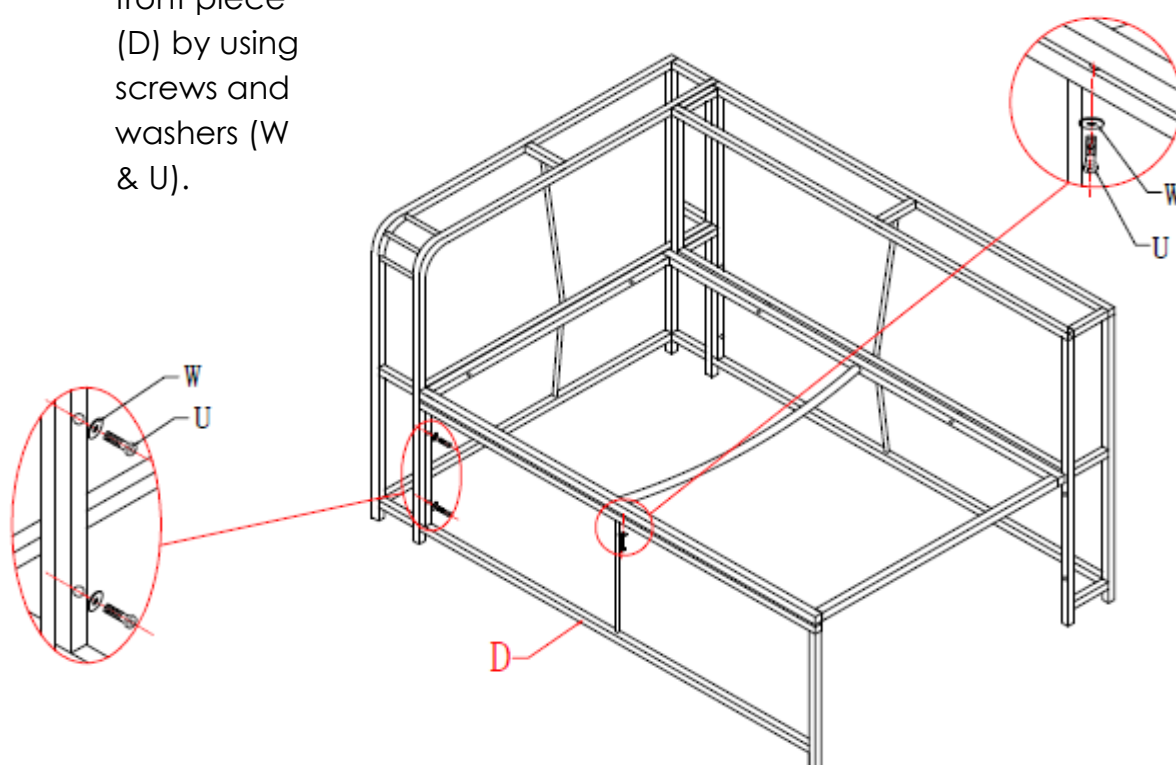



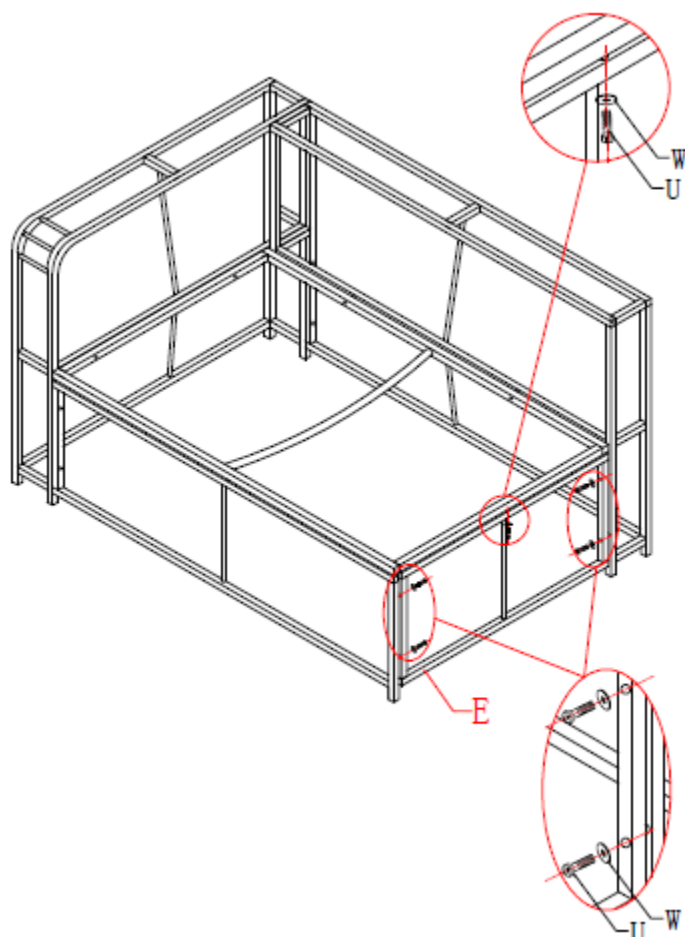


4. Secure the side piece (E) using screws and washers (W & U).

### Right chair parts list

 
A1		1
B1		1
F		1


G		1
H		1
U	M6*35	14
W		14

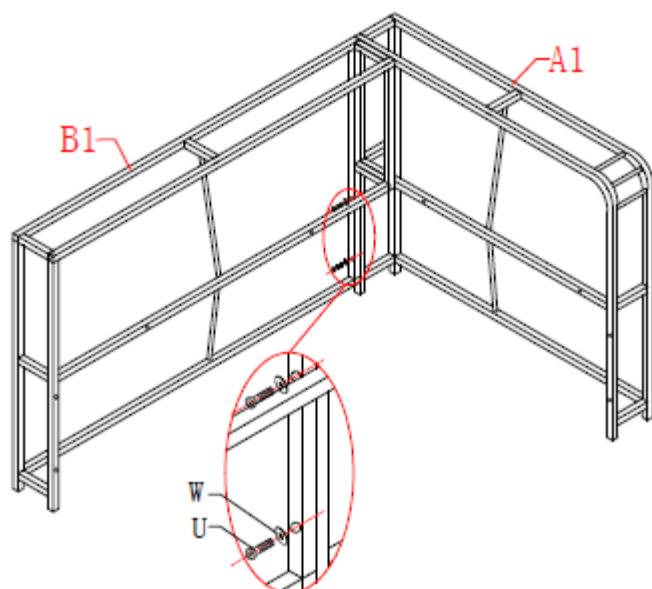

1. Attach B1 to A1 together using screws and washers (W & U).

   
2. Attach the base (F) using screws and washers (W & U).

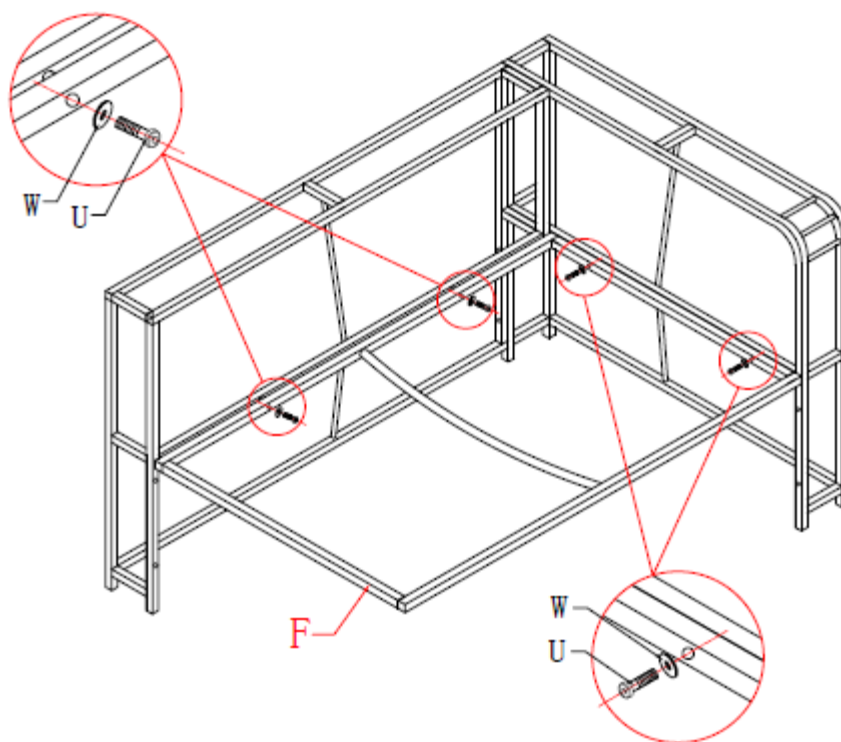

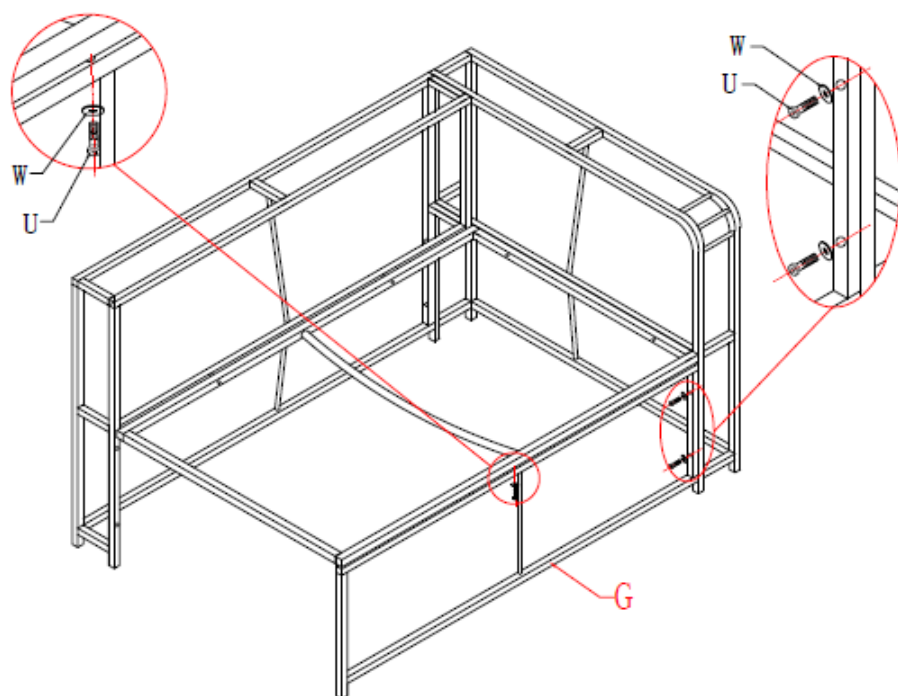


 

 


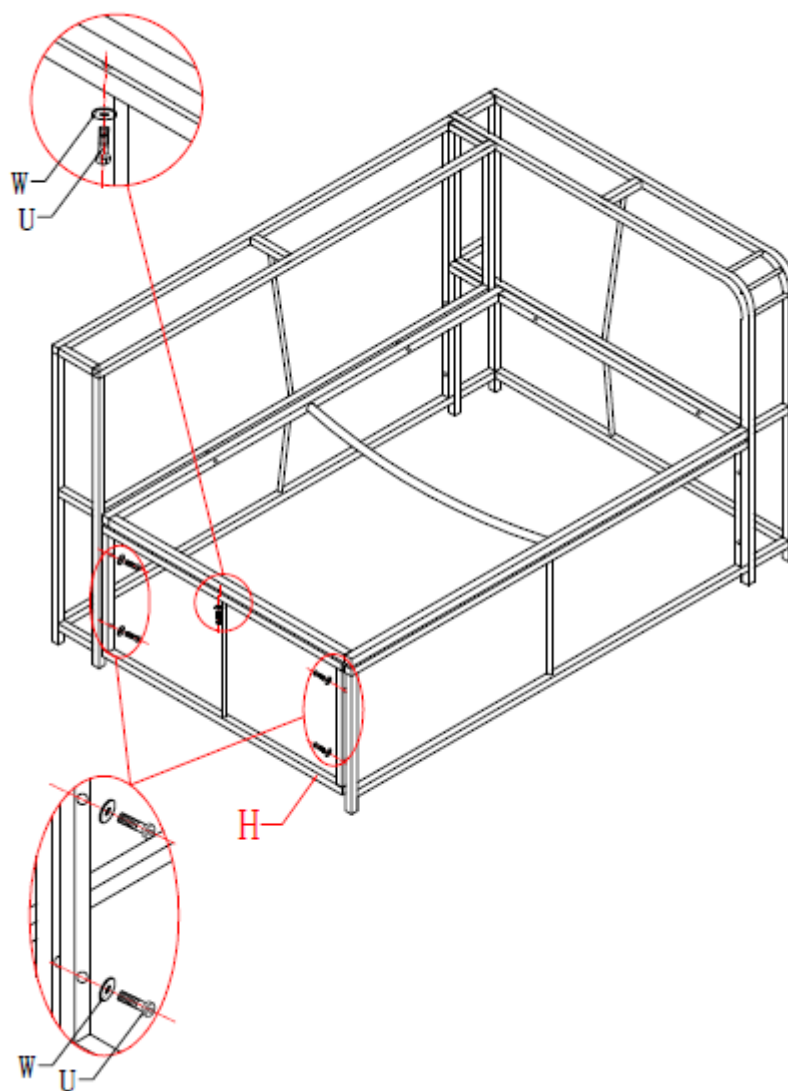

3. Secure the front piece (G) using screws and washers (W & U).


4. Secure the side piece (H) using screws and washers (W & U).



# Left stool parts list

  
 
M		1	P		2
N		2	U	 M6*35	10
O		2	V	 M6*50	2
			W		12
			X		2

1. Connect pieces M, N and O together using screws and washers (W & U).

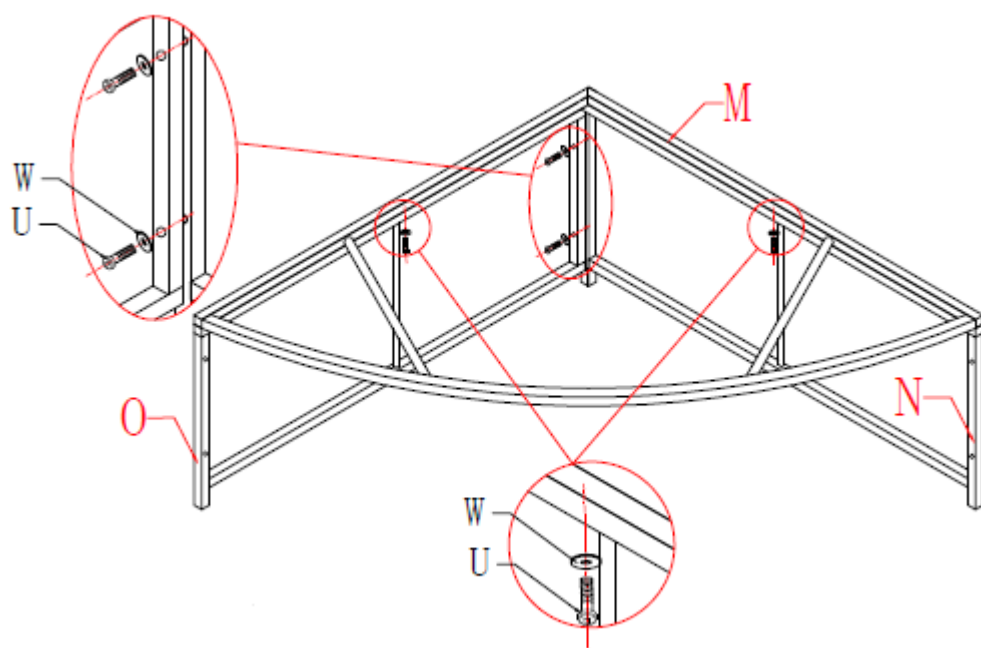



 

 
 


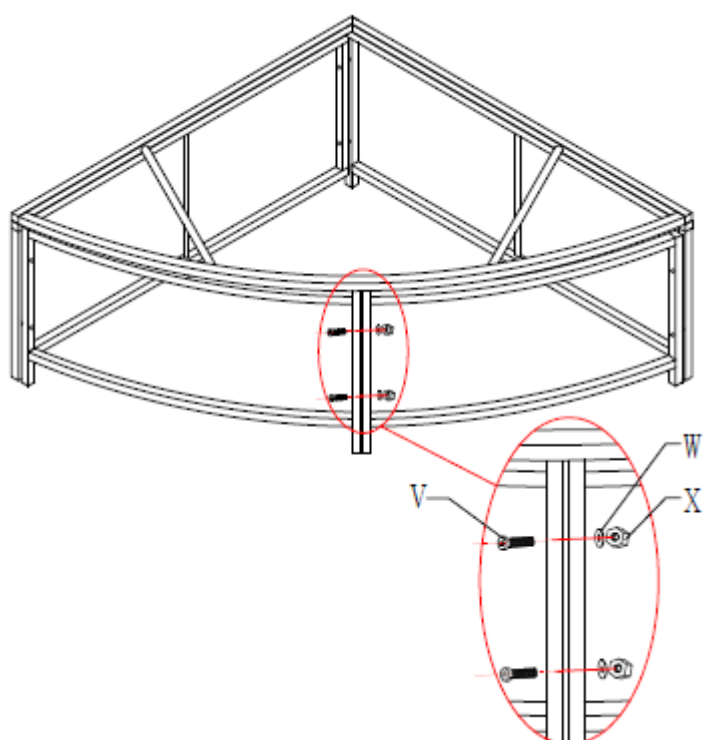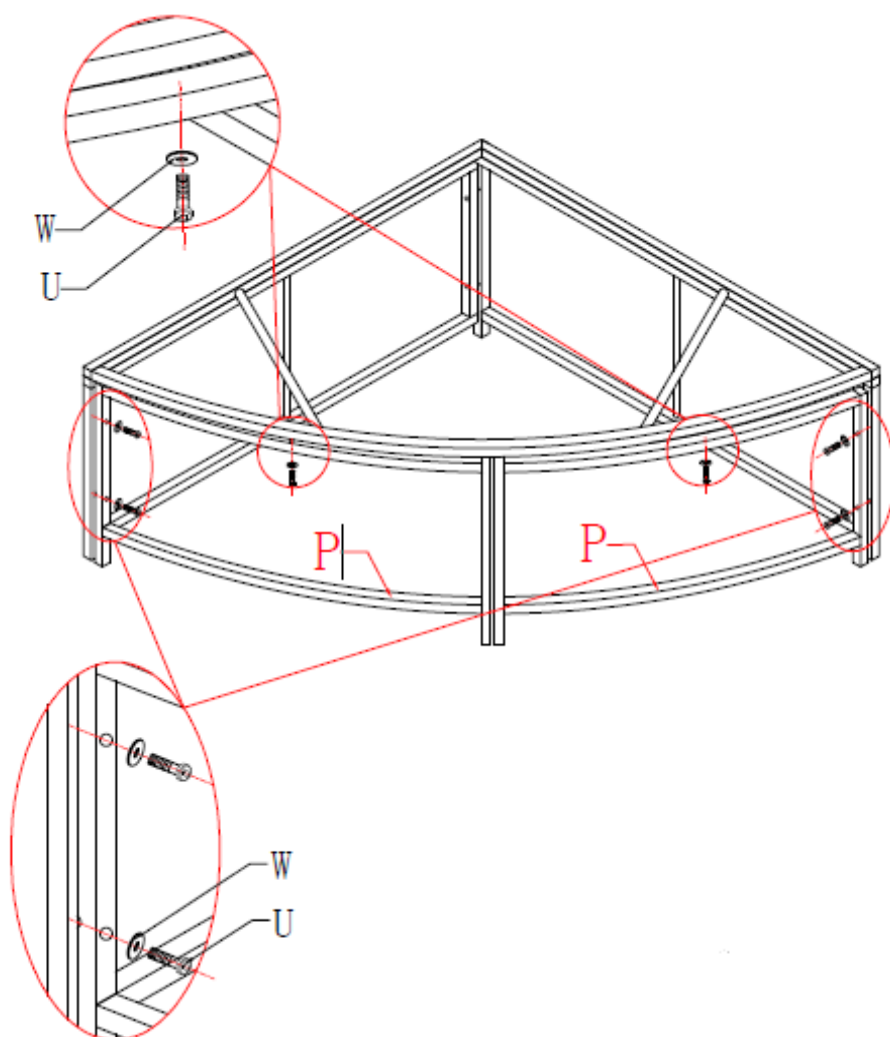


2. Attach the front pieces (P) using screws and washers (W & U).



3. Secure the front pieces together using screws, bolts and washers (V, W & U).

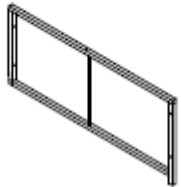
# Right stool parts list

 M		1
R		2
S		2
P		1
U	 M6*35	10
V	 M6*50	2
W		12
X		2

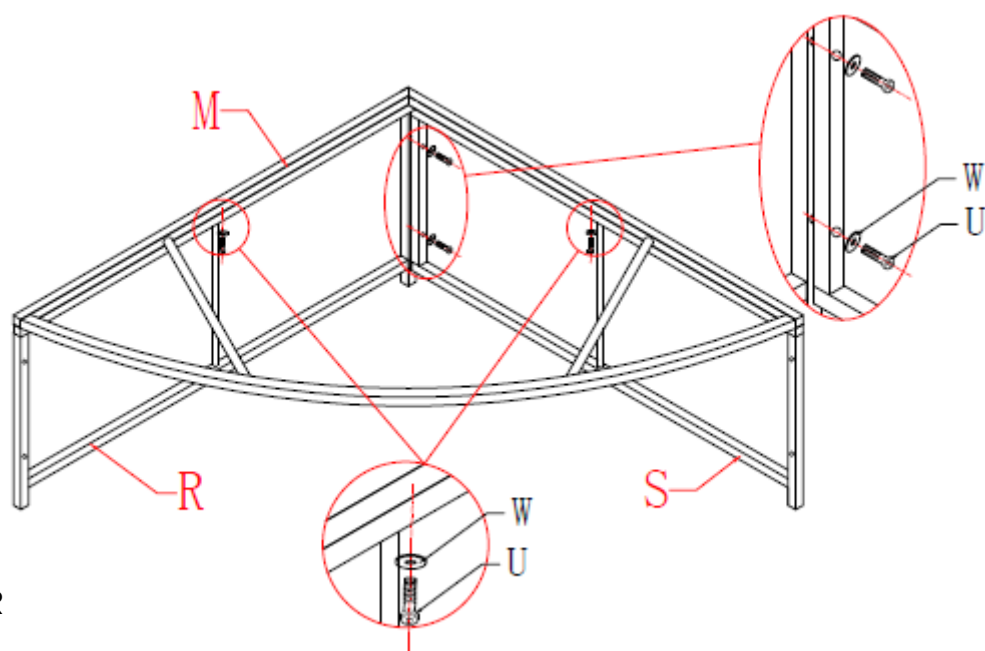


1. Attach pieces M, R and S together using screws and washers (W and U).


 
 
2. Attach the front pieces (P) using screws and washers (W and U).


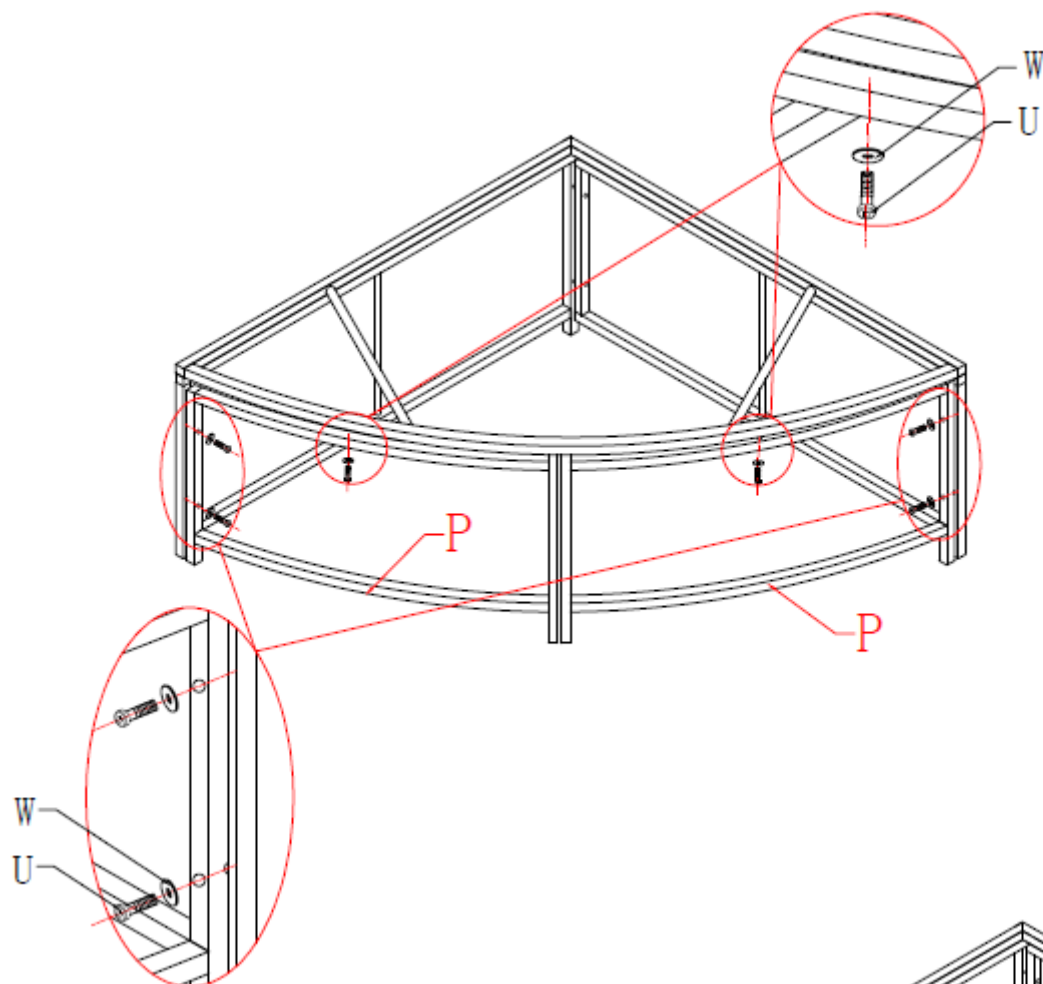


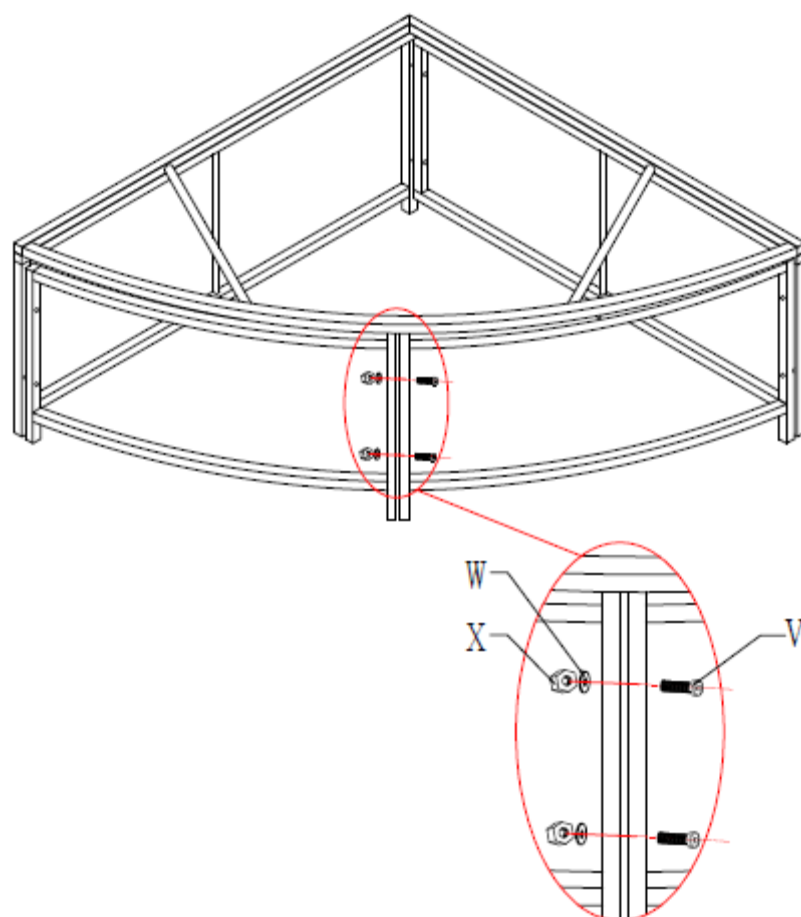

   
3. Secure the front pieces together using screws, washers and bolts (V, X and W).

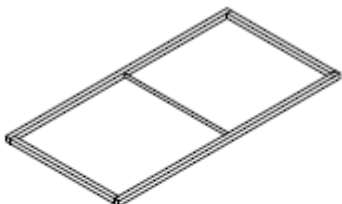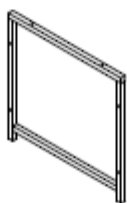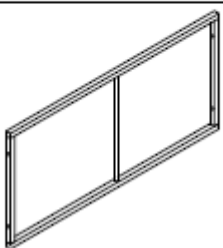



# Table parts list

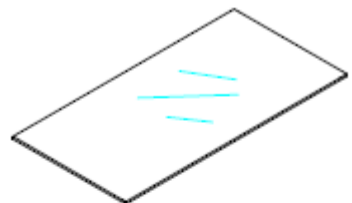  I		1
J		2
K		2

L		1
U	 M6*35	14
W		14
Y		1
Z		1

  
1. Attach pieces J and I together using screws and washers (W and U).

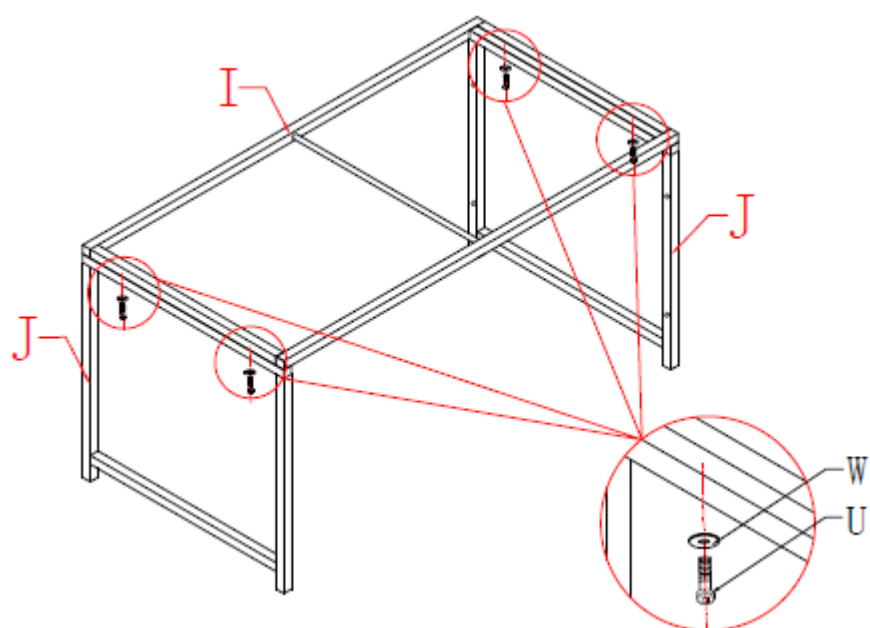

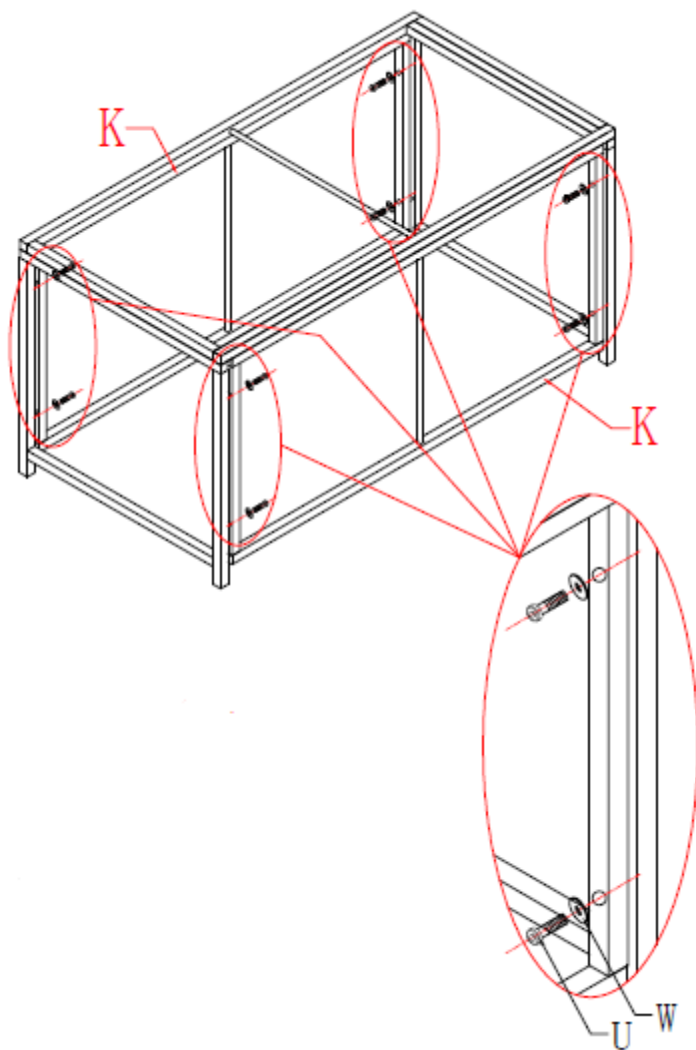

2. Attach the sides (K) using screws and washers (W and U).

 3. Place the tempered glass table-top (L) onto the top of the table.

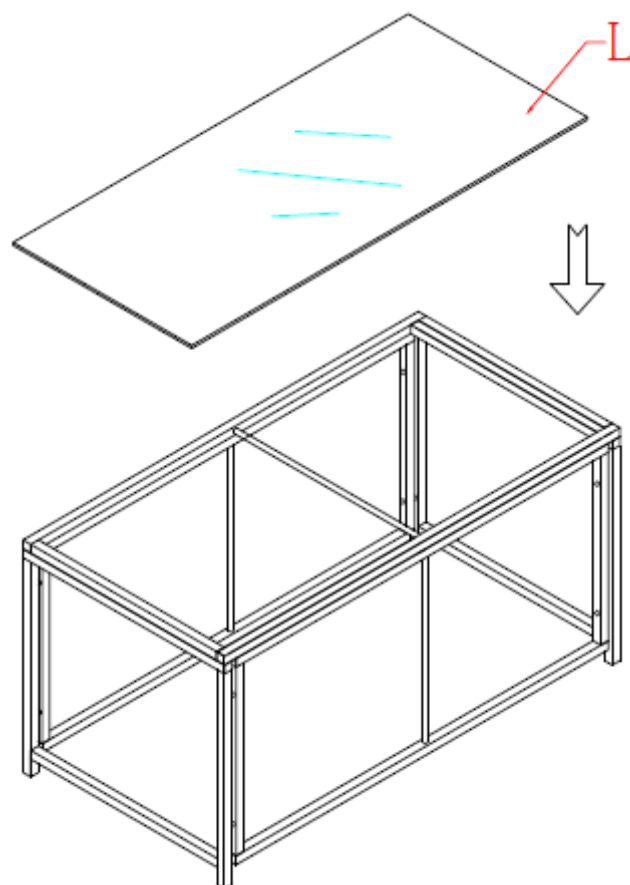



**Care & maintenance**

- Damp wipe the frame and allow to dry naturally.
- Do not use washing powders or any other substances containing abrasives since these products may scratch the furniture.
- Ensure the furniture is completely dry before storing.
- Periodically check that all screws and fixings are secure and the furniture is stable.
- We strongly advise covering up or storing away your furniture when not in use to protect it from the elements and prolong the life of the furniture.
- Remove any stains from spillages as quickly as possible.
- After use, store the cushions in a clean, dry place.

## **GUARANTEE**

### **IMPORTANT**

**Please do not return this product without first calling the Customer Service**

Thank you for purchasing this product, which has been made to demanding high quality standards and is guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase.

Register your product for an extended 2-year warranty by visiting our website [www.bosch-home.co.uk](#). The product must be registered, along with your contact information, within 30 days of purchase. For full terms and conditions please visit our website.

This guarantee does not affect your statutory rights. If your product fails due to a defect in material or workmanship during this period, please return it to the place of purchase. Normal wear and tear is not covered under the guarantee.

Any guarantee is invalid if the product has been misused or subject to neglect or an attempted repair other than by our own service centre.

Due to continuous product improvement, we reserve the right to change the product specification without prior notice.

Please retain for future reference.  
Colours and contents may vary.