 




ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

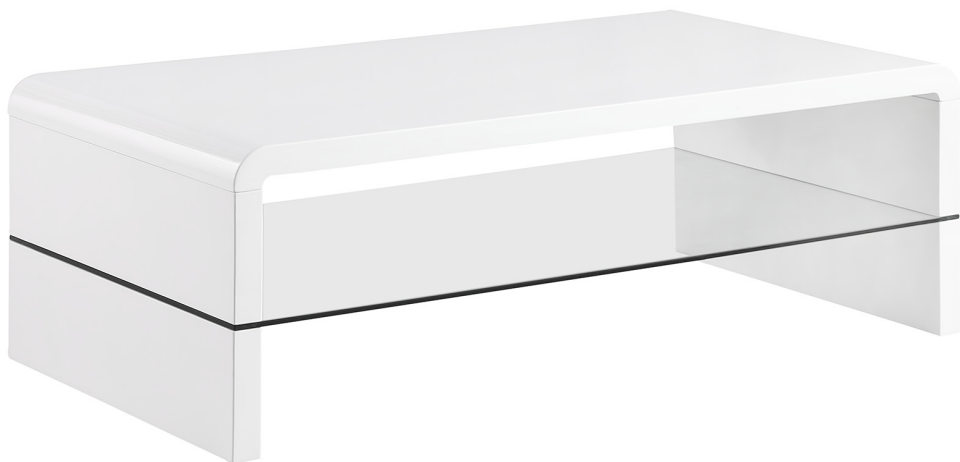

Fine Furniture for every stage of life

703798
Coffee Table

REVISION 0: 12/22/2021
REVISION 1: 07/25/2022

PAGE 1 OF 5

COASTERFURNITURE.COM

ITEM: 703798



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



 
ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION


A TOP PANEL

1PC

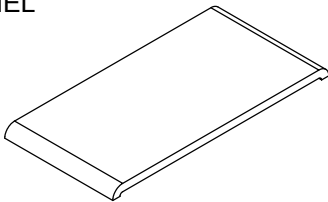


B UPPER SIDE PANEL

 2PCS

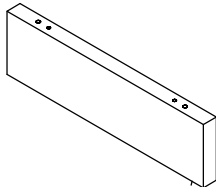


C LOWER SIDE PANEL

 2PCS

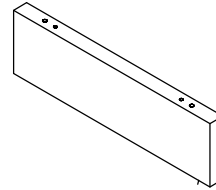


D TEMPERED GLASS

 1PC

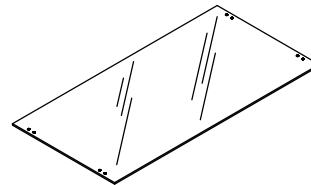

Z HARDWARE IDENTIFICATION

 
1 ROD



M8x370

4PCS

 2 WOOD DOWEL



ø8x40

8PCS

3 SPRING WASHER



M8

4PCS

4 WASHER



ø25xø8.5x2

4PCS

5 SCREW



M8

4PCS

6 SOCKET WRENCH

 


M8


1PC

ITEM: 703798
ASSEMBLY INSTRUCTIONS

STEP 1

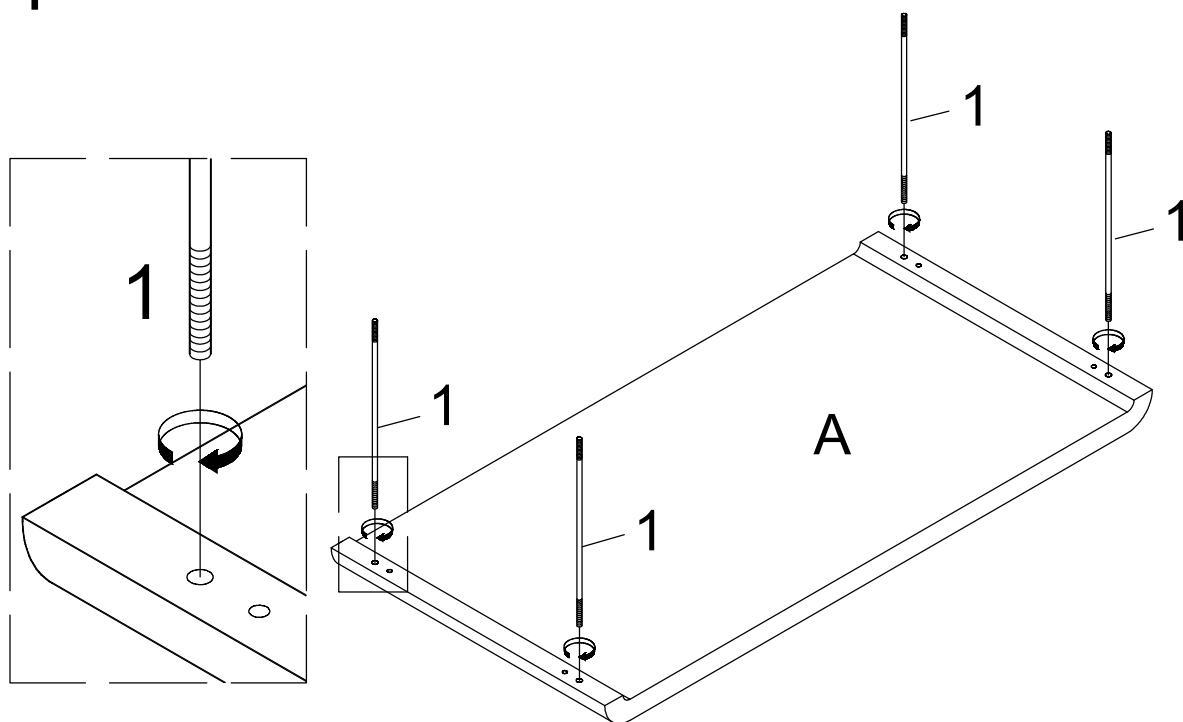

 
STEP 2

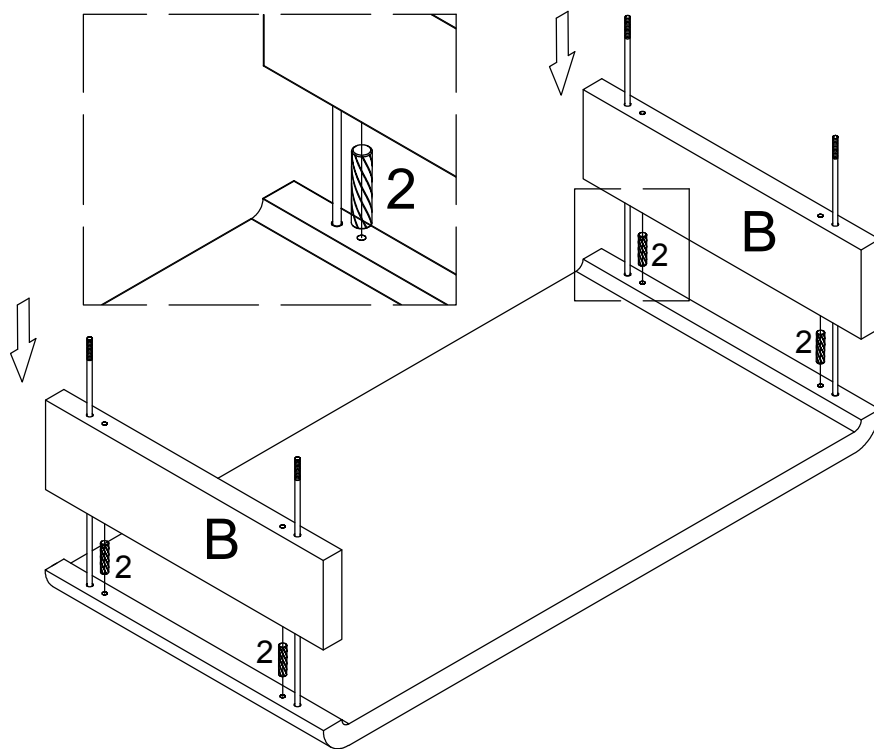


ITEM: 703798
ASSEMBLY INSTRUCTIONS



 
STEP 3

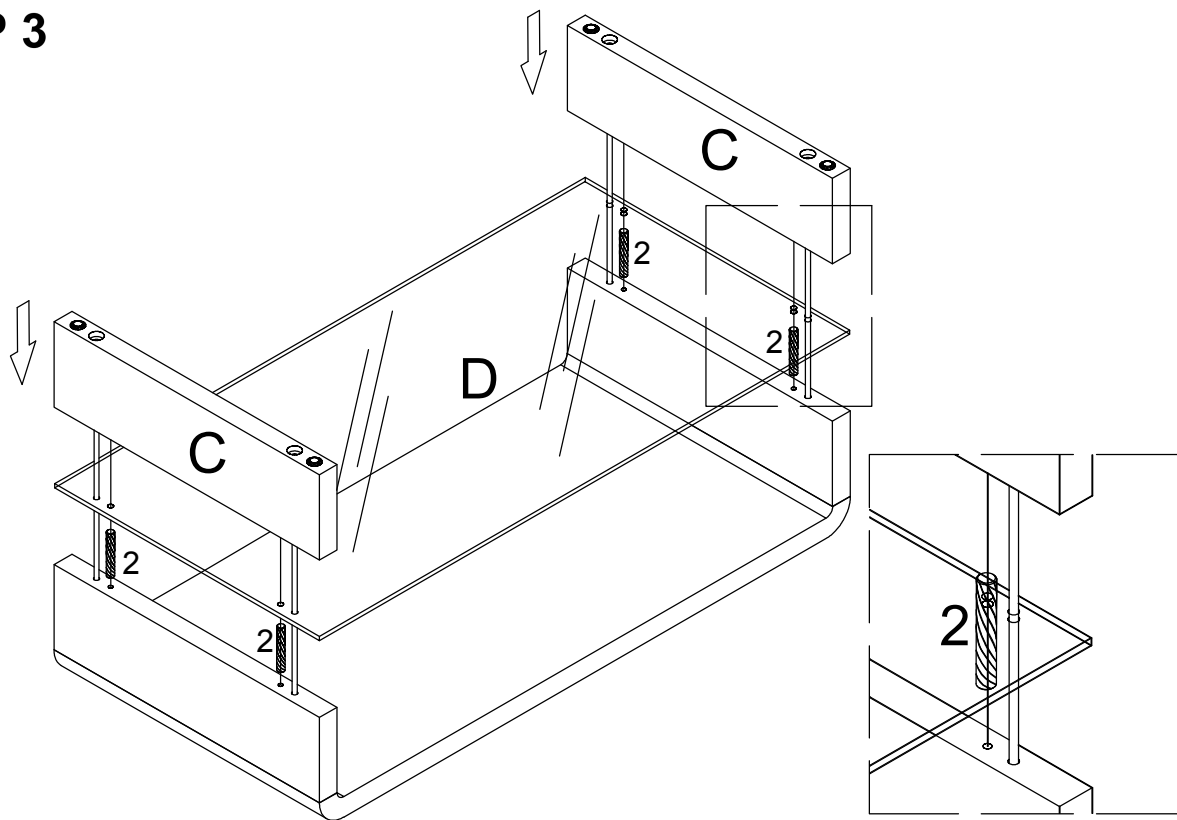

 STEP 4

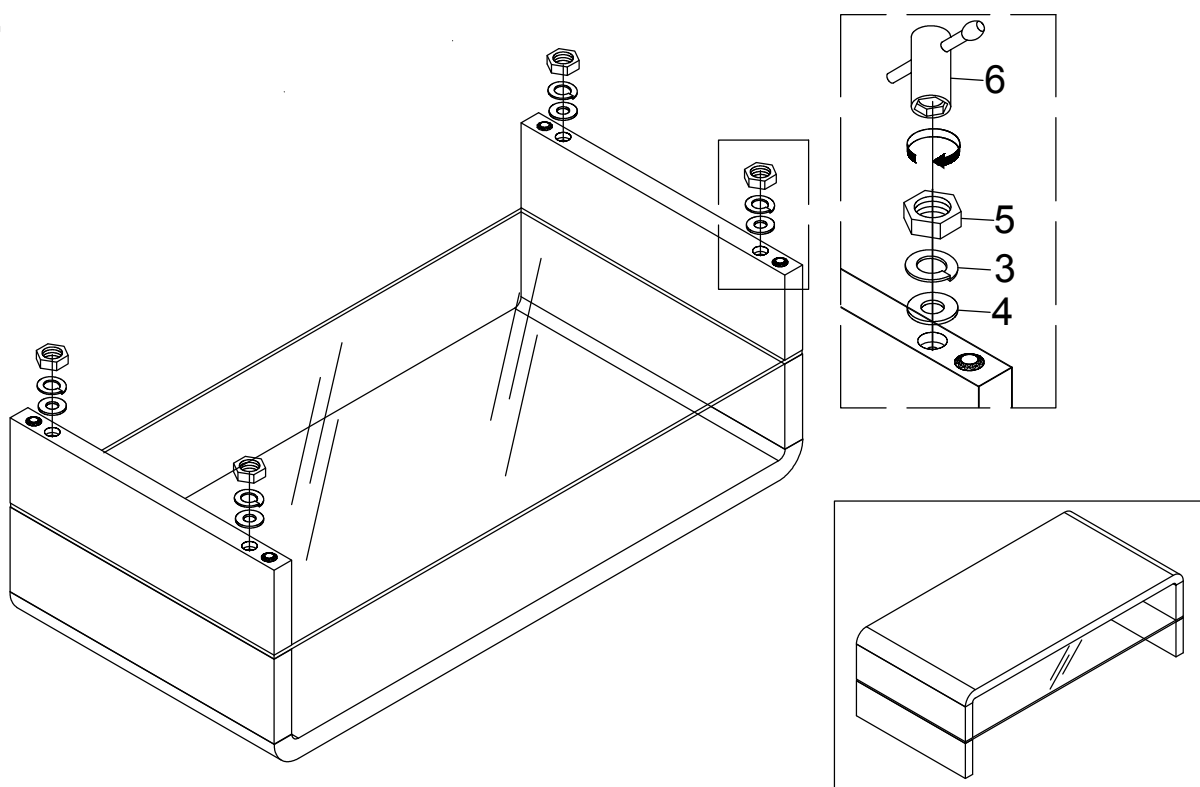

ITEM: 703798
ASSEMBLY INSTRUCTIONS

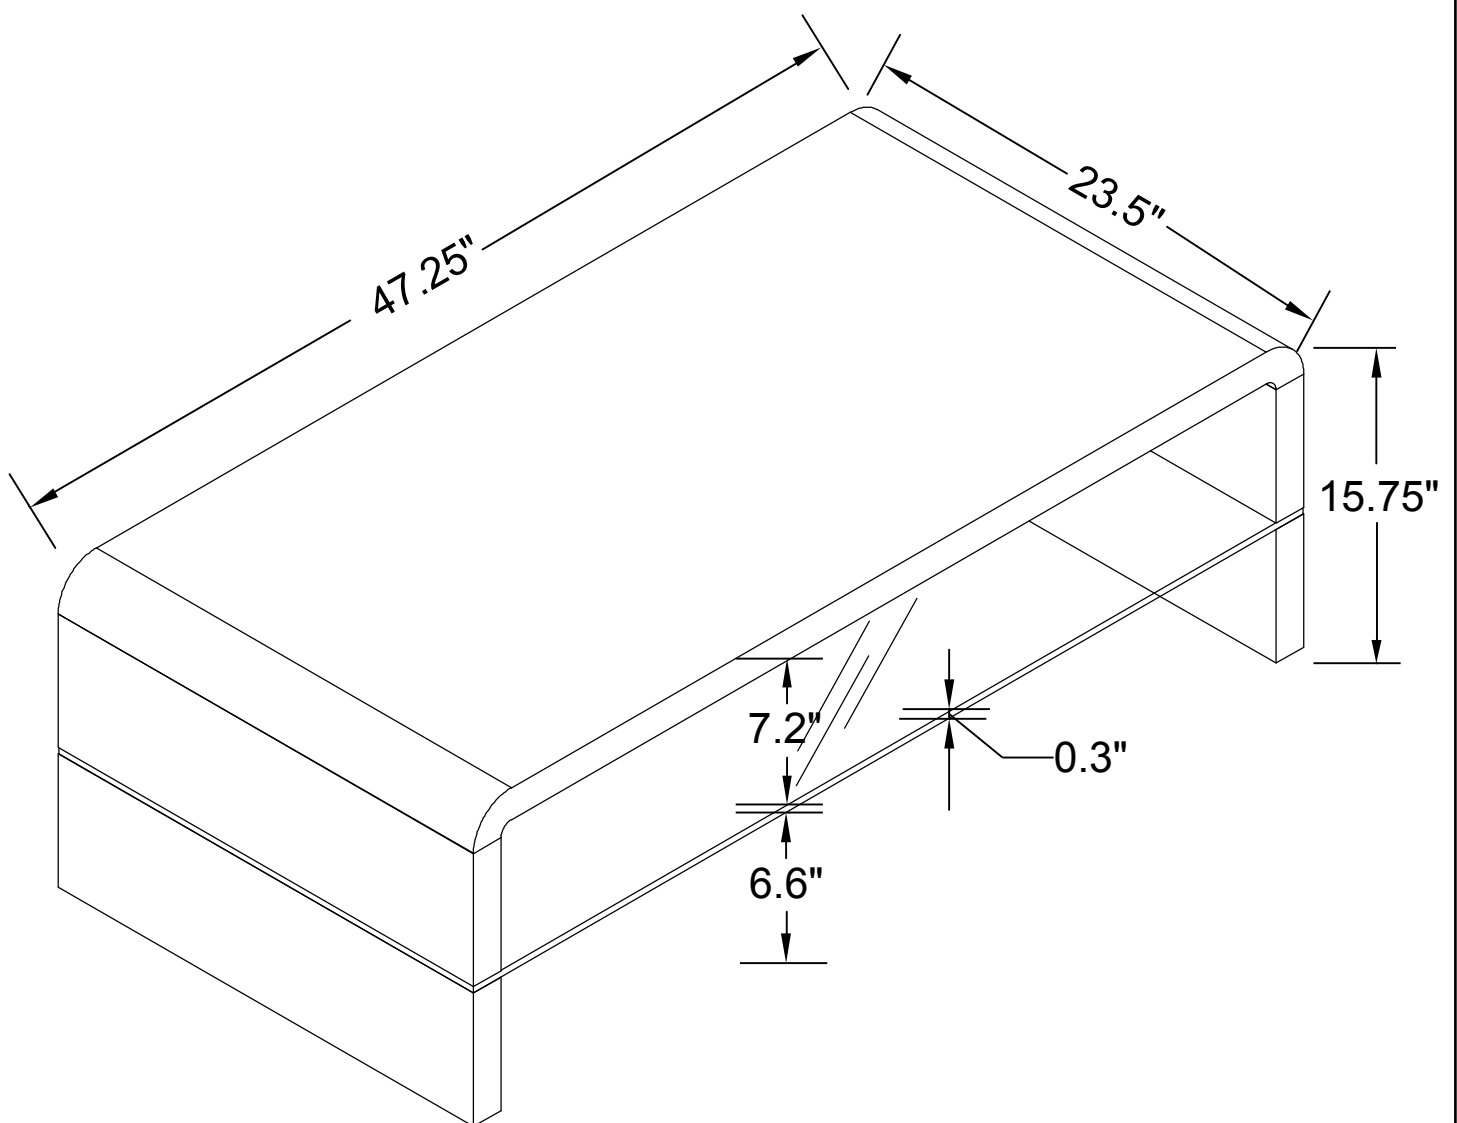 

Note: Dimension tolerance $\pm 5\%$